

Switch number	Function	Values			
1 2 3	Select code word (morse code identifier transmitted)	on-on-on: <b>MO</b>	off-on-on: <b>MOH</b>	on-on-off: <b>MOE</b>	off-on-off: <b>MO5</b>
		on-off-on: <b>MOI</b>	off-off-on: <b>S</b>	on-off-off: <b>MOS</b>	off-off-off: <b>MO</b>
4	Code speed	on: <b>10 WPM</b>	off: <b>15 WPM</b>		
5	Enable level (for turning on the transmitter)	on: active low	off: active high		
6	Key level (for keying the transmitter)	on: active low	off: active high		
7	Interval mode: transmit the code continuously or only in intervals	on: <b>continuous</b>	off: <b>interval</b>		
8	Intervale length: duration of the transmitting cycle (only in interval mode)	on: <b>1 min</b>	off: <b>12 sec</b>		
9 10	Interval count: number of intervals in the repetition cycle (adjust it to the number of transmitters)	on-on: <b>1/2</b>	off-on: <b>1/4</b>	on-off: <b>1/3</b>	off-off: <b>1/5</b>