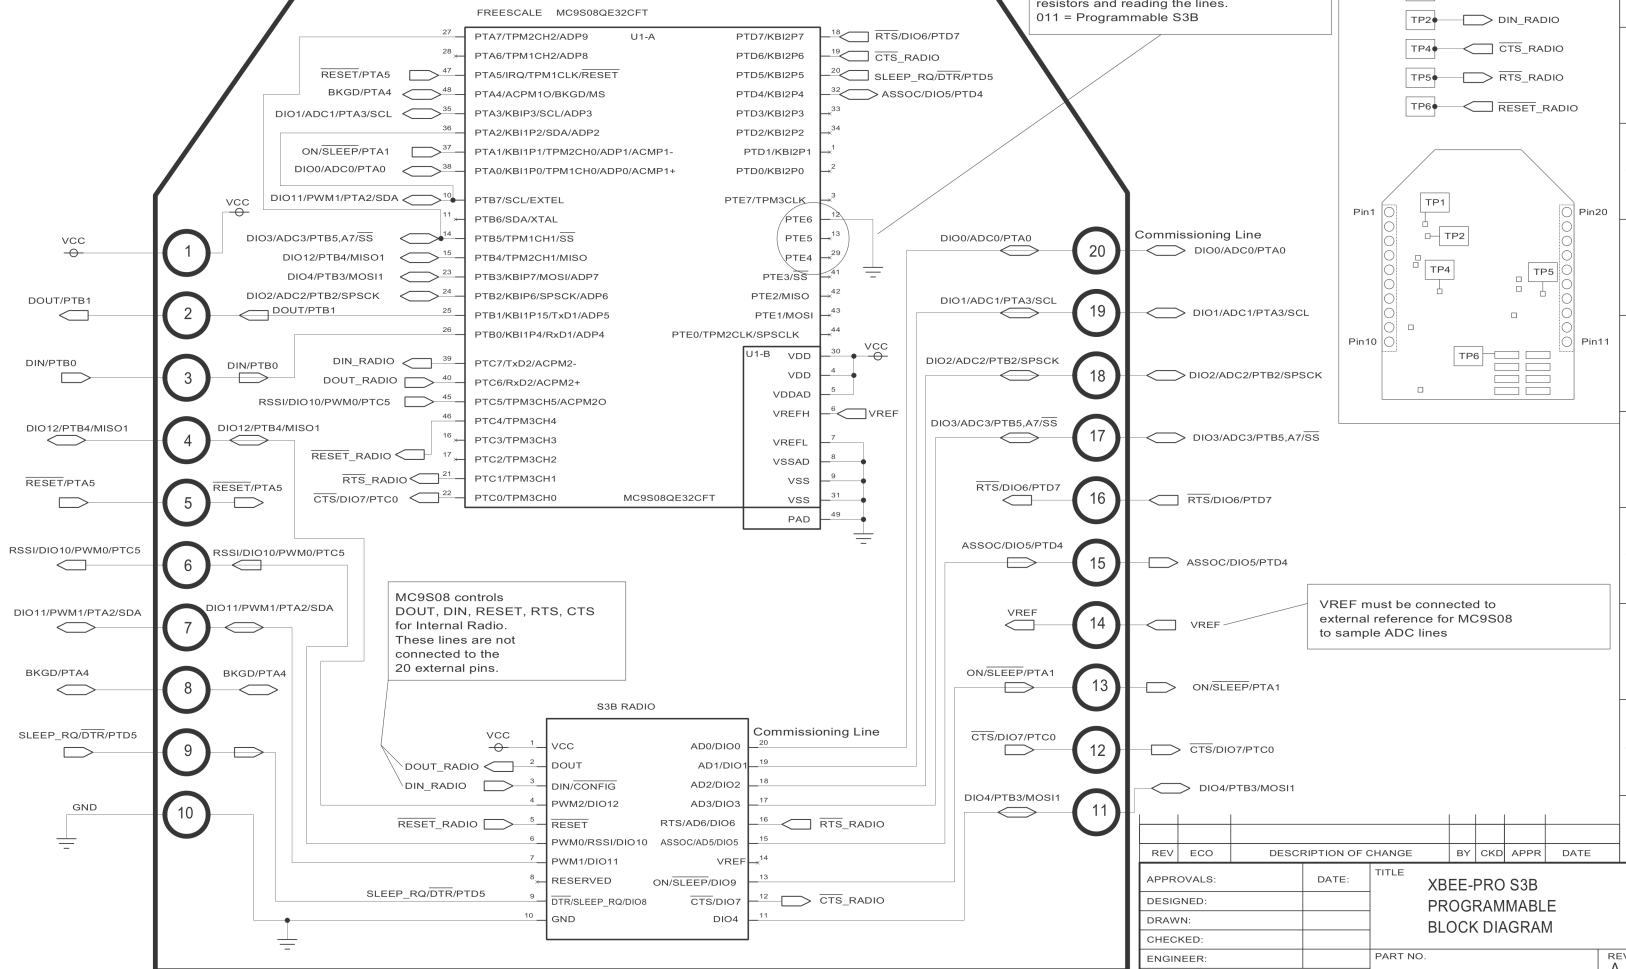


Pins PTE4, 5 and 6 are used so software can determine fundamental Hardware differences by turning on internal pull-up resistors and reading the lines.
011 = Programmable S3B

[illegible]