

How To Adjust Crossbars

***The rear crossbar should be longer than the front one, you can also adjust the rear one to make it as same as the front one.**



Adjustable



Non-Adjustable



Step 1:

- Put the screws and lock washers into the non-adjustable side



- Tighten the screws



Step 2:

- Insert the screw and lock washer to the adjustable side



- Adjust the clamp

- Tighten the screw



Step 3:

Measure the crossbars and make sure they are the same length

