

# Installation Guide for Wheel Cover

## ⚠ [Safety Warning/Caution]

### Preparation:

- Clean the rim and fender panel area of your vehicle
- If your vehicle is raised, please make sure that it is properly blocked before installation
- Cleaning cloth & cleaning liquid (recommended)
- Please remove any accessories on the body of your vehicle
- Professional technicians and proper tools are higher recommended
- Avoid exposure to excessive heat and high pressure



### Step 1:

- Check if the size of the wheel cover will fit your rim. Compare the size of wheel cover on the box to the last two digits of tire code on the tire wall
- Wear gloves and other necessary protection before installation



### Step 2:

- Remove the old wheel cover with a screw driver and clean the rim area again



### Step 3:

**\*In order to prevent damages or scratches to the surface, do not place the front side of the wheel cover against the floor\***

- Take out the retention ring and insert around the wheel cover tabs. Make sure the ring is set into each hubcap slot
- Align valve stem opening on the wheel cover with the tire air valve stem



### Step 4:

- Place the wheel cover on your wheel
- Gently punch the wheel cover evenly against the rim until it snaps into place and firmly secures on the wheel
- Make sure the wheel cover is mounted in position before driving

