

## Car

### *General fault isolation procedure*

#### Fault Codes

Fault code	Fault description

#### Table of contents

Page

General fault isolation procedure.....	1
References.....	1
Preliminary requirements.....	1
Fault isolation procedure.....	2
Requirements after job completion.....	3

#### List of tables

1	References.....	1
2	Required conditions.....	2
3	Support equipment.....	2
4	Consumables, materials and expendables.....	2
5	Spares.....	2

### *References*

*Table 1 References*

Data module/Technical publication	Title
None	

### *Preliminary requirements*

This is a draft copy of issue 000-01.

Produced by: khzae.net

## Required conditions

*Table 2 Required conditions*

Action/Condition	Data module/Technical publication
Car will not start	

## Support equipment

*Table 3 Support equipment*

Name	Identification/Reference	Quantity	Remark
None			

## Consumables, materials and expendables

*Table 4 Consumables, materials and expendables*

Name	Identification/Reference	Quantity	Remark
None			

## Spares

*Table 5 Spares*

Name	Identification/Reference	Quantity	Remark
None			

## Safety conditions

None

### ***Fault isolation procedure***

- 1 Do warning lights appear?
- 1.1 Yes: Go to 2
- 1.2 No: Go to 3

- 2 Battery is flat, call mechanic  
**Go to Requirements after job completion**
- 3 Lock & unlock car to disable immobiliser and try starting again
- 4 Does the engine still not start?
- 4.1 Yes: Go to 5
- 4.2 No: Go to 6
- 5 Engine is flooded/other technical issue, call mechanic  
**Go to Requirements after job completion**
- 6 Car is working  
**Go to Requirements after job completion**

***Requirements after job completion***

None.

This is a draft copy of issue 000-01.

Produced by: khzae.net

