

Car

General fault isolation procedure

Fault Codes

Fault code	Fault description

Table of contents

Page

General fault isolation procedure.....	1
References.....	1
Preliminary requirements.....	1
Fault isolation procedure.....	2
Requirements after job completion.....	3

List of tables

1	References.....	1
2	Required conditions.....	2
3	Support equipment.....	2
4	Consumables, materials and expendables.....	2
5	Spares.....	2
6	Required conditions.....	3

References

Table 1 References

Data module/Technical publication	Title
None	

Preliminary requirements

This is a draft copy of issue 000-01.

Produced by: khzae.net

Required conditions

Table 2 Required conditions

Action/Condition	Data module/Technical publication
None	

Support equipment

Table 3 Support equipment

Name	Identification/Reference	Quantity	Remark
None			

Consumables, materials and expendables

Table 4 Consumables, materials and expendables

Name	Identification/Reference	Quantity	Remark
None			

Spares

Table 5 Spares

Name	Identification/Reference	Quantity	Remark
None			

Safety conditions

None

Fault isolation procedure

- 1 Car will not start
- 2 Do warning lights appear?
- 2.1 Yes: Go to 3

Applicable to: All

FLWCHRT-A-00-00-00-00A-420A-D

- 2.2 No: Go to 4
- 3 Battery is flat, call mechanic
- Go to Requirements after job completion**
- 4 Lock & unlock car to disable immobiliser and try starting again
- 5 Does the engine still not start?
- 5.1 Yes: Go to 6
- 5.2 No: Go to 7
- 6 Engine is flooded/other technical issue, call mechanic
- Go to Requirements after job completion**
- 7 Car is working
- Go to Requirements after job completion**

Requirements after job completion

Required conditions

Table 6 Required conditions

Action/Condition	Data module/Technical publication
None	