



Please Call First!

DO NOT RETURN TO STORE

Need help with assembly? Missing or broken parts?

Business Hours: M-F 8am-5pm PST

Toll Free: 1 (866) 632-6632 support@slambrands.com

10.07 B

PHASE

TALL FLAT PANEL TV STAND

Assembly Instructions
Item #222269



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

Toll Free: 1 (866) 632-6632 support@slambrands.com www.slambrands.com



IMPORTANT INFORMATION

Read carefully before assembling TV Stand.
Keep these instructions for further use.



CAUTION!

This TV Stand is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than maximum weights indicated may result in instability causing possible injury. **WARNING!** Young children can be killed when furniture tips over. Use angle-braces or anchors to secure furniture to wall.

 
Model: 222269

Distribution / Manufacturer: Slam Brands, Inc.


Country of Origin: China

Manufacture Date: 07.28.07

Accommodates Most:



Flat Panel

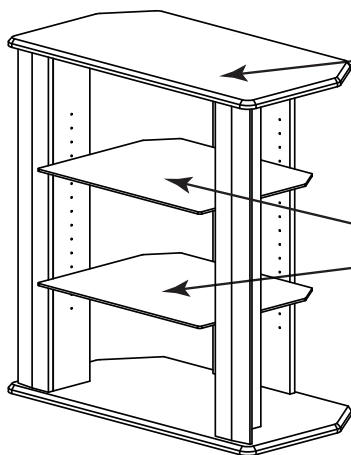 

Television Shelf:

A maximum of a 32in. Flat Panel TV. A maximum TV shelf load weight of 125.0lb. / 56.6kg.

Component Shelves:

A maximum load weight of 40.0lb. / 18.1kg.



SLAM BRANDS, INC
2260 152nd Ave NE
Redmond, WA 98052
www.slambrands.com

Toll Free: 1 (866) 632-6632 Email: support@slambrands.com Business Hours: M-F 8am-5pm PST

SAFETY FIRST

- ! When moving TV Stand, remove TV first.
Do NOT move TV Stand with TV.
- ! To avoid injury, assemble TV Stand in final location. Moving the stand after assembled is not recommended.

 
This product is sold with anti-tip hardware and it is recommended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the TV Stand. Slam Brands, Inc. is not responsible for any personal injury or damage to audio/video pier, components, or household effects resulting from improper use of this product.




AVIO™

AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.


ASSEMBLY OVERVIEW

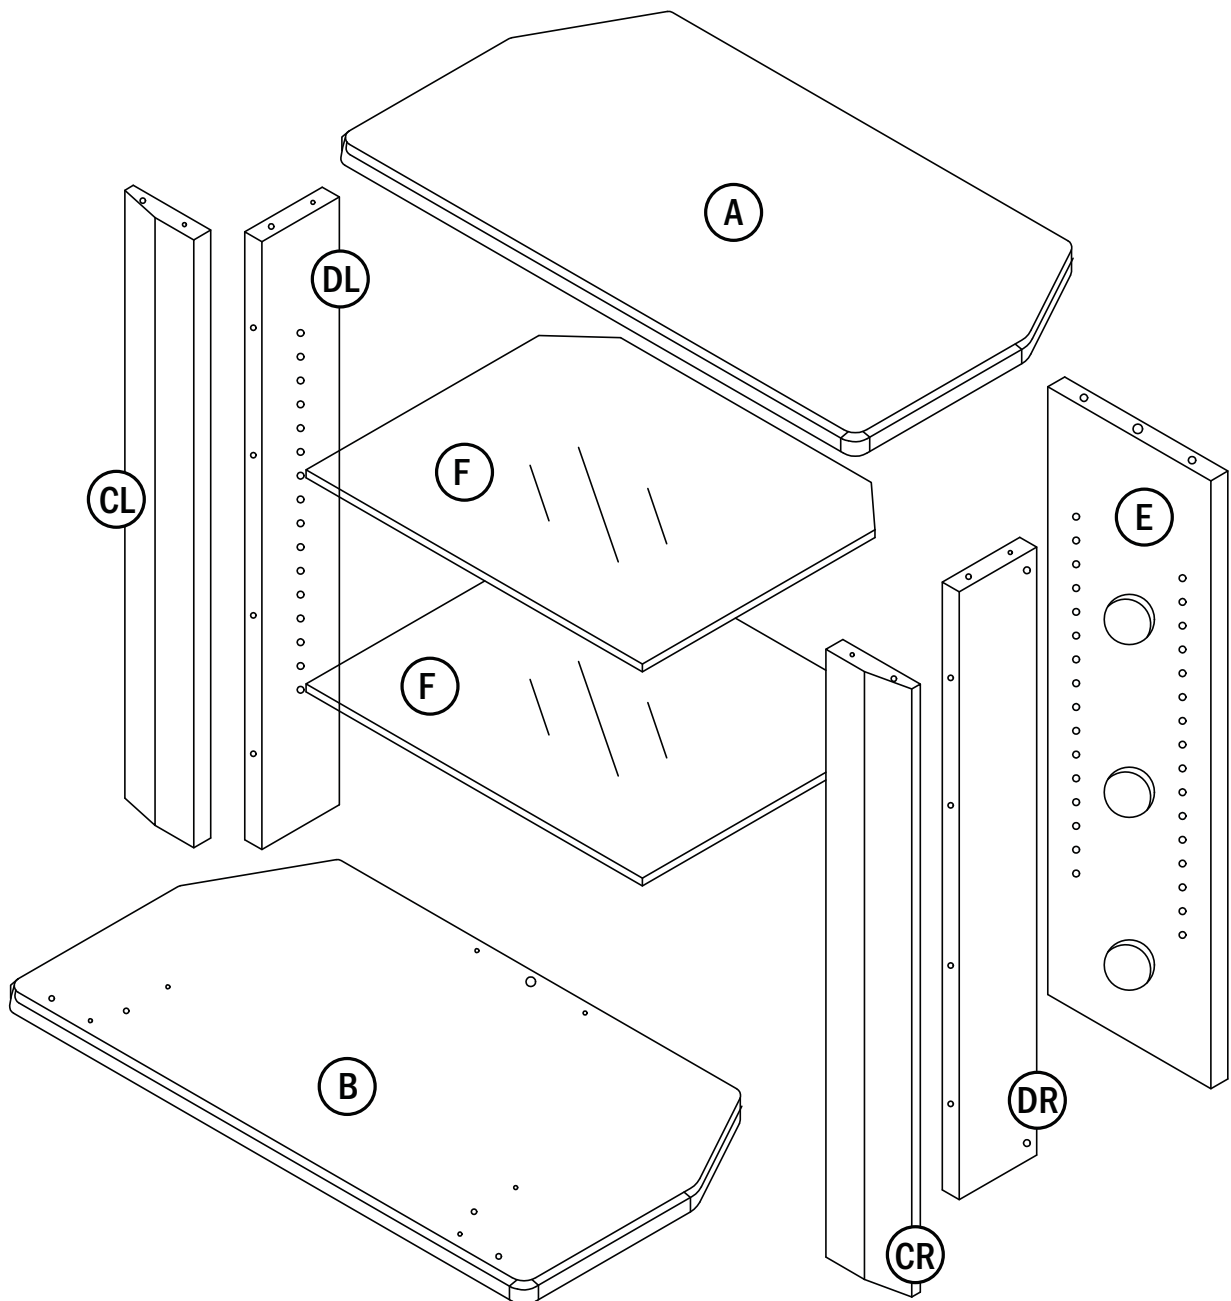


PARTS IDENTIFICATION

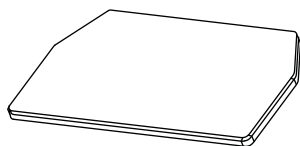 


Ⓐ Top Board (1)
T00268

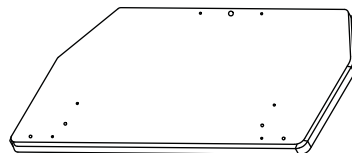 


Ⓑ Bottom Board (1)
T00269

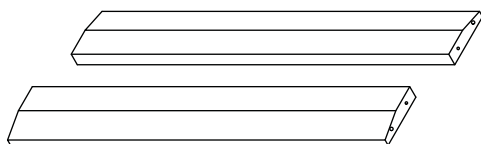 

 
Ⓒ Left and Right Side Supports (2)
CL T00270 / CR T00271

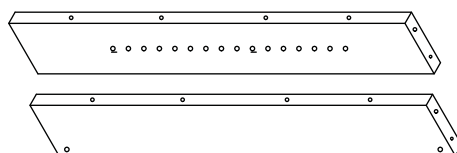

 Ⓓ Left and Right Side Supports (2)
DL T00272 / DR T00273

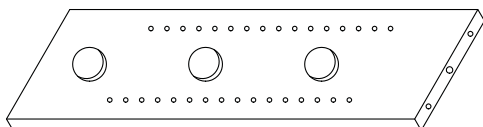


Ⓔ Back Board (1)
T00274

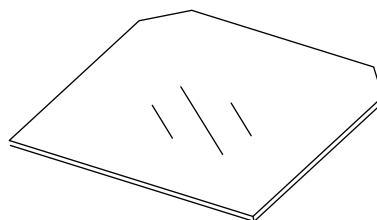 


Ⓕ Glass Shelves (2)
5mm
T00275

 
HARDWARE IDENTIFICATION

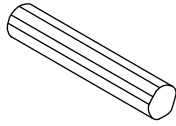


- ① Dowels (18)
6 x 30mm
H00091

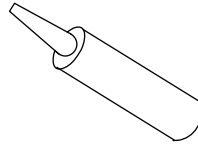 

- ② Glue (1)
5g

 


- ③ Cam (12)
ø 15 x 12mm
H00092

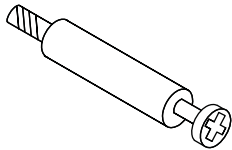 


- ④ Cam Bolt (12)
ø 7.5 x 35mm
H00106



 
- ⑤ Glass Shelf Supports (8)
23 X 20 x 16.5mm
H00107

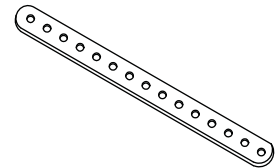

 
- ⑥ Wall Bracket (1)
230 x 11 x 2mm
H00041

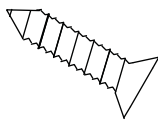

 - ⑦ Phillips Head Screws (2)
4 x 14mm
H00104

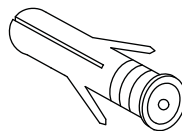

 - ⑧ Drywall Anchor (1)
6.4 x 30mm
H00108




- ⑨ Phillips Head Screw (1)
4 x 32mm
H00105




- ⑩ Cam Caps (12)
ø 17.4 x 5.8mm

THE “CAM” ASSEMBLY SYSTEM


THIS PAGE IS A REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES. BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

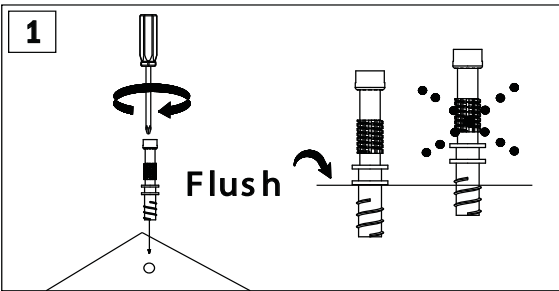1


Screw Cam Bolts into designated holes.

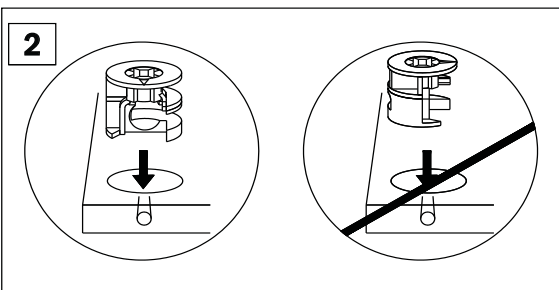2

Press in Cams. Arrow on Cams should face the hole in the edge of the panel.

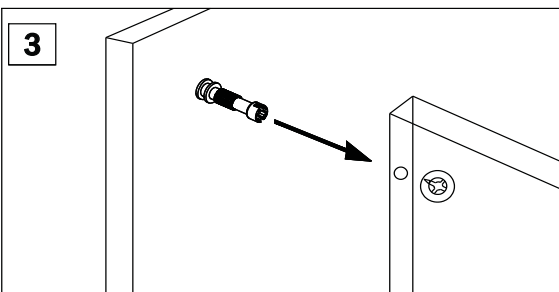3

Press panels together.

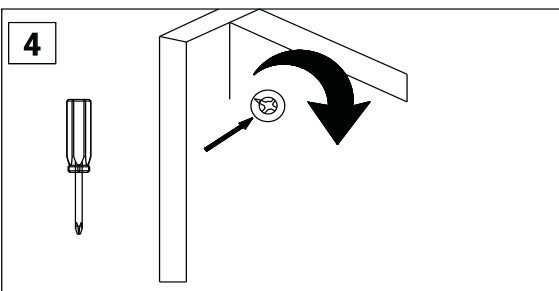4

Turn Cam ½ turn clockwise to tighten.




AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

THE “DOWEL” ASSEMBLY SYSTEM


THIS PAGE IS A REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES. BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

1

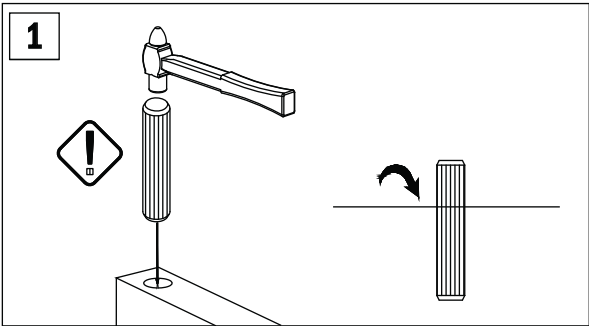

Tap dowels gently into designated holes.


2

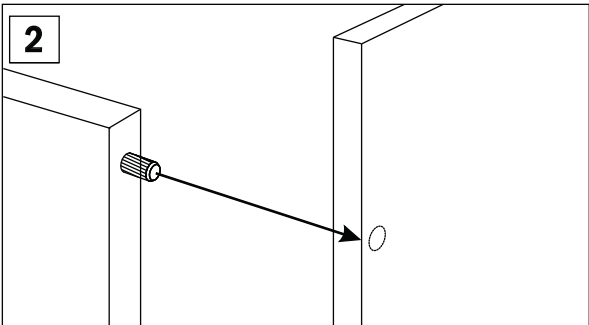

Press panels together.

ATTACH CAM BOLTS

 1


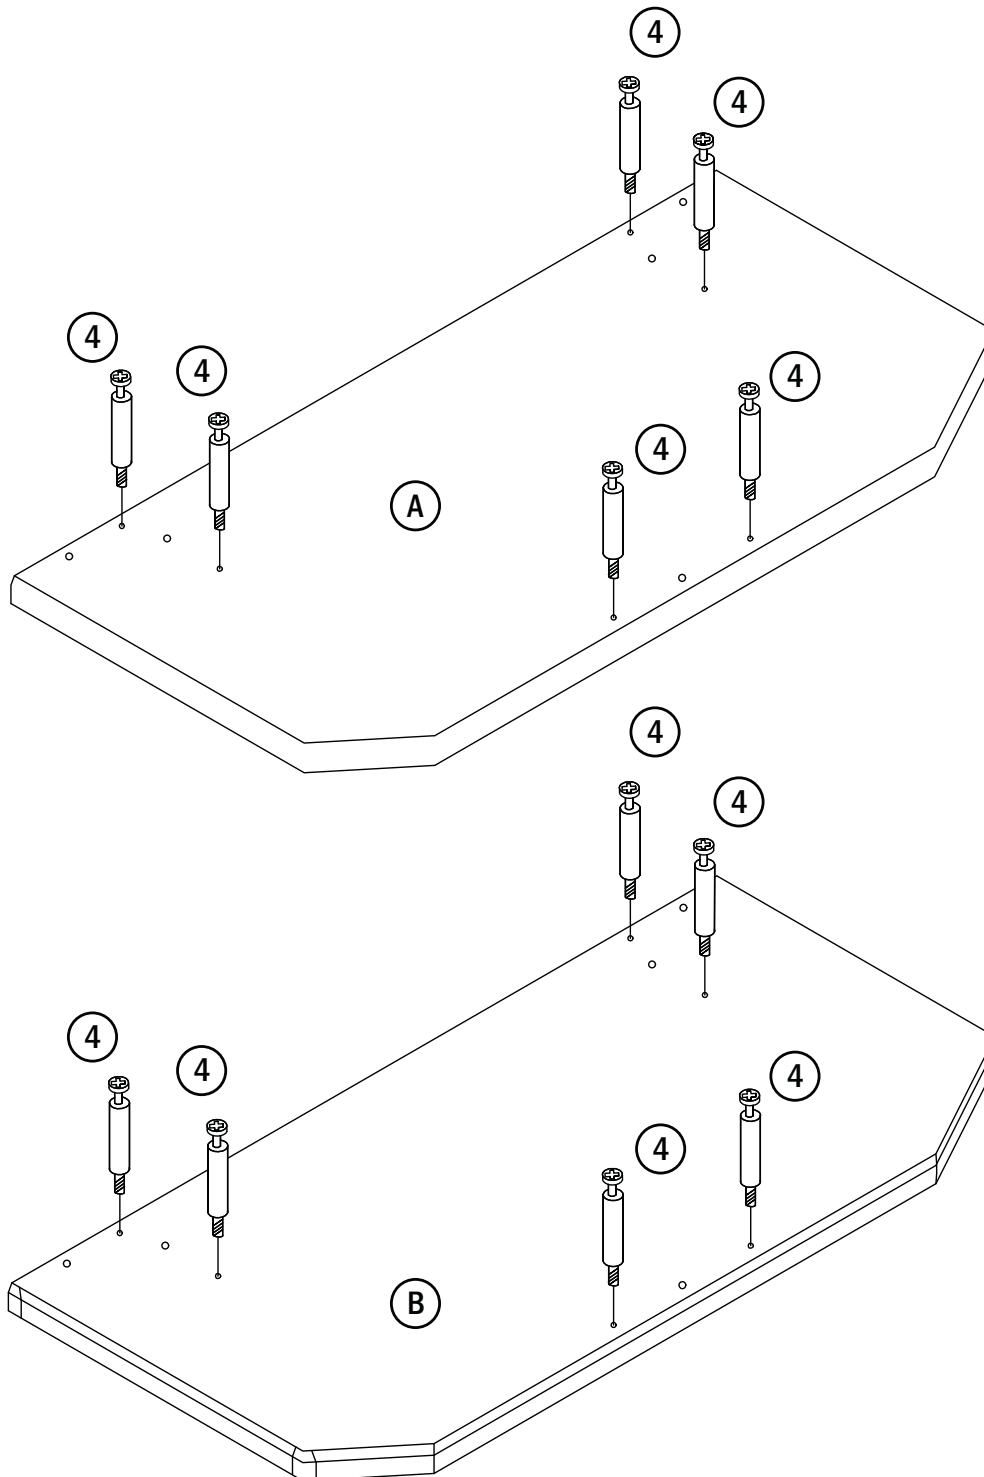


AVIO™

AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.


CONNECT SIDE SUPPORTS

  2

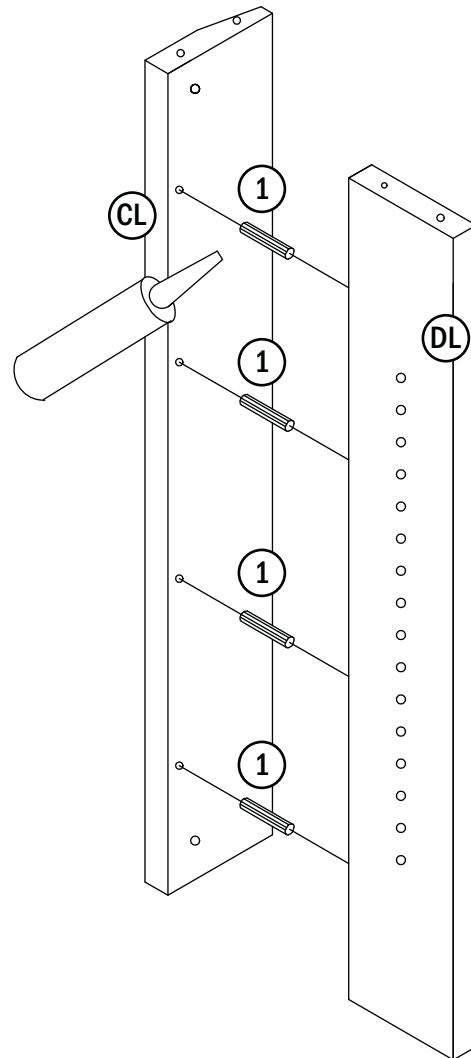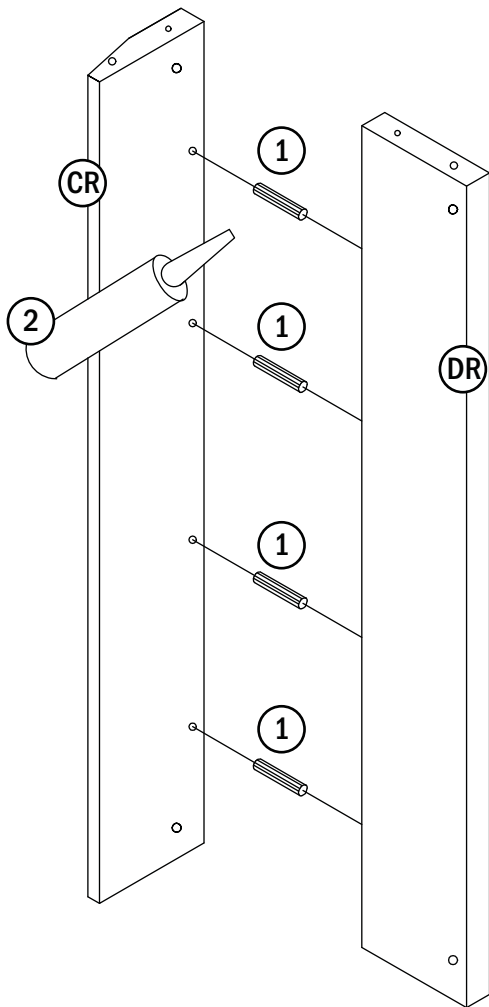

ATTACH WALL BRACKET TO BACK BOARD (OPTIONAL)

 3

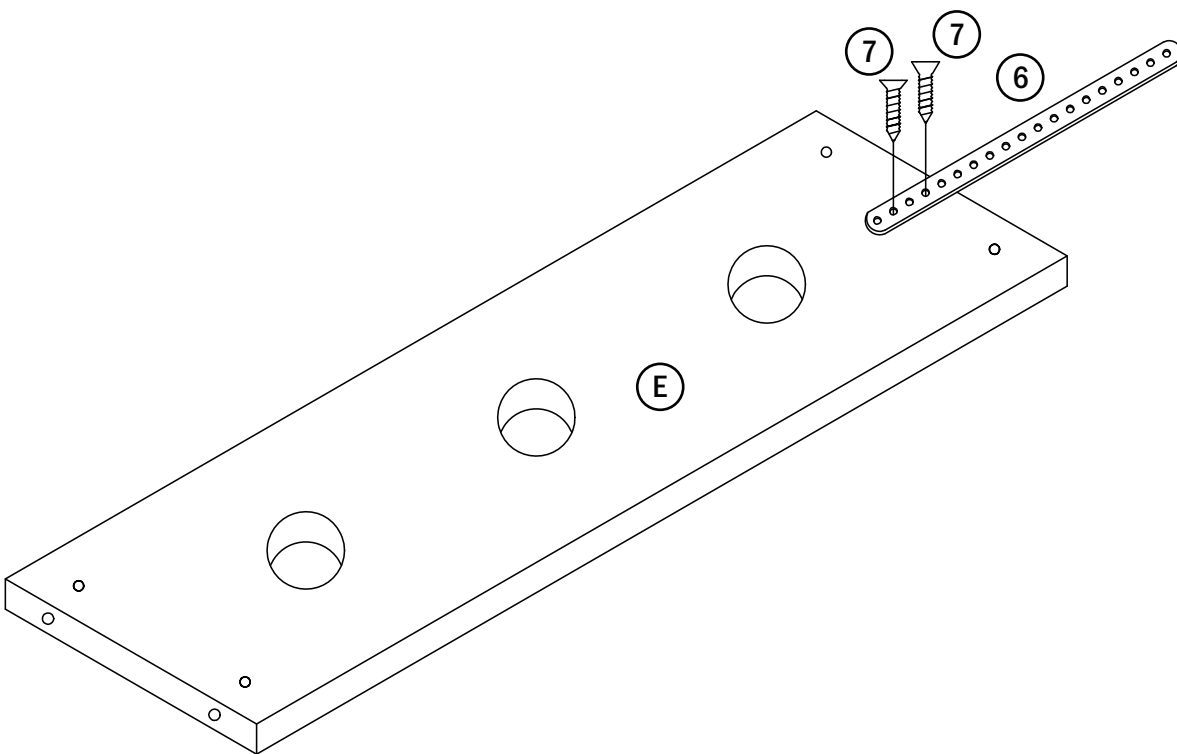


AVIO™


AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

ATTACH SIDE SUPPORTS TO BASE

 4

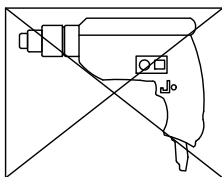


 Refer to Cam Assembly System
page for additional instruction.

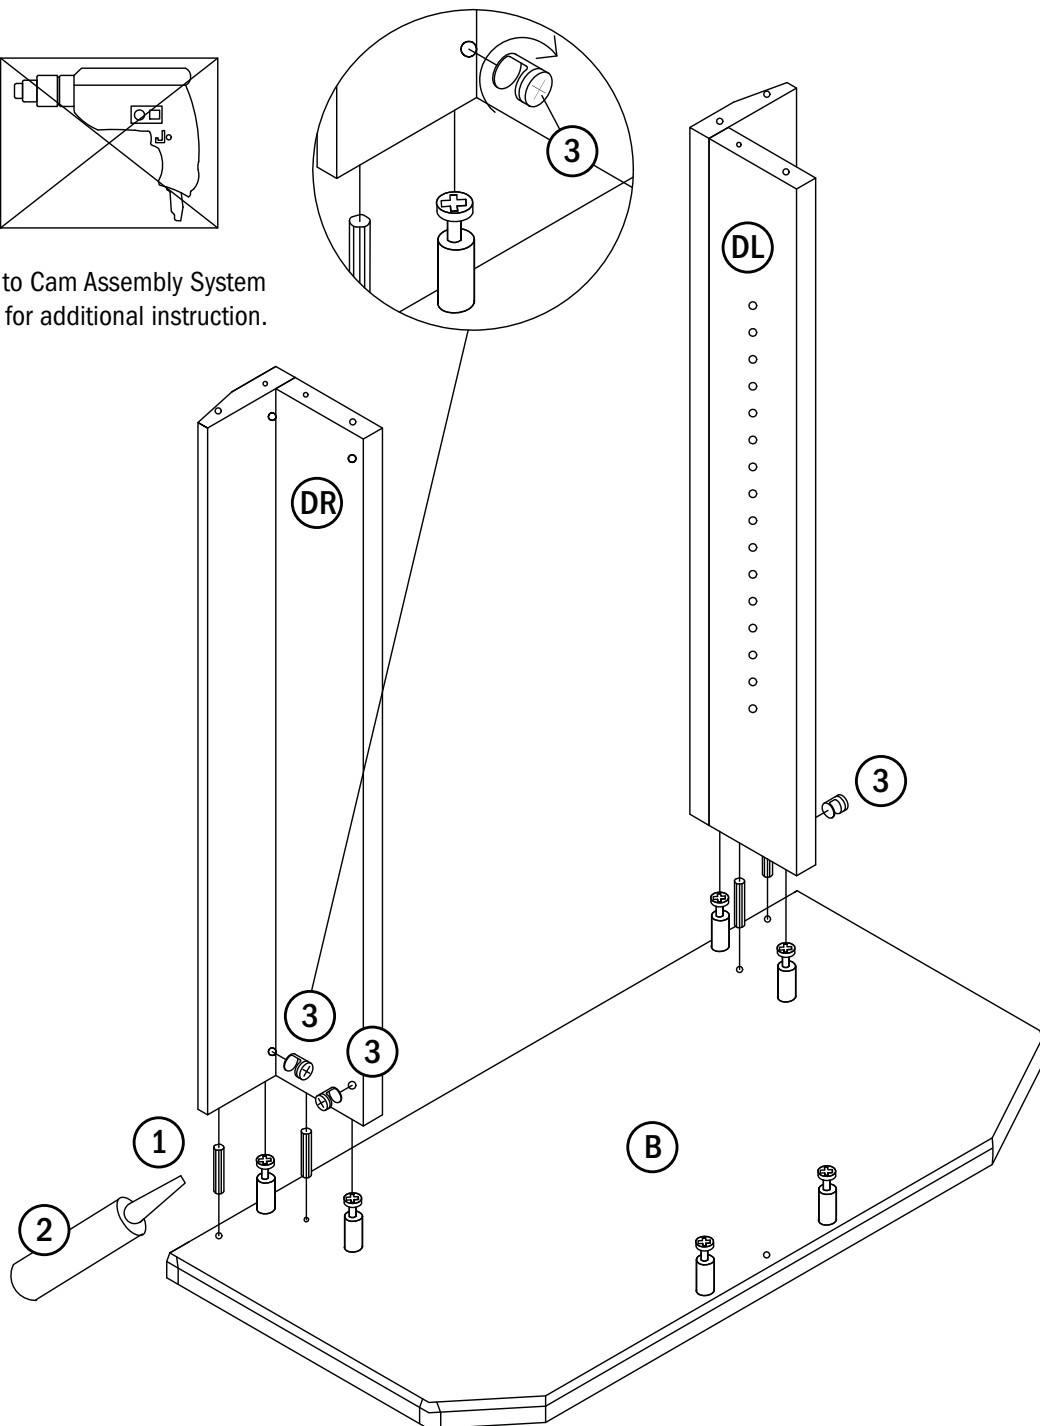

ATTACH BACK BOARD, CAM CAPS

 5


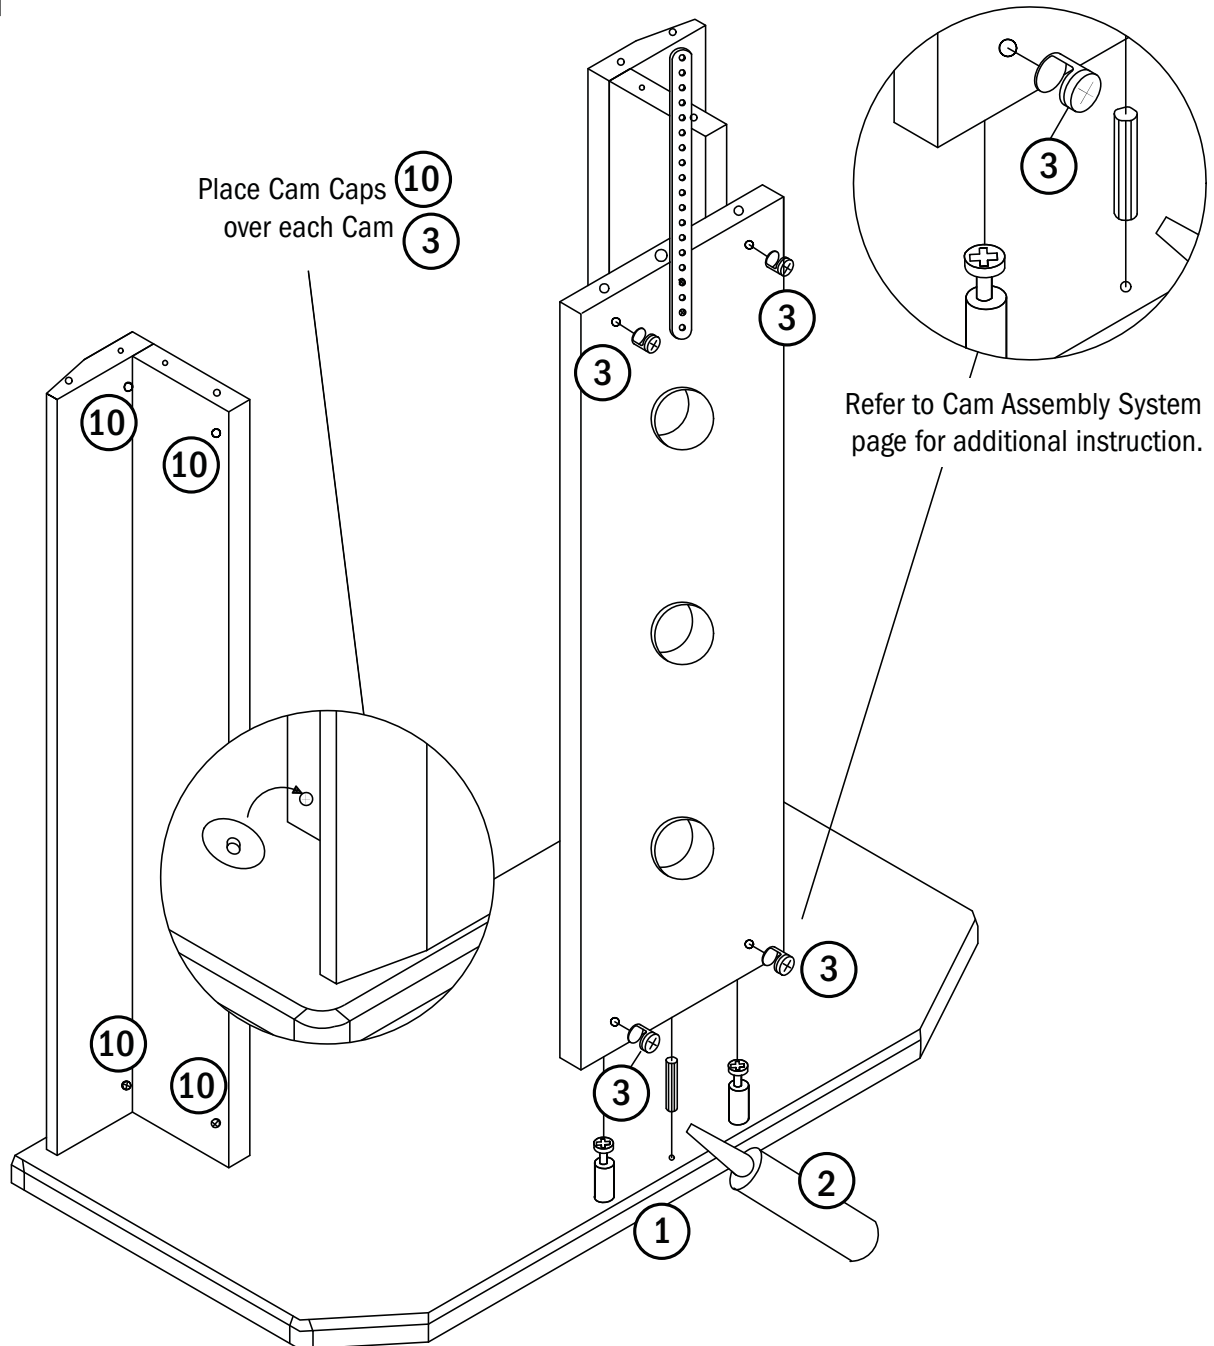


AVIO™

AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

ATTACH TOP BOARD TO SUPPORTS

  
6

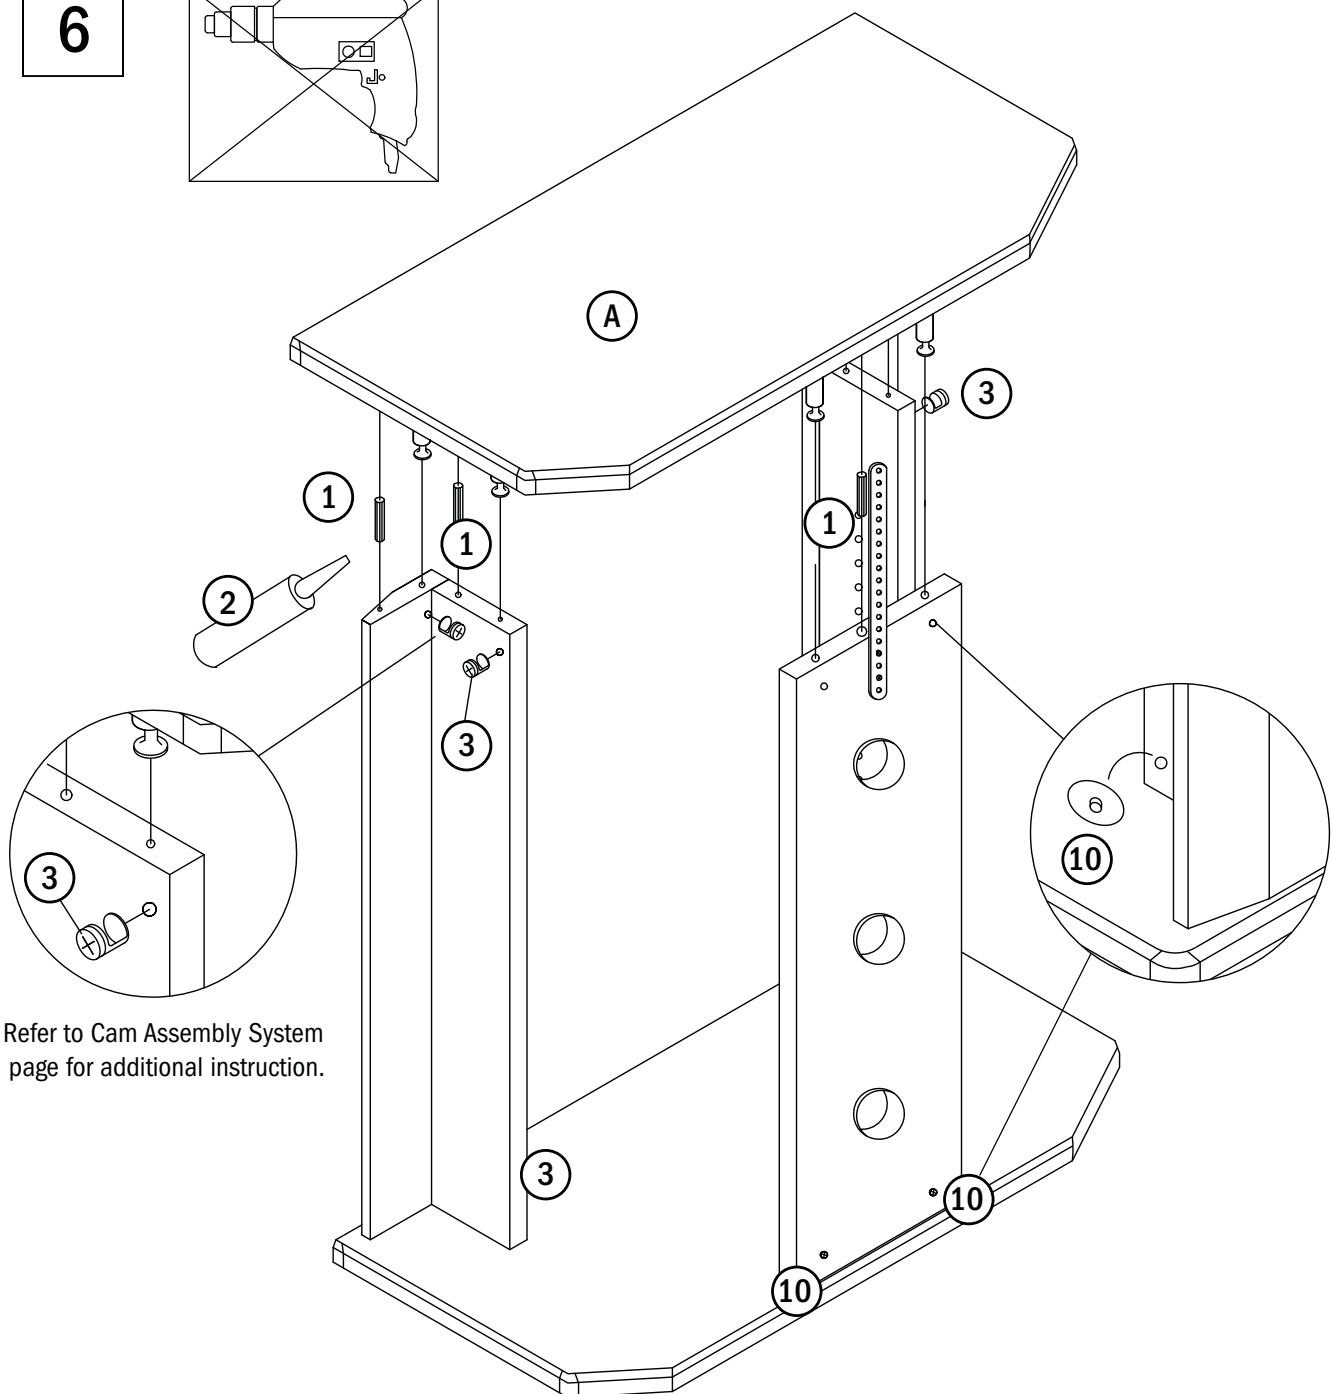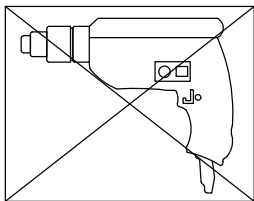

Refer to Cam Assembly System
page for additional instruction.

ATTACH SHELF SUPPORTS

 7

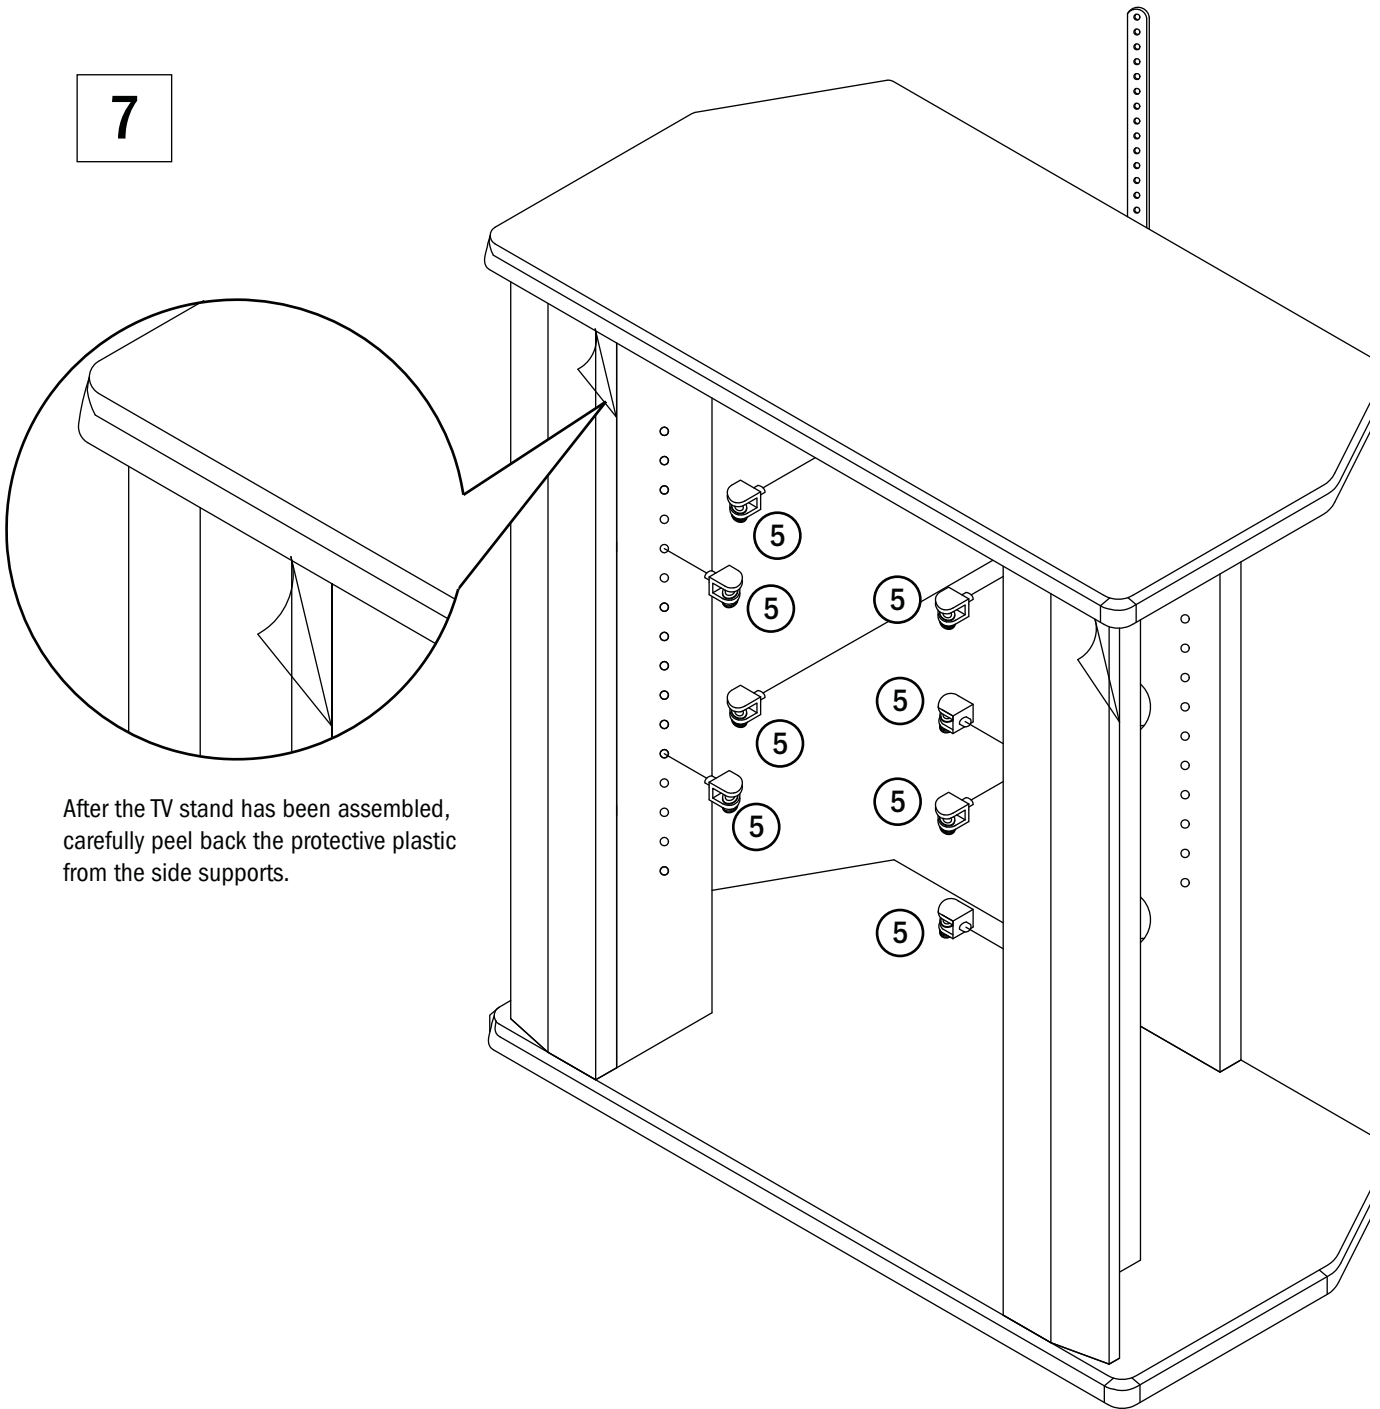

After the TV stand has been assembled, carefully peel back the protective plastic from the side supports.

 
 


AVIO™

AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.


PLACE GLASS SHELVES

8

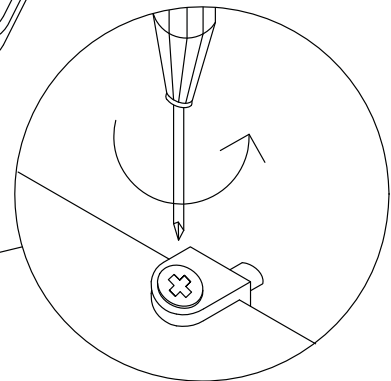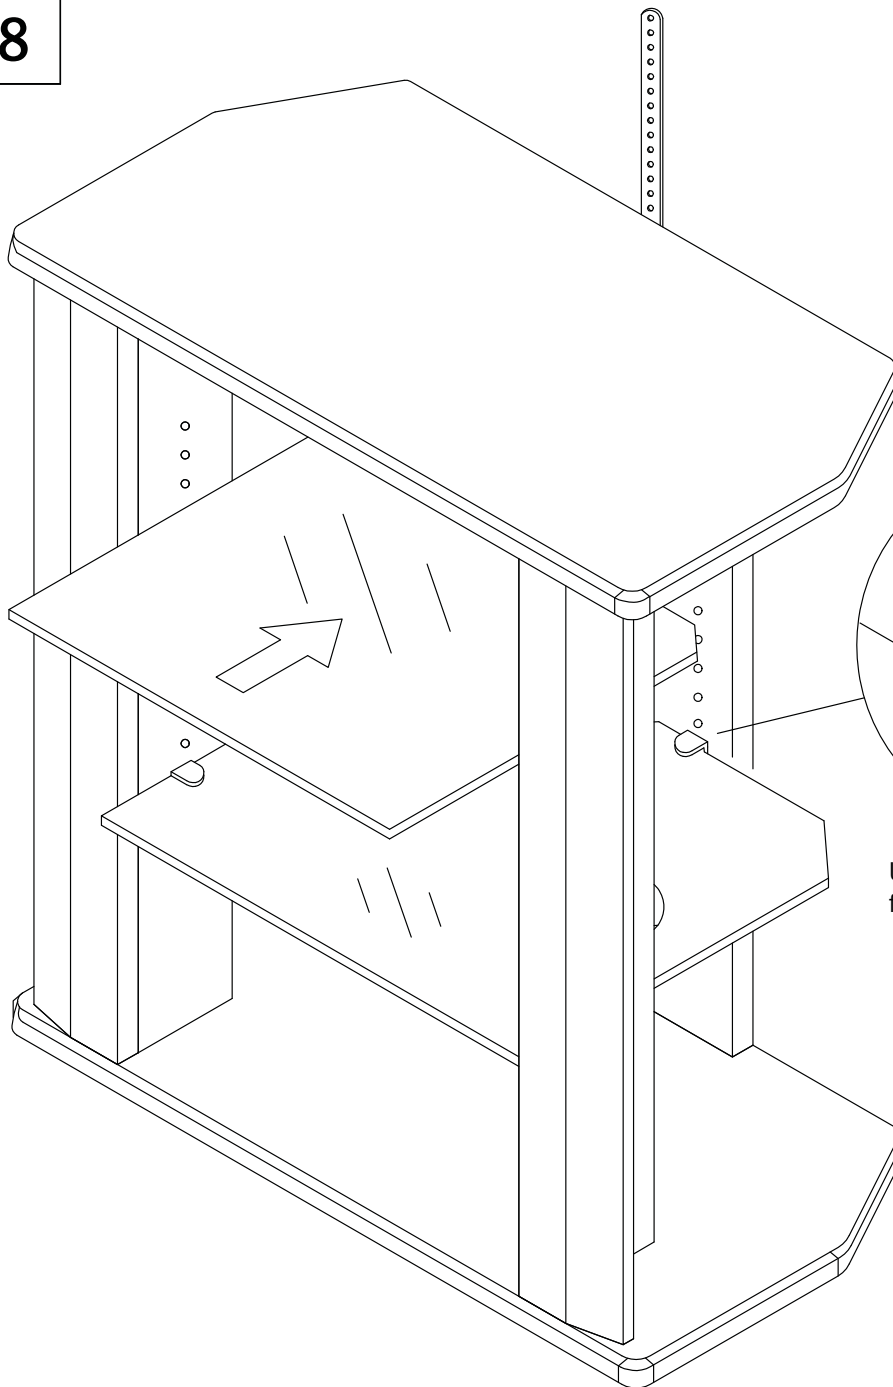


Use a screwdriver to tighten screws from underneath shelves.

 
ATTACH WALL BRACKET (OPTIONAL)

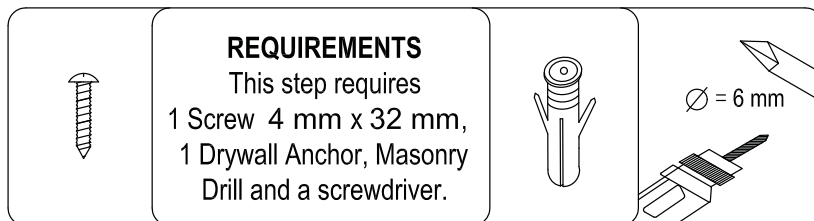

 
ATTENTION! Wall mount serves as tip-over protection – it is recommended that the safety bracket be installed! For some wall types, a special Drywall Anchor may be required.

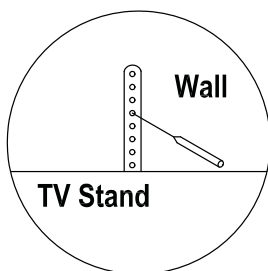

 
Place TV Stand in desired position
Mark position on wall with pencil

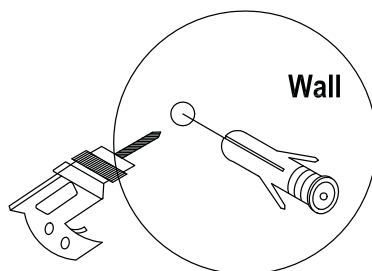

 Move TV Stand aside
Drill mark with Masonry Drill
Attach Drywall Anchor to the wall

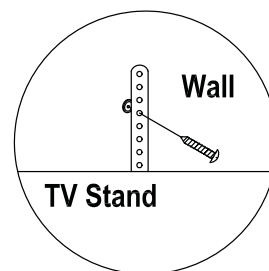

 Move TV Stand back to its desired position
Tighten screw using screwdriver

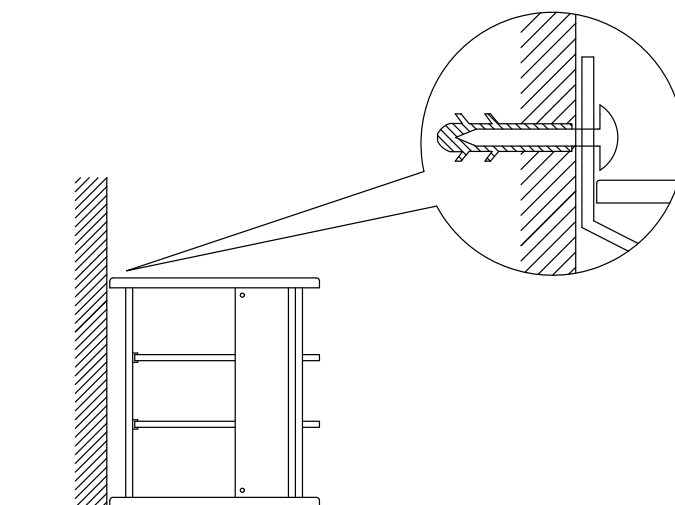

Mount to a wall with or without a baseboard



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

Toll Free: 1 (866) 632-6632 support@slambrands.com www.slambrands.com

