



# Please Call First!

## DO NOT RETURN TO STORE

Need help with assembly? Missing or broken parts ?

Business Hours: M-F 8am-5pm PST

Toll Free: 1 (866) 632-6632 support@slambrands.com

09.07 A

# SONIS

## TV STAND

### Assembly Instructions

### Item #222274



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

support@slambrands.com www.slambrands.com



# IMPORTANT INFORMATION

Read carefully before assembling TV Stand.

Keep these instructions for further use.



## CAUTION!

This TV Stand is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than maximum weights indicated may result in instability causing possible injury. **WARNING!** Young children can be killed when furniture tips over. Place TVs on lower furniture, as far back as possible. Use angle-braces or anchors to secure furniture to wall.

Model: 222274

Distribution / Manufacturer : Slam Brands, Inc.

Country of Origin: Indonesia

Manufacture Date: 09.01.07

 
Accommodates Most:



CRT



Plasma/LCD

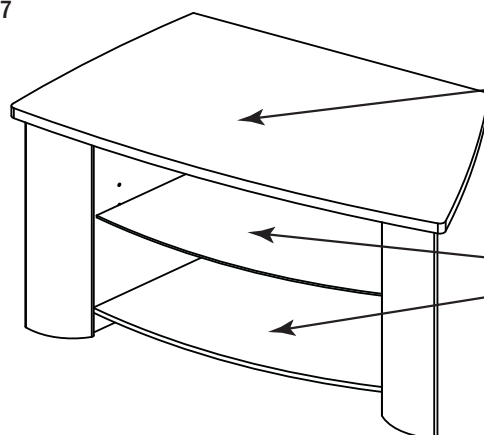

### Television Shelf:

A maximum of a 36in. CRT or a 42in. Plasma/LCD.  
A maximum TV shelf load weight of 150.0lb. / 99.7kg.

### Component Shelves:

A maximum load weight of 40.0lb. / 18.1kg.

Toll Free: 1 (866) 632-6632

Email: [support@slambrands.com](mailto:support@slambrands.com)

Business Hours: M-F 8am-5pm PST



**SLAM BRANDS, INC**  
2260 152nd Ave NE  
Redmond, WA 98052  
[www.slambrands.com](http://www.slambrands.com)

## SAFETY FIRST

 
- ! When moving TV Stand, remove TV first.  
Do NOT move TV Stand with a TV on top
- ! TVs are front heavy. Place TV as far from front surface of stand as possible.
- ! To avoid injury, assemble TV Stand in final location. Moving the stand after assembly is not recommended.

This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the TV Stand. Slam Brands, Inc. is not responsible for any personal injury or damage to stand, television, components, or household effects resulting from improper use of this product.




AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.


# ASSEMBLY OVERVIEW

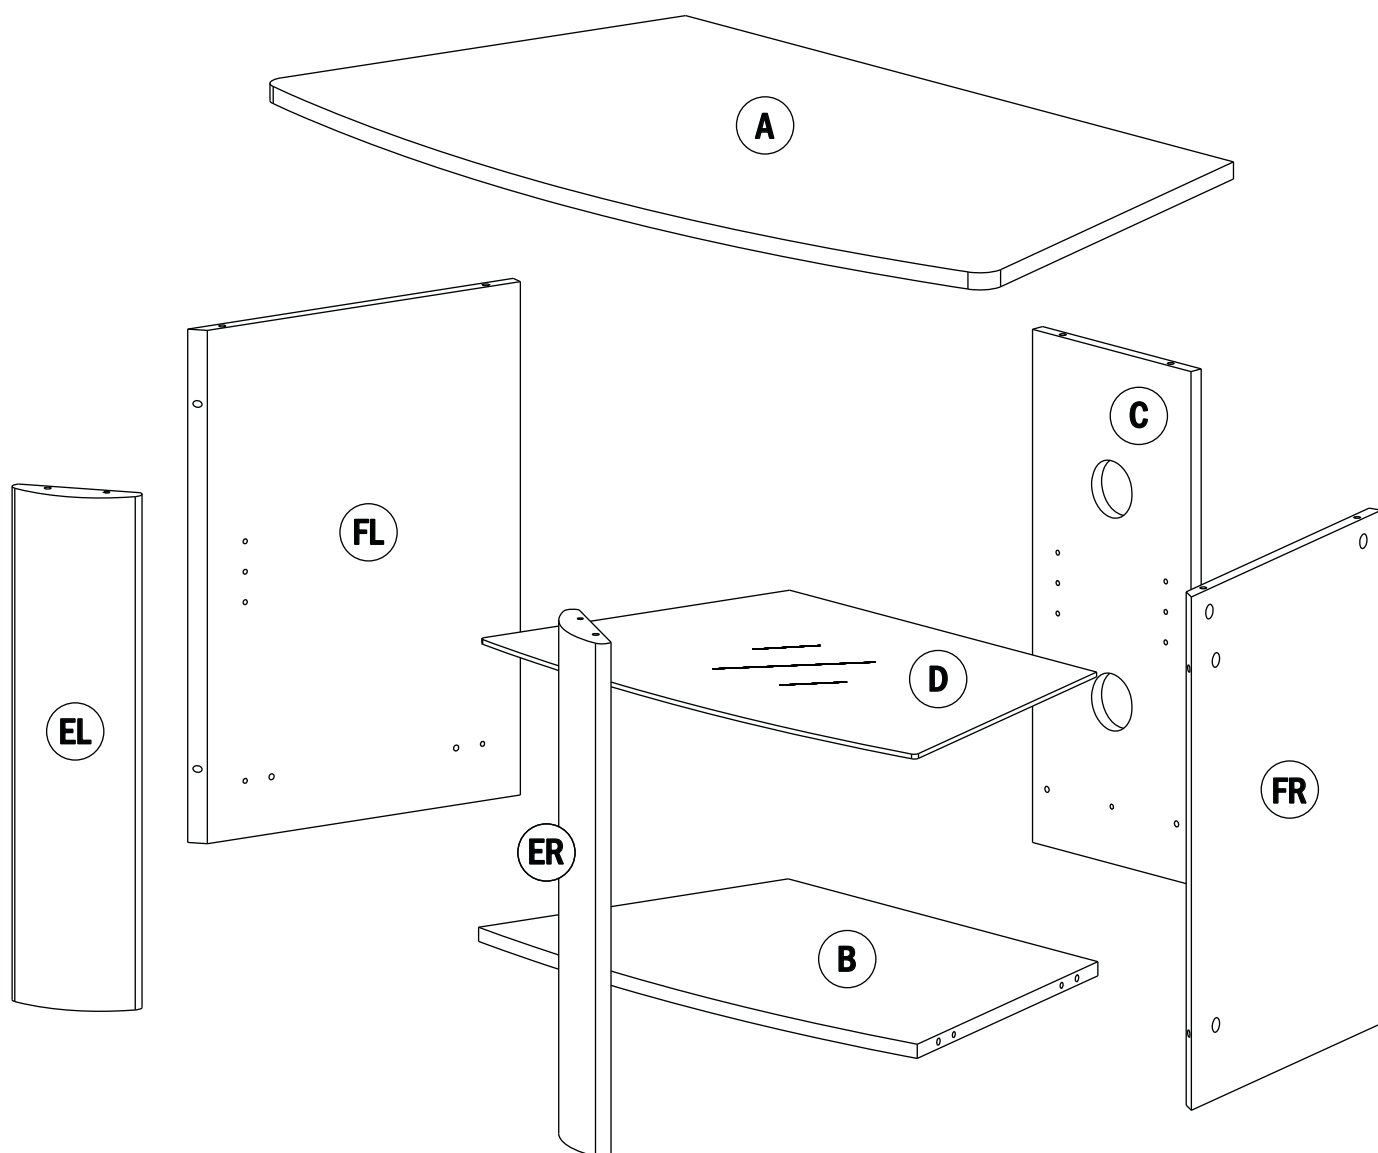


# PARTS IDENTIFICATION

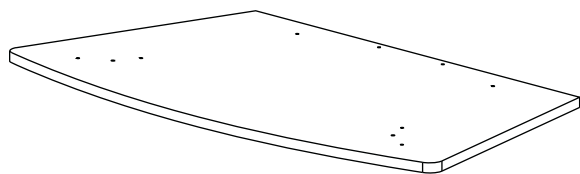 


Ⓐ Top Board (1)  
T00588

 

Ⓑ Bottom Board (1)  
T00589

 

Ⓒ Back Board (1)  
T00590

 

Ⓓ Glass Shelf (1)  
T00591



 
Ⓔ Front Support (1)  
T00592



Ⓕ Front Support (1)  
T00593



Ⓖ Side Support (1)  
T00594



Ⓗ Side Support (1)  
T00595

# HARDWARE IDENTIFICATION



 
- ① Cam Bolts (12)  
7 x 32 mm  
H00074



- ② Cams (16)  
ø15 x 22 mm  
H00245




- ③ Cam Caps (16)  
ø17.4 x 5.8 mm  
H00093




- ④ Cam Angle Dowels (4)  
ø7 x 55 mm  
H00204



 - ⑤ Cable Management Caps (2)  
ø68 x 17.5 mm  
H00087



 - ⑥ Shelves Pins (4)  
ø26 x 12 x 12 mm  
H00205



- ⑦ Phillips Head Screw (1)  
12 x 45 mm  
H00249



- ⑧ Phillips Head Screws (2)  
6 x 13 mm  
H00095



- ⑨ Wall Bracket (1)  
230 x 11 x 2 mm  
H00041



- ⑩ Screw (1)  
8 x 38 mm  
H00056




- ⑪ Drywall Anchor (1)  
6.4 x 30 mm  
H00049

# THE “CAM” ASSEMBLY SYSTEM

 
THIS PAGE IS A REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES. BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

1

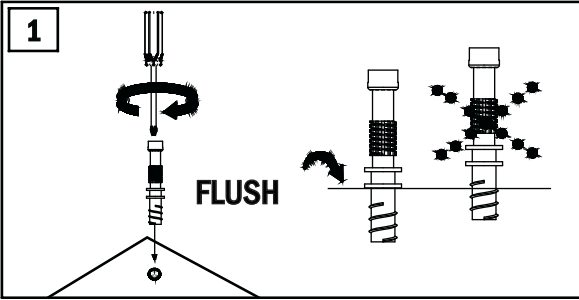

Screw Cam Bolts ① into designated holes.

 
2

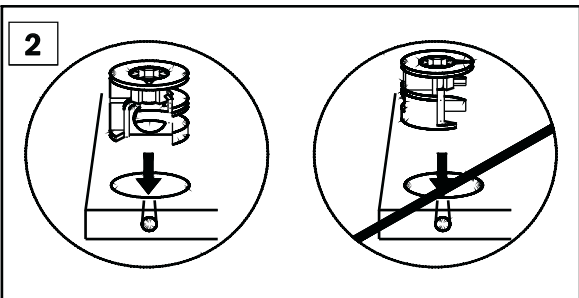

Press Cams ② into designated holes.


Arrow on Cams should face the hole at the edge of the board.

 3

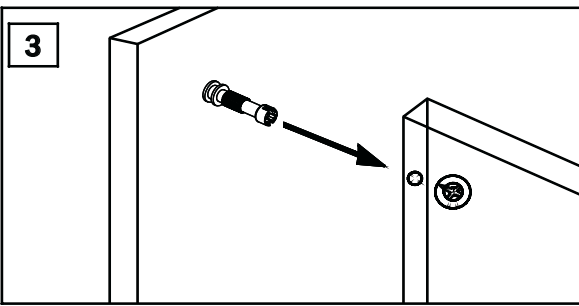

Align Cam Bolt with hole at Cam and press boards together.

 
4

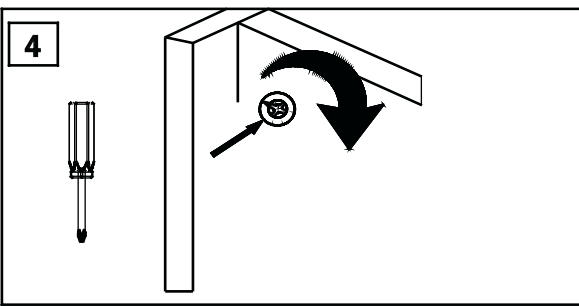

Turn Cam ½ turn clockwise to lock.

# ATTACH CAM BOLTS

 
1

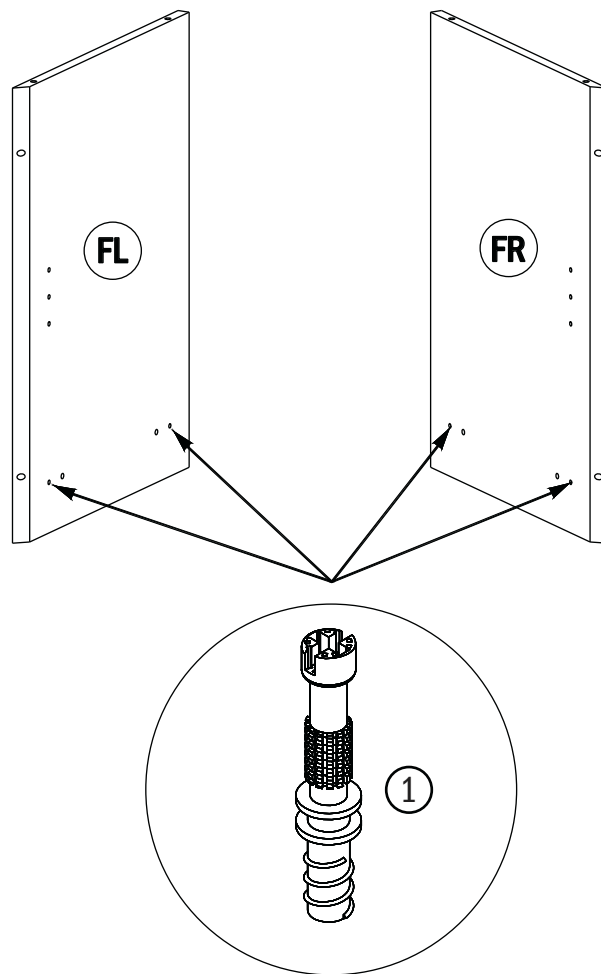

**NOTE:** Please review the “Cam Assembly System” page to properly fasten Cam bolts.

# INSERT CAMS

 2

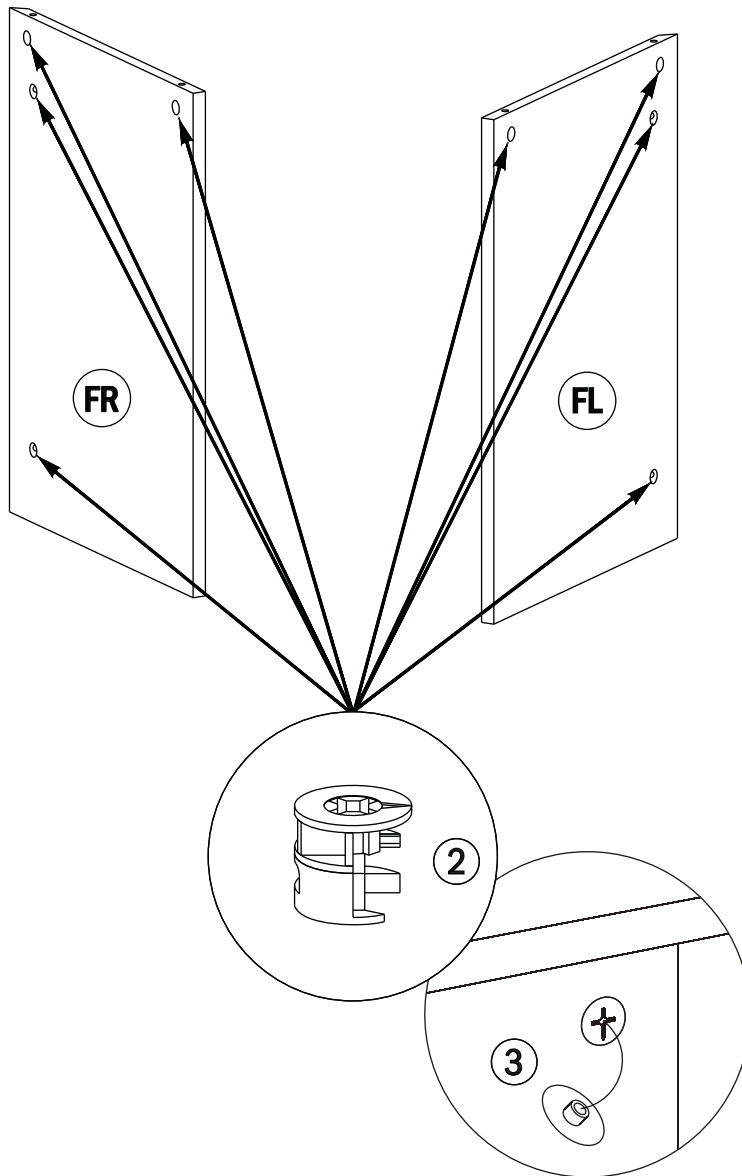


Apply Cam Caps after  
tightening Cams.

**NOTE:** Please review the “Cam Assembly System” page to properly insert Cams.



# INSERT CAMS

 3

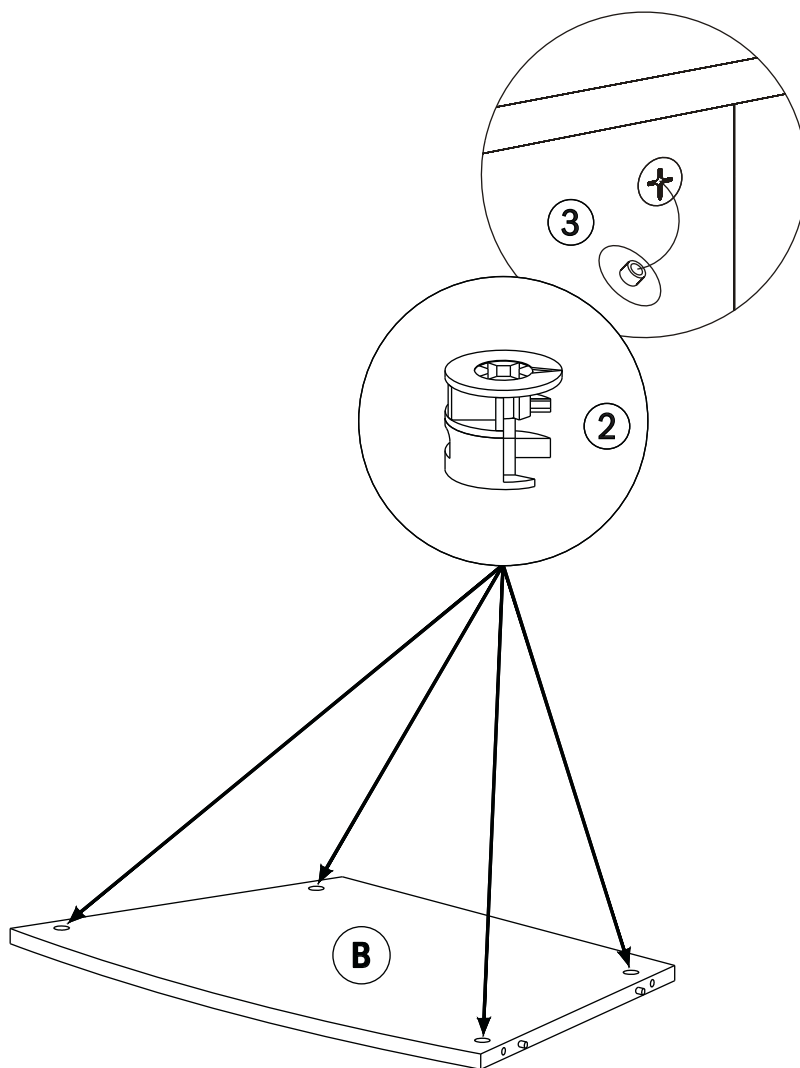


Apply Cam Caps after tightening Cams.

**NOTE:** Please review the “Cam Assembly System” page to properly insert Cams.

# ATTACH CAM BOLTS

 
4

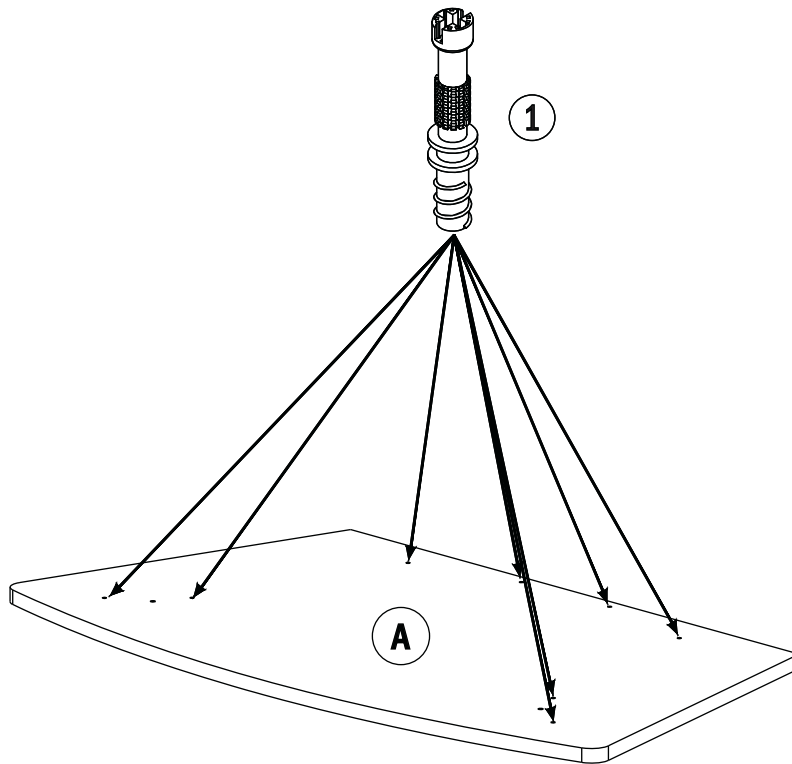

**NOTE:** Please review the “Cam Assembly System” page to properly fasten Cam bolts.

# INSERT CABLE MANAGEMENT CAPS, WALL BRACKET, & INSERT CAMS

 5

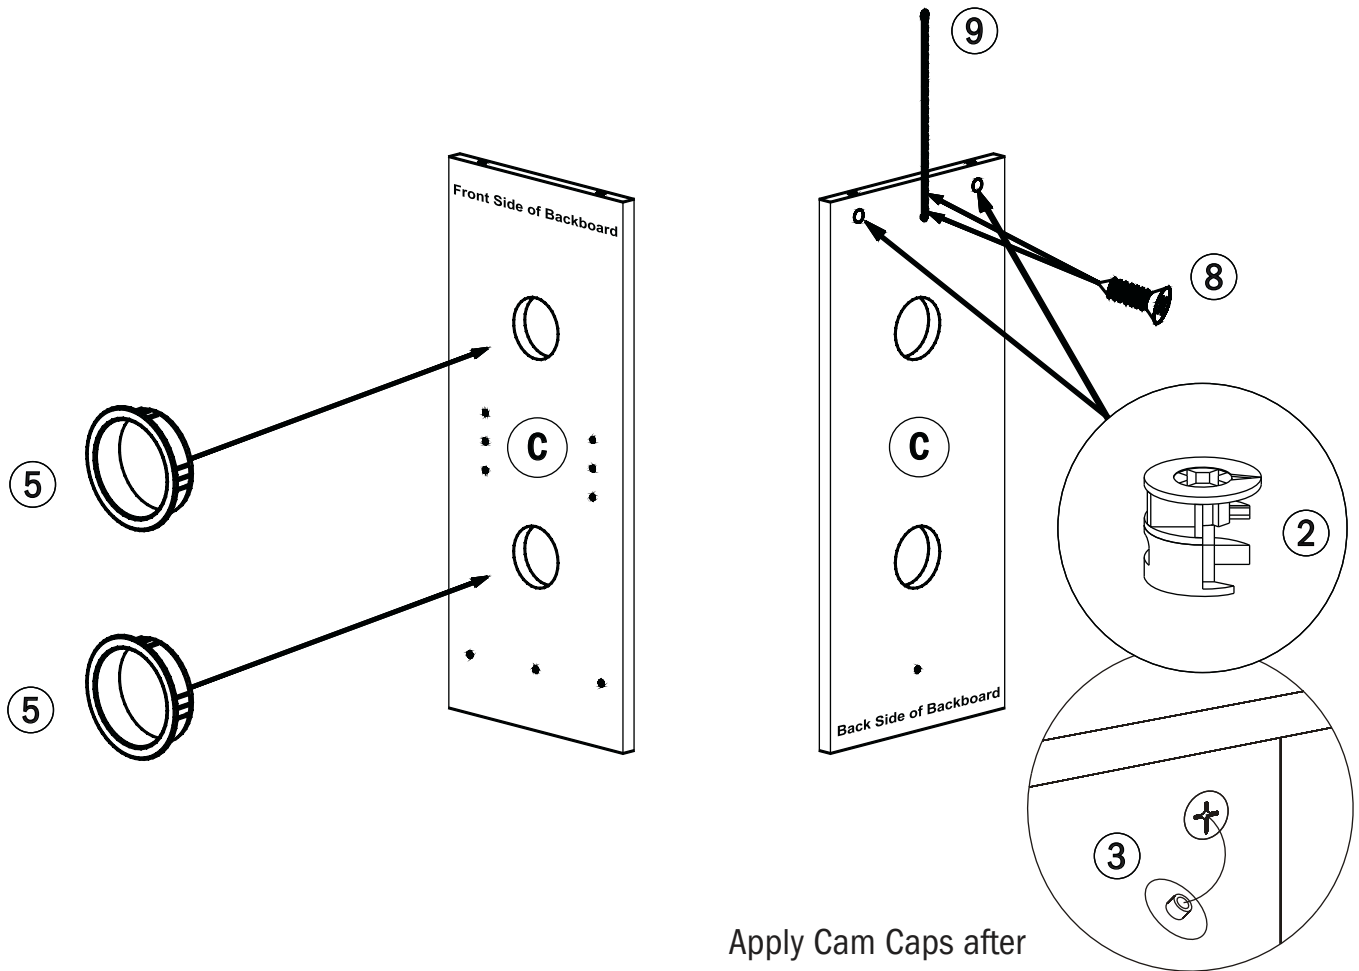


Apply Cam Caps after tightening Cams.

**NOTE:** Please review the “Cam Assembly System” page to properly insert Cams.

# INSERT CAMS

 6

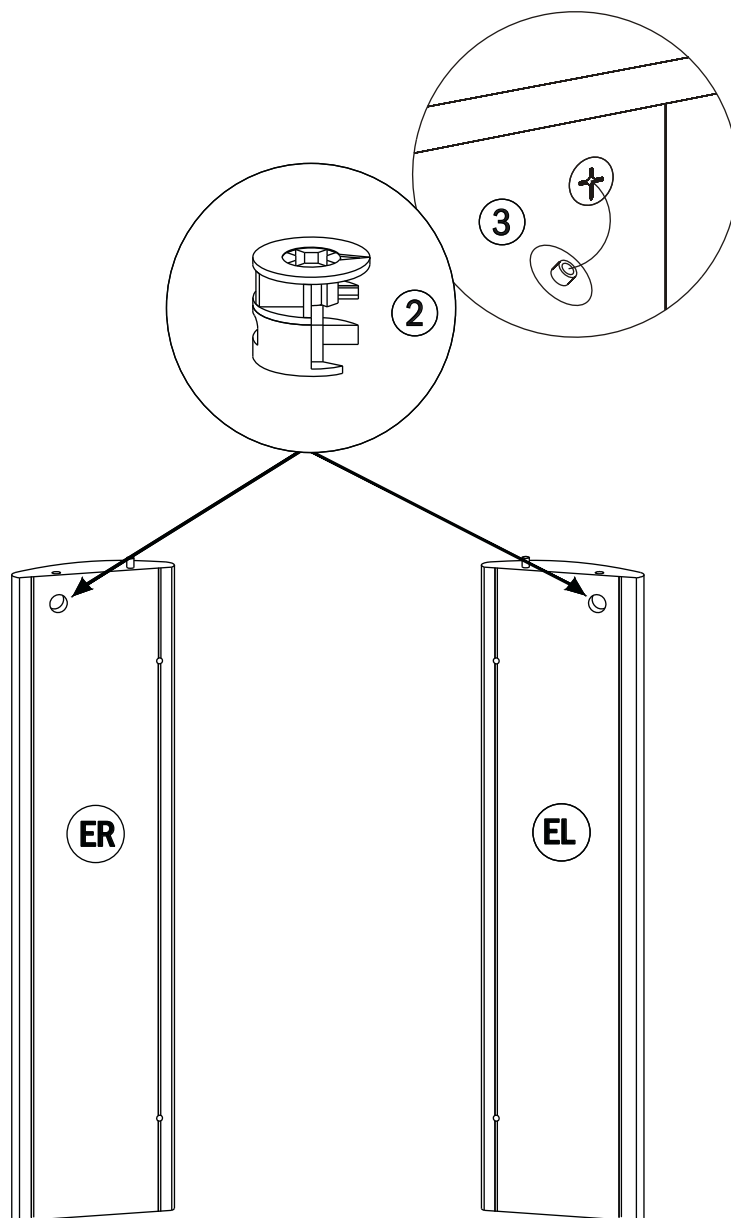


Apply Cam Caps after tightening Cams.

**NOTE:** Please review the “Cam Assembly System” page to properly insert Cams.

# ATTACH CAM ANGLE DOWELS

 7

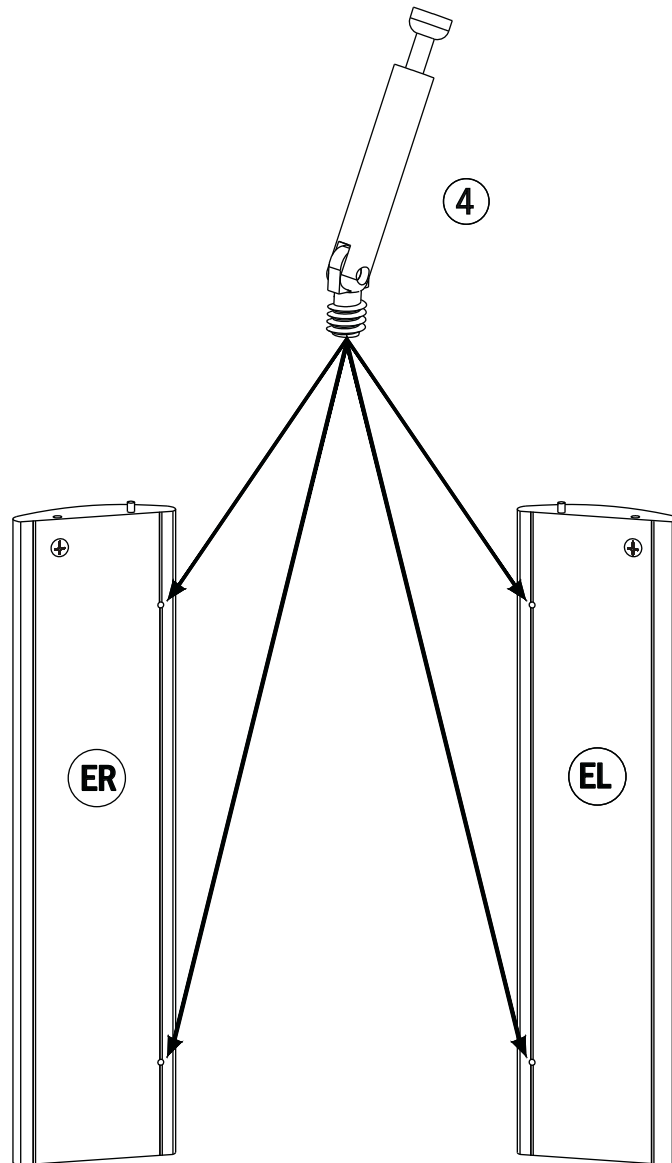

**NOTE:** Please review the “Cam Assembly System” page to properly fasten Cam Angle Dowels bolts.


# ATTACH FRONT SUPPORTS

 8



## ATTENTION !

THE PLASTIC PROTECTION LAYER IS IN PLACE TO AVOID SCRATCHES DURING TRANSIT. PEEL OFF THE PROTECTION LAYER AROUND (ER & EL) BEFORE ATTACHING LEFT AND RIGHT FRONT SUPPORTS (ER & EL) TO SIDE SUPPORT (FR & FL).

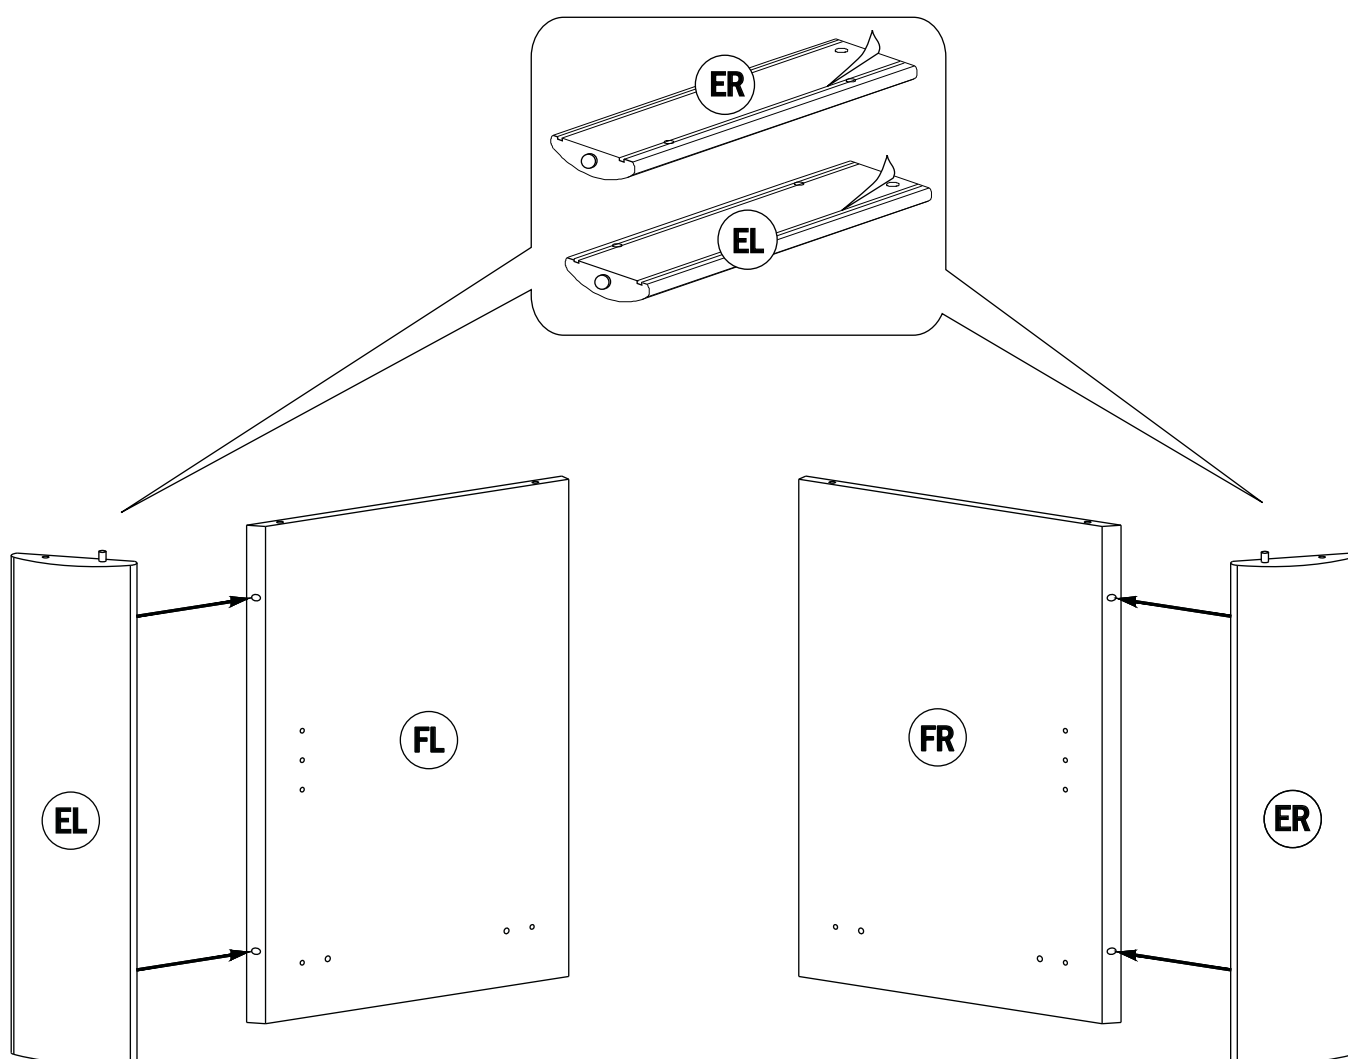


**NOTE:** Please review the “Cam Assembly System” page to properly fasten Cams.



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

# ATTACH BOTTOM SHELF

 
9

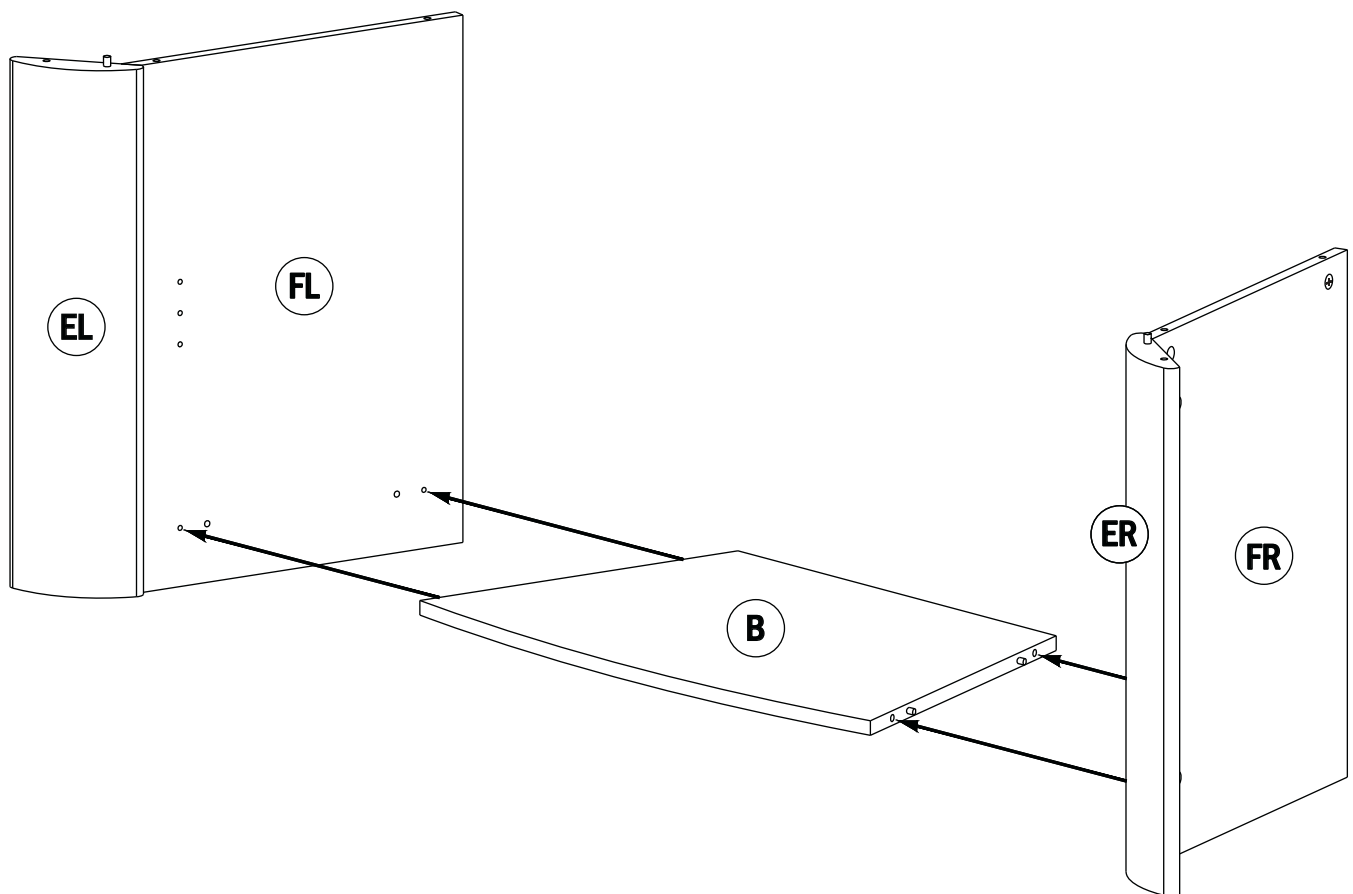

**NOTE:** Please review the “Cam Assembly System” page to properly fasten Cams.

# ATTACH BACKBOARD

 
10

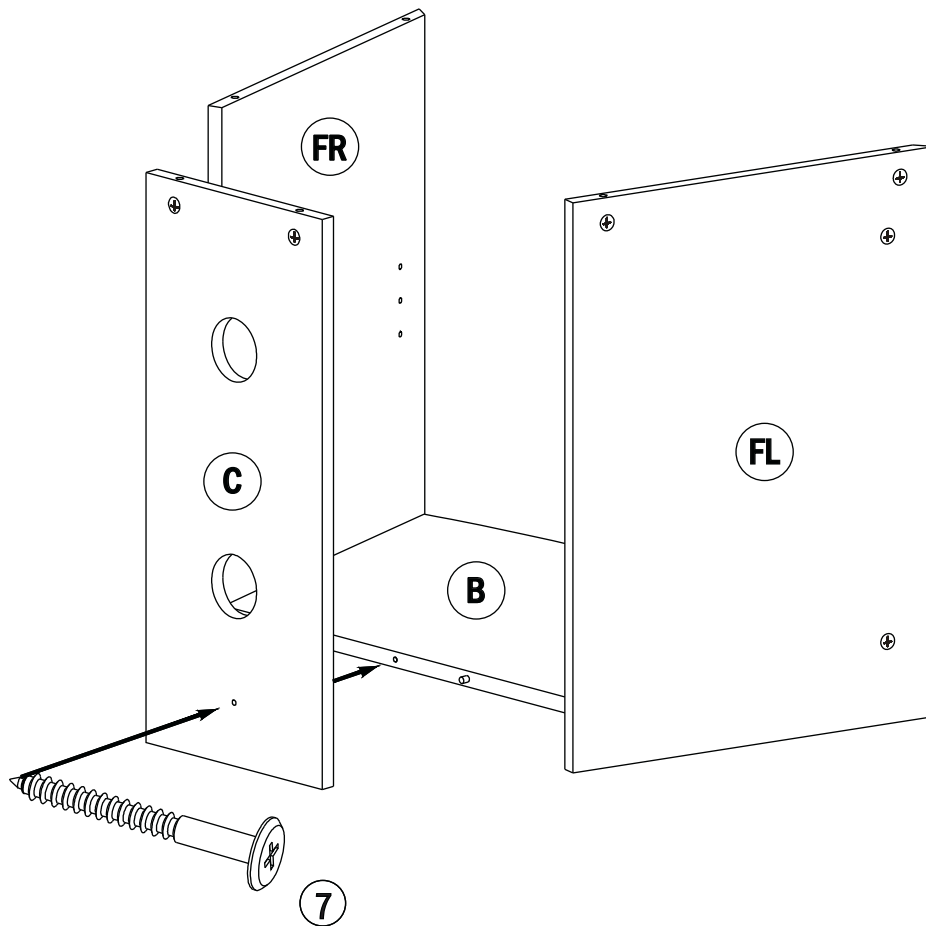



# ATTACH TOP BOARD

 
11

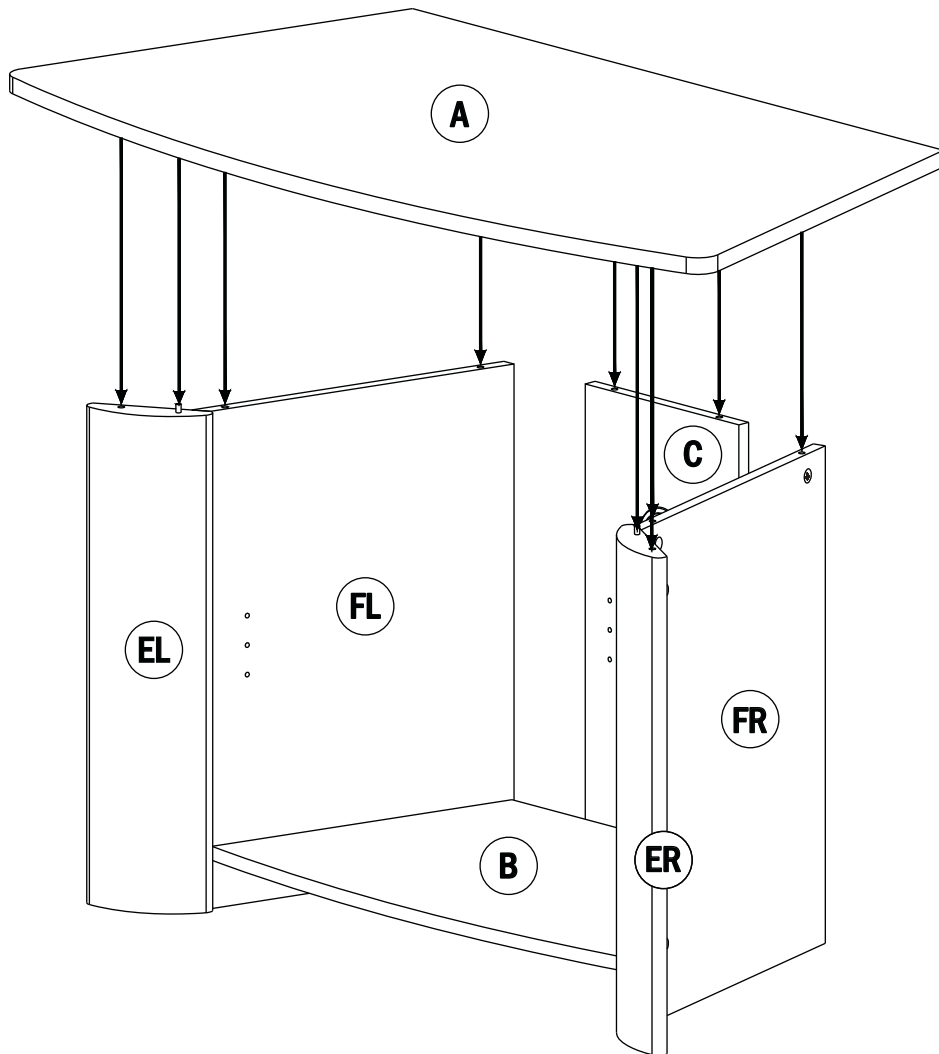

**NOTE:** Please review the “Cam Assembly System” page to properly fasten Cams.


# INSERT GLASS SHELF PINS

 12

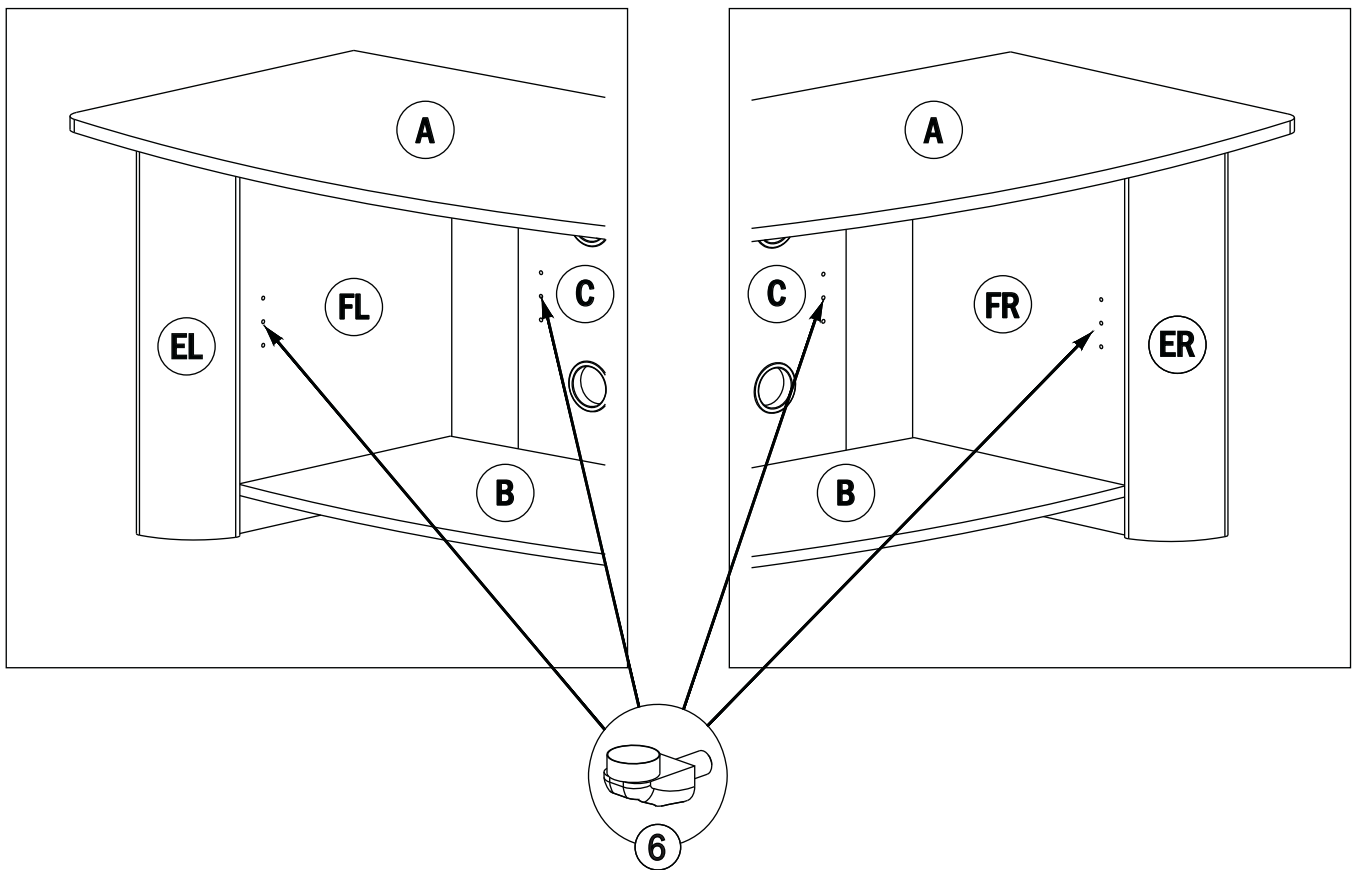


# SLIDE IN GLASS SHELF

 13

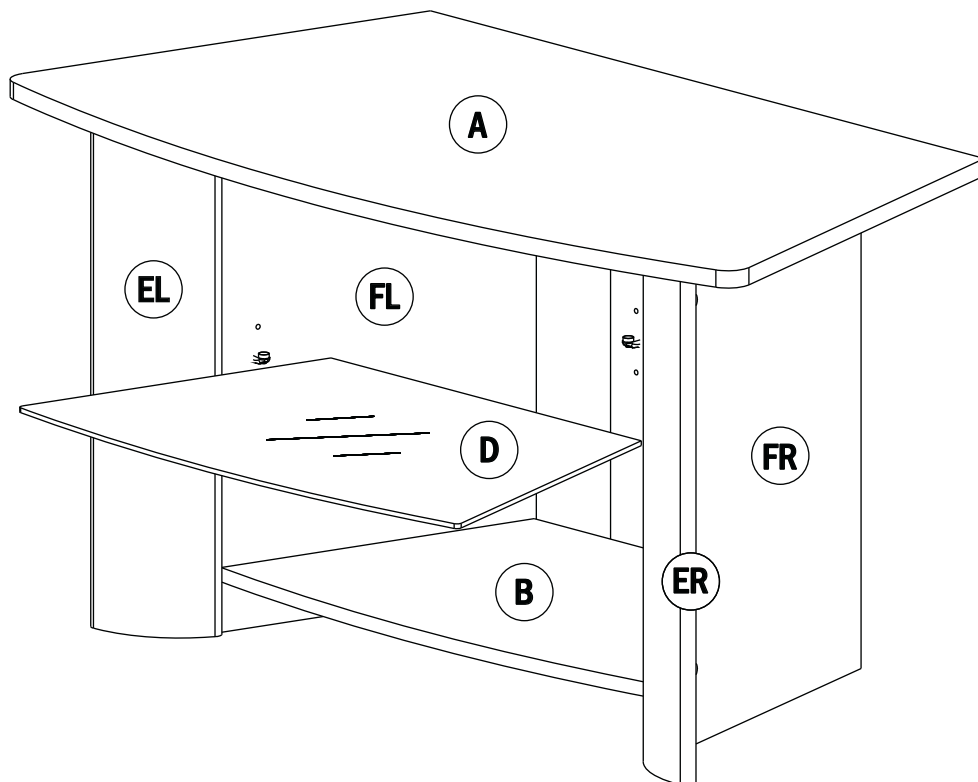


# ATTACH WALL BRACKET

 
14

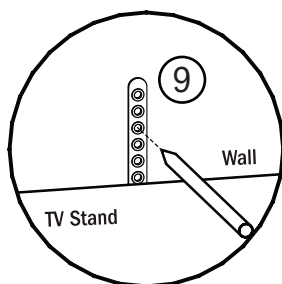

 
- Place TV Stand in desired position
- Mark position on wall with pencil

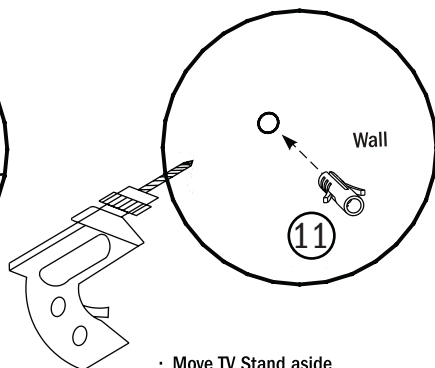

 - Move TV Stand aside
- Drill mark with Masonry Drill
- Attach Drywall Anchor to the wall

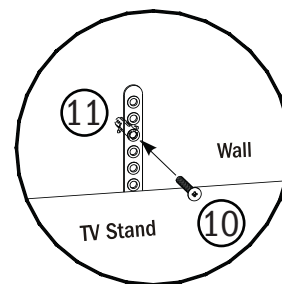

 - Move TV Stand back to its desired position
- Tighten screw using screwdriver

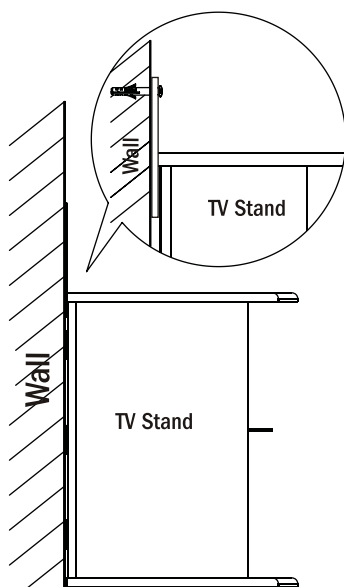

This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the TV Stand. **The anti-tipping hardware must be used to avoid this potential tipping issue.**

Mount to a wall with or without a baseboard