

Slam Brands and LevelUp products are guaranteed to be free from defect and missing parts.



Please Call First!

DO NOT RETURN TO STORE

To order missing or replacement parts, please call

Toll Free: 1 (866) 632-6632 support@slambrands.com

Business Hours: M-F 8am-5pm PST

07.08 A

LEVELUPTM

CURVE GAMING STATION FOR XBOX 360[®]

Assembly Instructions

SB Item #222690-00

JCP Lot#794-1029

UPC #8-44-892-00017-1

**PLEASE READ & KEEP
FOR FUTURE REFERENCE**

LOT # _____

Date of Purchase _____

This product is manufactured under license from Microsoft Corporation. Microsoft, Xbox, Xbox 360 and the Xbox logos are either registered trademarks or trademarks of Microsoft Corporation in the U.S. and/or other countries and are used under license from Microsoft. Xbox 360 Game system, controllers, Guitar and games not included.



LICENSED FOR



XBOX 360[®]

IMPORTANT INFORMATION

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



This Gaming Station is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than maximum weights indicated may result in instability causing possible injury.

SB Item #222690-00 / JCP Lot #794-1029

Distributed / Manufactured by:

Slam Brands, Inc.

Country of Origin: Indonesia

 
Manufacture Date: 08.01.08

Maximum Load Weights:

Accessory Dock:
20lb./9kg.

Component Shelves:
10lb./4.5kg.

Console Bay:
20lbs./9kgs.

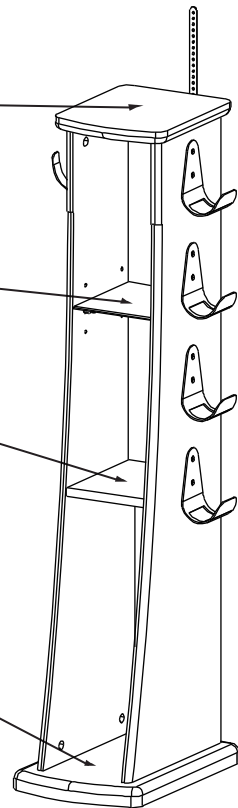

2260 152nd Ave NE Redmond, WA 98052 www.slambrands.com

Business Hours: M-F 8am-5pm PST Toll Free: 1 (866) 632-6632 Email: support@slambrands.com



Toll Free: 1 (866) 632-6632 support@slambrands.com www.slambrands.com

IMPORTANT INFORMATION

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION. PLEASE READ AND KEEP FOR FUTURE REFERENCE.

SAFETY FIRST

 
- ! When moving Gaming Station, remove AV equipment first. Do NOT move Gaming Station with console or components inside.
- ! To avoid injury, assemble Gaming Station in final location. Moving the Gaming Station after assembly is not recommended.
- ! Ensure that all parts and hardware are located before assembly.

ANTI-TIP HARDWARE

This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the Gaming Station. Slam Brands, Inc. Is not responsible for any personal injury or damage to Gaming Station, components, or household effects resulting from improper use of this product.


ASSEMBLY OVERVIEW

The parts and hardware shown are NOT actual size.

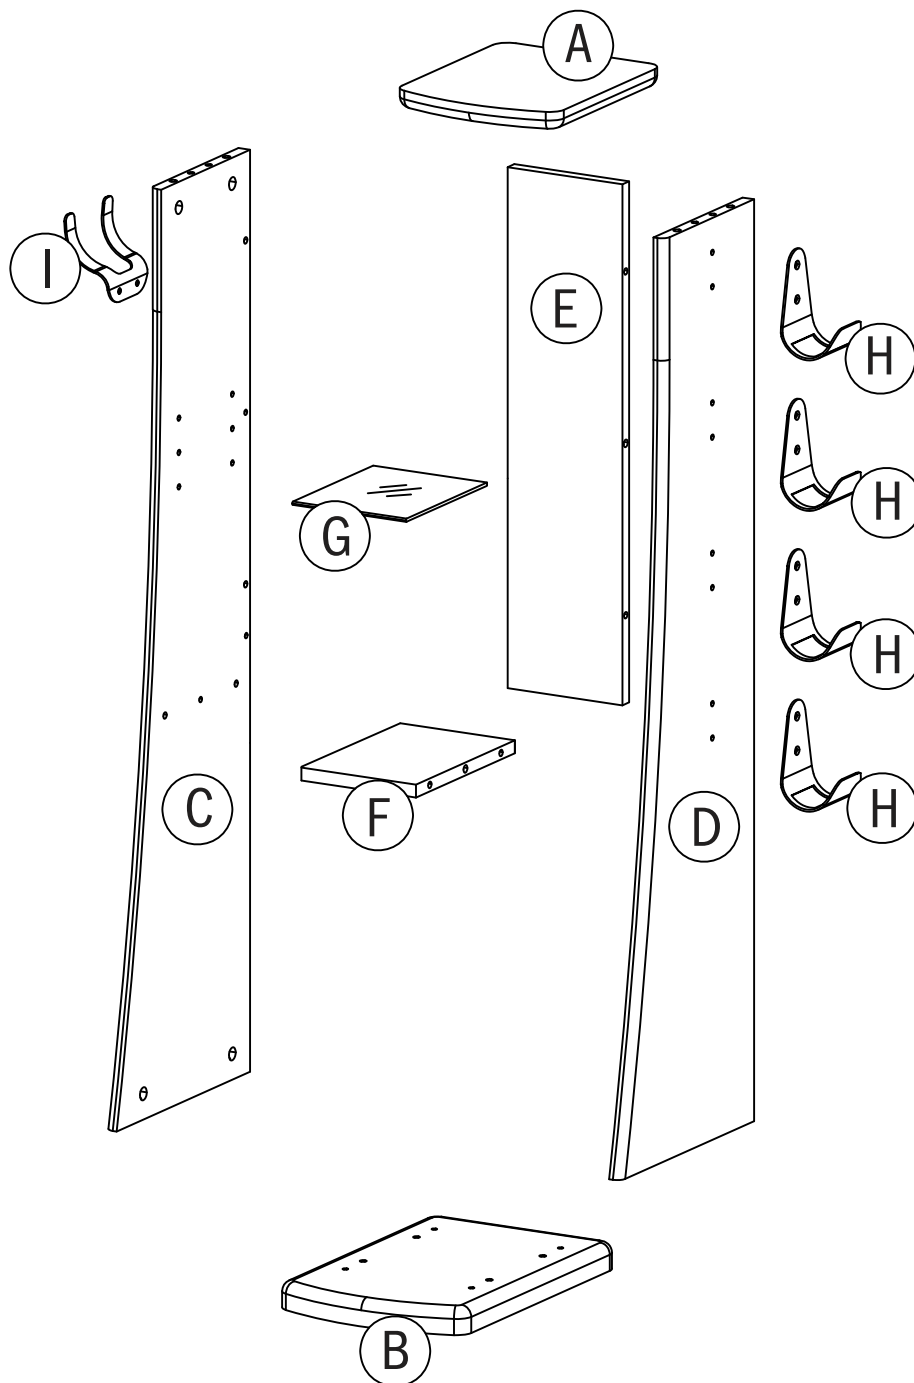


PARTS IDENTIFICATION

 
The parts and hardware shown are NOT actual size.




Ⓐ Top Board (1)
T00863

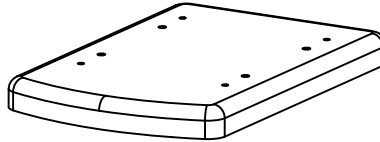 


Ⓑ Base (1)
T00864

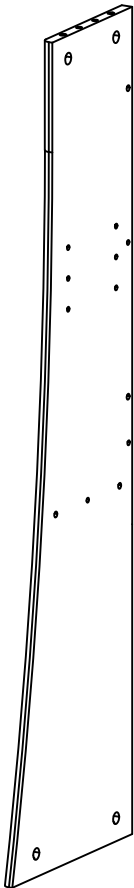 


Ⓒ Left Side Support (1)
T00865

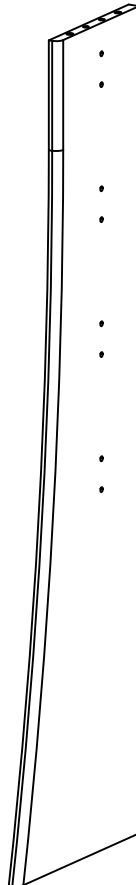 

Ⓓ Right Side Support (1)
T00866

 

Ⓔ Backboard (1)
T00867

 

Ⓕ Shelf (1)
T00868



Ⓖ Acrylic Shelf (1)
T00869



Ⓗ Controller Hook (4)
T00870



Ⓖ Guitar Hook (1)
T00871

HARDWARE IDENTIFICATION

 
The parts and hardware shown are NOT actual size.




- ① Cam Bolt (12)
7.5 x 35mm
H00106




- ② Cam (12)
ø 12.5 x 11mm
H00245




- ③ Sticker Cover (12)
ø 17.6mm
H00557

 

- ④ Dowel (16)
6 x 30mm
H00091

 

 - ⑤ Shelf Support (4)
26.5 X 12.5mm
H00225



- ⑥ Phillips Head Screw (12)
6 X 9.5mm
H00556



- ⑦ Wall Bracket (1)
230 x 11 x 2mm
H00041



 
- ⑧ Phillips Head Screw (1)
8 x 38mm
H00056




- ⑨ Wall Anchor (1)
5.8 x 26.5mm
H00108

THE “CAM” ASSEMBLY SYSTEM

THIS PAGE IS REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES.
BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

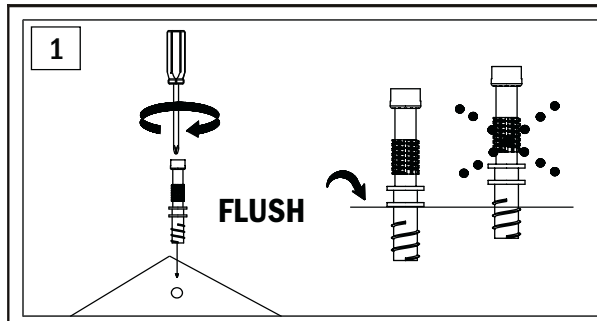


 Screw Cam Bolts ① into designated holes.

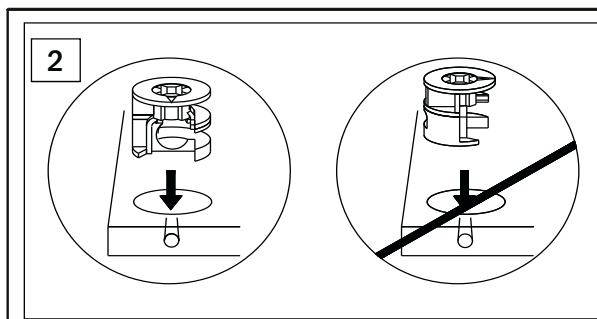


Press Cams ② into designated holes.

 Arrow on Cams should face the hole at the edge of the board.

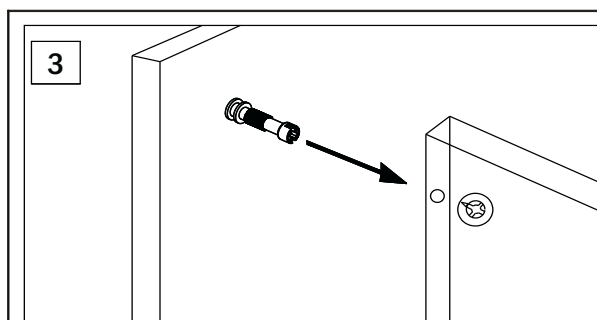

 
Align Cam Bolt with hole at Cam and press boards together.

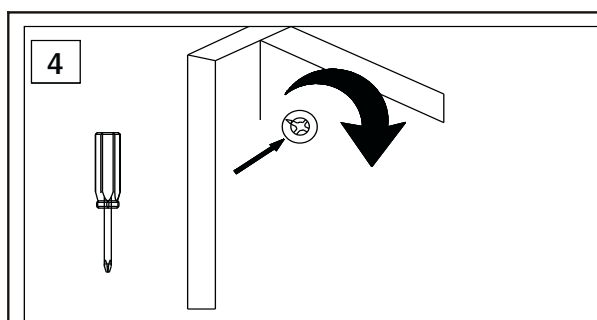


Turn Cam 1/2 turn clockwise to lock.

THE “DOWEL” ASSEMBLY SYSTEM

 THIS PAGE IS REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES.
BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

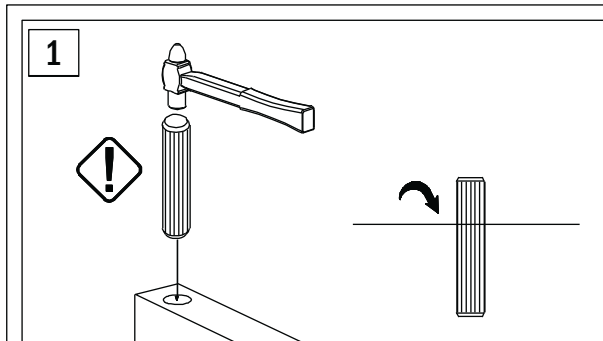

 Tap Dowels ④ gently into designated holes. A small amount of glue may be applied to the inside of the hole to secure dowel.

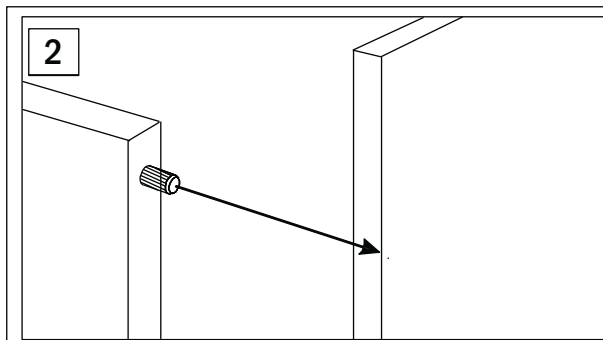


Align Dowel with designated hole and press boards together.



PREPARE LEFT SIDE SUPPORTS FOR ASSEMBLY

 
1

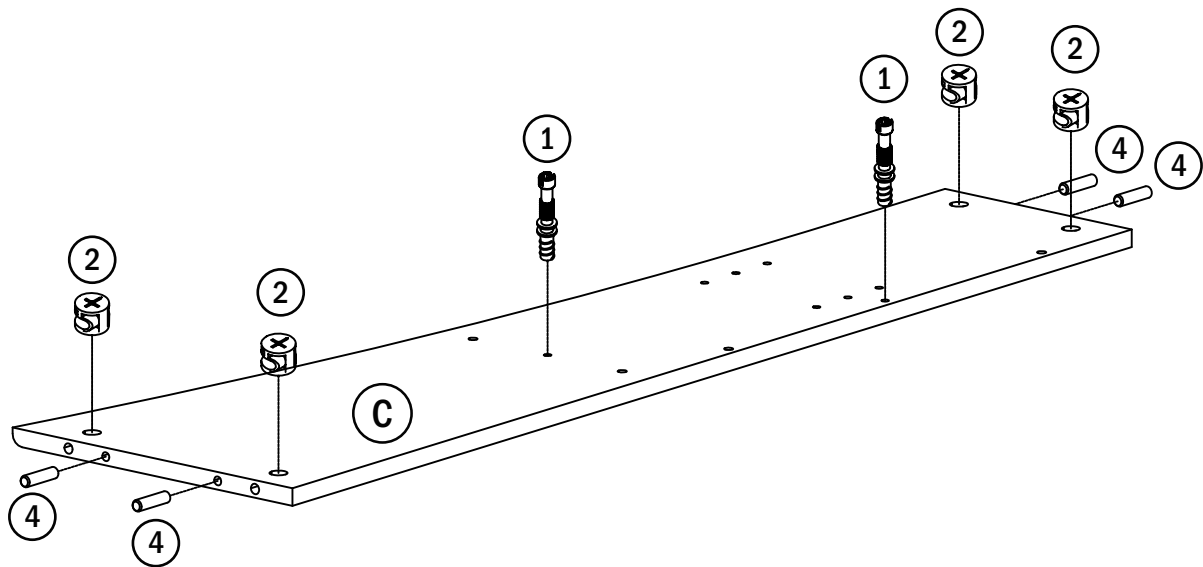

NOTE: Please review the Cam and Dowel Assembly System pages to properly fasten Cam Bolts and Dowels.

PREPARE RIGHT SIDE SUPPORTS FOR ASSEMBLY

 2


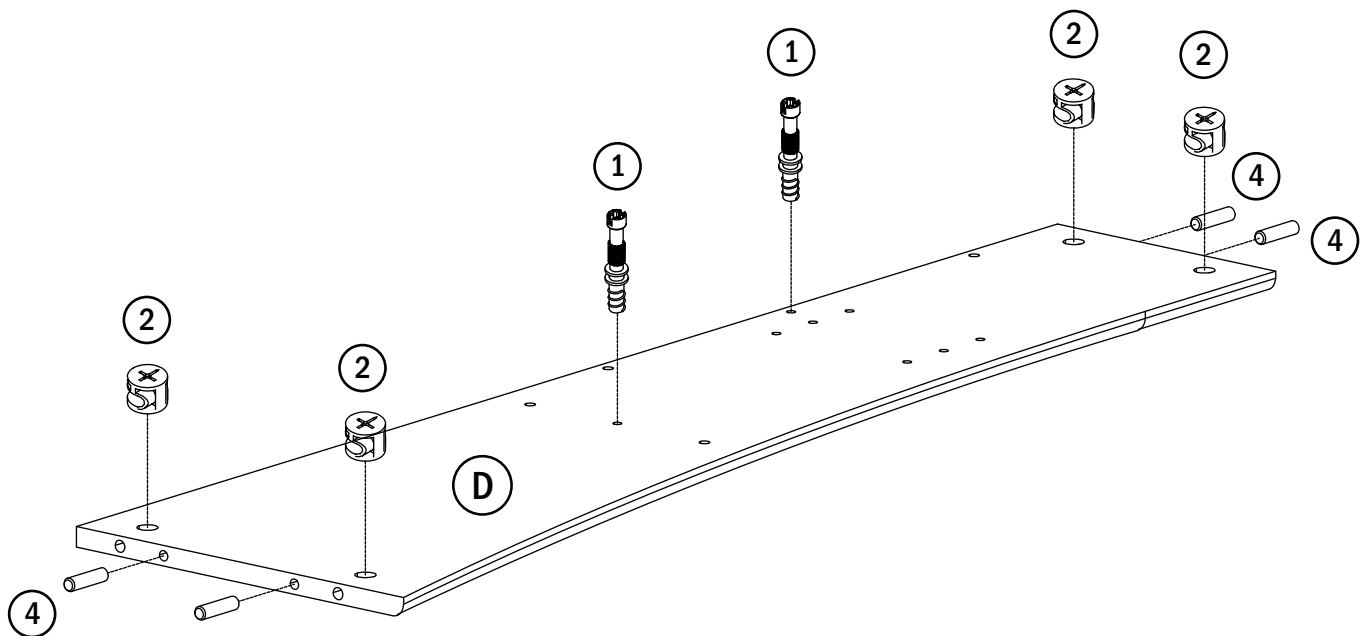


NOTE: Please review the Cam and Dowel Assembly System pages to properly fasten Cam Bolts and Dowels.



PREPARE SHELF & BACK BOARD FOR ASSEMBLY

  
3

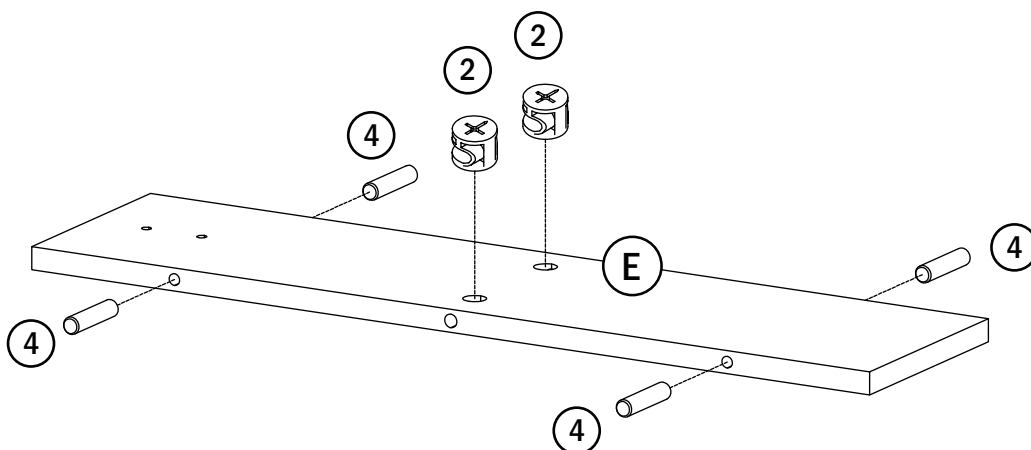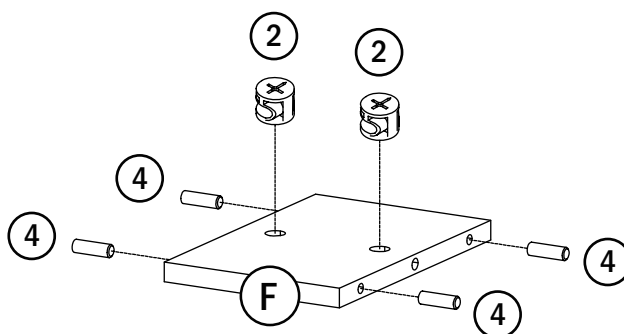



NOTE: Please review the Cam and Dowel Assembly System pages to properly fasten Cam Bolts and Dowels.

ATTACH BACK BOARD & SHELF TO LEFT SIDE SUPPORT

 
4

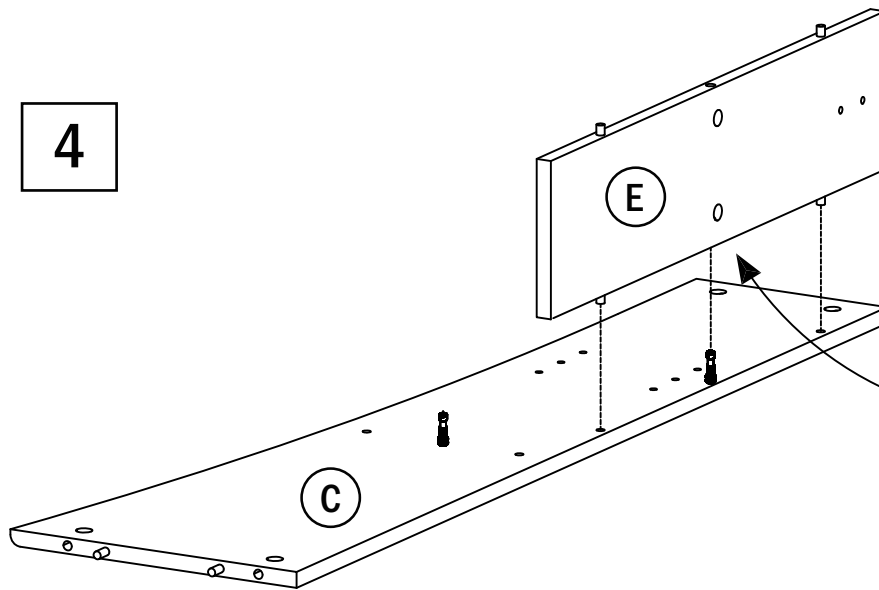

  
Don't forget to lock the Cams on
the backside of (E)

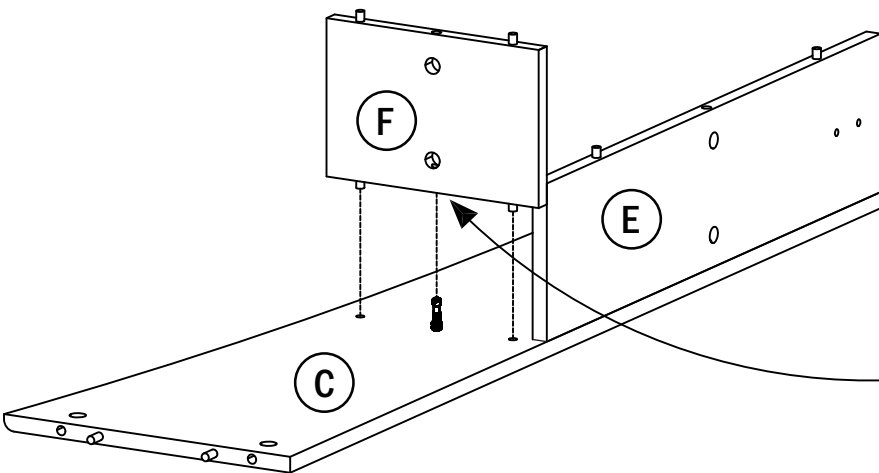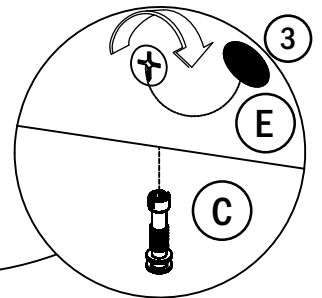

 Don't forget to lock the Cams on
the underside of (F)

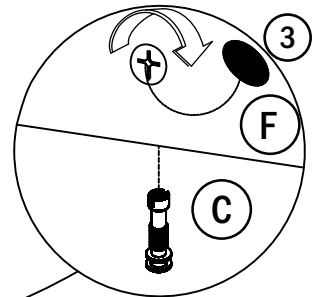

 Place Sticker Cover (3) over
each of the (2) Cams.


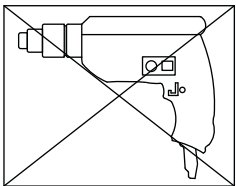


NOTE: Please review the Cam and Dowel Assembly System pages to properly fasten Cam Bolts and Dowels.



ATTACH RIGHT SIDE SUPPORT TO BACK BOARD & SHELF

  5

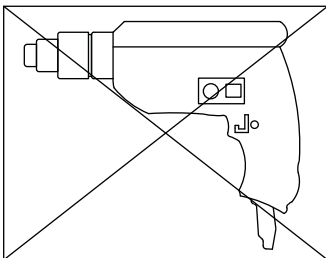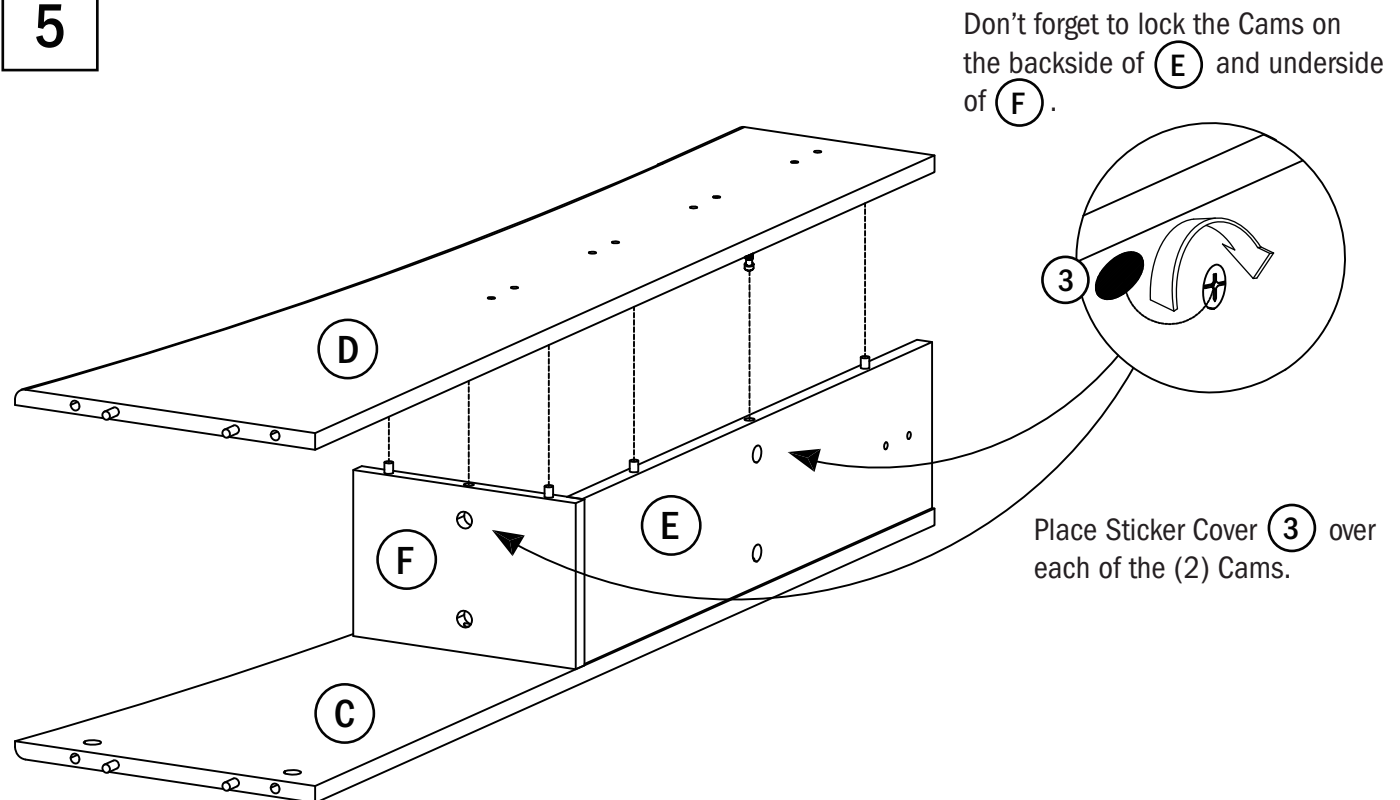


NOTE: Please review the Cam and Dowel Assembly System pages to properly fasten Cam Bolts and Dowels.




PREPARE BASE FOR ASSEMBLY & ATTACH TO SIDE SUPPORTS

6

 Don't forget to lock the Cams on
the inside of (C) & (D) .

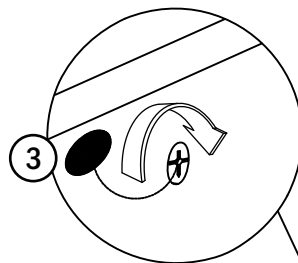

   
Place Sticker Cover (3) over
each of the (4) Cams.

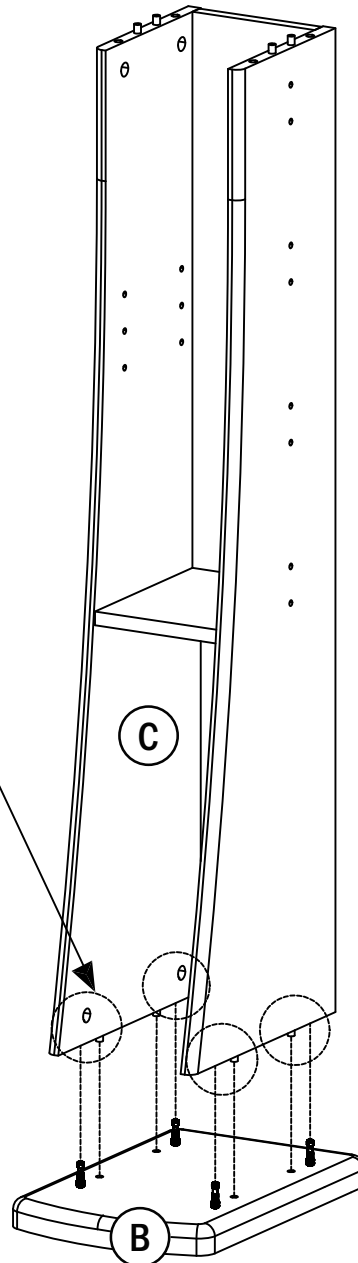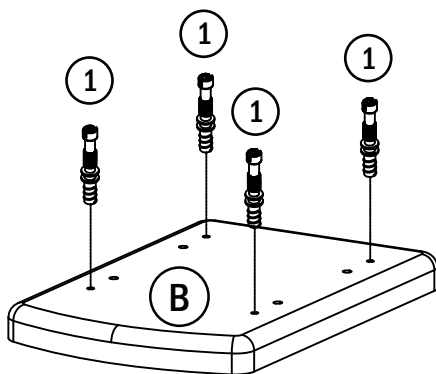

NOTE: Please review the Cam and Dowel Assembly System pages to properly fasten Cam Bolts and Dowels.



 
PREPARE TOP FOR ASSEMBLY & ATTACH TO SIDE SUPPORTS

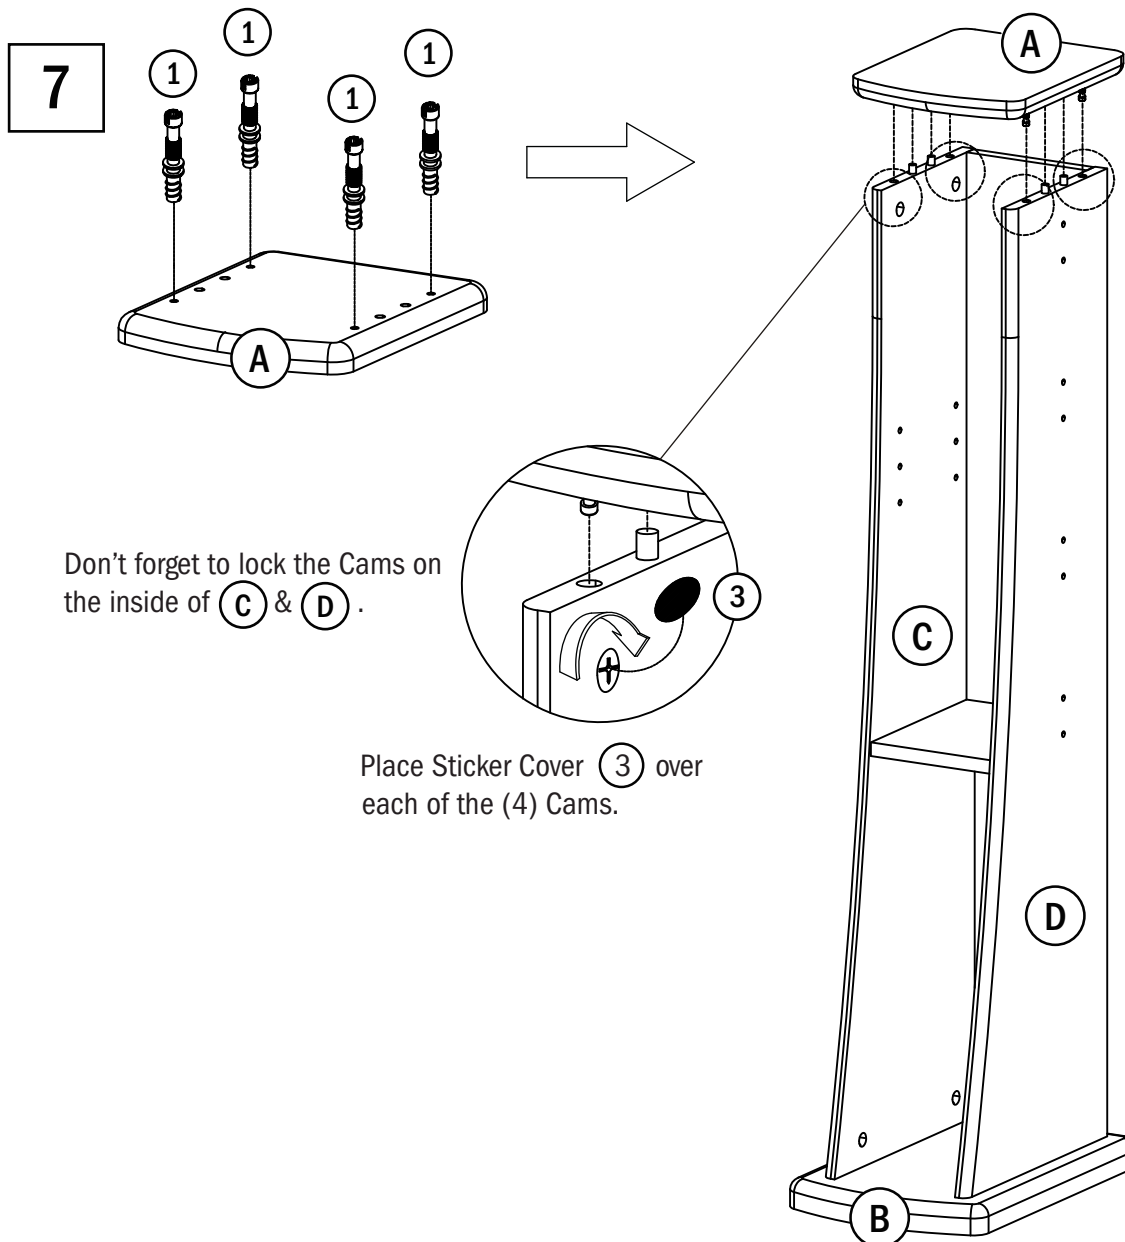


NOTE: Please review the Cam and Dowel Assembly System pages to properly fasten Cam Bolts and Dowels.

ATTACH GUITAR HOOK & CONTROLLER HOOKS TO SIDE SUPPORT

 8

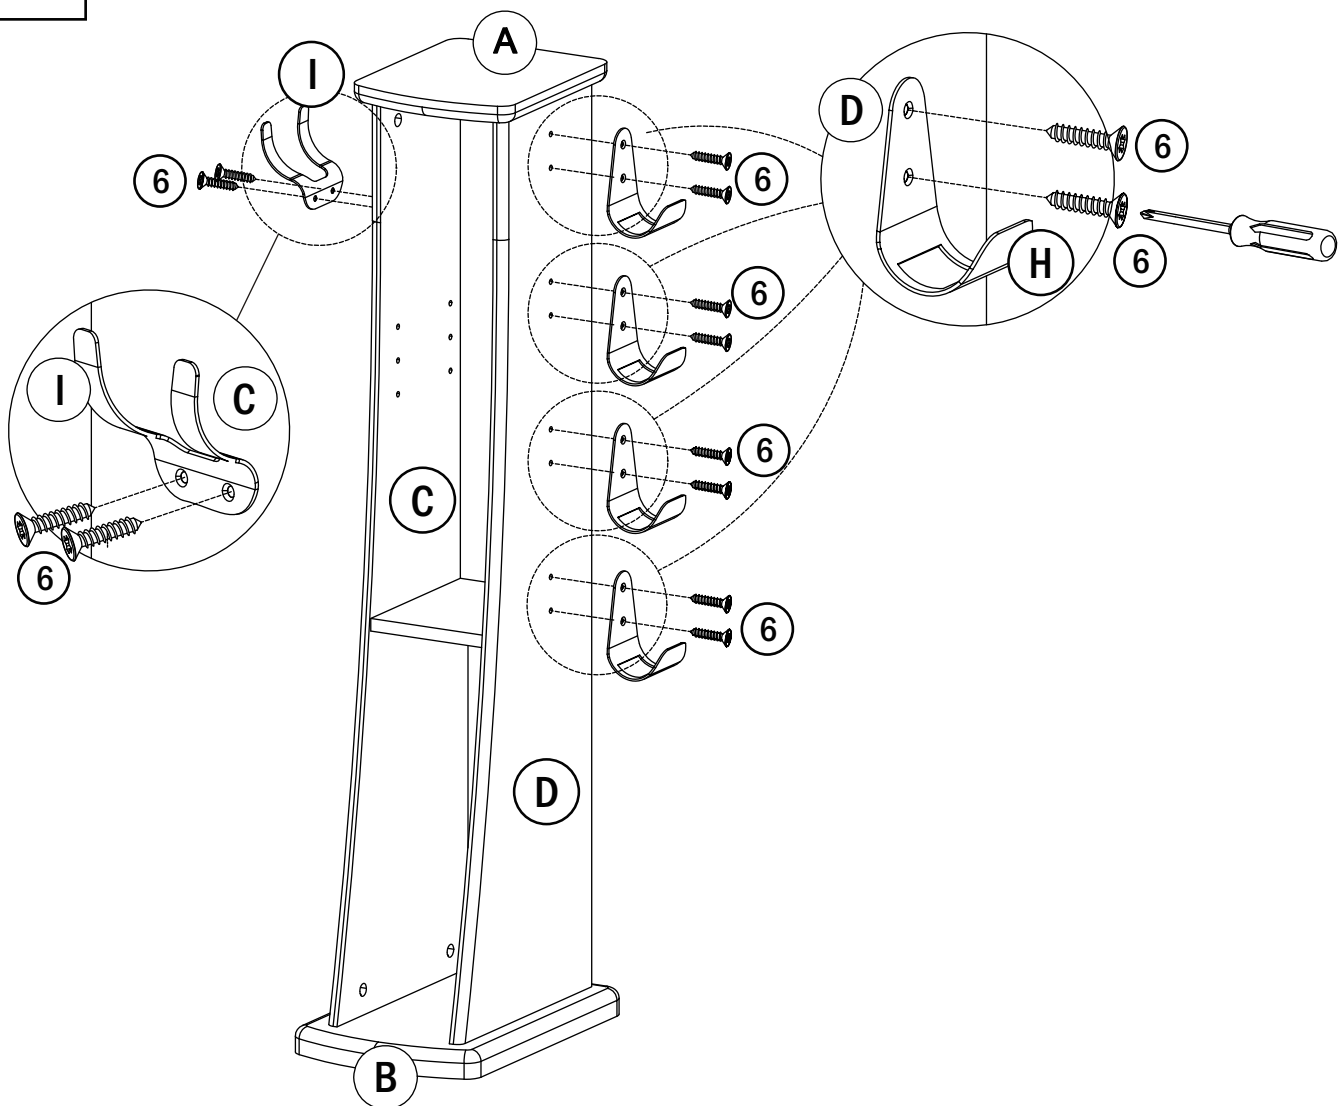


 INSERT SHELF SUPPORTS & PLACE ACRYLIC SHELF

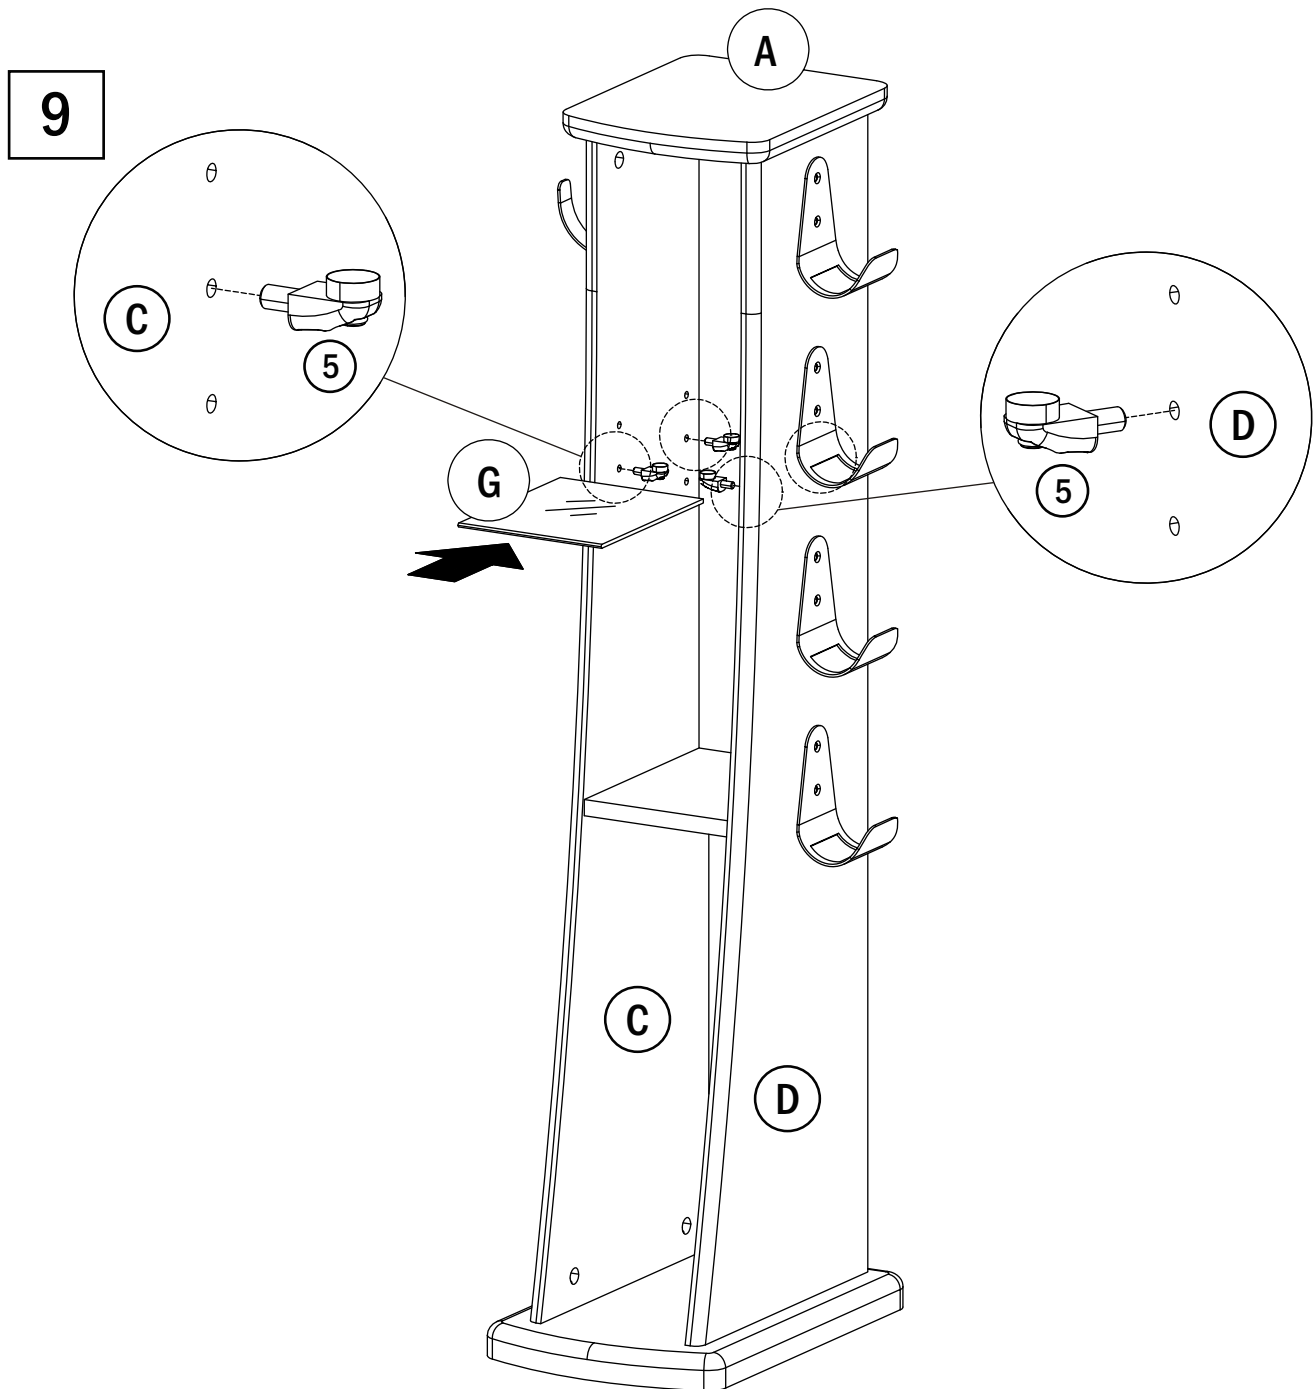


ATTACH WALL BRACKET TO BACK BOARD

 
10

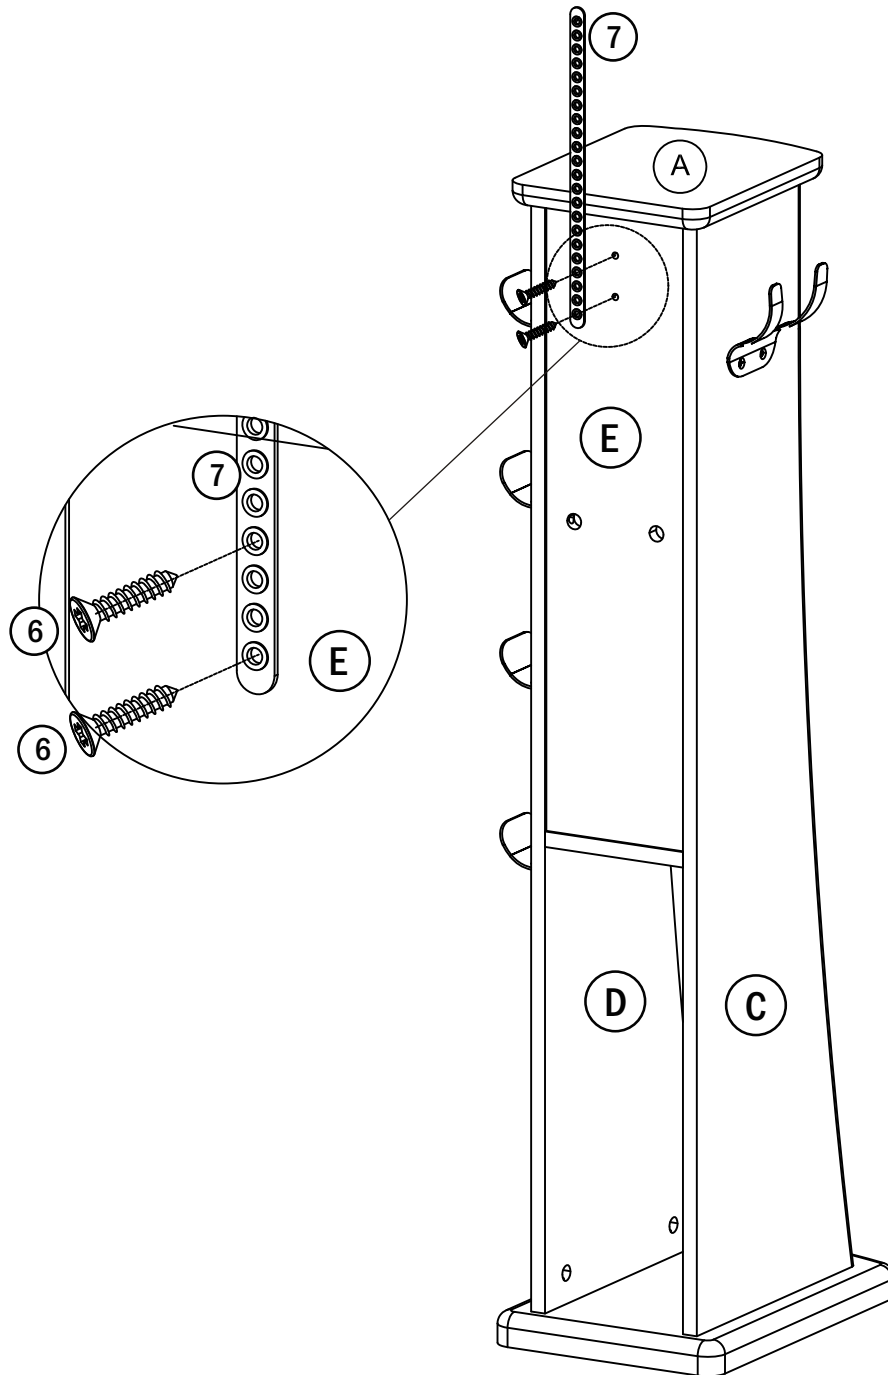


SECURE GAMING STATION TO WALL

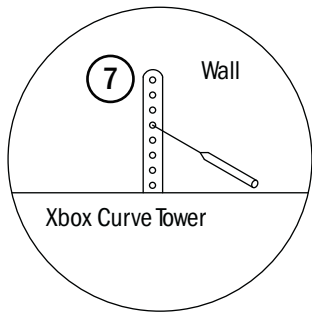 

 
Place Xbox Curve Tower in desired position.
Mark position on wall with pencil.

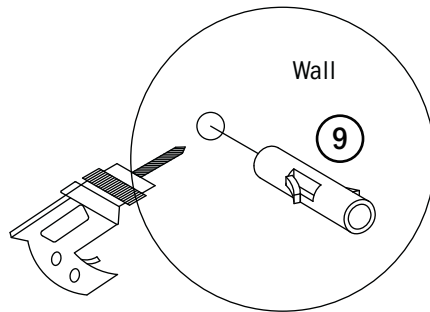

 Move Xbox Curve Tower aside.
Drill hole at mark with Masonry Drill.
Insert Drywall Anchor into hole.

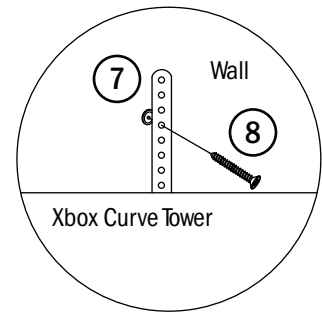

 Move Xbox Curve Tower back to its desired position.
Screw through one of the holes in the Wall
Bracket and into the Drywall Anchor.

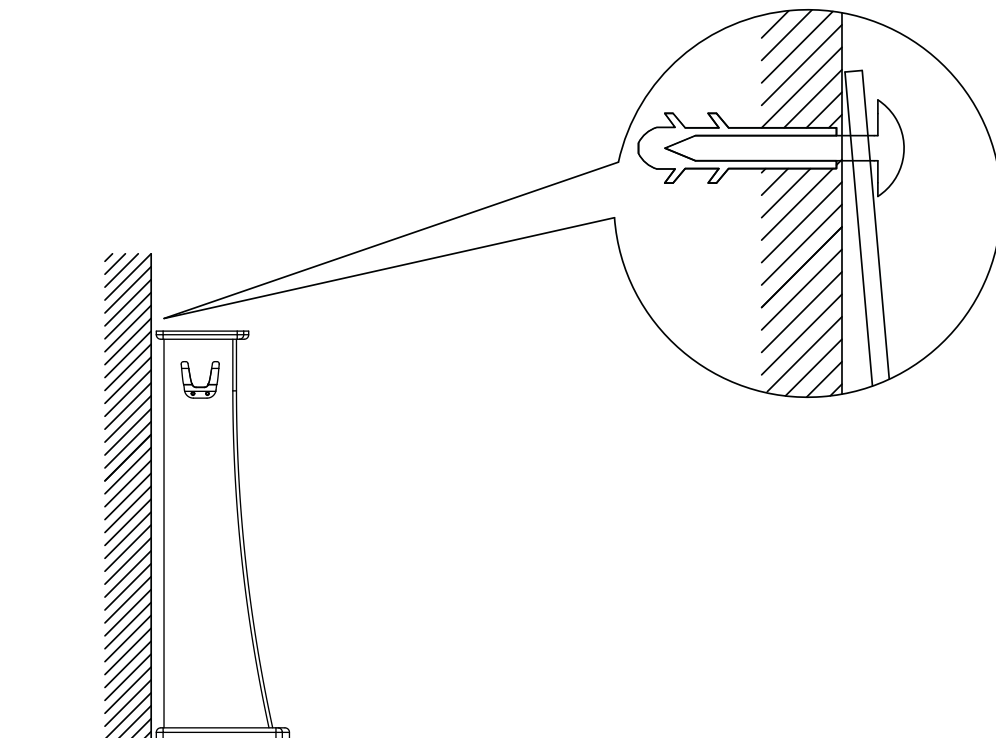

This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the Gaming Station. Slam Brands, Inc. is not responsible for any personal injury or damage to Gaming Station, components, or household effects resulting from improper use of this product.



Please Call First!

DO NOT RETURN TO STORE

To order missing or replacement parts, please call

Toll Free: 1 (866) 632-6632 support@slambrands.com

Business Hours: M-F 8am-5pm PST

