



Please Call First!

DO NOT RETURN TO STORE

Need help with assembly? Missing or broken parts?

Business Hours: M-F 8am-5pm PST

Toll Free: 1 (866) 632-6632 support@slambrands.com

Assembly Instructions

03.08 B

Costco Item #220286

SB #222448

CAMILLE

Television Stand



Toll Free: 1 (866) 632-6632 support@slambrands.com www.slambrands.com



IMPORTANT INFORMATION

 
THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

CAUTION!

This TV Stand is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than maximum weights indicated may result in instability causing possible injury.

SB Model: 222248 / Costco #220286
Distribution / Manufacturer: Slam Brands, Inc.
Country of Origin: China
Manufacture Date: 04.01.08

TV Stand Top Surface
Accommodates Most:




Flat Panel
(152.4cm)

Maximum Load Weight:

Top Shelf: 200lb./90.7kg.

Maximum Load Weight:

Component Shelves: 50lb/22.6kg.

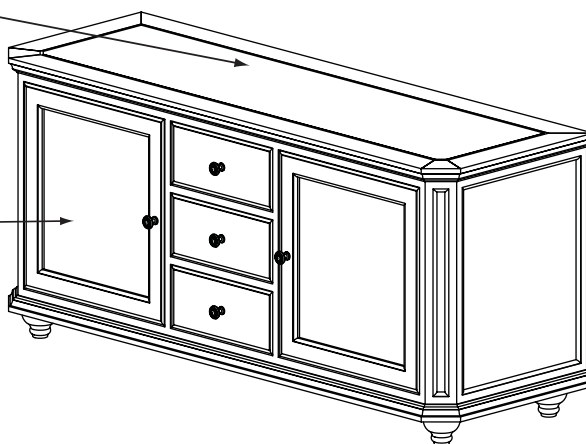

2260 152nd Ave NE Redmond, WA 98052 www.slambrands.com
Toll Free: 1 (866) 632-6632 Email: support@slambrands.com Business Hours: M-F 8am-5pm PST



THANK YOU for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the Parts List (below):

FURNITURE CARE: Dust with a soft cloth following the grain pattern of the wood. Dust often to remove the everyday abrasive particles from the wood surfaces. Before dusting, moisten cloth lightly with a spray product. Wood finishes also benefit from an occasional waxing or polishing.

| | PARTS LIST | QTY |
|---|---------------------------------------|-----|
| A | CAMILLE TV STAND | 1 |
| B | BACK PANEL T00596 | 2 |
| C | SIDE GLASS DOOR PANELS T00597 | 2 |
| D | SIDE WOOD DOOR PANELS T00598 | 2 |
| E | SIDE SPEAKER CLOTH DOOR PANELS T00599 | 2 |
| F | LEGS T00600 | 4 |



STEP 1: INSTALL DOOR PANELS AND UNIVERSAL MEDIA TRAY

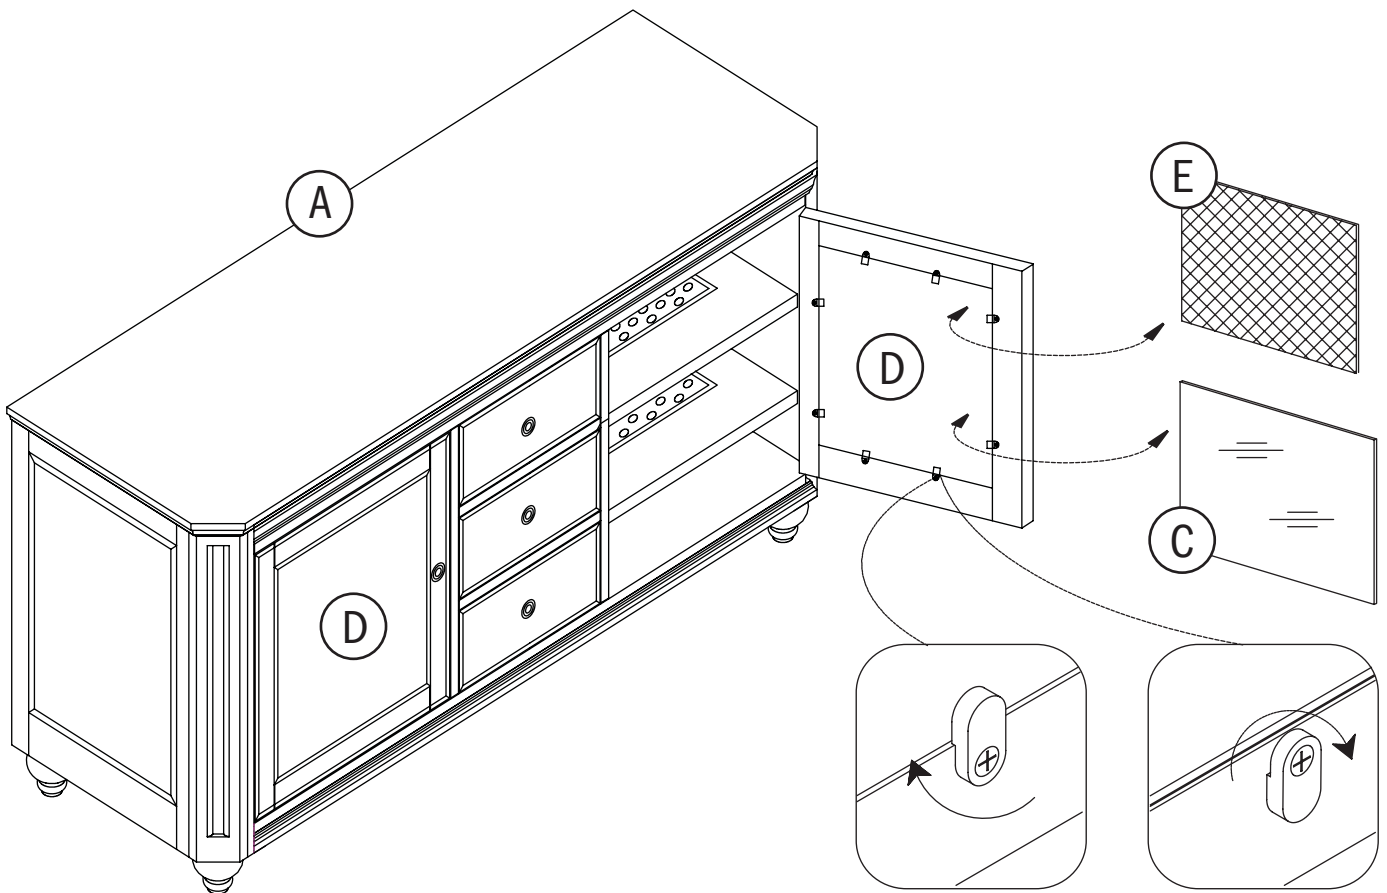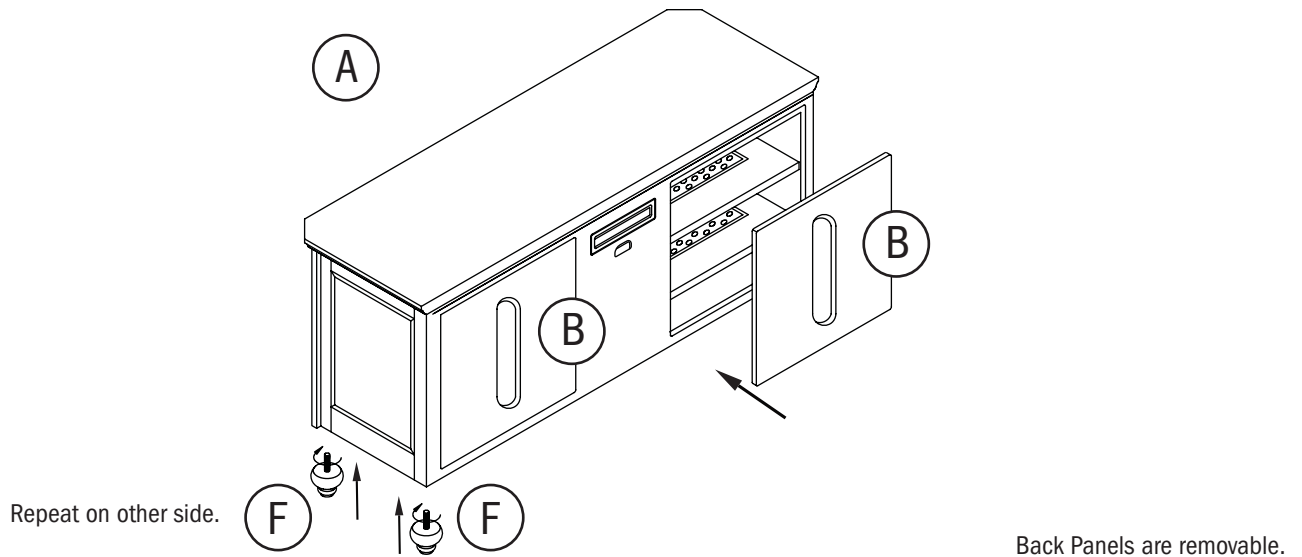

To change door panels, loosen the screws on the inside of the door and rotate the clips to allow for removal of the panel. Replace with desired panel, rotate clips to secure the panel within the door frame and tighten screws.