

Slam Brands and LevelUp products are guaranteed to be free from defect and missing parts.



Please Call First!

DO NOT RETURN TO STORE

To order missing or replacement parts, please call

Toll Free: 1 (866) 632-6632 support@slambrands.com

Business Hours: M-F 8am-5pm PST

Patents Pending.

07.08 B

TM
LEVELUP

Wii TOWER GAMING STATION FOR NINTENDO

Assembly Instructions

SB Item #222298-00

JCP Lot#794-1028

UPC #8-52836-00126-9



**PLEASE READ & KEEP
FOR FUTURE REFERENCE**

LOT # _____

Date of Purchase _____



IMPORTANT INFORMATION

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.



This Gaming Station is intended for use only with the products and maximum weights indicated. Use with other products or products heavier than maximum weights indicated may result in instability causing possible injury.

SB Item #222298-00 / JCP Lot #794-1028

Distributed / Manufactured by:

Slam Brands, Inc.

Country of Origin: Indonesia

 
Manufacture Date: 08.01.08

Maximum Load Weights:

Accessory Dock:
10lb./4.5kg.

Component Shelves:
10lb./4.5kg.

Consloe Bay:
20lbs./9kgs

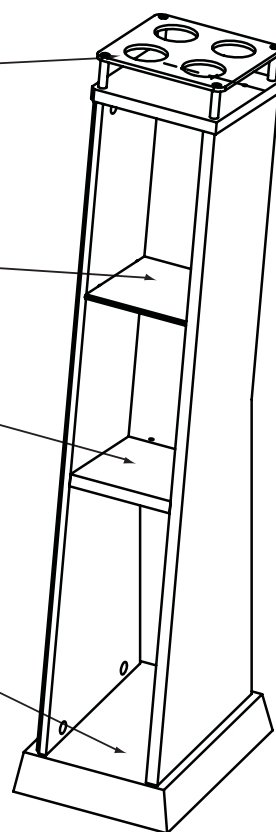

2260 152nd Ave NE Redmond, WA 98052 www.slambrands.com

Business Hours: M-F 8am-5pm PST Toll Free: 1 (866) 632-6632 Email: support@slambrands.com



IMPORTANT INFORMATION

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

SAFETY FIRST

- ! When moving Gaming Station, remove console equipment first. Do NOT move Gaming Station with console or equipment inside.
- ! To avoid injury, assemble Gaming Station in final location. Moving the Gaming Station after assembly is not recommended.
- ! Ensure that all parts and hardware are located before assembly.

ANTI-TIP HARDWARE

 
This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the Gaming Station. Slam Brands, Inc. is not responsible for any personal injury or damage to Gaming Station, console equipment, or household effects resulting from improper use of this product.






ASSEMBLY OVERVIEW


The parts and hardware shown are NOT actual size.

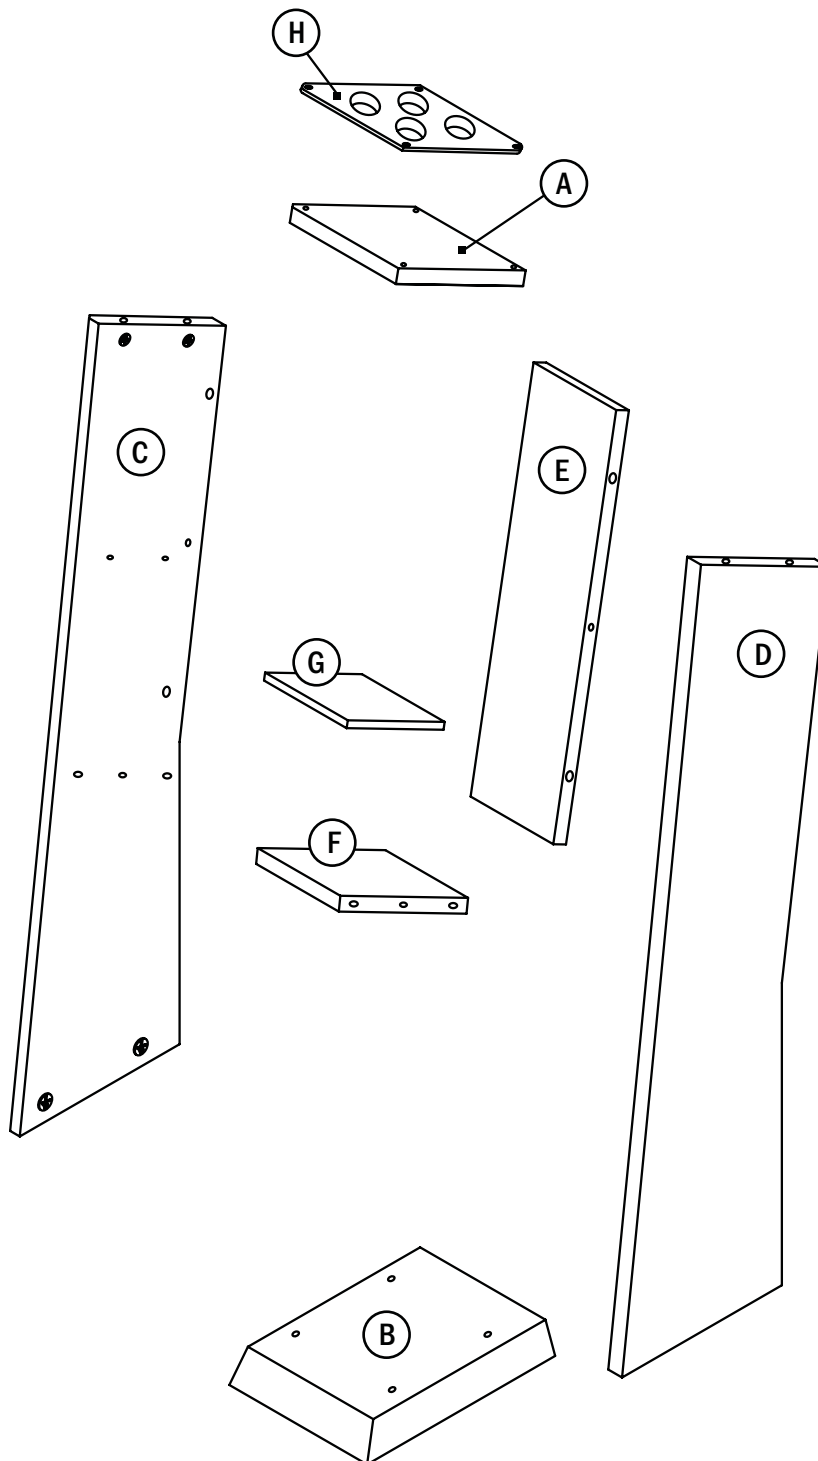


PARTS IDENTIFICATION

 

 
(A) Top Board (1)
T00556

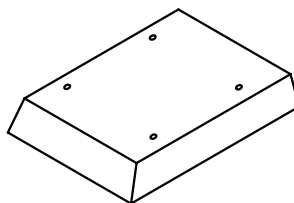

 
(B) Base (1)
T00557

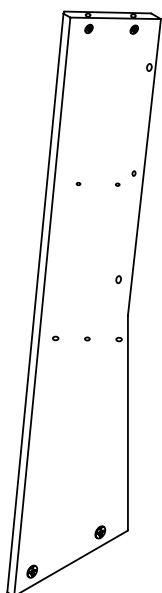

 
(C) Left Side Support (1)
T00558

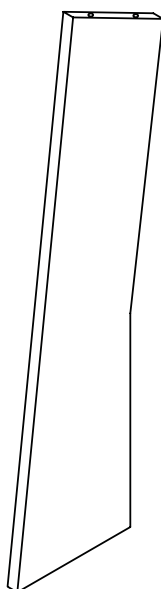

 
(D) Right Side Support (1)
T00559

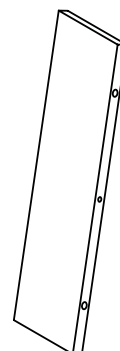

 
(E) Back Board (1)
T00560



 (F) Shelf (1)
T00561



 
(G) Blue acrylic shelf (1)
5mm
T00562




(H) Accessory Dock (1)
5mm
T00563

HARDWARE IDENTIFICATION

 
Assembly requires a Phillips or Flat Head screwdriver (not included).




① Dowel (8)
6 x 30mm
H00091

 


② Aluminum Tube (4)
10 x 35mm
H00244

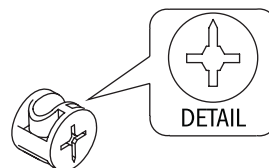 


③ Cam (12)
ø 15 x 12mm
H00245

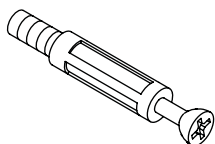 

④ Cam Bolt (12)
7.5 x 35mm
H00106

 

 ⑤ Shelf Support (4)
26.5 X 12.5mm
H00205

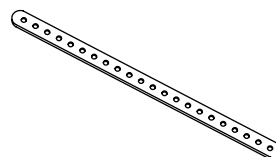


⑥ Wall Bracket (1)
230 x 11 x 2mm
H00041




⑦ Phillips Head Screw (2)
6 x 19mm
H00104



 
⑧ Cam Cap (12)
17.6 x 5mm
H00241




⑨ Wall Anchor (1)
5.8 x 26.5mm
H00242

 

 ⑩ Phillips Head Screw (1)
8 x 38mm
H00105

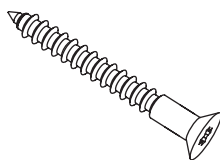

 ⑪ Tapered Phillips Bolt (4)
4.8 x 55mm
H00243

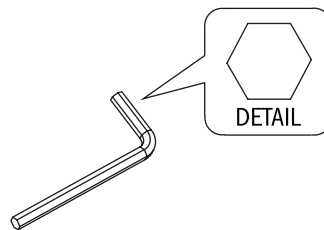


⑫ Allen Key Wrench (1)
60 x 20 x 4mm
H00227




CAM ASSEMBLY

 THIS PAGE IS REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES.
BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

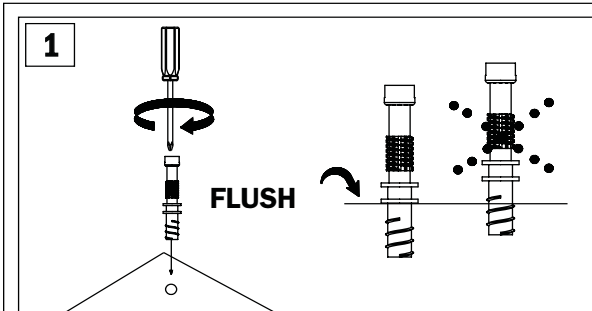


 Screw Cam Bolts **④** into designated holes.

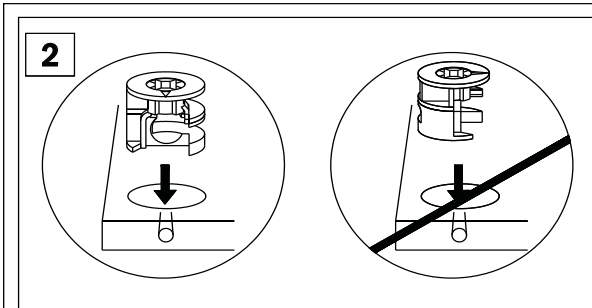


Press Cams **③** into designated holes.

 Arrow on Cams should face the hole at the edge of the board.

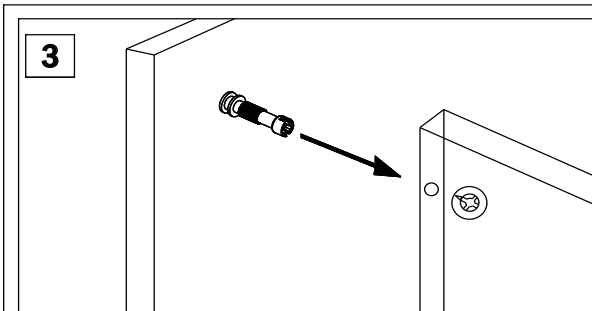

 
Align Cam Bolt with hole at Cam and press boards together.

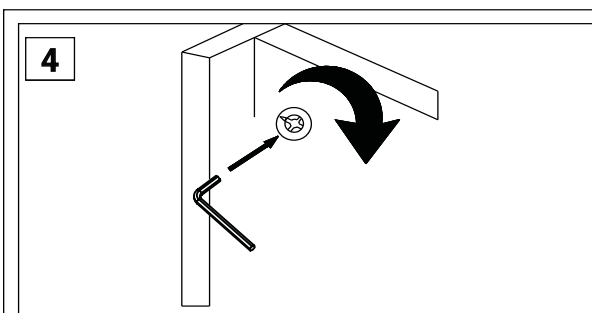


Turn Cam 1/2 turn with the Allen Key Wrench **⑫** clockwise to lock.

DOWEL ASSEMBLY

 THIS PAGE IS REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES.
BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

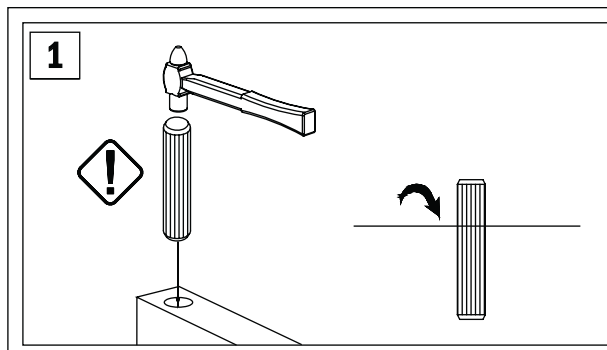

 Taps Dowels ① gently into designated holes. A small amount of glue may be applied to the inside of the hole to secure dowel.

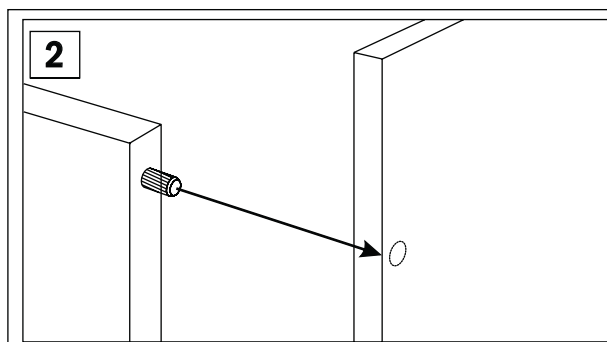


Align Dowel with designated hole and press boards together.



STEP 1: PREPARE SIDE SUPPORTS FOR ASSEMBLY

 
Review the “Cam Assembly” page for instructions on how to properly insert Cam Bolts.

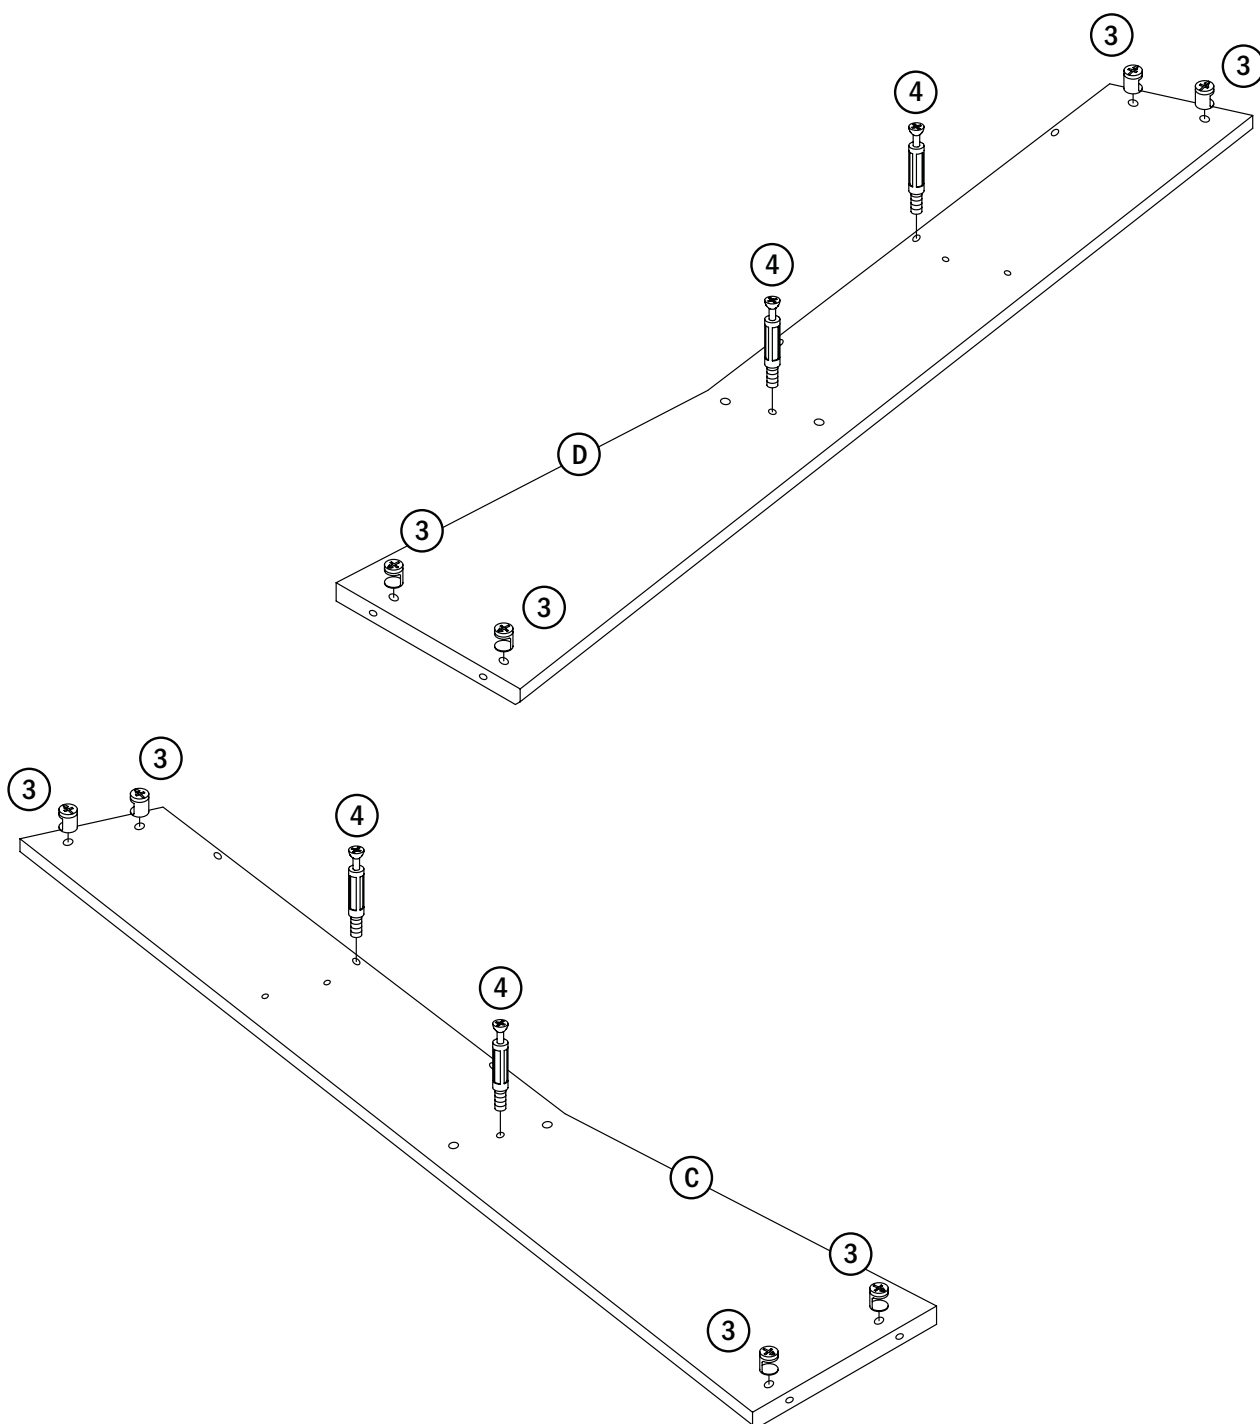

STEP 2: PREPARE SHELF AND BACKBOARD FOR ASSEMBLY


Review the “Cam Assembly” page for instructions on how to properly insert Cams.

 Review the “Dowel Assembly” page for instructions on how to properly insert Dowels.

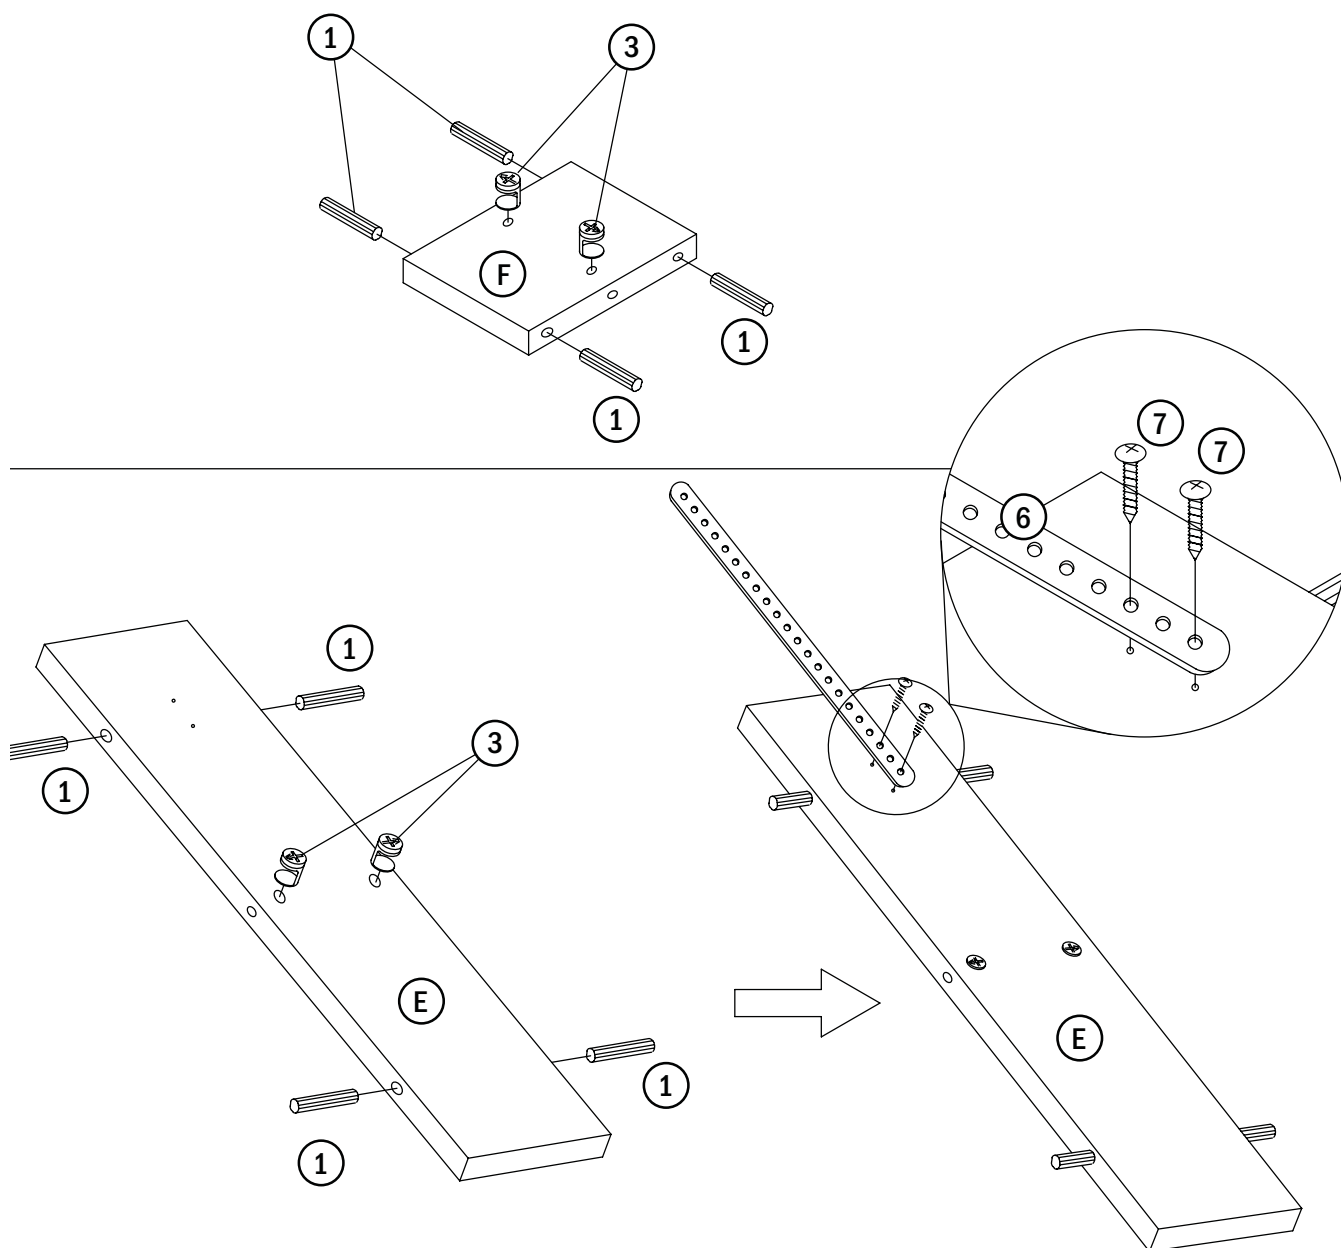


STEP 3: ATTACH BACKBOARD AND SHELF TO SIDE SUPPORT

 Review the “Cam Assembly” page for instructions on how to properly insert Cam Bolts.
Review the “Dowel Assembly” page for instructions on how to properly insert Dowels.

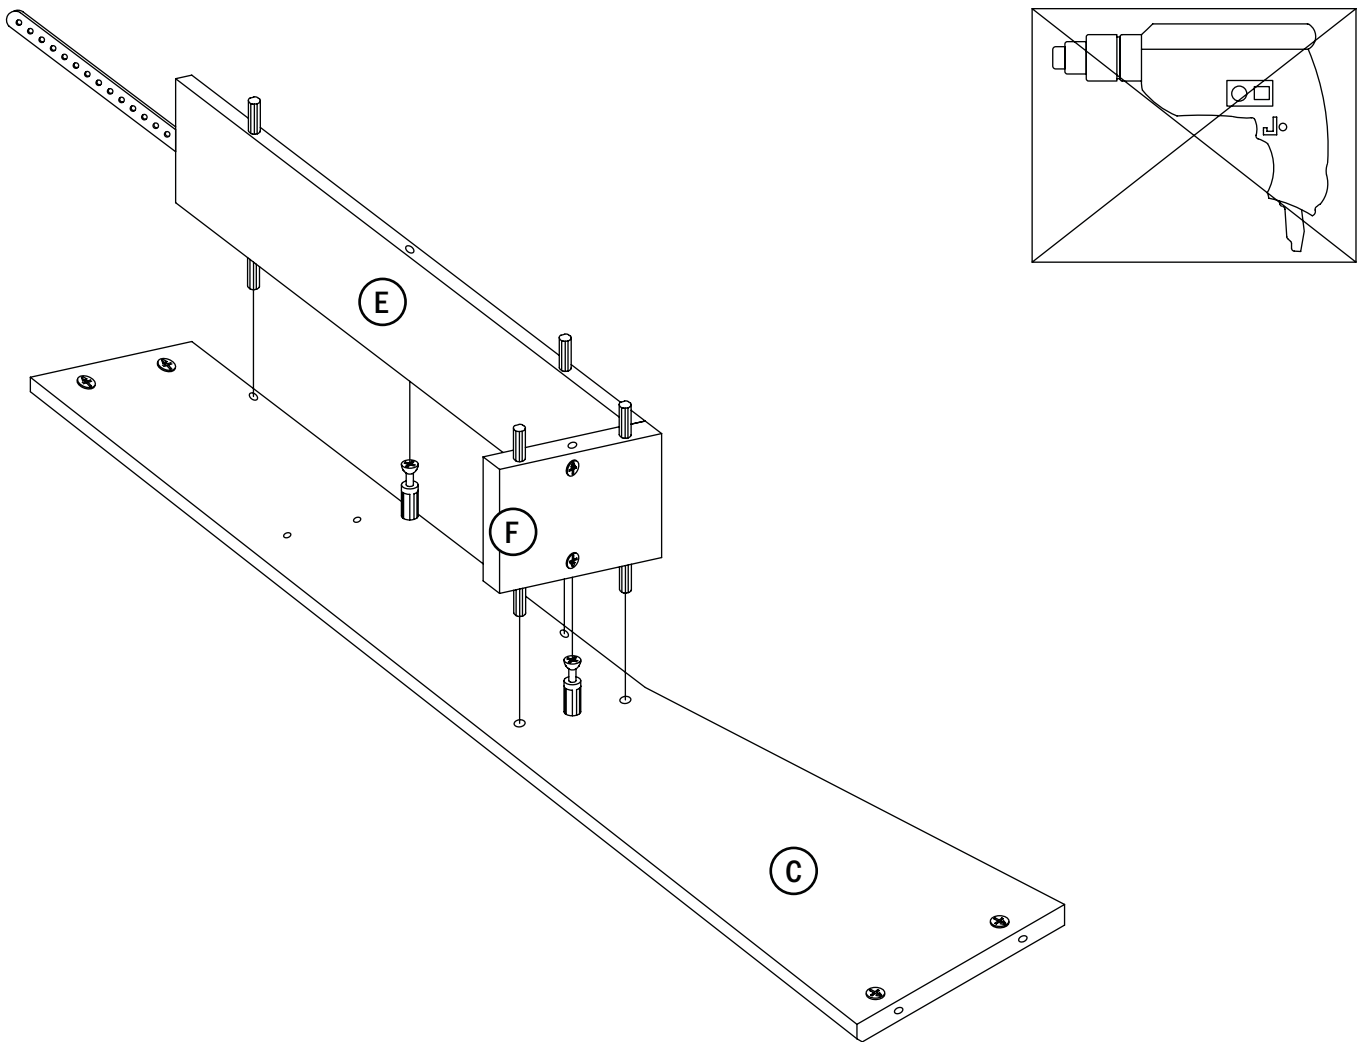

STEP 4: ATTACH SIDE SUPPORT TO BACKBOARD AND SHELF

 Review the “Cam Assembly” page for instructions on how to properly insert Cam Bolts.
Review the “Dowel Assembly” page for instructions on how to properly insert Dowels.

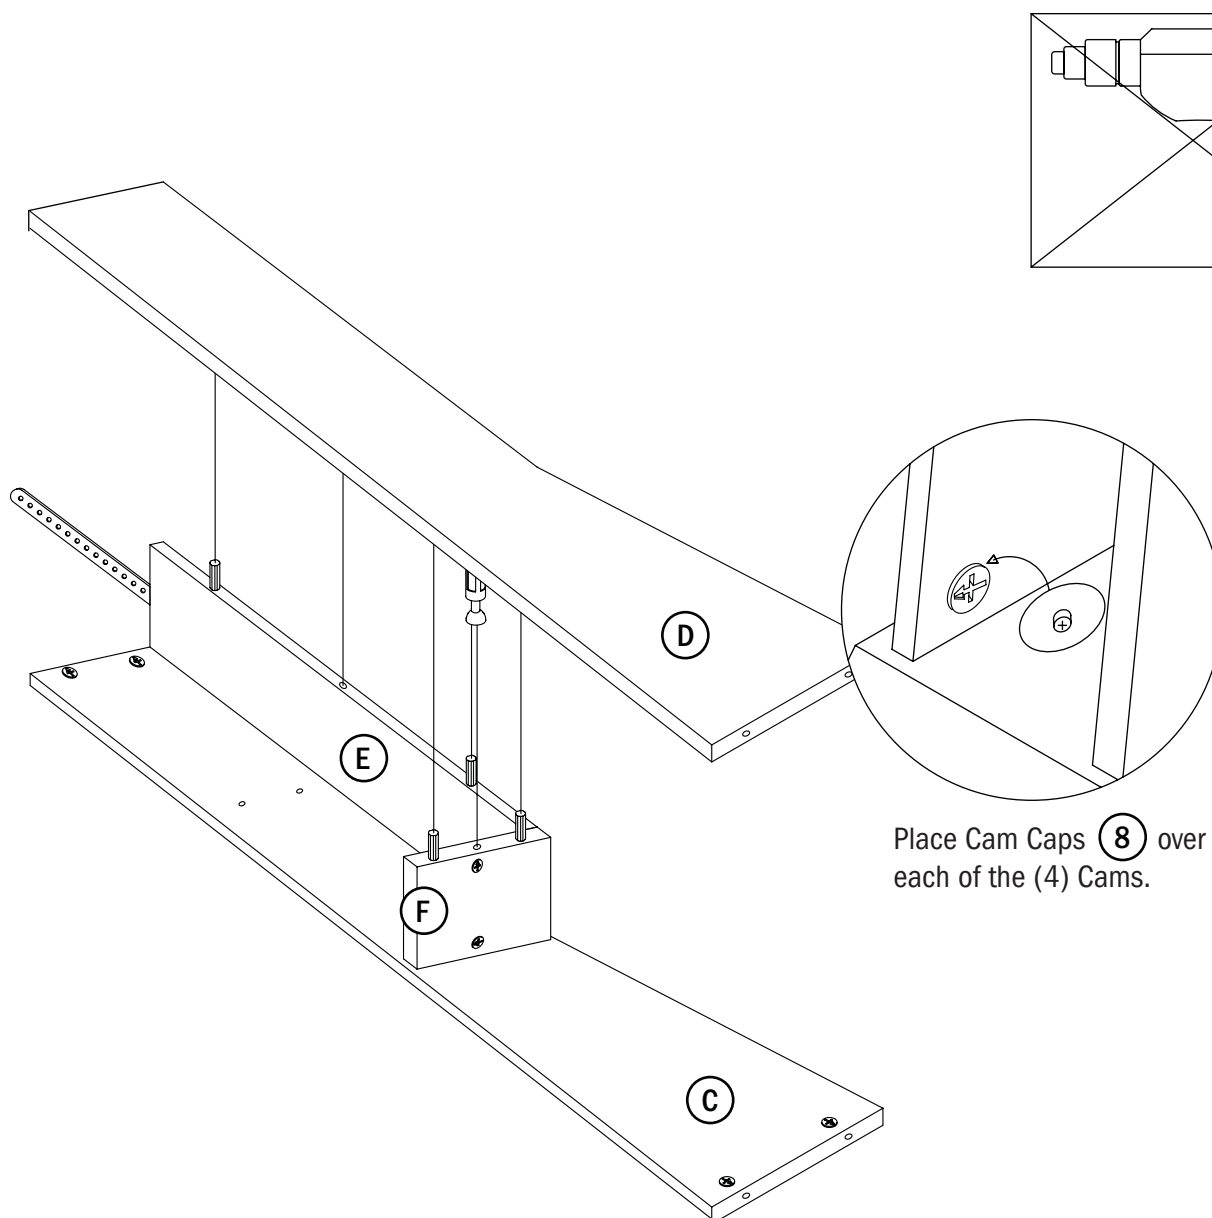


Place Cam Caps (8) over each of the (4) Cams.




STEP 5: PREPARE BASE FOR ASSEMBLY AND ATTACH TO SIDE SUPPORTS

 Review the “Cam Assembly” page for instructions on how to properly insert Cam Bolts.
Review the “Dowel Assembly” page for instructions on how to properly insert Dowels.

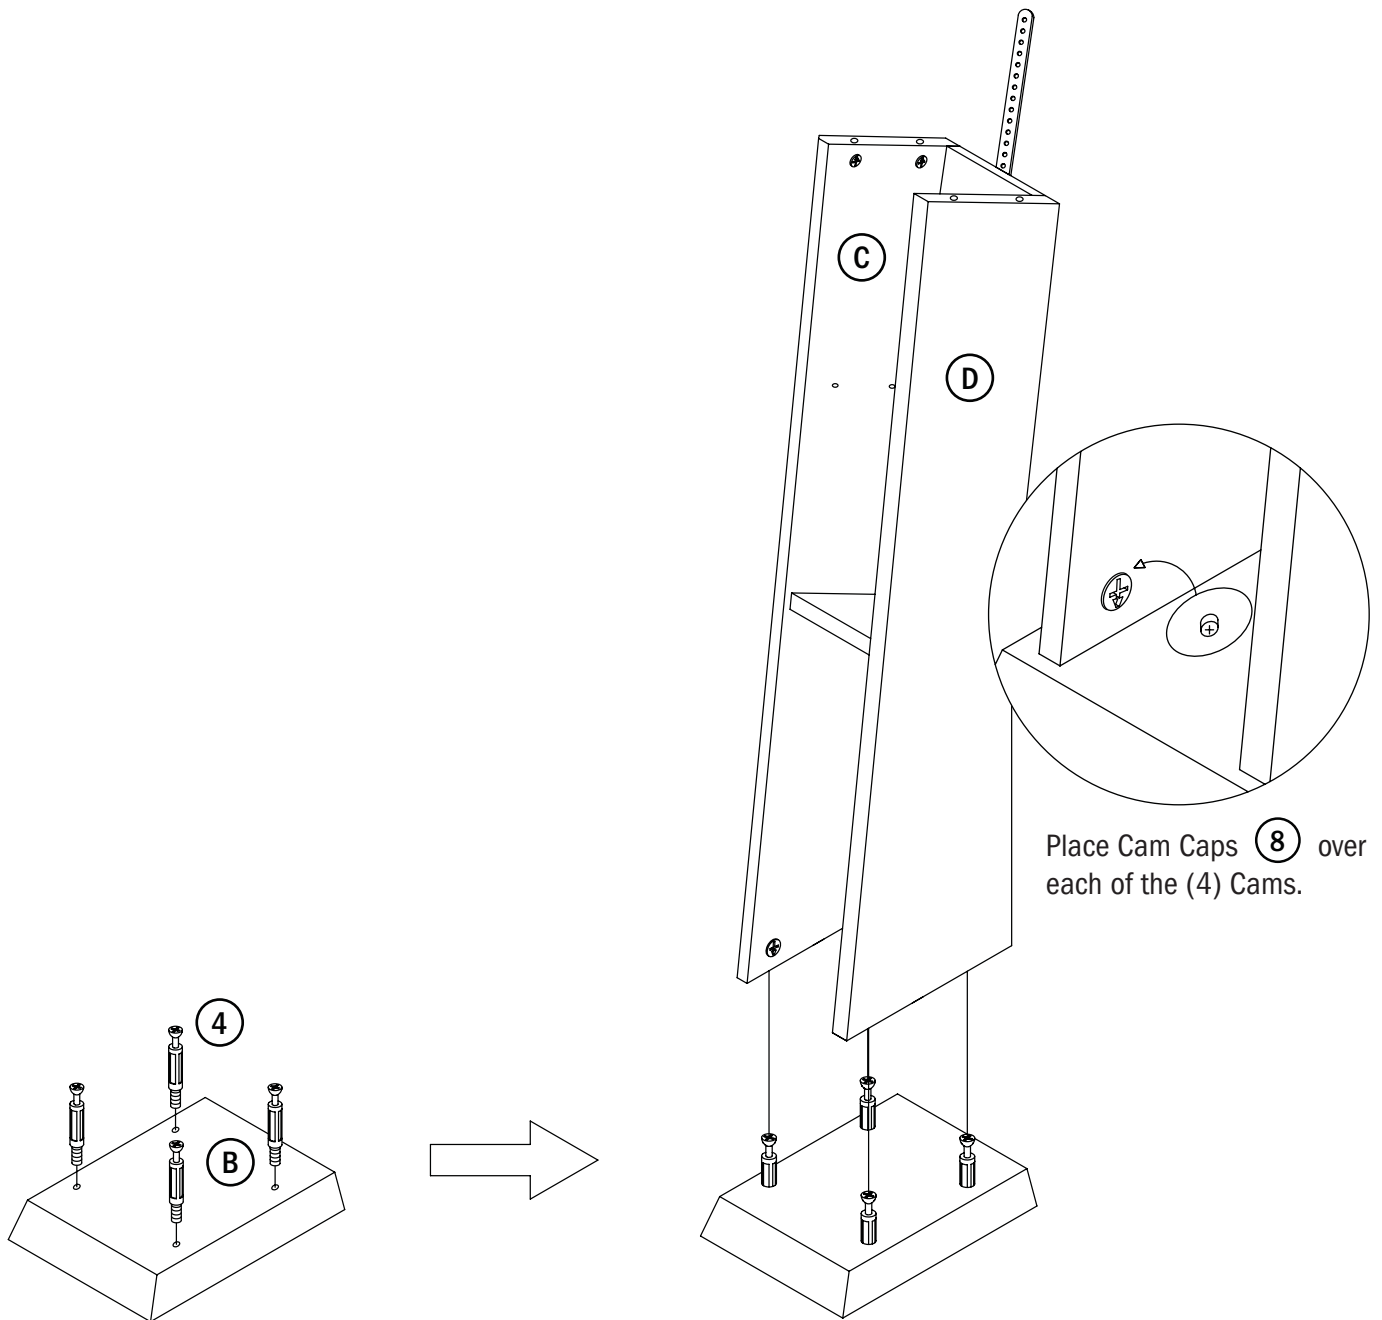


 STEP 6: INSERT SHELF SUPPORTS AND PLACE ACRYLIC SHELF

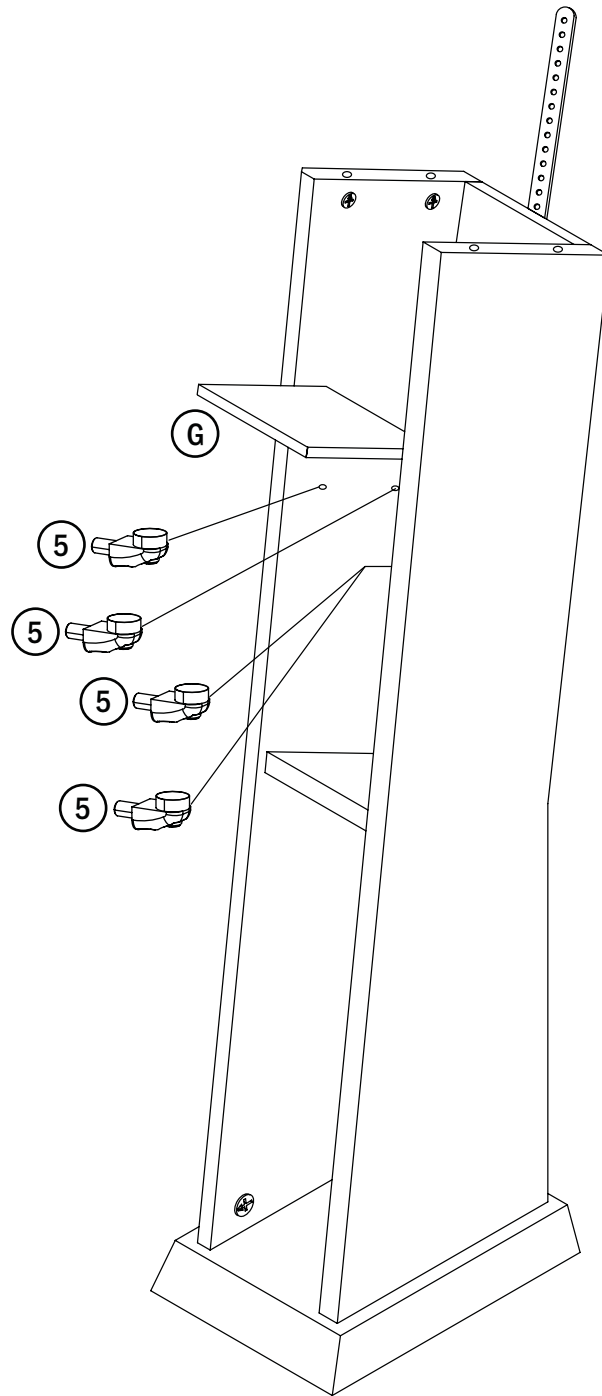


STEP 7: BUILD AND ATTACH ACCESSORY DOCK

 
Review the “Cam Assembly” page for instructions on how to properly insert Cam Bolts.

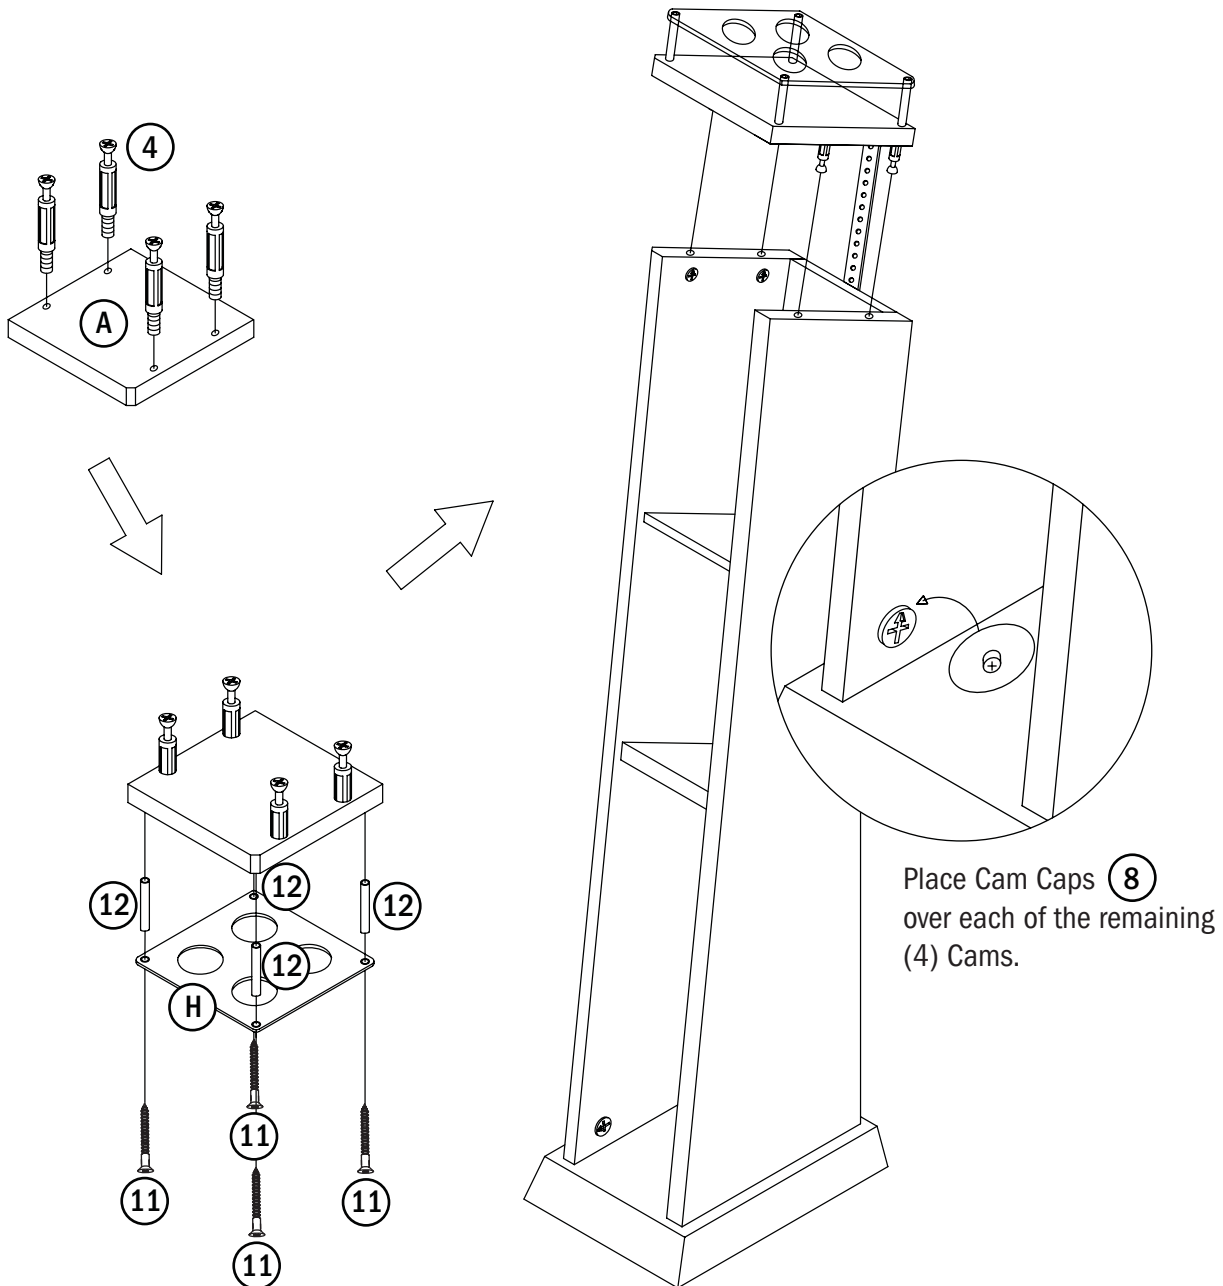

 
STEP 8: SECURE GAMING STATION TO WALL

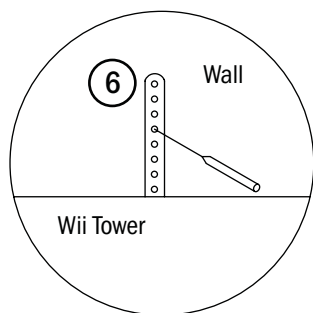

 
Place Wii Tower in desired position.
Mark position on wall with pencil.

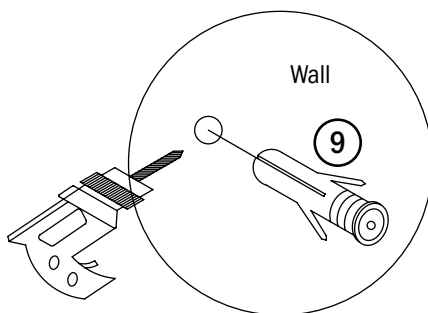

 Move Wii Tower aside.
Drill hole at mark with Masonry Drill.
Insert Drywall Anchor into hole.

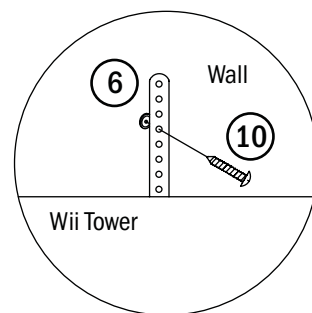

 Move Wii Tower back to its desired position.
Screw through one of the holes in the Wall
Bracket and into the Drywall Anchor.

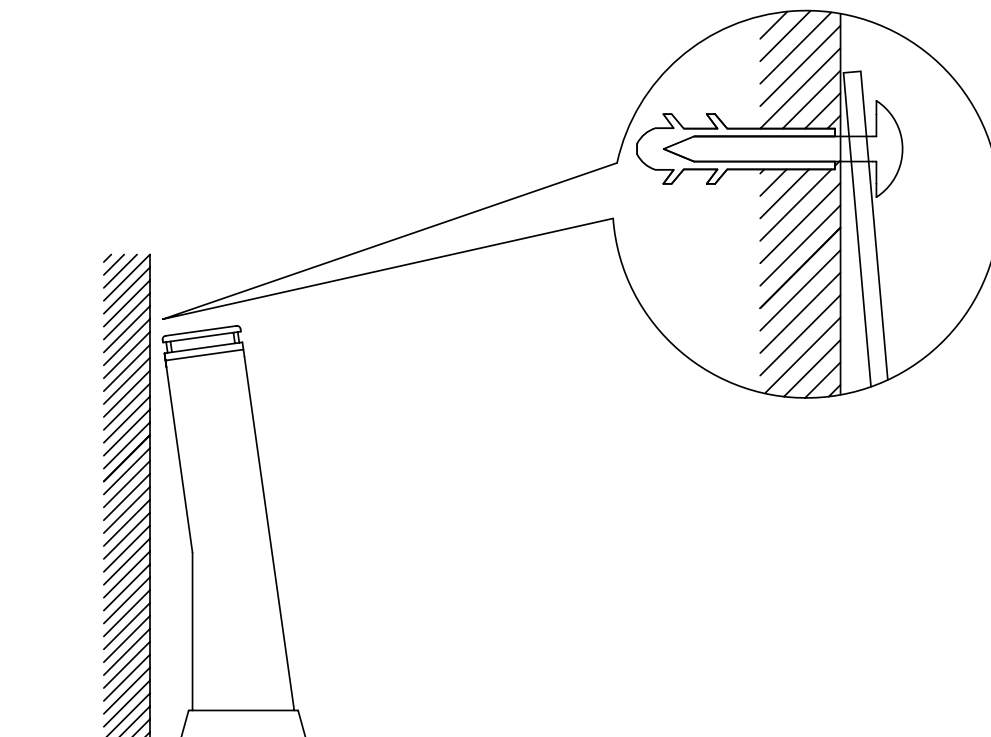

This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the Gaming Station. Slam Brands, Inc. is not responsible for any personal injury or damage to Gaming Station, components, or household effects resulting from improper use of this product.







