



Please Call First!

DO NOT RETURN TO STORE

Need help with assembly? Missing or broken parts?

Business Hours: M-F 8am-5pm PST

Toll Free: 1 (866) 632-6632 support@slambrands.com

06.07 A

KARI

WIDE TV STAND

Assembly Instructions
Item #222283



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

Toll Free: 1 (866) 632-6632 support@slambrands.com www.slambrands.com



IMPORTANT INFORMATION

Read carefully before assembling TV Stand.
Keep these instructions for further use.



CAUTION!

This TV Stand is intended for use only with the products and maximum weights indicated. Use with other products, or products heavier than maximum weights indicated, may result in instability causing possible injury. For your safety, this product is sold with anti-tip hardware intended to secure the product in place.

 
Model: 222283

Distribution / Manufacturer: Slam Brands, Inc.

Country of Origin: Indonesia

Manufacture Date: 06.01.07

Accommodates Most:




DLP/LCD Projection



Plasma/LCD

Component Shelves:

 A maximum load weight of 50lb./22.6kg.

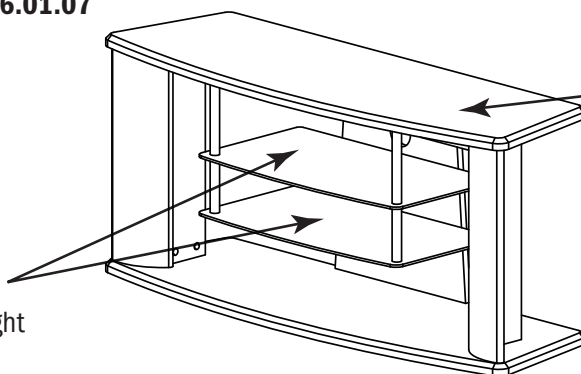

Television Shelf:

A maximum of a 50in. DLP/LCD Projection or a 50in. Plasma/LCD.

A maximum TV shelf load weight of 150.0lb./68.0kg.



SLAM BRANDS, INC
2260 152nd Ave NE
Redmond, WA 98052
www.slambrands.com

Toll Free: 1 (866) 632-6632 Email: support@slambrands.com Business Hours: M-F 8am-5pm PST

SAFETY FIRST

 
- ! When moving TV Stand, remove TV first.
Do NOT move TV Stand with TV.
- ! To avoid injury, assemble TV Stand in final location. Moving the stand after assembled is not recommended.

This product is sold with anti-tip hardware and it is intended that the product be used with this hardware attached. Danger from tipping may result if the hardware is not attached to both the wall and the TV Stand. Slam Brands, Inc. is not responsible for any personal injury or damage to stand, television, components, or household effects resulting from improper use of this product.




AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.


ASSEMBLY OVERVIEW

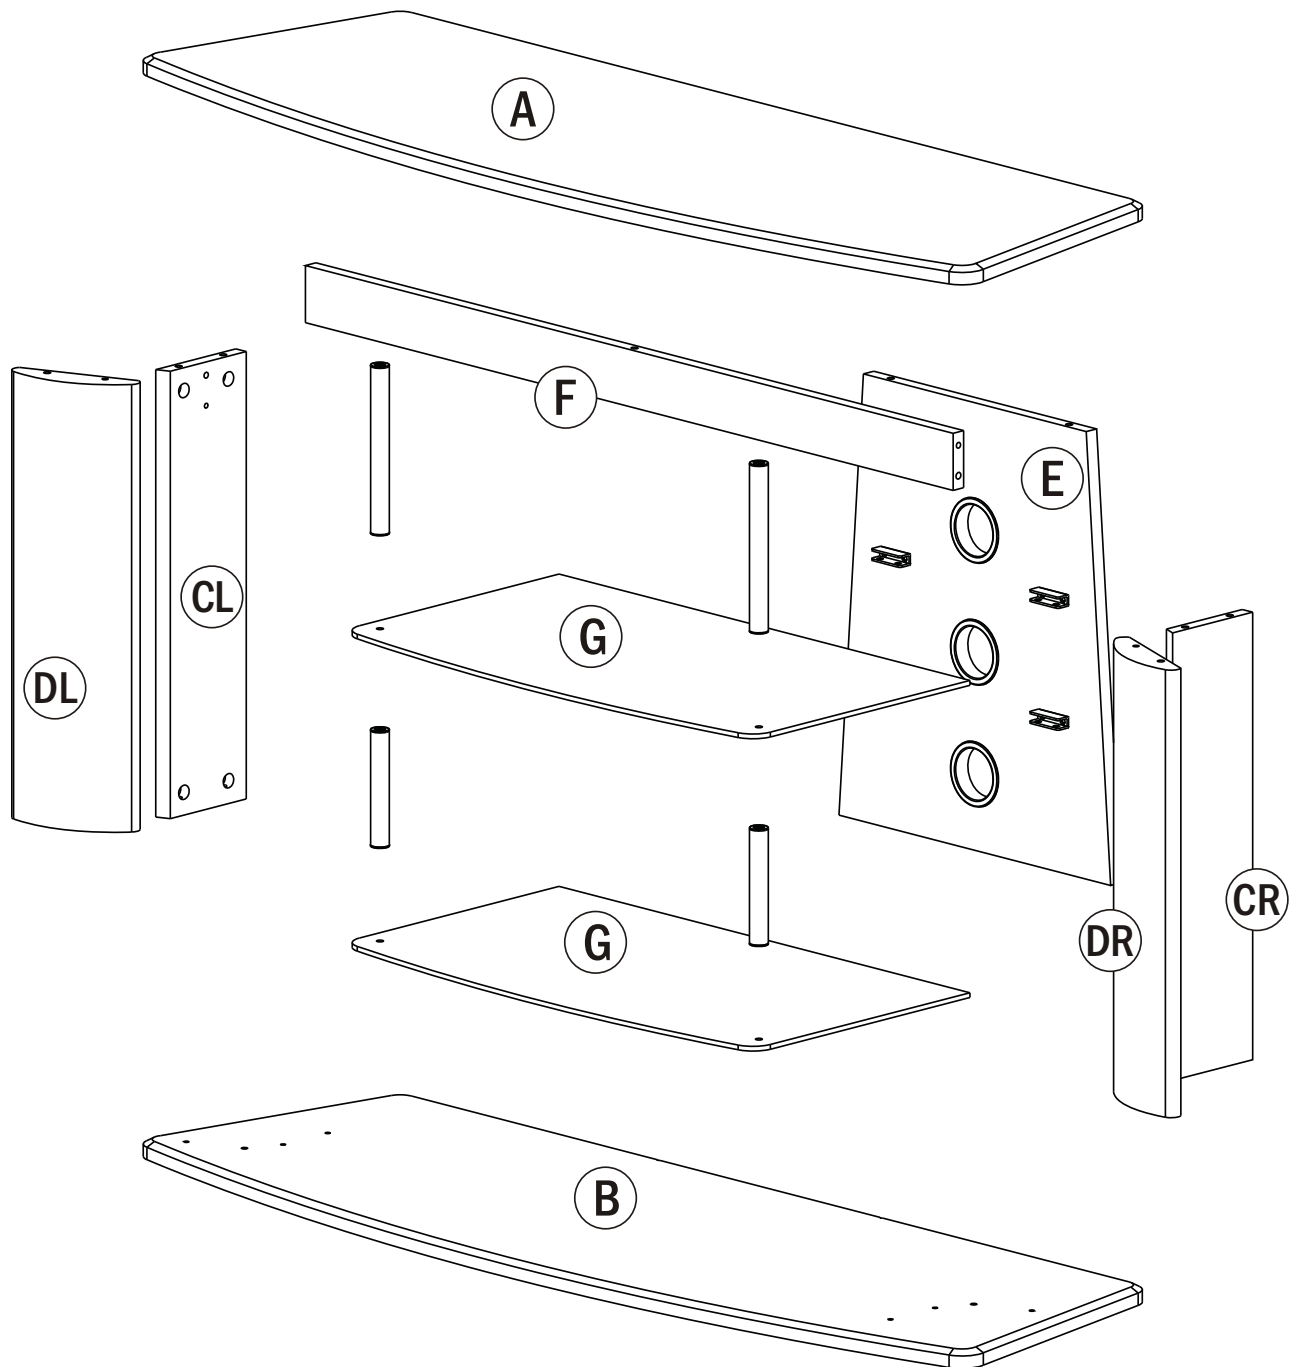


PARTS IDENTIFICATION

 


Ⓐ Top Board (1)
T00259

 


Ⓑ Bottom Board (1)
T00260

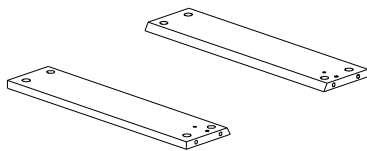 

 
Ⓒ Left and Right Side Supports (2)
CL T00261 / CR T00262

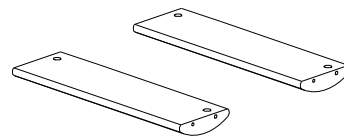

 
Ⓓ Left and Right Side Supports (2)
DL T00263 / DR T00264



Ⓔ Back Board (1)
T00265

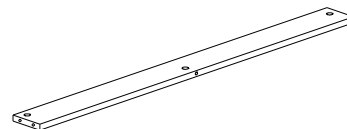 

Ⓕ Brace Board (1)
T00266

 

Ⓖ Glass Shelves (2)
T00267

HARDWARE IDENTIFICATION



 
- ① Cam Bolts (19)
7 x 32mm
H00074




- ② Cams (19)
ø 15 x 12mm
H00092



- ③ Cam Caps (19)
ø 17.4 x 5.8mm
H00094



- ④ Dowels (6)
6 x 30mm
H00091

 

- ⑤ Glass Shelf Clips (4)
40 x 19 x 12mm
H00097



 
- ⑥ Nut Caps (2)
ø 12 x 12mm
H00102



- ⑦ Washers (2)
13mm
H00090



- ⑧ Cable Management Caps (3)
ø 68 X 17.5mm
H00087



- ⑨ Connecting Rods (2)
ø 6 x 326mm
H00098



- ⑩ Long Tubes (2)
ø 19 x 175mm
H00100



 
- ⑪ Short Tubes (2)
ø 19 X 120mm
H00099



- ⑫ Drywall Anchor (1)
6.4 x 30mm
H00049



- ⑬ Phillips Head Screws (8)
6.4 x 12.7mm
H00095



- ⑭ Phillips Head Screw (1)
8 x 38mm
H00056



- ⑮ Wall Bracket (1)
230 x 11 x 2mm
H00041




- ⑯ Phillips Head Screws (6)
6.4 x 25.4mm
H00103




- ⑰ Plastic Feet (6)
42 x 20mm
H00101

THE “CAM” ASSEMBLY SYSTEM


THIS PAGE IS A REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES. BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

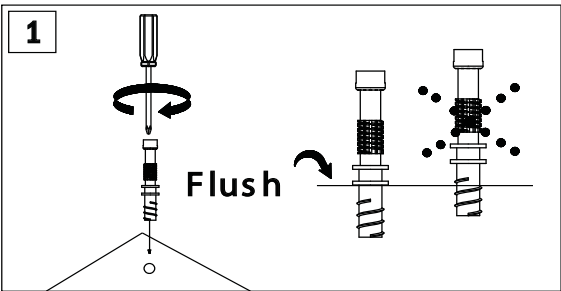1

 
Screw Cam Bolts into designated holes.

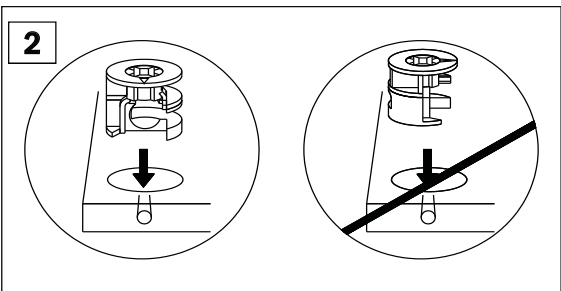2

 Press in Cams. Arrow on Cams should face the hole in the edge of the panel.

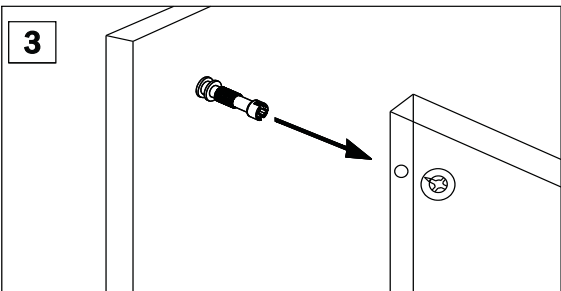3

 Press panels together.

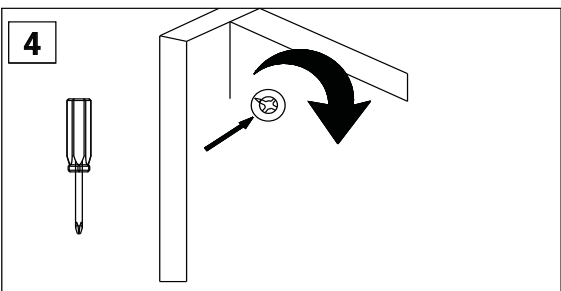4

Turn Cam ½ turn clockwise to tighten.




AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

THE “DOWEL” ASSEMBLY SYSTEM


THIS PAGE IS A REFERENCE FOR COMPLETING THE STEP-BY-STEP INSTRUCTIONS ON THE FOLLOWING PAGES. BEGIN ASSEMBLY WITH STEP 1. REFER TO THIS PAGE FOR ADDITIONAL INFORMATION AS DIRECTED.

1

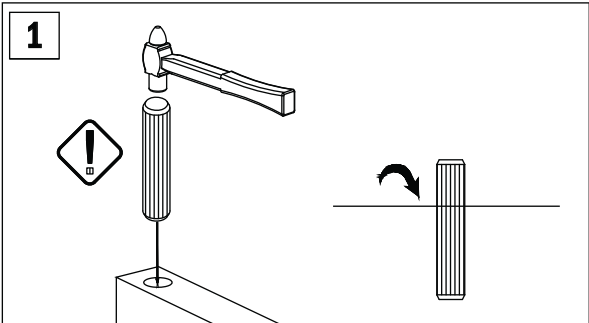

Tap dowels gently into designated holes.

2

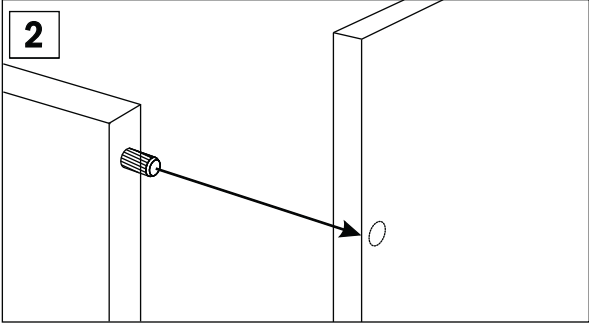


Press panels together.

ATTACH CAM BOLTS




REQUIREMENTS

 This step requires
9 Cam Bolts and
a screwdriver
9X

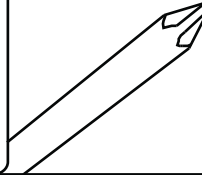

1

 Attach Cam Bolts to the bottom side of
Top Board (A) as shown and fasten.

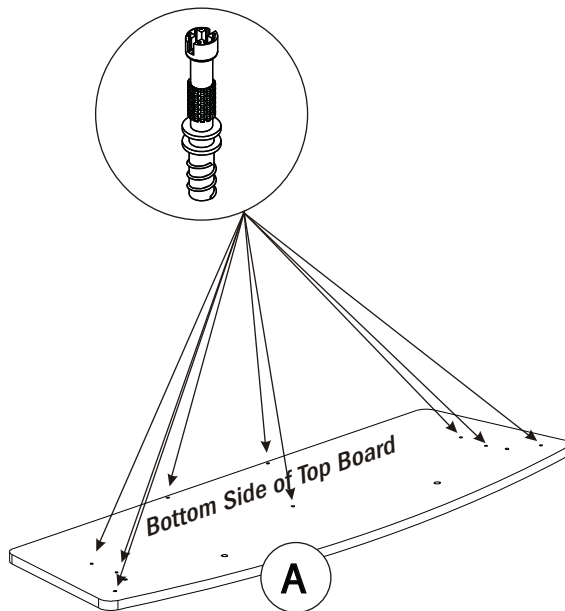

NOTE: Please review the “Cam Assembly System” page to properly fasten Cam Bolts.



 
AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

ATTACH CONNECTING RODS





REQUIREMENTS

This step requires
2 Connecting Rods
and a screwdriver
2X

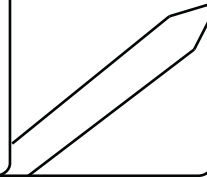


2

  Attach Connecting Rods to the bottom of Top Board (A) as shown

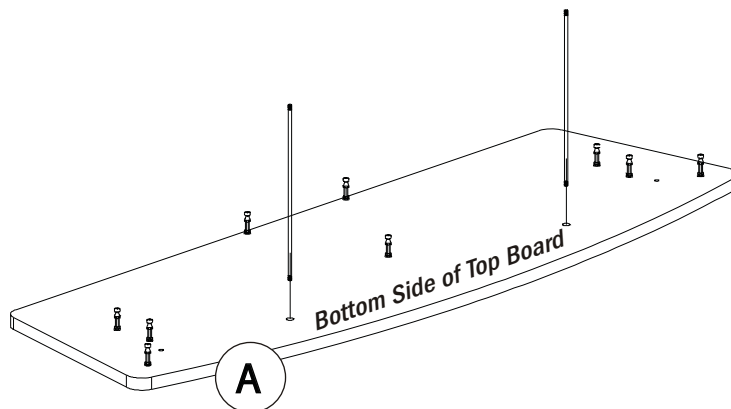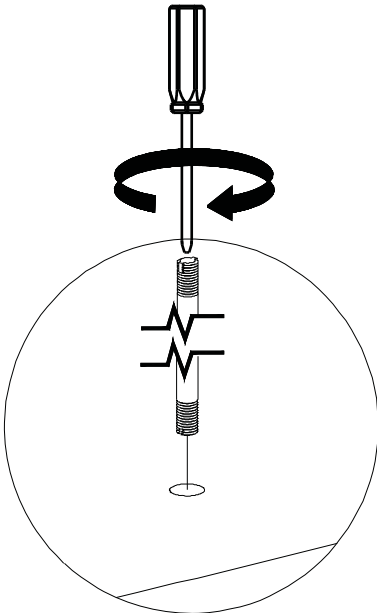


ATTACH PLASTIC FEET

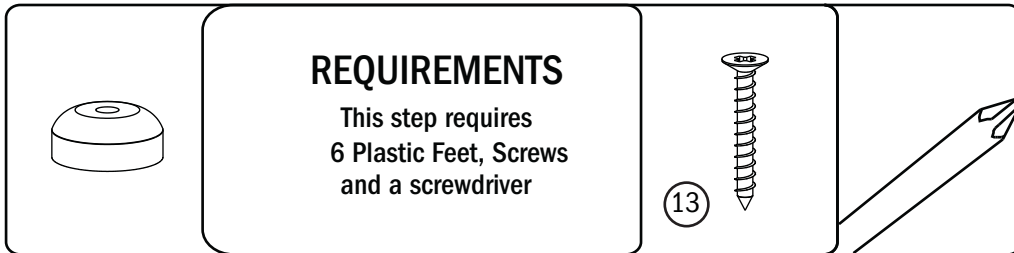 

3

 
Attach Plastic Feet and Screws to the bottom Board (B) as shown

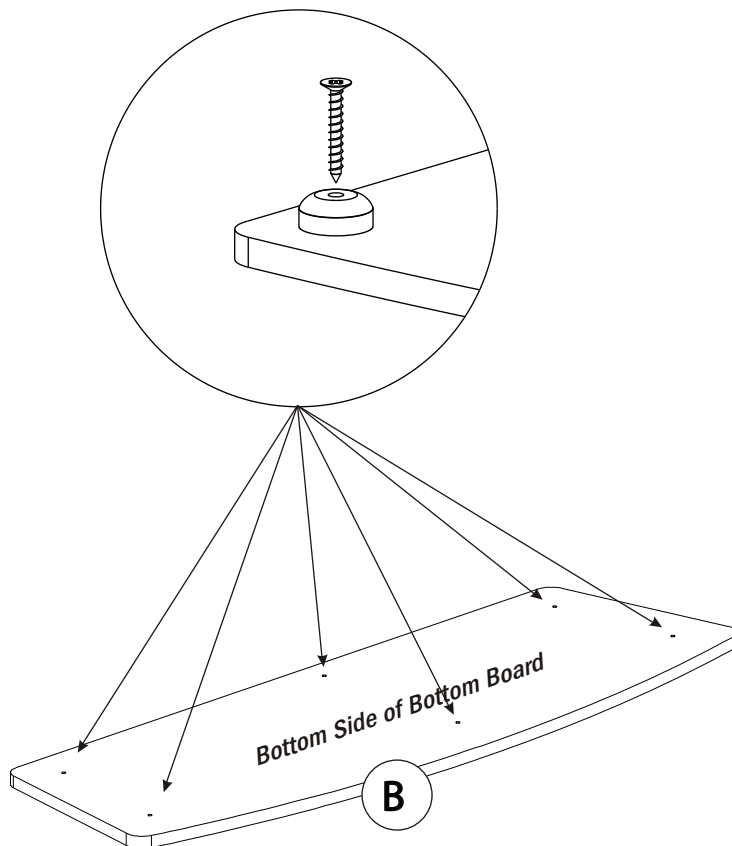

AVIO™


AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

 ATTACH CAM BOLTS

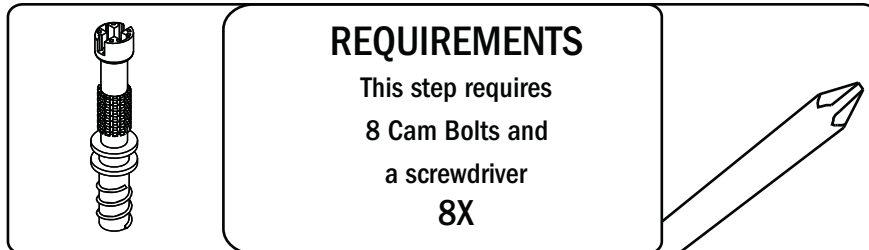


4

 Attach Cam Bolts to upper side of Base Board (B) as shown and fasten.

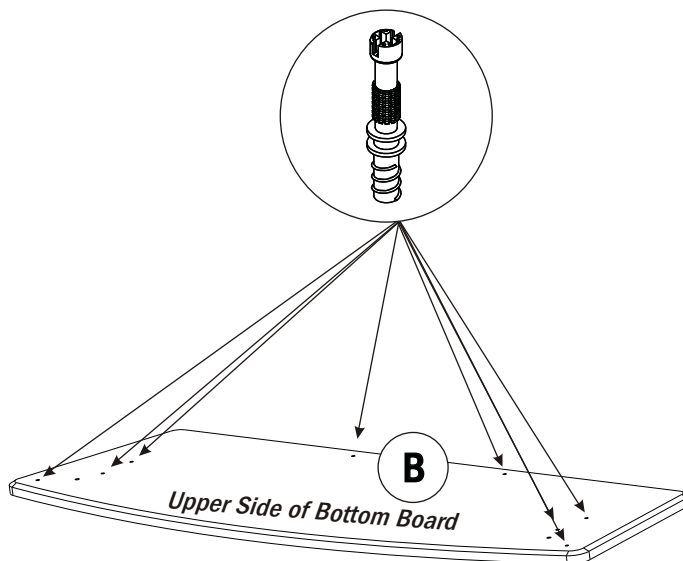

NOTE: Please review the “Cam Assembly System” page to properly fasten Cam Bolts.

 INSERT CAMS




Requirements

This Step Requires
8 Cams,

5

 
- Insert Cams Into Supports (CL & CR) as Shown

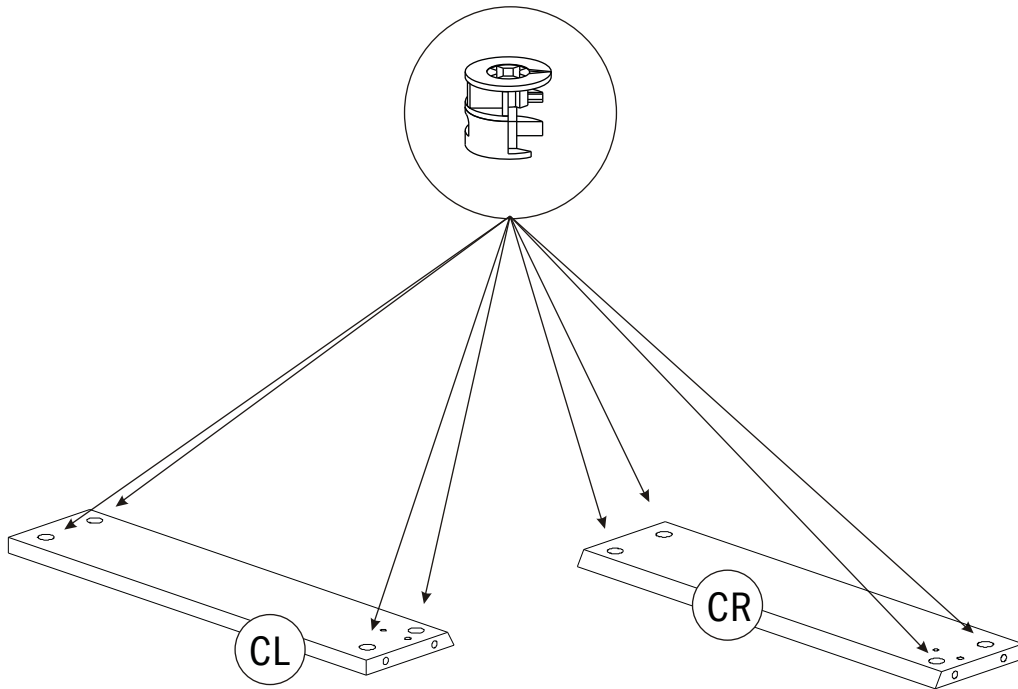

AVIO™


AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

 ATTACH CAM BOLTS




REQUIREMENTS

 This step requires
2 Cam Bolts and a
Screwdriver
2X

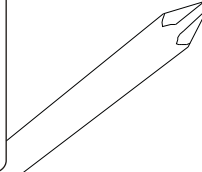


6

 Attach Cam Bolts into (CL & CR)
Side Supports and fasten

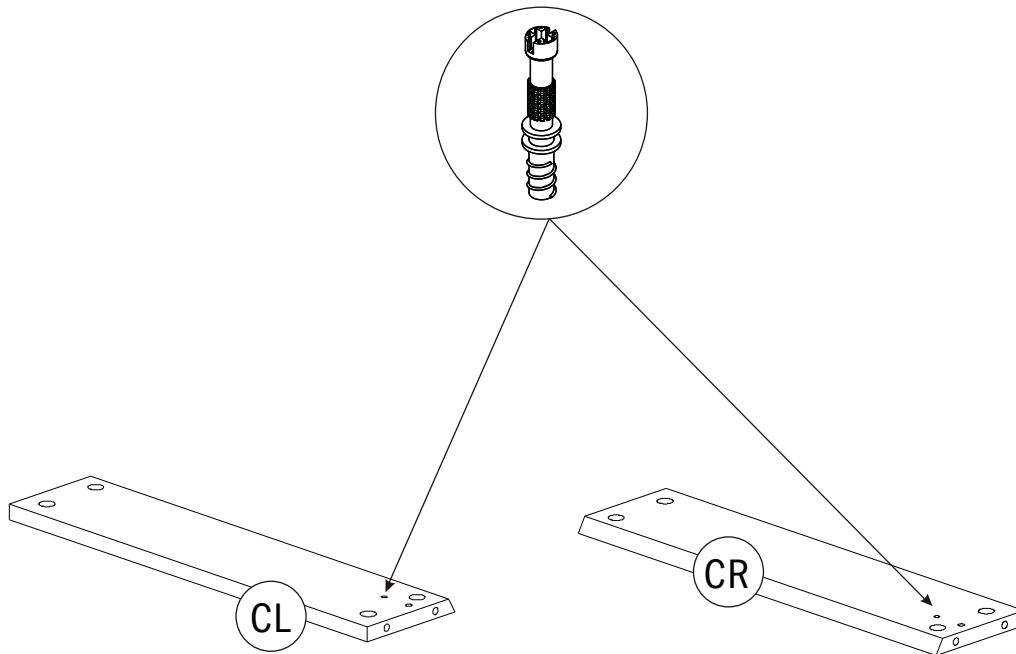

INSERT CAMS

 


Requirements

This Step Requires
4 Cams

7

 - Attach Cams Into Supports (DL & DR) as Shown.

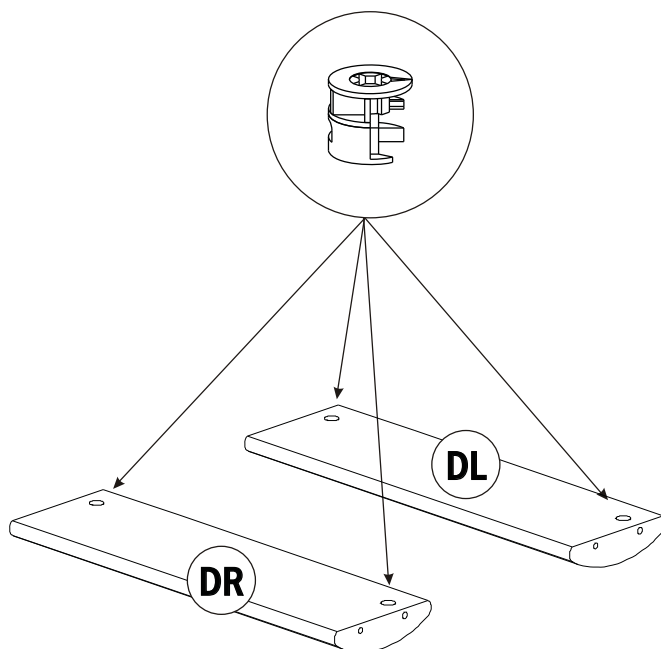

NOTE: Please review the “Cam Assembly System” page to properly fasten Cams and Cam Bolts.



 
AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

ATTACH DOWELS




Requirements

This Step Requires
4 Dowels,
and a Hammer
4X

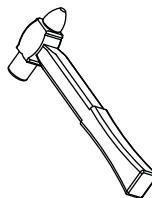




8

 **Attach Dowels to Side Supports (DL & DR)
as shown and tap into place.**

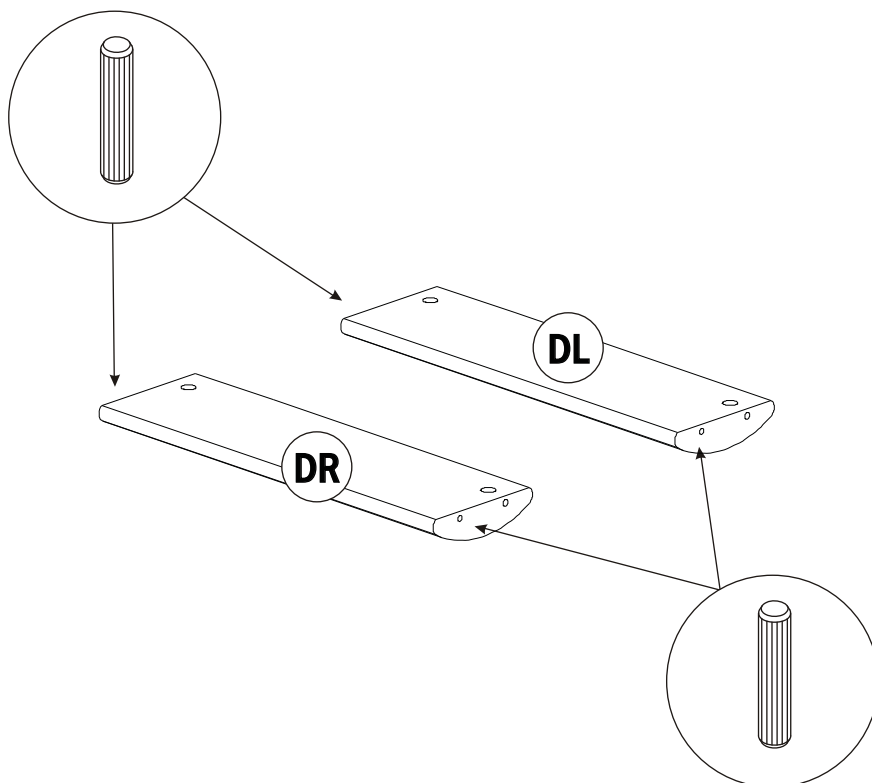


NOTE: Please review the “Cam Assembly System” page to properly fasten Dowels.

   ATTACH GLASS CLIPS

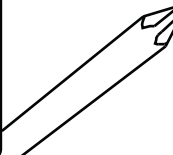	Requirements This Step Requires 4 Glass Shelf Clips and 8 Screws (13) and a Screw Driver		
---	---	---	---

9

 
- Attach Glass Shelf Clips Side Front of Rear Board (E) as Shown

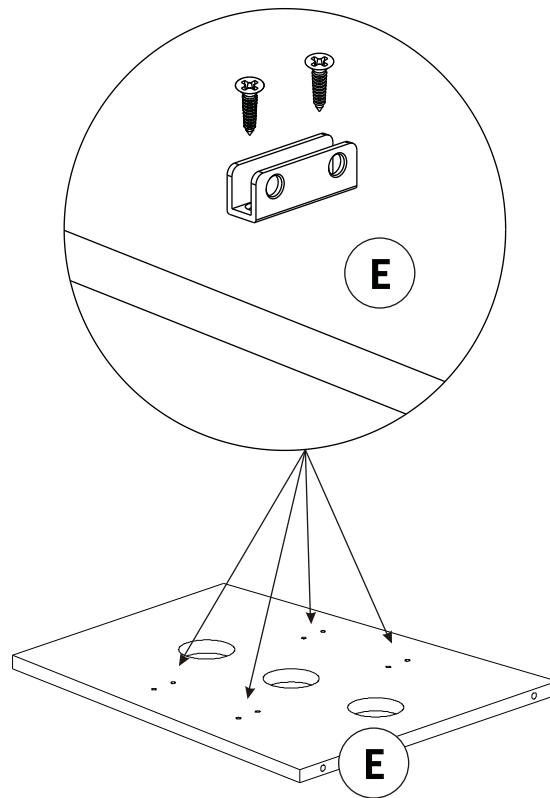

AVIO™


AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

 ATTACH CABLE MANAGEMENT CAPS

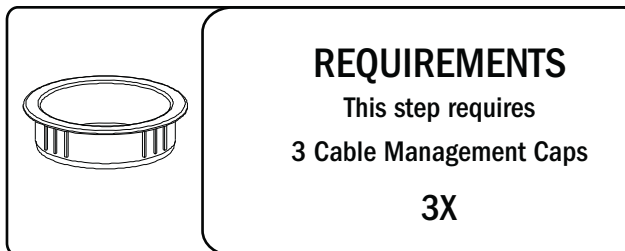

10

 - Attach Cable Management Caps to Front of Rear Board (E) as Shown.

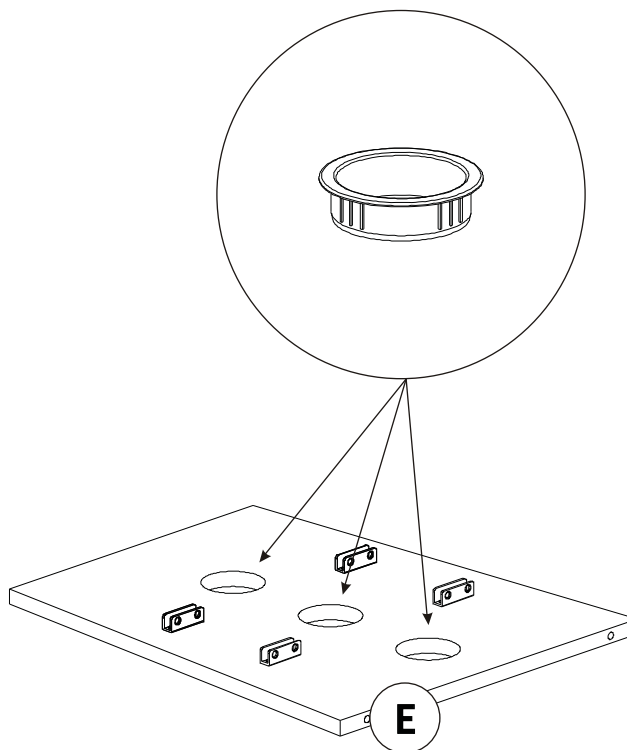

INSERT CAMS

 


Requirements

This Step Requires
4 Cams

11

- Insert Cams side back of Rear Board (E) as shown.

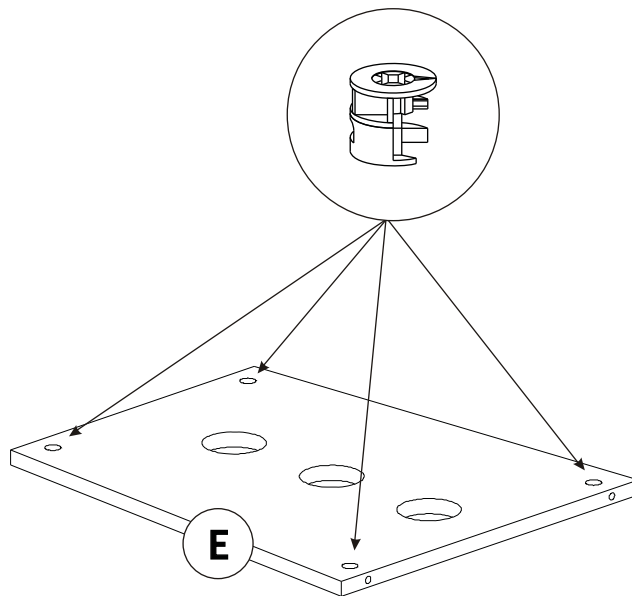


NOTE: Please review the “Cam Assembly System” page to properly fasten Cams and Cam Bolts.




AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

 ATTACH WALL BRACKET

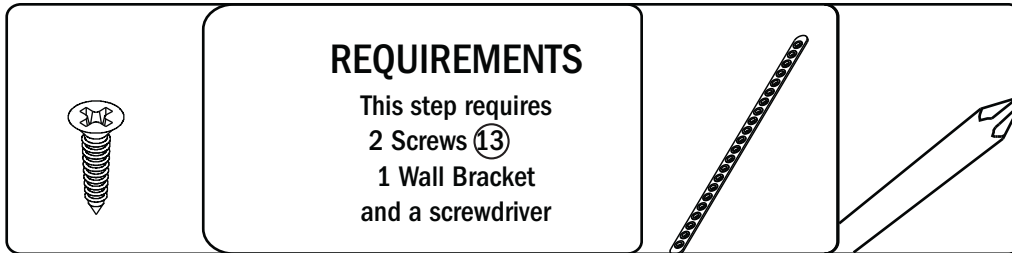


12

 Attach Wall Bracket to the Back side of
Rear Board (E) as shown.

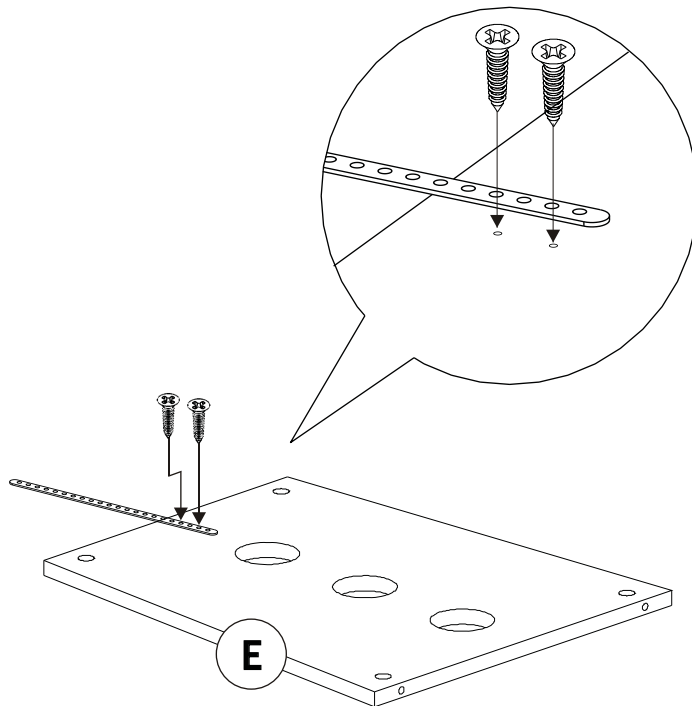

INSERT CAM CAPS

 


Requirements

This Step Requires
3 Cams

13

 - Insert Cams to Brace Board (F) as shown.

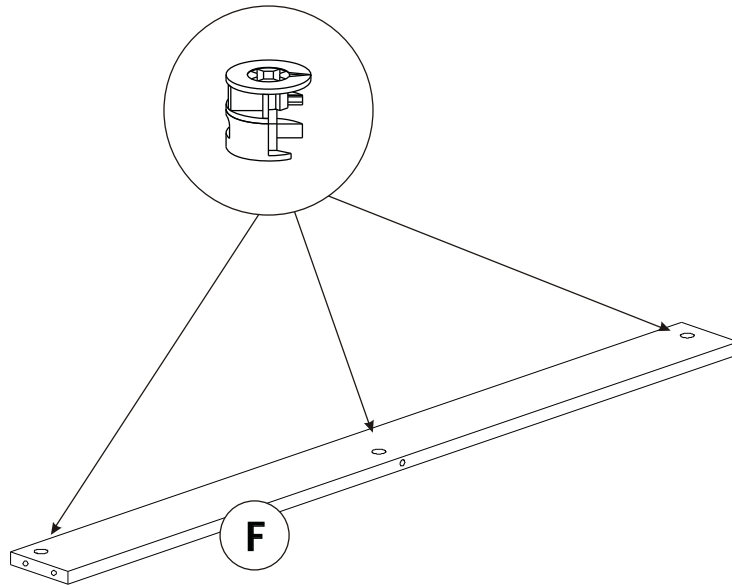


NOTE: Please review the “Cam Assembly System” page to properly fasten Cams and Cam Bolts.



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

 
ATTACH DOWELS



Requirements


This Step Requires
2 Dowels,
and a Hammer

 2X

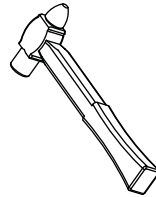


14

 Attach Dowels to Brace Board (F)
as shown and tap into place.

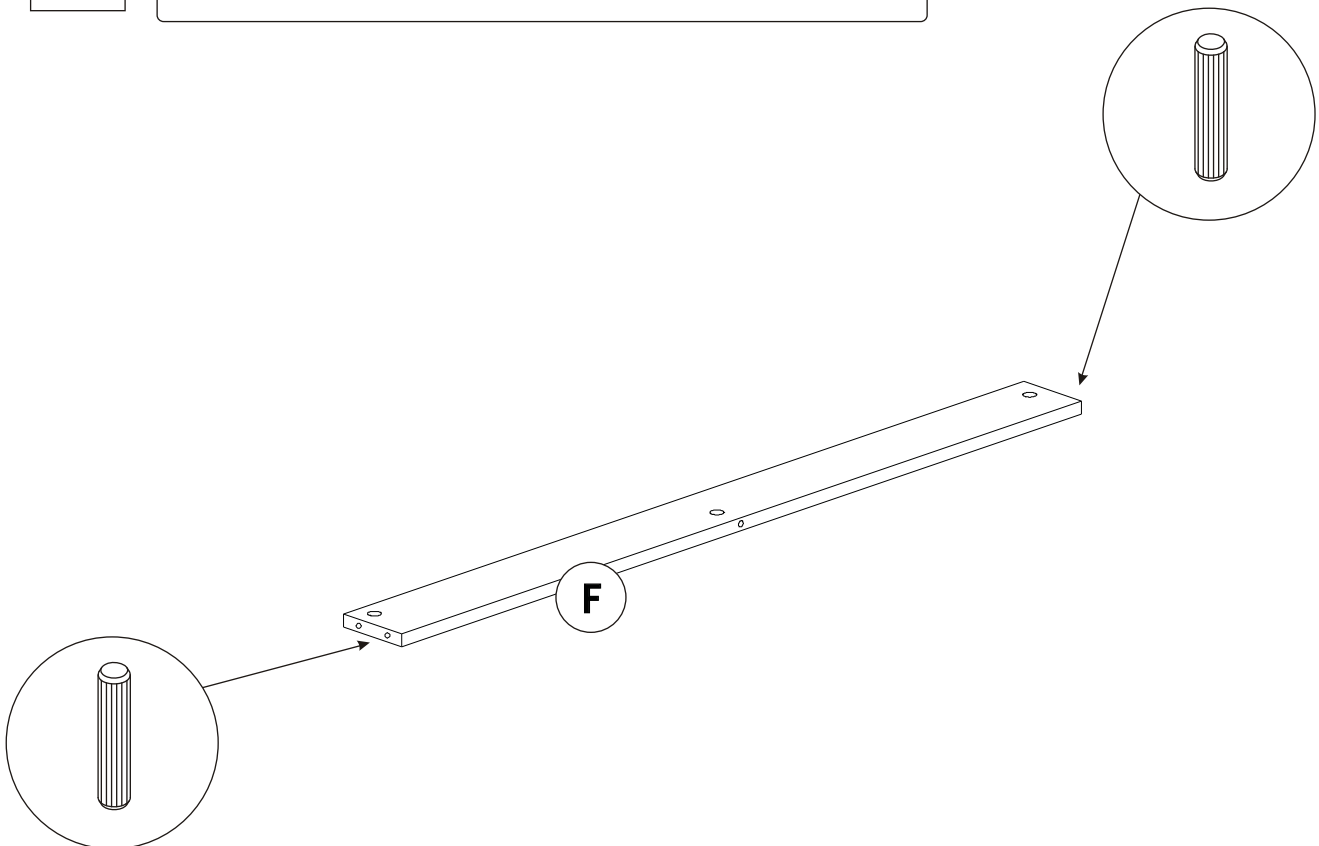


NOTE: Please review the “Cam Assembly System” page to properly fasten Dowels.

 ATTACH REAR BOARD

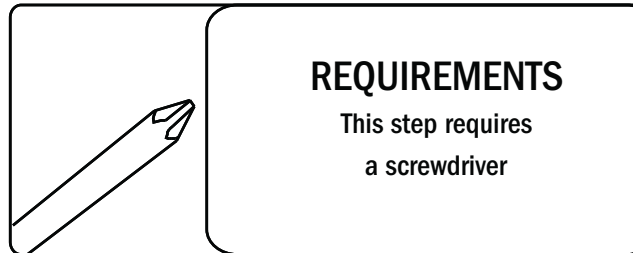

15

 Attach Back Board (E) to Under Side
of Top Board (A) as Shown.

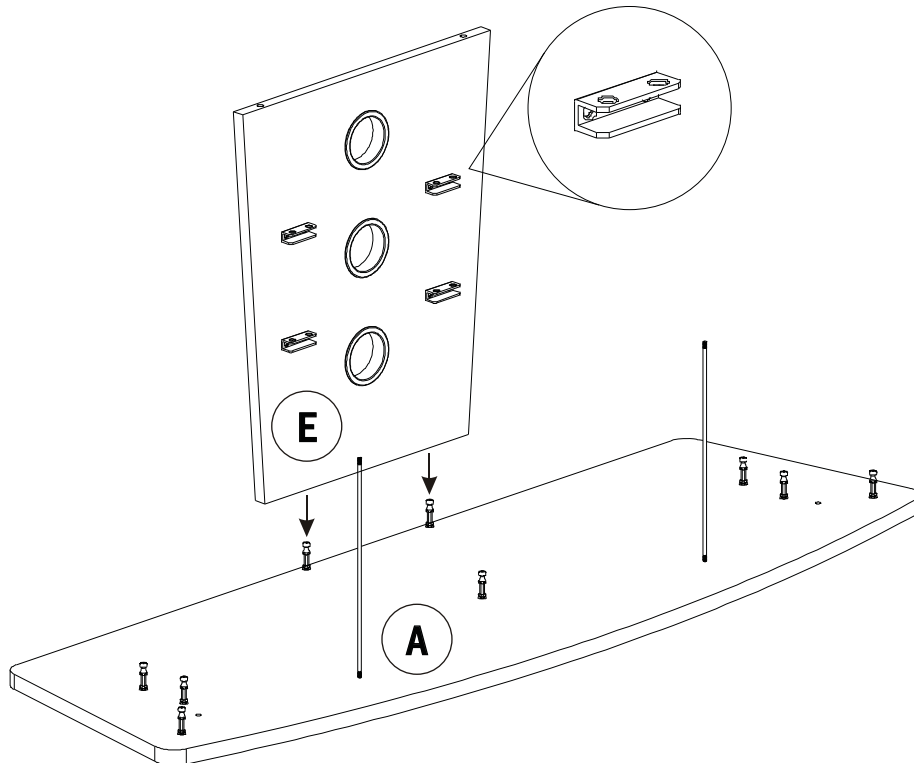

NOTE: Please review the “Cam Assembly System” page to properly fasten Cams and Cam Bolts.



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

ATTACH SUPPORTS AND BRACE BOARD



 
16

Attach Supports (CR) (CL) to Brace Board (F) as Shown.




ATTENTION !

A PLASTIC PROTECTION LAYER IS IN PLACE TO AVOID SCRATCHES DURING TRANSIT.
PEEL OFF THE PROTECTIVE PLASTIC LAYER BEFORE ATTACHING THE SUPPORTS (CL&CR) TO BRACE BOARD (F).

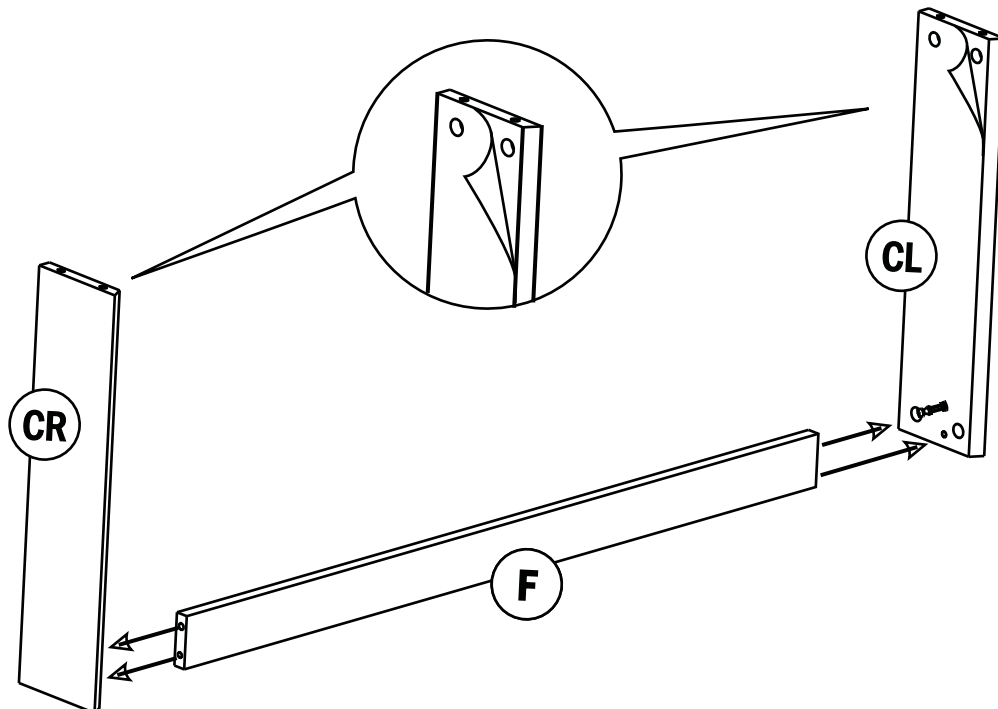


NOTE: Please review the “Cam Assembly System” page to properly fasten Cams and Cam Bolts.

 ATTACH SUPPORTS

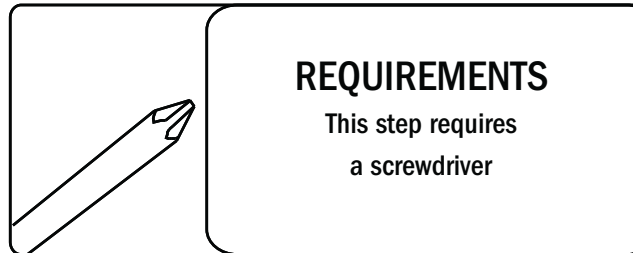

17

 - Attach Side Supports (CL & CR) to Top Board (A)

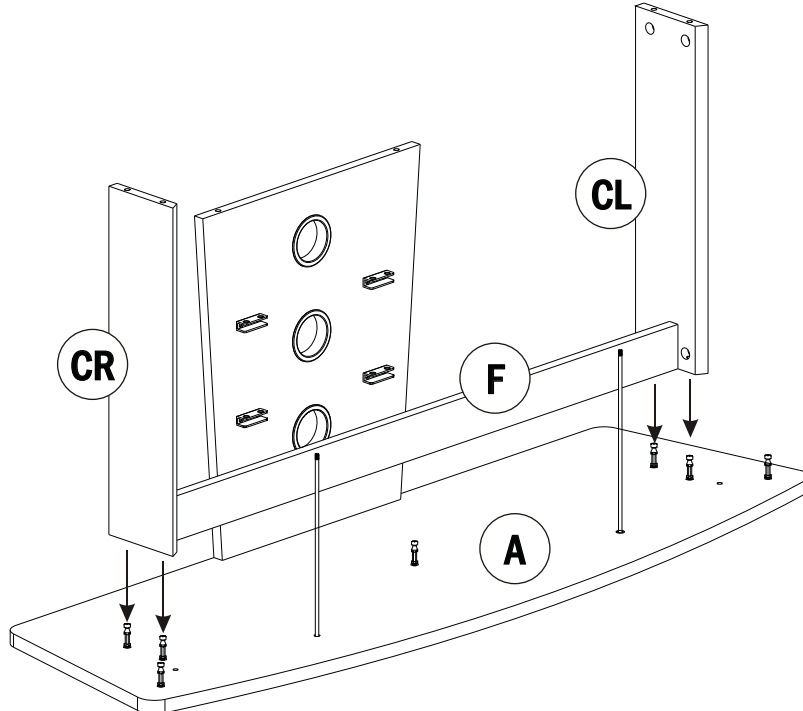

NOTE: Please review the “Cam Assembly System” page to properly fasten Cams and Cam Bolts.



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

INSERT LONG TUBES



REQUIREMENTS

 
This step requires

2 Long Tubes

2X

18

- Insert Long Tubes to Connecting Rods

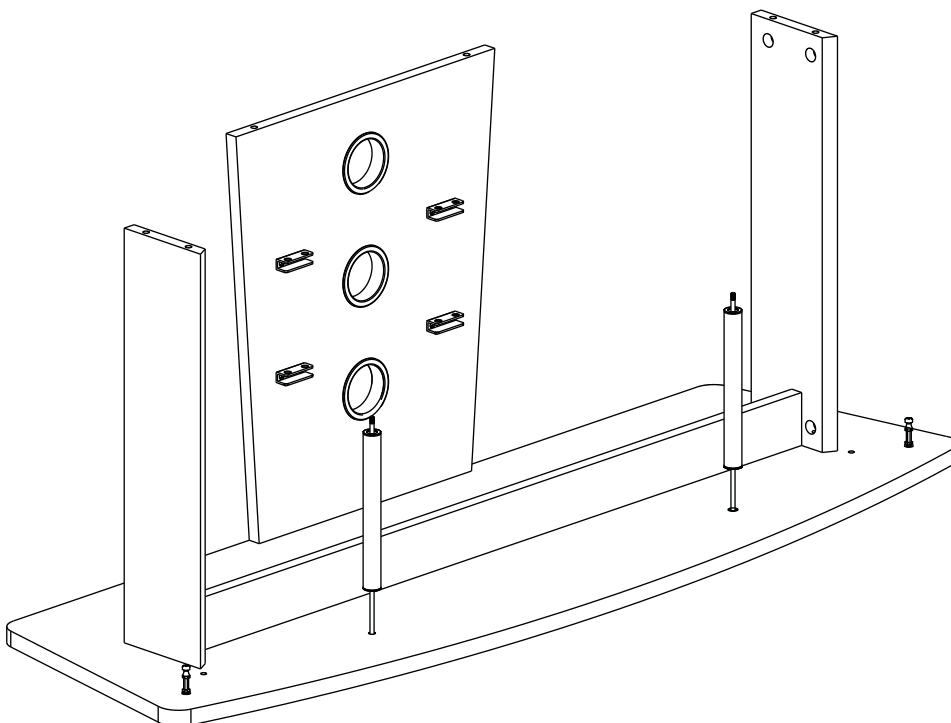


ATTACH GLASS SHELF



19

 Attach Glass Shelf (G) to the
assembled base as shown

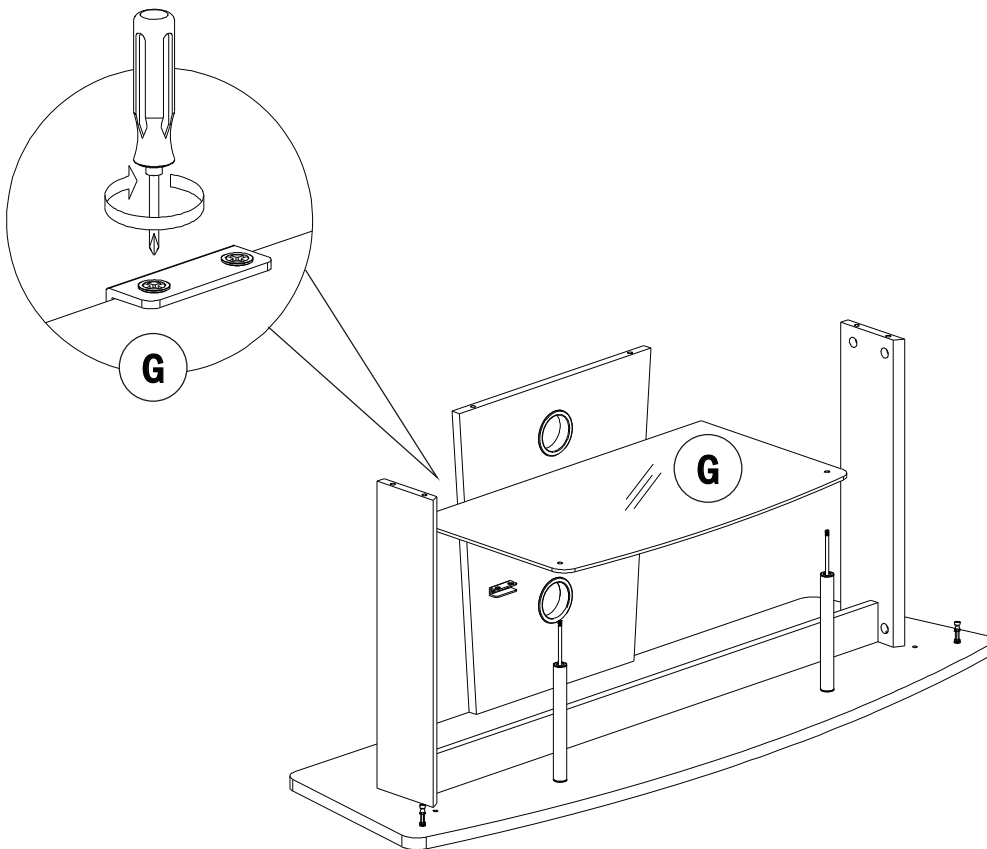

INSERT SHORT TUBES



REQUIREMENTS

 
This step requires

2 Short Pipes


2X

20

Insert Short Pipes to Connecting Rods.

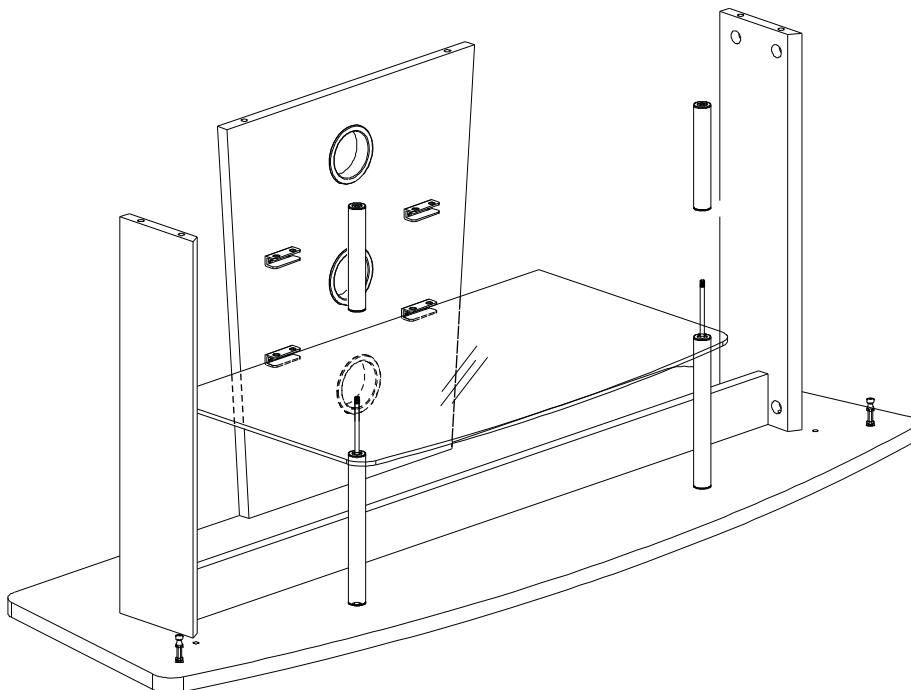


INSERT NUT CAPS AND WASHER PLATES

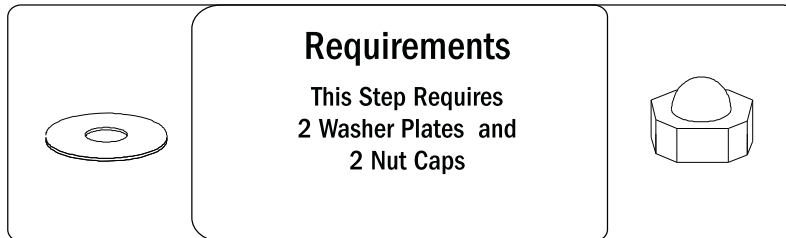 

21

 Attach Glass Shelf (G) to the assembled base as shown and attach Washer plates and Nut Caps to Connecting Rods as shown.

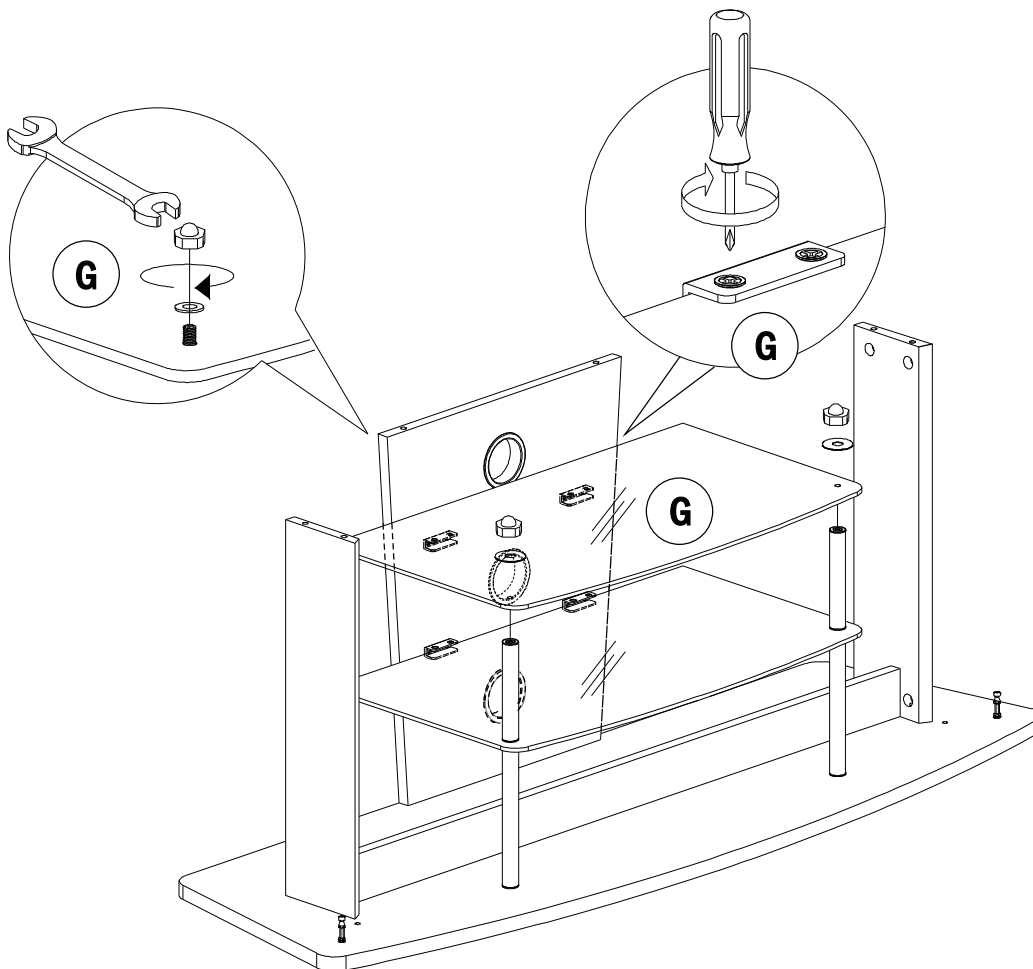

AVIO™

 
AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

ATTACH SIDE SUPPORTS




22

Attach side Supports (DL & DR) to Top Board (A) as shown.

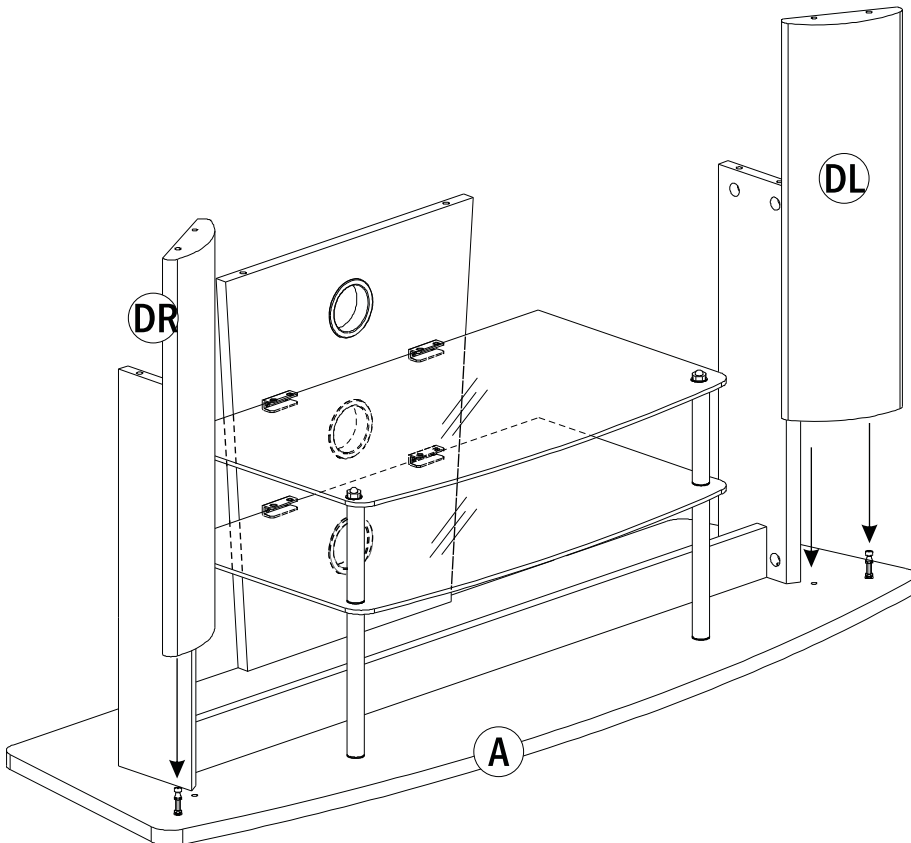


NOTE: Please review the “Cam Assembly System” page to properly fasten Cams.

 ATTACH BOTTOM BOARD

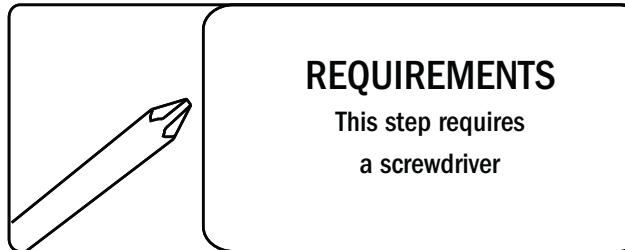

23

 - Attach Bottom Board (B) to Rear Board (E) , Shelf side Support(CL) , (CR), Side Support (DL) , (DR) as shown.

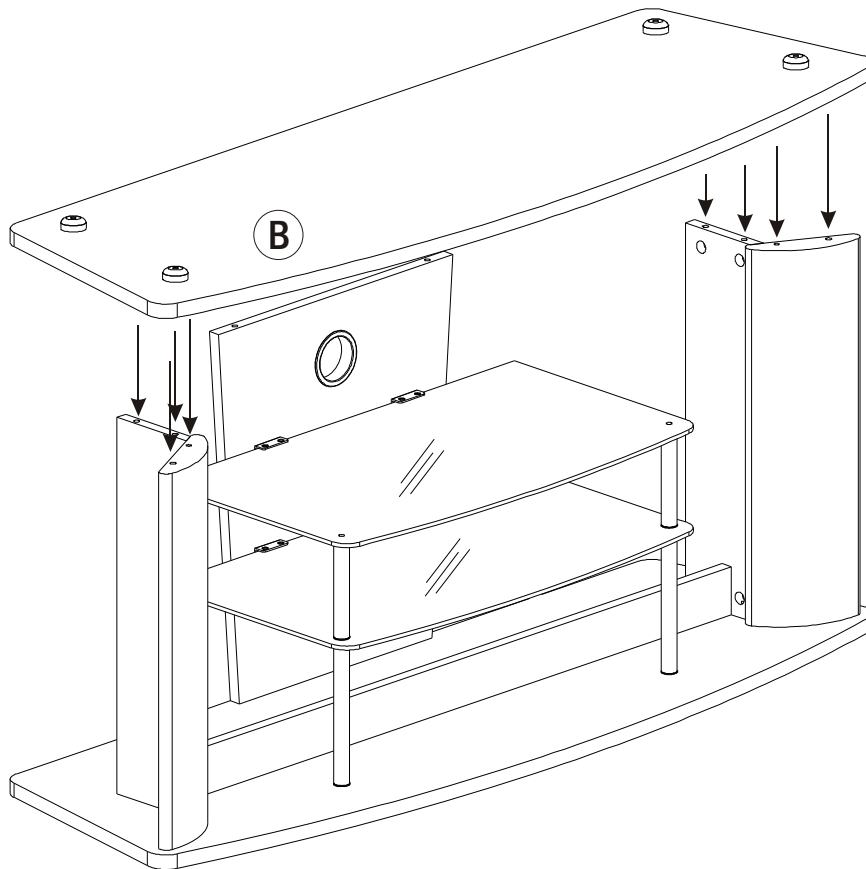


NOTE: Please review the “Cam Assembly System” page to properly fasten Cams and Cam Bolts.



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

 ATTACH CAM CAPS AND TURN UPRIGHT




REQUIREMENTS

This step requires
19 Cam Caps


24

 Insert Cam Caps to all fastened Cams as shown.

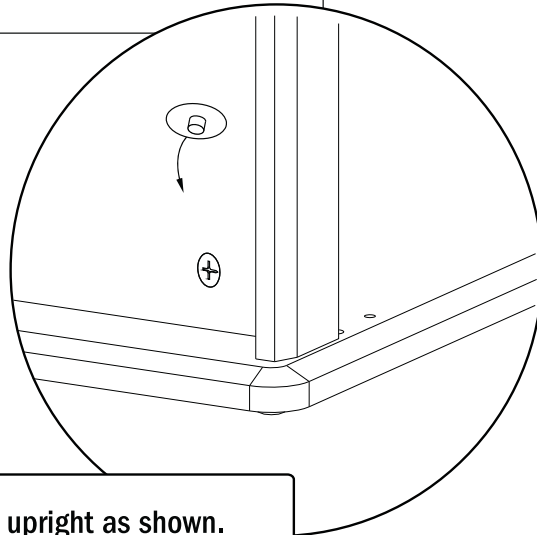

25

 Finally, turn the assembled unit upright as shown.

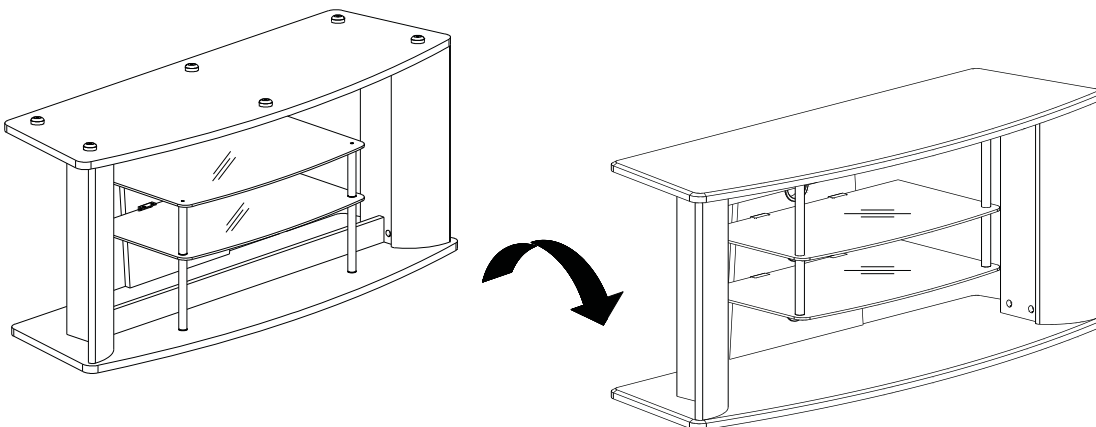

ATTACH WALL BRACKET


	<p>REQUIREMENTS</p> <p>This step requires</p> <p>1 Screw (14)</p> <p>1 Drywall Anchor, Masonry</p> <p>Drill and a screwdriver</p>		 <p>Ø = 6 mm</p>
---	--	---	---

26




Attention !

 
Wall mount serves as tip-over protection - it must be installed !
For some wall types, a special Drywall Anchor may be required !

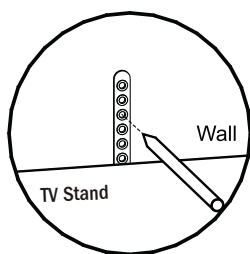

 
- Place TV Stand in desired position
- Mark position on wall with pencil

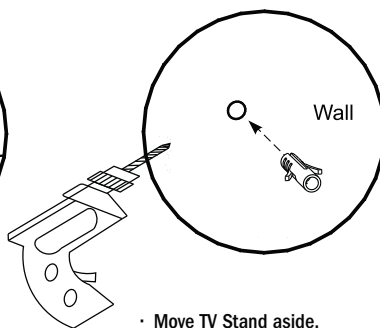

 - Move TV Stand aside.
- Drill mark with Masonry Drill
- Attach Drywall Anchor to the wall

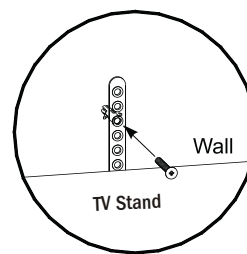

 - Move TV Stand back to its desired position.
- Tighten screw using screwdriver

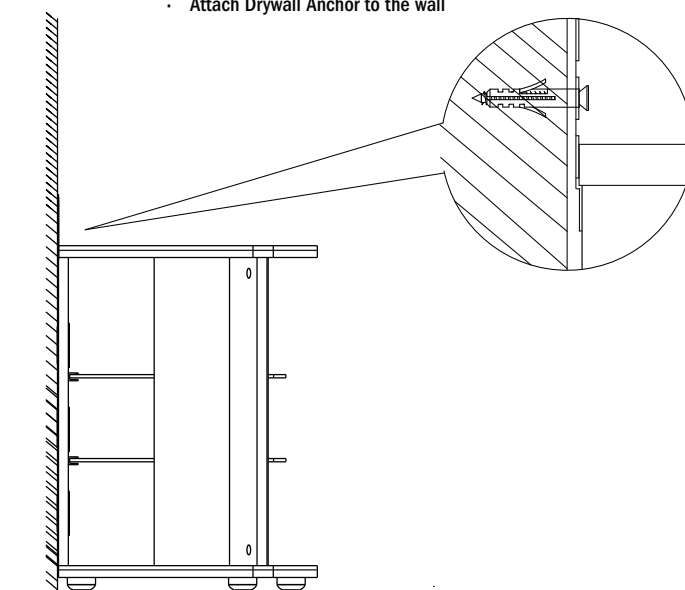

Mount to a wall with or without a baseboard



AVIO Entertainment Furnishings is a trademark of Slam Brands, Inc.

Toll Free: 1 (866) 632-6632 support@slambrands.com www.slambrands.com

