 



# N300 Wireless Router

## User Manual

### Overview

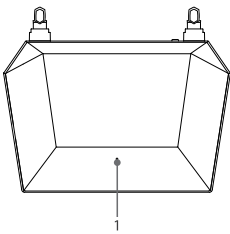


 Number	Indicator	Description
01	Indicator status	Solid red: Power on, Internet is not connected. Solid green: Connected to the Internet.

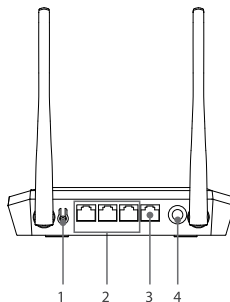

Number	Ports and Button	Description
01	Reset/WPS Button	Press the button for 1 s to start the WPS process. Press and hold the button for 5s to reset the device.
02	LAN ports	Connects to wired devices such as computers and set top boxes. You can switch between the WAN port and LAN port.
03	WAN port	Connects to the Internet modem or Ethernet port. You can switch between the WAN port and LAN port.
04	Power port	Connects to the power supply.


### Connect to Internet

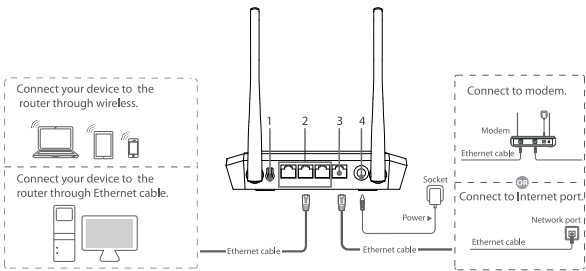 

- Power off the modem.
- Connect the modem's LAN port with an Ethernet cable (RJ45) to the router's WAN port.
  - If your internet connection is through an Ethernet cable directly from the wall, connect the other end of Ethernet cable to the router's WAN port.
- Connect the power adapter to the router's DC-IN and turn it on.
- Plug in the modem's power adapter.

### Set up the Network via a Web Browser

 1. Connect your smartphone or computer to the Wi-Fi name (SSID) displayed on the device label on the router.

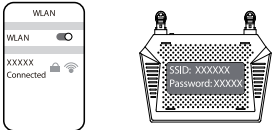


2. Launch a web browser. Key in 192.168.10.1 in the address bar. Enter the default Username and Password on the label at the bottom of the router, then you can enter the router management page.



3. Choose **Internet** Page, select **WAN Type**, click **DHCP**, and click **Save**.

 - i** If you do not know the Internet connection type, please consult your Internet Service Provider.

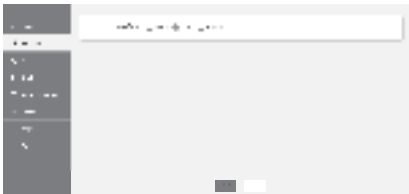

4. Choose **WIFI** page. Change the **SSID** and **Password** to improve your W-Fi network security. Click **Save** to save the configuration.



### FAQ

Q1: What should I do if I can't access the router's management page?

- Reboot your router and try again
- Check your W-Fi connection.
- Use another Web browser such as Google Chrome.
- Restart your device.

Q2: What should I do if I can't access Internet?

- Reboot your modem and router, then try again.
- Check the Internet is working. With an Ethernet cable connecting the modem to the computer directly.

Q3: What can I do if I forget my wireless network password?

- If you have not changed the default wireless password, it can be found on the label at the back of the router.
- Connect your computer to the router via an Ethernet cable. Log in to the web management page at IP Address: 192.168.10.1 and go to **Install > Wireless** to retrieve or reset your wireless password.

Q4: What should I do if I forget my Web management page password?

- Check the Web password on the label at the bottom of the router.
- When the router is power on, use a pin to press and hold the **RESET** button on the back until the LED blinks. Then the password will restore to the default that marked on the label.