

# **EC-Net-AX Andover AC256 Driver**

User Guide

---

**DISTECH**  
CONTROLS™

---

Innovative Solutions for Greener Buildings™

**Document Revision History:**

Version 1.0 - Initial Release – November 2011

EC-Net-AX Andover AC256 Driver – User Guide

**05DI-UGAC256-10**

©, Distech Controls Inc., 2011. All rights reserved.

First printing – November 2011. Printed in Canada.

While all efforts have been made to verify the accuracy of information in this manual, Distech Controls is not responsible for damages or claims arising from the use of this manual. Persons using this manual are assumed to be trained HVAC professionals and are responsible for using the correct wiring procedures, correct override methods for equipment control and maintaining safe working conditions in fail-safe environments. Distech Controls reserves the right to change, delete or add to the information in this manual at any time without notice.

Distech Controls, the Distech Controls logo, and Innovative Solutions for Greener Buildings are trademarks of Distech Controls, Inc.; Niagara<sup>AX</sup> Framework and Niagara Framework are registered trademarks of Tridium, Inc.; BACnet is a registered trademark of ASHRAE; All other trademarks are property of their respective owners; All specifications subject to change without notice or liability to provide changes to prior purchasers. Information and specifications published here are current as of the date of publication of this document; Products or features contained herein may be covered by one or more U.S. or foreign patents.

# TABLE OF CONTENTS

---

|  |           |
|--|-----------|
| <b>Compatibility .....</b>   | <b>5</b>  |
| Tested Versions.....   | 5         |
| Platforms.....   | 5         |
| Mapping of AC256 Points to Proxy Extensions.....                               | 5         |
| <b>Installation .....</b>  | <b>6</b>  |
| <b>Quick Start .....</b>   | <b>7</b>  |
| <b>AC256 Component Guides.....</b>   | <b>8</b>  |
| AndoverNetwork .....   | 8         |
| AndoverDevice .....  | 10        |
| AndoverProxyExt.....   | 13        |
| <b>Andover AC256 Views .....</b>   | <b>16</b> |
| Device Manager.....  | 16        |
| Point Manager .....  | 17        |
| AC256 Virtual Terminal .....   | 21        |
| Backup Manager View.....   | 22        |
| Performing a Backup .....  | 23        |
| Performing a Reload.....   | 23        |
| Setting Options on the Controller .....  | 24        |
| <b>Point Value Conversion Considerations .....</b>                             | <b>26</b> |
| Conversion from AC256 point values to EC-Net <sup>AX</sup> Boolean points..... | 26        |
| Conversion from AC256 point values to EC-Net <sup>AX</sup> Numeric points..... | 26        |
| Conversion from AC256 point values to EC-Net <sup>AX</sup> Enum points.....    | 26        |
| Conversion from AC256 point values to EC-Net <sup>AX</sup> String points.....  | 27        |
| <b>Using the AndoverScript Object.....</b>                                     | <b>28</b> |



# COMPATIBILITY

---

## Tested Versions

The Andover AC256 driver was developed against the following AC256 systems:

- 1) AC256, Firmware version 8.3
  - a. 1 Package Control Unit, Firmware version 3.3

The Andover AC256 driver has been field tested against the following AC256 systems:

- 1) AC256, Firmware version 7.0D
  - a. 3 IOU panels
  - b. 3 LCU panels

## Platforms

The ANDOVER AC256 driver will function on all EC-Net<sup>AX</sup> platforms that support serial RS-232 communications. EC-Net<sup>AX</sup>-3.1 or higher is required.

## Mapping of AC256 Points to Proxy Extensions

The Andover AC256 driver allows the creation of any of the following ControlPoint/AndoverProxyExt combinations:

- NumericPoint with AndoverNumericProxyExt
- NumericWritable with AndoverNumericProxyExt
- BooleanPoint with AndoverBooleanProxyExt
- BooleanWritable with AndoverBooleanProxyExt
- StringPoint with AndoverStringProxyExt
- StringWritable with AndoverStringProxyExt
- EnumPoint with AndoverEnumProxyExt
- EnumWritable with AndoverEnumProxyExt

There are no limitations put on mapping AC256 points to proxy types. It is up to the integrator to determine which point type to create for each point that is learned from the Andover network.

To determine how point values obtained from the AC256 panels are converted to data for each of the above proxy point types, see [“Point Value Conversion Considerations.”](#)

# INSTALLATION

---

To use the EC-Net<sup>AX</sup> Andover AC256 driver, you must have a target host that is licensed for the feature “andoverAC256”. In addition, other device limits or proxy point limits may exist in your license.

From your PC, use the EC-Net<sup>AX</sup> Pro 3.1.x or later installed with the “installation tool” option (checkbox “This instance of EC-Net<sup>AX</sup> Pro will be used as an installation tool”). This option installs the needed distribution files (.dist files) for commissioning various models of remote EC-BOS<sup>AX</sup> platforms. The dist files are located under your EC-Net<sup>AX</sup> install folder in various revision-named subfolders under the “sw” folder.

When installing EC-Net<sup>AX</sup> Pro on your PC, you should also select the **andoverAC256** module.

Apart from installing the 3.n.nn version of the EC-Net<sup>AX</sup> distribution files in the EC-BOS<sup>AX</sup>, make sure to install the **andoverAC256** module too (if not already present, or upgrade if an older revision). For more details, see “About the Commissioning Wizard” in the EC-BOS<sup>AX</sup> Install and Startup Guide.

Following this, the station is now ready for Andover AC256 software integration, as described in the rest of this document.

# QUICK START

---

## 1. Create a new station

- Follow the installation and configuration instructions preceding this.
- On EC-Net<sup>AX</sup> Pro menu “Tools”, select “New Station”.
- In the “Nav” pane of EC-Net<sup>AX</sup> Pro, expand the new station, and double-click the “drivers” branch. This will display a “Driver Manager” in the right pane.
- Click “New” in the “Driver Manager”. Select the “Andover Network”, and click “Add”. Answer the remaining wizard prompts until the new network is added.
- Right click on “config.bog” for the new station in the Nav tree, and select “Save”.
- At this point you will need to download the new station to the EC-BOS<sup>AX</sup> and start the station.

## 2. Download and Start the new Station on the target EC-BOS<sup>AX</sup>.

## 3. Configure and Learn

- Open the running station in EC-Net<sup>AX</sup> Pro
- View the property sheet for the AndoverNetwork:
  - Response Timeout: 0.5 sec.
  - Retry Count: 1
  - Inter Message delay: 0.0 sec
  - Expand “Serial Port Parameters” and enter in the communication settings that match the setup of the AC256 panel you are connecting to.
- View the Device Manager view of the AndoverNetwork. Click “New” to add a single Andover Device. Go to the new Andover Device property sheet.
  - Set the “Device Password” to “&xxxxx” type of password
  - Set the “Built in User Password” to the administrator level password from the factory
- Save the station and restart the EC-BOS<sup>AX</sup>.
- Navigate to the “Points” folder under the device and double click the points folder to display the “Andover Point Manager” view.
  - Click the “Discover” button and wait for discovery to complete
  - Select one or more discovered points in the top pane and click “Add”
  - You now have one or more Andover points added, and they should be polling.

# AC256 COMPONENT GUIDES

## AndoverNetwork

The AndoverNetwork provides all the configuration parameters necessary to allow the driver to communicate with a network of a single Andover AC256 device + LCUs.

The AndoverNetwork is the "network-level" component in the EC-Net<sup>AX</sup> architecture. It has the standard network component properties such as status and enabled (see "Driver Architecture / Common network components" in the *EC-Net<sup>AX</sup>-3.x Drivers Guide* for more information), as well as properties unique to configuring an AC256 network.

| AndoverNetwork (Andover Network) |  |
|----------------------------------|--|
| Status                           | {ok}                                     |
| Enabled                          | <input checked="" type="checkbox"/> true |
| Fault Cause                      |  |
| Health                           | Ok [18-Jun-07 2:45 PM EDT]               |
| Alarm Source Info                | Alarm Source Info                        |
| Monitor                          | Ping Monitor                             |
| Tuning Policies                  | Tuning Policy Map                        |
| Poll Scheduler                   | Basic Poll Scheduler                     |
| Retry Count                      | 1  |
| Response Timeout                 | +00000h 00m 00.500s                      |
| Inter Message Delay              | 00000h 00m 00.000s [0ms - 1sec]          |
| Serial Port Config               | Serial Helper                            |
| Unsolicited Receive Handler      | Andover Unsolicited Receive              |
| AC256_Device                     | Andover Device                           |

*NOTE: In the following properties, the grayed out properties are inherited from the base EC-Net<sup>AX</sup> driver classes, and as such are only touched on here. For a full explanation, refer to the "Driver architecture" chapter in the EC-Net<sup>AX</sup>-3.x Drivers Guide.*

- **Status** – The status of the network. Will normally be {ok}. See Fault Cause property for more information if not {ok}.
- **Enabled** – Enables or Disables the Andover AC256 Driver
- **Fault Cause** – if the "Status" is fault, the fault cause will appear here.
- **Health** – Communications health and fail statistics
- **Alarm Source Info** – configuration for routing alarms
- **Monitor** – container for monitor (ping) properties.
- **Tuning Policies** - A container for tuning policies which determines how and when proxy points are read and written.
- **Poll Scheduler** – contains properties for Fast, Normal, and Slow rate polling, as well as statistics on polling performance.
- **Retry Count** – Number of times to re-send a message if the initial try has no response.
- **Response Timeout** – The amount of time to wait for a response to a message sent to the AC256 panel. If this time is exceeded, then a retry will be sent (if "Retry Counts" is non-zero )



- **Inter Message Delay** – Some installations require a “pause” between adjacent messages to allow time for the AC256 panel to “catch up” with its own internal processing. This has the effect of adding time between polls, so this number should be kept as small as possible. Normally, a setting of “0.0” will work.
- **Serial Port Config** – The communications parameters are set here to match the set up of the AC256 network controller's RS-232 port.

|   |   |
|---|---|
| <input type="checkbox"/> <input checked="" type="radio"/> Status            | { ok }  |
| <input type="checkbox"/> <input checked="" type="radio"/> Port Name         | COM1  |
| <input type="checkbox"/> <input checked="" type="radio"/> Baud Rate         | Baud9600 ▼  |
| <input type="checkbox"/> <input checked="" type="radio"/> Data Bits         | Data Bits8 ▼  |
| <input type="checkbox"/> <input checked="" type="radio"/> Stop Bits         | Stop Bit1 ▼   |
| <input type="checkbox"/> <input checked="" type="radio"/> Parity            | None ▼  |
| <input type="checkbox"/> <input checked="" type="radio"/> Flow Control Mode | <input type="checkbox"/> RtsCtsOnInput <input type="checkbox"/> RtsCtsOnOutput <input type="checkbox"/> XonXoffOnInput <input type="checkbox"/> XonXoffOnOutput |

- **Unsolicited Receive Handler** – no configurable or viewable properties.
- **Andover Device** – A dynamically added device that is a proxy for the actual AC256 panel. ***Note that an Andover Network should contain one and only one Andover Device***

## AndoverDevice

The AndoverDevice is a dynamic slot on the AC256 Network. There should only ever be one and only one AndoverDevice located under an Andover Network object. The AndoverDevice corresponds to the AC256 panel to which the RS-232 connection is made.

| Property                     | Value                        |
|------------------------------|------------------------------|
| Status                       | {ok}                         |
| Enabled                      | true                         |
| Fault Cause                  |                              |
| Health                       | Ok [18-Jun-07 4:06 PM EDT]   |
| Alarm Source Info            | Alarm Source Info            |
| Device Password              | sne222                       |
| Built In User Password       | santa                        |
| Comm Initialized             | true                         |
| Prompt Status                | R Prompt                     |
| Current Domain               | 0                            |
| Print Status Readings        | Print Status Readings        |
| Jace Date Time               | 2007 JUN 18 MON 16 6 19      |
| Automatically Set Time       | true                         |
| Sync Time Frequency          | 00000h 11m 00s [1min - +inf] |
| Automatically Reload Program | true                         |
| Program Reload Settings      | Program Reload Settings      |
| Automatically Set Options    | true                         |
| Option Command Settings      | Andover Set Options Config   |
| Monitor Point                | F1                           |
| Use S Port                   | false                        |
| Points                       | Andover Point Device Ext     |
| AndoverScript                | Andover Script               |

*NOTE: In the following properties, the grayed out properties are inherited from the base EC-Net<sup>AX</sup> driver classes, and as such are only touched on here. For a full explanation, refer to the "Driver architecture" chapter in the EC-Net<sup>AX</sup>-3.x Drivers Guide.*

- **Status** – The status of the device. Will normally be {ok}. A value of {down} indicates that the last ping to the device was not answered (the "Print CommStatus" command is used as the ping message).
- **Enabled** – Enables or Disables communication to the associated device from AC256 Driver
- **Fault Cause** – if the "Status" property value is {fault}, the fault cause is displayed here.
- **Health** – contains metadata about the health of this device on the network:
  - **Down** – indicates if this device is down – should be false under normal operation.

- **Alarm** – indicates if this device is in alarm – should be false under normal operation
- **Last OK Time** – the last time of successful communication to this device
- **Last Fail Time** – the last time of unsuccessful communication to this device
- **Last Fail Cause** – the reason of the last communication failure
- **Alarm Source Info** – configuration items for alarms generated from the ping process (device up and device down events)
- **Device Password** – This is usually formed from the serial number tag inside of the AC256 controller enclosure.
- **Built In User Password** – This should be set to the built in user password that is factory set. Some well known passwords are “Santa”, “bugger”, and “froboz”.
- **Comm Initialized** – indicates a successful login or not
- **Prompt Status** – Indication of the context with which the driver is currently talking to the panel. Normally indicates “R Prompt”
- **Current Domain** – Indication of the current “domain” with which the driver is currently talking to the panel. Normally indicates “0”.
- **Print Status Readings** – Whenever a “status” message is received (usually happens at startup), this property is updated with the values from message. To force an update of the readings, you may issue the “Status Command” action by right clicking on the Andover Device component in the Nav tree.

| Print Status Readings                           |                         |
|---|-------------------------|
| <input type="checkbox"/> Unit Number            | 1                       |
| <input type="checkbox"/> Number Attached I O Us | 2                       |
| <input type="checkbox"/> Iou Comm Faults        | 1, 2                    |
| <input type="checkbox"/> Iou Overrides          |                         |
| <input type="checkbox"/> Number L C Us          | 2                       |
| <input type="checkbox"/> L C U Comm Faults      | 1                       |
| <input type="checkbox"/> Disabled Var Classes   | F, V                    |
| <input type="checkbox"/> Number Failures        | 1                       |
| <input type="checkbox"/> Andover Date Time      | 2007 JUN 18 MON 16 20 6 |

- **EC-BOS<sup>AX</sup> Date Time** – A display of the EC-BOS<sup>AX</sup>'s real time clock. This value is also updated as a courtesy (so the user can compare the AC256 time with the **EC-BOS<sup>AX</sup>** time) whenever the “Status Command” action is invoked on the Andover Device.
- **Automatically Set Time** – If set to “true”, then the driver will send a time update command to the AC256 panel on a schedule determined by the “Sync Time Frequency” property.
- **Sync Time Frequency** – how often to send the EC-BOS<sup>AX</sup>'s clock time to the Andover panel to keep them time-synchronized.
- **Automatically Reload Program** – The driver has the ability to download (automatically, when it detects the panel's memory has been lost) a complete database backup copy. The backup copies are stored on the EC-BOS<sup>AX</sup> in a “backups” folder, using panel serial number, domain, and time in the file name.

- **Program Reload Settings** – Settings which need to be entered whenever an AC256 panel is reloaded from scratch. The panel normally will prompt the terminal user for number of IOU's and number of LCU's that need to be configured in to the system.

| Program Reload Settings                          |  |
|--|--|
| <input type="checkbox"/> Reload Required         | <span style="color: red;">●</span> false |
| <input type="checkbox"/> L Bus Ious At Startup   | 2 [1 - 16]                               |
| <input type="checkbox"/> Acnet L C Us At Startup | 2 [1 - 127]                              |

- Reload Required – Driver determines if a reload is required
- L Bus Ious At Startup – Enter the number of IOUs that need to be re-configured into the system, should the controller database need to be reloaded.
- Acnet L C Us At Startup – Enter the number of LCU's that need to be re-configured into the system, should the controller database need to be reloaded.
- **Automatically Set Options** – The driver has the ability to execute the “Set Options” command after a reload if this property is set to “true”. The Set Options command prompts the terminal user for several pieces of information. The answers to these prompts should be configured into the property “Option Command Settings” below:
- **Option Command Settings** – The answers to the prompts presented to a terminal user (the driver becomes the terminal user in this case) in response to the “Set Options” command. Note that these values can also be set via the “Andover Backup Manager” view using the [“Set Options”](#) button.

| Option Command Settings                                 |   |
|---|---|
| <input type="checkbox"/> Console Port Speed             | Baud9600                                  |
| <input type="checkbox"/> Console Inactivity Auto Logoff | <span style="color: red;">●</span> false  |
| <input type="checkbox"/> Console Message Buffering      | <span style="color: red;">●</span> false  |
| <input type="checkbox"/> S Port Speed                   | Baud1200                                  |
| <input type="checkbox"/> S Port Inactivity Auto Logoff  | <span style="color: green;">●</span> true |
| <input type="checkbox"/> S Port Message Buffering       | <span style="color: green;">●</span> true |
| <input type="checkbox"/> Master I D Number              | 1 [1 - 32]                                |
| <input type="checkbox"/> X Bus Speed                    | Baud300                                   |
| <input type="checkbox"/> L Bus Speed                    | Baud19200                                 |
| <input type="checkbox"/> Acnet Speed                    | Baud9600                                  |

- **Monitor Point** – This is the point that is used in the “ping” process. In order for the panel to be detected as “up”, this point must exist in the panel. Defaults to “F1” because this flag point is found in AC256 panels.
- **Points** – A container object that contains proxy points corresponding to points or system variables on the parent AndoverDevice. These proxy points are the data items in this device which need to be polled for data.
- **Use S Port** – Normally, the EC-BOS<sup>AX</sup> will be connected to the Andover panel through the “C Port” of the Andover panel. In some installations, it may be required to use the “S Port”. In these cases, set this property to true. (Note: This affects whether or not a newline character is transmitted after the device password is sent during a logon. If not set correctly, logon will be unsuccessful)

# AndoverProxyExt

The AC256 proxy extension types take on the readable-writable personality of the control point they are attached to. For example, a AndoverProxyExt, when used as an extension on a NumericPoint has “read only” functionality, but when used on as an extension on a NumericWritable can read and write the point values.

The AndoverProxyExt is the “point-level” component in the EC-Net<sup>AX</sup> architecture. The following shows an AndoverProxyExt on a NumericWritable control point:

| Property             | Value                                       |
|----------------------|---|
| Status               | {ok}  |
| Fault Cause          |   |
| Enabled              | <input checked="" type="radio"/> true       |
| Device Facets        | units=null, precision=1, min=-inf, max=+inf |
| Conversion           | Default                                     |
| Tuning Policy Name   | Default Policy                              |
| Read Value           | 79.3 {overridden}                           |
| Write Value          | 31.7 {ok} @ 10                              |
| Assigned Name        | KWPEAK                                      |
| Point Origin         | SV DOM 0                                    |
| Point Notes          |   |
| Send Disable Command | On Every Write                              |
| Read Enabled State   | On Every Read                               |
| Native Enable State  | <input checked="" type="radio"/> false      |
| Poll Frequency       | Normal                                      |

*NOTE: In the following properties, the grayed out properties are inherited from the base EC-Net<sup>AX</sup> driver classes, and as such are only touched on here. For a full explanation, refer to the “Driver architecture” chapter in the EC-Net<sup>AX</sup>-3.x Drivers Guide.*

- **Status** – The status of the proxy ext. Will normally be {ok}. Will transition to ‘fault’ if a response to a poll is detected to be an error. Will transition to ‘down’ if the parent device is down. Will indicate ‘stale’ if the point value has not been updated within the stale timeout period (see Tuning Policy property on the network).
- **Fault Cause** – if the “Status” property value is {fault}, the fault cause is displayed here.
- **Enabled** – Enables or Disables communication to the associated point from Andover Driver
- **Device Facets** – Used to modify the value read to the value displayed. Typically not used in an AC256 integration.
- **Conversion** – Can apply custom conversion to the point values. Applies to both read and (inversely) to write values.
- **Tuning Policy Name** – selects the tuning policy to apply to this point. See “Tuning Policies” property of the AndoverNetwork
- **Read Value** – the value last read from the point in the panel

- **Write Value** – the value last written from this proxy ext (does not apply to read only point types)
- **Assigned Name** – The name used to address this point in the Andover panel. For AC256, this is the only parameter necessary to specify a unique point.
- **Point Origin** – If the point was added using the point manager, then this property will contain the actual location of the point in the AC256 network. For this example, “SV DOM 0” indicates the point came from the SV table of Domain 0 (the AC256 panel). This property is for informational use only, and does not affect the operation of the driver.
- **Point Notes** – If the point was added using the point manager, this property *may* contain additional meta data. For example, if the point is located on an LCU or IOU, the wiring terminals will be displayed by default. The integrator is free to add, modify, or delete any text in this property – it is for informational use only and does not affect the operation of the driver.
- **Send Disable Command** – For points that are Writable, in order for the driver’s written value to “stick” in the panel, the point must be in a “Disabled” state in the panel. This allows the terminal user (the driver) to set a value without having the Andover controller’s program over-write the value from its internal control logic. There are three selections here:
  - **Never** – This setting assumes that either the point is already disabled in the panel, or, alternatively, that the point may or may not be enabled, but is never updated internally by the Andover panel. This setting is the most efficient use of comm. bandwidth because a separate “Disable” command is not required.
  - **On Every Write** – The “Disable” command will be sent EVERY time a write is required to the point. This is the safest setting to assure that the value written will be the value retained in the Andover panel, but has the tradeoff of consuming the most additional comm. bandwidth because two messages are required to be sent for one value written (the ‘disable’ command, followed by the ‘modify’ command)
  - **Only On First Write** – This setting represents a compromise between never sending disable, and always sending disable. The ‘disable’ command will only be sent on the first write, and the driver will “remember” that it has already disabled the point on additional writes. The possibility exists that the driver and panel can become “out of sync” if there is another entity (external to the driver) that also sets the disabled state of the point (NOTE: it is possible to do so from program logic in the panel).
- **Read Enabled State** – This is the “read” equivalent of the “send disable command” property detailed above. This allows the terminal user (the driver when it is polling) read the enabled/disabled state of a point in the panel and mark it accordingly in the proxy ext. There are three selections:
  - **Never** – For points for which you don’t care what the enabled/disabled state is. This has the advantage of consuming the least bandwidth, but the disadvantage of not knowing what the point state is.
  - **On Every Read** – For points for which it is critical to know the disabled/enabled state. This setting consumes more bandwidth (must perform 2 reads – one for state, one for value) whenever polling the point.
  - **Only On First Read** – Compromise setting. The driver will read the enabled state the first time it polls, and “remember” that state from then on out. For writable points, a write which includes a “disable” or a return to “auto” from a previously disabled point will also update the remembered value.

- **Native Enable State** – The enabled/disabled state of the point in the Andover panel. This is the “remembered” state which is updated either from a read (if reading of state is also enabled) or from a write (if writing of state is enabled).
- **Poll Frequency** – Fast, Normal, or Slow. Rates are determined by the Poll Scheduler settings on the AndoverNetwork/Communicator/PollScheduler property.

- Device Manager
- Point Manager
- AC256 Virtual Terminal

The Device Manager is the default view when you double-click on an AndoverNetwork in the Nav tree. This manager view provides a quick and easy way to display and add AC256 devices.

The Andover AC256 Device Manager consists of either one pane. There is no “discover” functionality for AC256, since one and only one device is allowed per network. The view below shows a typical Andover AC256 Device Manager view.

Click the “New” button to add the Andover Device to the network container. Remember, **ONLY ADD ONE DEVICE**.

## EC-Net-AX Andover AC256 Driver



# Point Manager

The Point Manager is the default view when you double-click on a “points” folder under an AndoverDevice in the Nav tree. The Point Manager is a table-based view, where each row represents a unique point in an AC256 controller. Below is an example Point Manager view:

| Database        |                           |             |               |           |              | 13 objects |
|-----------------|---------------------------|-------------|---------------|-----------|--------------|------------|
| Name            | value                     | fault cause | assigned name | raw value | origin       | notes      |
| HODV1w          | Moving Forward {ok} @ def |             | HODV1         | 1         | SV DOM 0     |            |
| BooleanWritable | true {ok} @ def           |             | HODV1         | 1         | unknown      |            |
| KWPEAK          | 38.9 {overridden} @ 10    |             | KWPEAK        | 38.86     | SV DOM 0     |            |
| SIGNSWOV        | true {ok}                 |             | SIGNSWOV      | 5         | LCU IO DOM 2 | D1         |
| RECSWOV         | true {ok}                 |             | RECSWOV       | 2.55      | LCU IO DOM 2 | D2         |
| WK2SWOV         | true {ok}                 |             | WK2SWOV       | 5         | LCU IO DOM 2 | D3         |
| WK1SWOV         | true {ok}                 |             | WK1SWOV       | 5         | LCU IO DOM 2 | D4         |
| PUSHON          | 5.0 {ok}                  |             | PUSHON        | 5         | LCU IO DOM 2 | C5         |
| PUSHOFF         | 5.0 {ok}                  |             | PUSHOFF       | 5         | LCU IO DOM 2 | C6         |
| GE2SWOV         | true {ok}                 |             | GE2SWOV       | 5         | LCU IO DOM 2 | D7         |
| GE1SWOV         | true {ok}                 |             | GE1SWOV       | 5         | LCU IO DOM 2 | D8         |
| SIGNSWON        | false {ok}                |             | SIGNSWON      | 0         | LCU IO DOM 2 | O1         |
| RECSWON         | false {ok}                |             | RECSWON       | 0         | LCU IO DOM 2 | O2         |

Buttons: New Folder New Edit Discover Cancel Add

The “New Folder”, “New”, and “Edit” buttons are not unique to the AC256 point Manager, and are explained in the “Driver architecture” chapter in the *EC-Net<sup>AX</sup>-3.x Drivers Guide*.

By clicking the “Discover” button, the “learn” mode of the manager is invoked (the panes will be split, and a “discovery” table will be displayed in the top pane) and a dialog box will be popped up to prompt the user for some additional data to guide the discovery process, as shown here:

**Discover These**

☐ Andover Point Discovery Config

☐ ☐ Sv Points ☐ false

☐ ☐ Sa Points ☐ false

☐ ☐ Sx Points ☐ false

☐ ☐ User Flag Points ☐ false

☐ ☐ System Flag Points ☐ false

☐ ☐ Iou Andover Iou Point Discovery Config

☐ ☐ Lcu Andover Lcu Point Discovery Config

**OK Cancel**

This dialog box contains several parameters that determine which points in the system are to be discovered:

- **Sv Points** – Discover points from the AC256 controller’s SV table that has been assigned names. These points are obtained by sending the “Print SV” command to the controller (domain 0)

- **Sa Points** – Discover points from the AC256 controller's SA table that have been assigned names. These points are obtained by sending the "Print SA" command to the controller (domain 0)
- **Sx Points** – Discover points from the AC256 controller's SX table that have been assigned names. These points are obtained by sending the "Print SX" command to the controller (domain 0)
- **User Flag Points** – Discover points from the AC256 controller's flags table that have been defined programmatically (i.e., not predefined flags). These points are obtained by sending the command "Print Flags" to the controller at domain 0, and looking for flag points that occur before the "System Defined Flags" section.
- **System Flag Points** – Discover points from the AC256 controller's flags table that are pre-defined. These points are obtained by sending the command "Print Flags" to the controller at domain 0, and looking for flag points that occur after the "System Defined Flags" section.
- **IOU** – Expand this section to refine which points are to be learned from any IOU's that may be attached to the AC256 controller:

- **Iou Points** – Set to true to learn IOU points. IOUs numbered starting at "Start Address" through "Stop Address" will be learned. Points with assigned names from these panels will be learned by sending the command "Print *n*", where *n* is the IOU address.
  - **Start Address** – Enter the starting IOU panel address to learn
  - **Stop Address** – Enter the last IOU panel address to learn
- **LCU** – Expand this section to refine which points are to be learned from any LCU's that may be attached to the AC256 controller:

- **Start Address** – Enter the address of the starting LCU to learn from. This is equivalent to the "domain" number of the first LCU.
  - **Stop Address** – Enter the address of the last LCU to learn from. This is equivalent to the "domain" number of the last LCU.
  - **Sv Points** – Set to true to learn assigned points from the SV table of the LCU. Points are learned by sending the "Dom *n*" command and then the "Print SV" command, where *n* is the LCU address.
  - **Flag Points** – Set to true to learn assigned points from the flags table of the LCU. Points are learned by sending the "Dom *n*" command and then the "Print Flags" command, where *n* is the LCU address

- **Io Points** – Set to true to learn assigned points from the IO table of the LCU. Points are learned by sending the “Dom *n*” command and then the “Print 1” command, where *n* is the LCU address

Clicking the OK will cause a learn process to be kicked off, the progress of which will be displayed in the job bar at the top of the split screen. When the learn process is done, the results will be displayed in the “Discovered” pane on the top half of the point manager display:

Andover Discover Points

Success >>

Discovered

98 objects

| assignedName | rawValue | origin      | notes |
|--------------|----------|-------------|-------|
| CH1WST       | 327.7    | IOU 1 DOM 0 | T1,1  |
| CH2WST       | 327.7    | IOU 1 DOM 0 | T1,2  |
| CCHWRT       | 327.7    | IOU 1 DOM 0 | T1,3  |
| CCDWST       | 327.7    | IOU 1 DOM 0 | T1,4  |
| CD1WRT       | 327.7    | IOU 1 DOM 0 | T1,5  |
| CD2WRT       | 327.7    | IOU 1 DOM 0 | T1,6  |

...

Database

13 objects

| Name                        | value                     | fault cause | assigned name | raw value | origin       | notes |
|-----------------------------|---------------------------|-------------|---------------|-----------|--------------|-------|
| <div></div> HODV1w          | Moving Forward {ok} @ def |             | HODV1         | 1         | SV DOM 0     |       |
| <div></div> BooleanWritable | true {ok} @ def           |             | HODV1         | 1         | unknown      |       |
| <div></div> KWPEAK          | 67.8 {overridden} @ 10    |             | KWPEAK        | 67.81     | SV DOM 0     |       |
| <div></div> SIGNSWOV        | true {ok}                 |             | SIGNSWOV      | 5         | LCU IO DOM 2 | D1    |
| <div></div> RECSWOV         | true {ok}                 |             | RECSWOV       | 2.543     | LCU IO DOM 2 | D2    |
| <div></div> WK2SWOV         | true {ok}                 |             | WK2SWOV       | 5         | LCU IO DOM 2 | D3    |
| <div></div> WK1SWOV         | true {ok}                 |             | WK1SWOV       | 5         | LCU IO DOM 2 | D4    |
| <div></div> PUSHON          | 5.0 {ok}                  |             | PUSHON        | 5         | LCU IO DOM 2 | C5    |

New Folder

New

Edit

Discover

Cancel

Add

The display line for a learned point shows the point name and several columns that are the information returned from the various commands sent to the controller during the learn.

- **assignedName:** The name of the point as it exists in the Andover system.
- **rawValue:** The value of the point as reported by the Andover system.
- **origin:** During the learn process, the driver keeps track of what component or table it is requesting point data from. This information is recorded as the “origin” of the point.
- **notes:** If additional information was returned, this information is recorded here for informational purposes only. The notes value is transferred to any point that is added as a result of the learn, but may be edited/deleted after the point has been added to the database. This column value may or may not be blank.

To add one or more points to the database, select them (multi-select by using CTRL-click or SHIFT-click operations with the mouse), and then select Add.

By clicking “Add” the point(s) are displayed in an “Add” dialog box where the added name, point name, and point type may be modified:

| Name     | Type          | Facets                                   | assigned name | raw value | origin      | notes |
|----------|---------------|--|---------------|-----------|-------------|-------|
| CH1VN    | Boolean Point | trueText=true,falseText=false            | CH1VN         | OFF       | IOU 1 DOM 0 | O1,15 |
| CH2VN    | Boolean Point | trueText=true,falseText=false            | CH2VN         | OFF       | IOU 1 DOM 0 | O1,16 |
| ZONE1.NE | Numeric Point | units=null,precision=1,min=-inf,max=+inf | ZONE1.NE      | 327.7     | IOU 2 DOM 0 | T2,1  |
| ZONE1.SW | Numeric Point | units=null,precision=1,min=-inf,max=+inf | ZONE1.SW      | 327.7     | IOU 2 DOM 0 | T2,2  |

☐ Name: CH1VN  
☐ Type: Boolean Point  
☐ Facets: trueText=true,falseText=false  
☐ assigned name: CH1VN  
☐ raw value: OFF  
☐ origin: IOU 1 DOM 0  
☐ notes: O1,15

OK Cancel

In this dialog, the points may be edited individually or in a batch. Note that any edits apply to ALL selected (highlighted) points in the Add dialog box. The “Type” determines which base point type will be created. ***There may be reasons for changing the Type at this point, but in general the most appropriate type of base point is already selected as the first type in the “Type” pull down selection box. You might want to verify that the Type does not need to be changed to a “writable” version of the same type.*** For example, you may want an “enumeration” point type instead of a “numeric” point type for a point which returns an integer number.


The “name” of the point to be added is derived from the “assignedName” of the point as learned from the controllers. EC-Net<sup>AX</sup> will not allow duplicate names, so if you attempt to learn and add the same point multiple times, EC-Net<sup>AX</sup> will modify the name so that it is unique. You may elect to edit the point “name” to any valid EC-Net<sup>AX</sup> name.

Once the point(s) are satisfactorily edited, click “OK” to create the proxy points corresponding to the group addresses.


Once added to the database, the points appear in the lower pane (or only pane if not in learn mode) of the Point Manager display.

## AC256 Virtual Terminal

The AC256 Console is a special view under the AndoverNetwork component. It is reached by right-clicking the Andover Network component in the component Nav tree, selecting “Views” and then “Andover Console”:

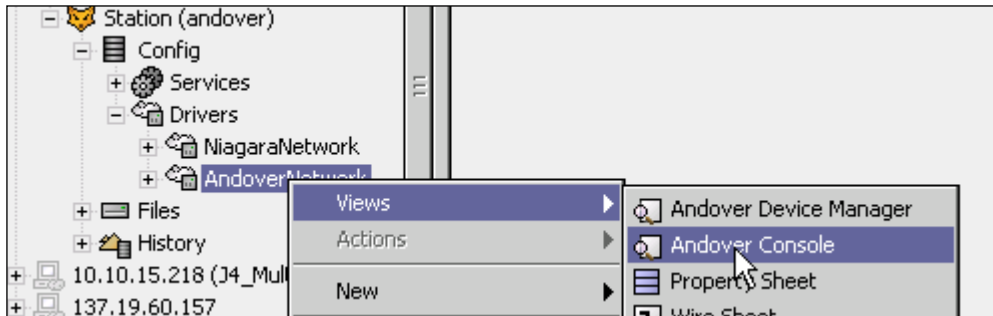

The console view allows the user to monitor the driver activity as it is happening in real time. In addition, the user can interrupt the normal driver communications to perform interactive terminal commands with the AC256 system:

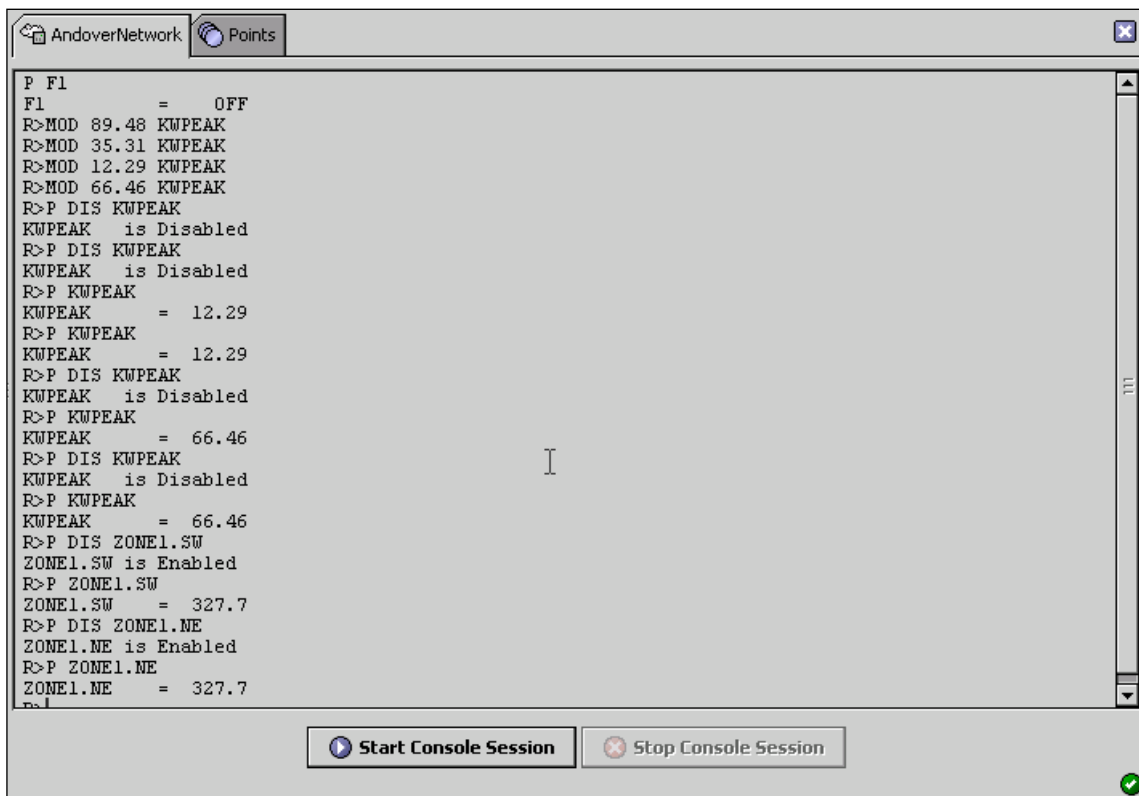

The AC256 console view shows the terminal interface of the AC256 device to which driver is connected. It shows the real-time communications that are taking place between the driver and the controller to the panel.

In addition, a user can enter an interactive session with the controller by clicking the “Start Console Session” button. The session will remain active until the user clicks “Stop Console Session” or exits the view. A console session will pre-empt all other communications for the duration of the session, causing the devices to be marked down and point to go stale. Exiting the console session should allow the driver to resume normal driver communications.


While in the console session, all keystrokes are from the user are sent to the AC256 controller just as if a terminal were connected directly to the controller. Therefore, the full

range of AC256 configuration, programming, and file operations are available while in interactive mode.


**CAUTION:** Care should be used to leave the controller in command line mode at an “R>” prompt when exiting the console session. Failure to do so may prevent the driver from resuming normal driver activity.

## Backup Manager View

A special view is provided on the Andover Device object which allows a user to perform a backup or restore of the AC256 main controllers or LCUs. The backup manager is accessed by right clicking on the Andover Device in the nav tree, selecting “Views”, and then selecting “Andover Backup Manager”:

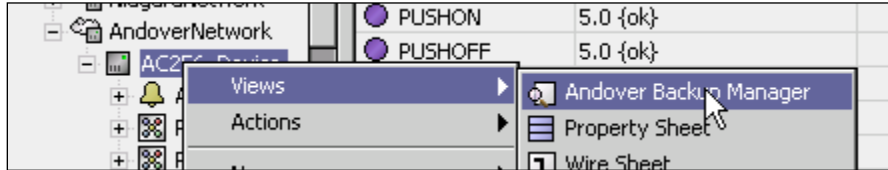


A typical backup manager view is shown here:

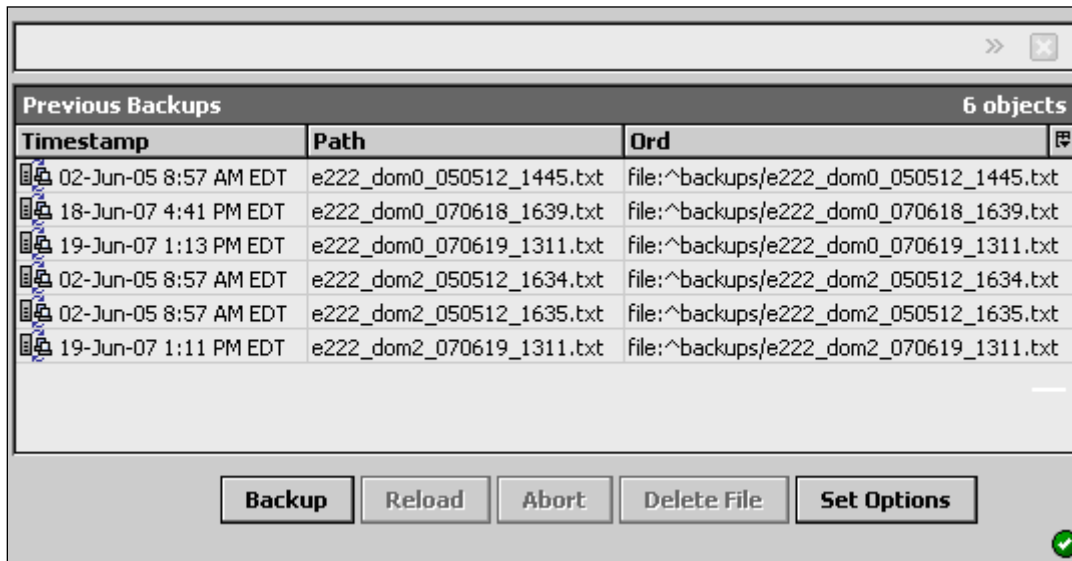

**NOTE:** The manager presents a list of backups that currently exist **on the EC-BOS<sup>AX</sup>**. Backups are always stored on the EC-BOS<sup>AX</sup> because the driver has the ability to automatically reload the controller database in the event that the controller ever loses its database. However, the tradeoff is that the user must be aware that each backup consumes valuable storage space on the EC-BOS<sup>AX</sup>.


If desired, a user with sufficient privileges can use the EC-Net<sup>AX</sup> Pro platform tools to copy these backups to an EC-Net<sup>AX</sup> Pro PC for archival purposes.

Files are automatically named by the backup manager using a set of rules. See the following example:

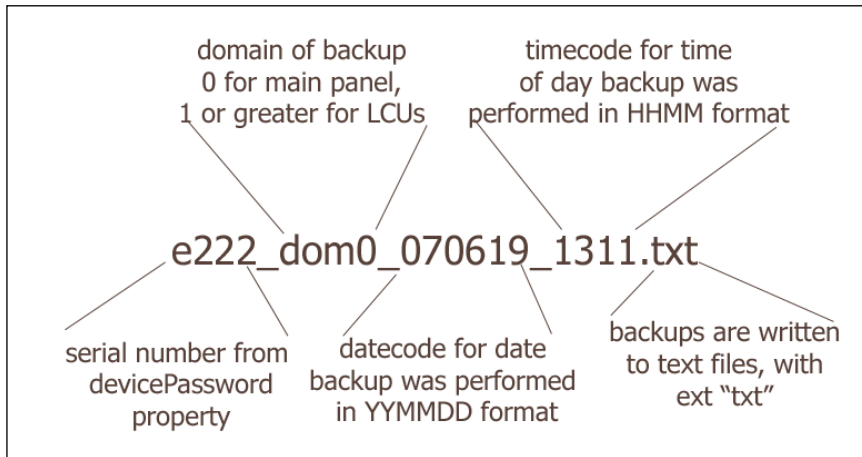

## Performing a Backup

A "backup" of the AC256 system can be performed by clicking on the "Backup" button. This causes a dialog box to appear:

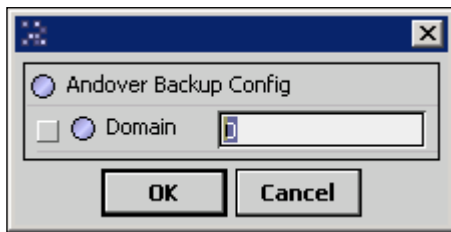

The user should enter the "domain" of the Andover device they wish to backup. An entry of "0" backups up the main AC256 panel, and an entry of 1 or greater corresponds to addresses of LCUs which are attached to the AC256.

Once the user clicks OK, the backup will be started, and the "Abort" button will be the only button enabled. To abort the backup, click "Abort".

The driver waits a considerable amount of time to be certain that all other comm. Activity has ceased. It then switches to the domain of choice and sends the "dump" command to the AC256 network.

PLEASE BE PATIENT....When the backup operation finishes, the buttons should return to the default state.

## Performing a Reload

A "reload" of a controller is invoked by highlighting a single file in the file list (which then enables the "Reload" button), and then selecting the "Reload" button:

| Previous Backups      |                           |   |
|-----------------------|---------------------------|---|
| Timestamp             | Path                      | Ord                                     |
| 02-Jun-05 8:57 AM EDT | e222_dom0_050512_1445.txt | file:^backups/e222_dom0_050512_1445.txt |
| 18-Jun-07 4:41 PM EDT | e222_dom0_070618_1639.txt | file:^backups/e222_dom0_070618_1639.txt |
| 19-Jun-07 1:13 PM EDT | e222_dom0_070619_1311.txt | file:^backups/e222_dom0_070619_1311.txt |
| 19-Jun-07 2:21 PM EDT | e222_dom0_070619_1419.txt | file:^backups/e222_dom0_070619_1419.txt |
| 02-Jun-05 8:57 AM EDT | e222_dom2_050512_1634.txt | file:^backups/e222_dom2_050512_1634.txt |
| 02-Jun-05 8:57 AM EDT | e222_dom2_050512_1635.txt | file:^backups/e222_dom2_050512_1635.txt |
| 19-Jun-07 1:11 PM EDT | e222_dom2_070619_1311.txt | file:^backups/e222_dom2_070619_1311.txt |

A “Reload Configuration” dialog box then is presented.

If the user clicks on the “OK” button, a restore of a previous backup file will be performed.

NOTE: A restore takes considerably longer to perform than a backup. If you wish, you may switch to the “Andover Console” view to monitor the progress of the backup and to verify that everything is still progressing. See following example:

```

R>MOD 77.19 KWPEAK
R>DOM 2
R-2>CLEAR MEMORY ALL Are You Sure (Y or N)?Y
R-2> @006004000040020283022045323232061307D70D0B$37
%0670C51BA77BBF610671BE37C753D8010672DE5DC753D8010673DE5CC753D801$43
%0674B447815200000675B447814A98000676796DC753D8010677796CC753D801$CB
%0680C51BA77BEE40681BE37C753B8040682D68CC753B8040683D68DC753B804$FE
%0684AE2E67E0BEE406856767DB65BEE40686796DC753B8040687796CC753B804$1A
%06B8C753D7689D1606B9C753D7689D2606BAC753D7689D3606BBC753D7689D46$8E
%06BCC753D7689D5606BDC753D7689D6606BEC753D7689D7606BFC753D7689D86$9E
%06C0AB27D2B5964606C1932098D00006$E3
?
R-2>DOM 0
R>DOM 0
R>MOD 36.46 KWPEAK

```


## Setting Options on the Controller

The Backup Manager view has one additional button called “Set Options”. This is a convenience to allow a user to invoke the “Set Options” command on the AC256 controller. Normally (i.e., from a terminal session) the Set Options command will prompt the terminal user for several parameters to enter. Invoking this command from the Backup Manager automatically answers all of the prompts with data stored in the AndoverDevice’s [Option Command Settings](#) property.

NOTE: This command is also automatically invoked if configured and if needed after an automatic reload of the controller database.



Clicking the Set Options button causes the following dialog box to be displayed:

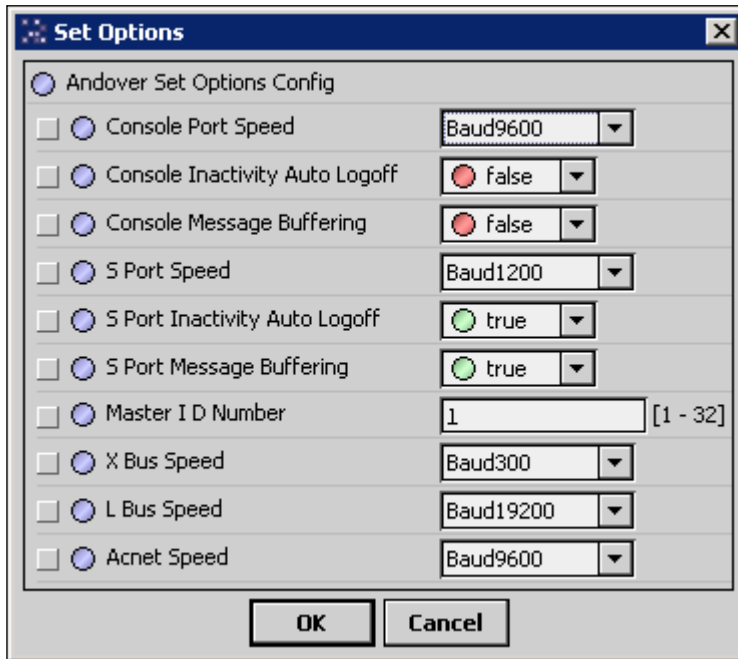

The 'Set Options' dialog box contains a section titled 'Andover Set Options Config' with a list of settings. Each setting has a checkbox, a radio button, and a value field. The settings are: Console Port Speed (Baud9600), Console Inactivity Auto Logoff (false), Console Message Buffering (false), S Port Speed (Baud1200), S Port Inactivity Auto Logoff (true), S Port Message Buffering (true), Master I D Number (1), X Bus Speed (Baud300), L Bus Speed (Baud19200), and Acnet Speed (Baud9600). The dialog box has 'OK' and 'Cancel' buttons at the bottom.

| Option                         | Value      |
|--------------------------------|------------|
| Console Port Speed             | Baud9600   |
| Console Inactivity Auto Logoff | false      |
| Console Message Buffering      | false      |
| S Port Speed                   | Baud1200   |
| S Port Inactivity Auto Logoff  | true       |
| S Port Message Buffering       | true       |
| Master I D Number              | 1 [1 - 32] |
| X Bus Speed                    | Baud300    |
| L Bus Speed                    | Baud19200  |
| Acnet Speed                    | Baud9600   |

As stated, the values displayed here are from the "Option Command Settings" property of the Andover Device. Click "OK" to set these options in the AC256 controller

# POINT VALUE CONVERSION CONSIDERATIONS

---

## Conversion from AC256 point values to EC-Net<sup>AX</sup> Boolean points

The AC256 driver uses the following sequence of conversions to convert AC256 point data into Boolean data for use within a BooleanPoint or BooleanWritable. Using this conversion technique it is possible to convert AC256 Boolean, Numeric, or String type points to Boolean values.

If raw point value is “0” or “Off”, the value is *false*. If the raw point value is “1” or “On” the value is *true*.

Else, try to convert the raw point string to a number (see “Conversion from AC256 point values to EC-Net<sup>AX</sup> Numeric points” below). If this succeeds, then if the value is non-zero the EC-Net<sup>AX</sup> value is *true*, else the value is *false*.

Else, the value cannot be converted, and will display with a “fault” status.

## Conversion from AC256 point values to EC-Net<sup>AX</sup> Numeric points

The AC256 driver uses the following sequence of conversions to convert AC256 point data into numeric data for use within a NumericPoint or NumericWritable. Using this conversion technique it is possible to convert AC256 Boolean, Numeric, or limited String type points to Numeric values.

1. Try to convert the point string to a number.
2. Else, see if the point string is “-On”, “On” or “Off”. If so, return -1.0, 1.0 or 0.0, respectively.
3. Else, the value cannot be converted, and will display with a “fault” status.

## Conversion from AC256 point values to EC-Net<sup>AX</sup> Enum points

The AC256 driver uses the following sequence of conversions to convert AC256 point data into enum data for use within a EnumPoint or EnumWritable. Using this conversion technique it is possible to convert AC256 Boolean, Numeric, or limited String type points to Enum values.

1. Try to convert the point string to a number. If this succeeds, then use the resulting number (truncated to nearest whole number) as the ordinal into the enumeration
2. Else, try to use the point string directly as the “tag” of the enumeration. If it matches one of the defined tags, then the enumeration value is the value that corresponds to that tag.
3. Else, the value cannot be converted, and will display with a “fault” status.


## Conversion from AC256 point values to EC-Net<sup>AX</sup> String points

No conversion is performed. The resultant value of the EC-Net<sup>AX</sup> point is the string to the right of the “=” sign of the “Raw Response”.


# USING THE ANDOVERSCRIPT OBJECT

There is a special object called an “AndoverScript” which can be placed under an AndoverDevice object to perform a sequence of un-interrupted commands to the Andover controller. This object can be invoked whenever the “run” action is invoked on the object.

The AndoverScript must be copied and pasted from the AndoverAC256 palette into the wire sheet of the AndoverDevice object:

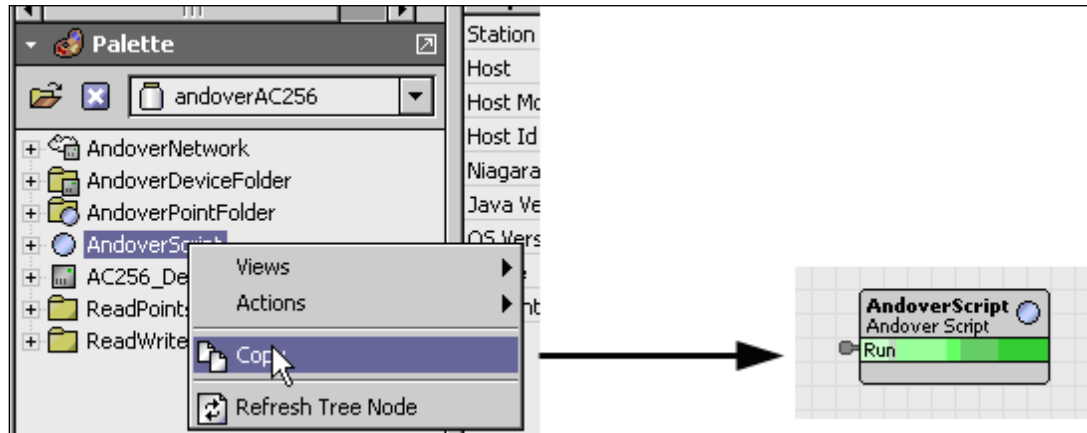

There are three properties on the AndoverScript object:

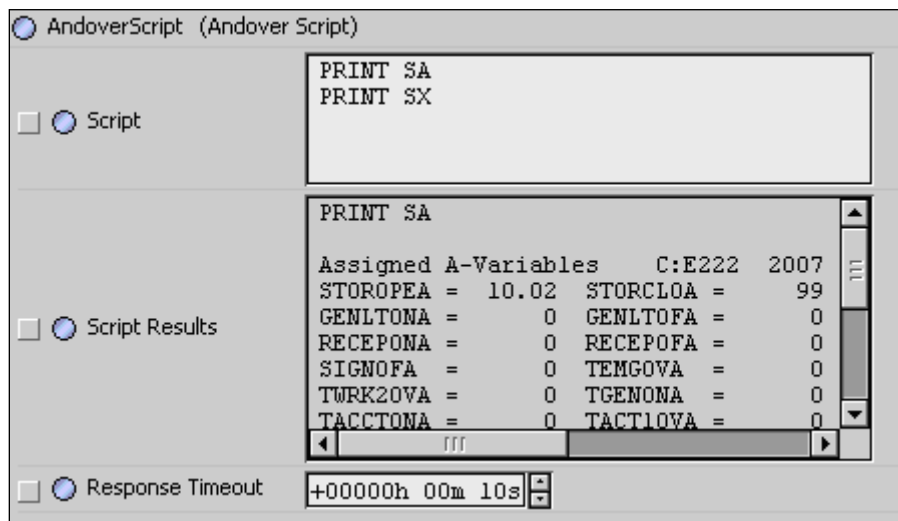

- **Script-** This is a list of commands to be sent to the Andover controller whenever this object's “run” action is invoked.
- **ScriptResults-** This is any text which is returned from the controller as a result of executing the script
- **ResponseTimeout-** This is how long the script will use *after every step* is executed to wait for a response.

In order to invoke the script, the “run” action on the object's input must be linked to another object. For example, to invoke this script whenever the driver is successful logging on the Andover network, link the Andover Device's “logonSuccessful” topic to the script's “run” action. There are many “kit” objects which can also be linked to the “run” action.



Distech Controls Inc  
4005-B Boul. Matte  
Brossard, QC J4Y 2P4  
Tel.: 1-800-404-0043  
Tel.: (450) 444-9898



05DI-UGAC256-10