

ADDR

Category	ADDR	Description
Broadcast	FF	Broadcast to All Devices
Broadcast Group	FE	Broadcast to Devices in Group
Broadcast Group	FD	Broadcast to Devices in Group
Broadcast Group	FC	Broadcast to Devices in Group
Broadcast Group	FB	Broadcast to Devices in Group
Broadcast Group	FA	Broadcast to Devices in Group
Broadcast Group	F9	Broadcast to Devices in Group
Broadcast Group	F8	Broadcast to Devices in Group
Broadcast Group	F7	Broadcast to Devices in Group
Broadcast Group	F6	Broadcast to Devices in Group
Broadcast Group	F5	Broadcast to Devices in Group
Broadcast Group	F4	Broadcast to Devices in Group
Broadcast Group	F3	Broadcast to Devices in Group
Broadcast Group	F2	Broadcast to Devices in Group
Broadcast Group	F1	Broadcast to Devices in Group
Broadcast Group Default	F0	Default broadcast group if device has not been configured
Unicast	EF	Unicast to Device
Unicast	...	Unicast to Device
Unicast	02	Unicast to Device
Unicast Default	01	Default unicast address if device has not been configured
None	00	No receipient

ADDR ALLOCATED

ADDR	Group	Device	Comment
E1	00	Kha-gateway-usb	Connected to machariel.qnet
E0	00	Kha-gateway-usb	Connected to blacksheep.qnet
C5	F4	kha-relay-2x3-node	North
C4	F4	kha-relay-2x3-node	South
C3	F1	Kha-led-ikea-node	East Oxberg
C2	F1	Kha-led-ikea-node	North Kallax
C1	F1	Kha-led-ikea-node	West Oxberg
C0	F1	Kha-led-ikea-node	South Kallax
BB	00	Kha-bgt-preset	
BA	00	Kha-bgt-rainbow	
B9	00	Kha-bgt-hsi	
B8	00	Kha-bgt-kaox	
B7	00	Kha-bgt-guru	
B6	00	Kha-bgt-dark	
B5	F3	Kha-bgt-power	Misc
B4	F3	Kha-bgt-power	Projects
B3	F3	Kha-bgt-power	Lights
B2	F2	Kha-bgt-audio	Audio Out
B1	F2	Kha-bgt-audio	Audio In
B0	00	Kha-bgt-main	

BOARD

Board	Type
All	FF
Kha-bgt-rainbow	A8
Kha-bgt-preset	A7
Kha-bgt-main	A6
Kha-bgt-kaox	A5
Kha-bgt-hsi	A4
Kha-bgt-guru	A3
Kha-bgt-dark	A2
kha-bgt-power	A1
kha-bgt-audio	A0
kha-relay-2x3-node	04
kha-gateway-usb	03
Kha-led-ikea-node	02
Board Default	01
None	00

CMD

Category	CMD	Opt Len	Payload	Type	Description
Management	FF	0 / 2	- or <1: board type> <1: board rev>	Command	Reboot Device, optionally only matching specific hardware
Management	FE	0	-	Reply	Bootloader: Command error
Management	FD	2	<1: board type> <1: board rev>	Command	Bootloader: Do not exit
Management	FC	2	<1: board type> <1: board rev>	Command	Bootloader: Wipe FLASH
Management	FB	2	<1: board type> <1: board rev>	Command	Bootloader: Wipe EEPROM
Management	FA	67	<1: board type> <1: board rev> <1: part 0-7> <64: data>	Command	Bootloader: Firmware data
Management	F9	3	<1: board type> <1: board rev> <1: page>	Command	Bootloader: Firmware write
Reserved	F8	Reserved			
Reserved	F7	Reserved			
Reserved	F6	Reserved			
Reserved	F5	Reserved			
Reserved	F4	Reserved			
Reserved	F3	Reserved			
Reserved	F2	Reserved			
Management	F1	0	-	Command	TX Enable
Management	F0	0	-	Command	TX Disable
Reserved	EF	Reserved			
Reserved	EE	Reserved			
Device	ED	1	<1: preset>	Command	Preset
Device	EC	0	-	Command	UI Enable
Device	EB	0	-	Command	UI Disable
Device	EA	0	-	Command	Debug Enable
Device	E9	0	-	Command	Debug Disable
Device	E8	1-MAX	<data>	Broadcast	Debug Message
Device	E7	0	-	Command	Stats Clear
Device	E6	9	<9: stats>	Reply	Stats Response
Device	E5	0	-	Command	Stats Request
Device	E4	0	-	Reply	Pong
Device	E3	0	-	Command	Ping
Device	E2	20	<1: board type> <1: board rev> <1: device group> <1: 0=boot, 1=app> <4: boot version> <4: boot crc> <4: app version> <4:app crc>	Broadcast	Up
Device	E1	20	<1: board type> <1: board rev> <1: device group> <1: 0=boot, 1=app> <4: boot version> <4: boot crc> <4: app version> <4:app crc>	Reply	Ident Response
Device	E0	0	-	Command	Ident Request
Register	DF	0	-	Command	Wipe configuration in memory
Register	DE	0	-	Command	Store configuration to EEPROM
Register	DD	0	-	Command	Load configuration from EEPROM
Reserved	DC	Reserved			
Reserved	DB	Reserved			
Reserved	DA	Reserved			
Reserved	D9	Reserved			
Register	E8	1	<1: addr>	Reply	Write Fail
Register	D7	1	<1: addr>	Reply	Write Success
Register	D6	2-MAX	<1: addr> <data>	Command	Write <data> bytes to address <addr>, don't reply
Register	D5	2-MAX	<1: addr> <data>	Command	Write <data> bytes to address <addr>
Reserved	D4	Reserved			
Reserved	D3	Reserved			
Reserved	D2	Reserved			
Register	D1	1-MAX	<1:addr> <data, empty if failed>	Reply	Read Reply <data> bytes from address <addr> or empty if failed
Register	D0	2	<1: addr> <1: len>	Command	Read <len> bytes from address <addr>
Reserved	CF	Reserved			
Reserved	CE	Reserved			
Reserved	CD	Reserved			
Reserved	CC	Reserved			
Reserved	CB	Reserved			
Device	CA	Reserved			
Device	C9	Reserved			
Device	C8	Reserved			
Device	C7	Reserved			

Device	C6	Reserved
Device	C5	Reserved
Device	C4	Reserved
Device	C3	Reserved
Device	C2	Reserved
Device	C1	Reserved
Device	C0	Reserved
Vendor	BF	Reserved
Vendor	BE	Reserved
Vendor	BD	Reserved
System	BC	Reserved
	BB	Reserved
	BA	Reserved
	B9	Reserved
	B8	Reserved
	B7	Reserved
	B6	Reserved
	B5	Reserved
	B4	Reserved
	B3	Reserved
	B2	Reserved
	B1	Reserved
	B0	Reserved
	AF	Reserved
	AE	Reserved
	AD	Reserved
	AC	Reserved
	AB	Reserved
	AA	Reserved
	A9	Reserved
	A8	Reserved
	A7	Reserved
	A6	Reserved
	A5	Reserved
	A4	Reserved
	A3	Reserved
	A2	Reserved
	A1	Reserved
	A0	Reserved
9F	?	?
...	?	?
01	?	?
00	0	-

CMD

?	Vendor Specific
?	Vendor Specific
?	Vendor Specific
Command	NOP

REGISTER

Module	Type	ADDR	Function	Values
Kha-bgt-audio	Device	00	Select audio source/destination	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Device	01	Bluetooth connection trigger	1=trigger once
Kha-bgt-audio	Device	02	Select power-on audio source/destination	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	03	Preset 0 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	04	Preset 0 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	05	Preset 1 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	06	Preset 1 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	07	Preset 2 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	08	Preset 2 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	09	Preset 3 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	0A	Preset 3 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	0B	Preset 4 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	0C	Preset 4 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	0D	Preset 5 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	0E	Preset 5 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	0F	Preset 6 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	10	Preset 6 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	11	Preset 7 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	12	Preset 7 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	13	Preset 8 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	14	Preset 8 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	15	Preset 9 enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	16	Preset 9 mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	17	Preset A enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	18	Preset A mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	19	Preset B enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	1A	Preset B mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	1B	Preset C enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	1C	Preset C mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	1D	Preset D enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	1E	Preset D mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-audio	Preset	1F	Preset E enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	20	Preset E mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD

REGISTER

Kha-bgt-audio	Preset	21	Preset F enabled	0 = Off, 1= On
Kha-bgt-audio	Preset	22	Preset F mode	0=AUXA, 1=AUXB, 2=AUXC, 3=AUXD
Kha-bgt-dark	Preset	00	Preset 0 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	01	Preset 0 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	02	Preset 1 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	03	Preset 1 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	04	Preset 2 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	05	Preset 2 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	06	Preset 3 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	07	Preset 3 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	08	Preset 4 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	09	Preset 4 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	0A	Preset 5 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	0B	Preset 5 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	0C	Preset 6 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	0D	Preset 6 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	0E	Preset 7 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	0F	Preset 7 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	10	Preset 8 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	11	Preset 8 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	12	Preset 9 enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	13	Preset 9 mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	14	Preset A enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	15	Preset A mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	16	Preset B enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	17	Preset B mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	18	Preset C enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	19	Preset C mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	1A	Preset D enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	1B	Preset D mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	1C	Preset E enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	1D	Preset E mode	0=Send Off, 1=Send On
Kha-bgt-dark	Preset	1E	Preset F enabled	0 = Off, 1= On
Kha-bgt-dark	Preset	1F	Preset F mode	0=Send Off, 1=Send On

REGISTER

Kha-bgt-guru	Device	00	Send to device id	0x00-0xFF
Kha-bgt-guru	Device	01	Stats request interval	0x01-0xFF (min) 0x00 = Off
Kha-bgt-hsi	Device	00	Send to device id	0x00-0xFE
Kha-bgt-hsi	Preset	01	Preset 0 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	02	Preset 0 hue	0x00-0xFF
Kha-bgt-hsi	Preset	03	Preset 0 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	04	Preset 0 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	05	Preset 1 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	06	Preset 1 hue	0x00-0xFF
Kha-bgt-hsi	Preset	07	Preset 1 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	08	Preset 1 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	09	Preset 2 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	0A	Preset 2 hue	0x00-0xFF
Kha-bgt-hsi	Preset	0B	Preset 2 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	0C	Preset 2 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	0D	Preset 3 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	0E	Preset 3 hue	0x00-0xFF
Kha-bgt-hsi	Preset	0F	Preset 3 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	10	Preset 3 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	11	Preset 4 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	12	Preset 4 hue	0x00-0xFF
Kha-bgt-hsi	Preset	13	Preset 4 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	14	Preset 4 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	15	Preset 5 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	16	Preset 5 hue	0x00-0xFF
Kha-bgt-hsi	Preset	17	Preset 5 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	18	Preset 5 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	19	Preset 6 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	1A	Preset 6 hue	0x00-0xFF
Kha-bgt-hsi	Preset	1B	Preset 6 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	1C	Preset 6 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	1D	Preset 7 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	1E	Preset 7 hue	0x00-0xFF
Kha-bgt-hsi	Preset	1F	Preset 7 saturation	0x00-0xFF

REGISTER

Kha-bgt-hsi	Preset	20	Preset 7 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	00	Preset 8 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	00	Preset 8 hue	0x00-0xFF
Kha-bgt-hsi	Preset	01	Preset 8 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	02	Preset 8 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	03	Preset 9 enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	04	Preset 9 hue	0x00-0xFF
Kha-bgt-hsi	Preset	05	Preset 9 saturation	0x00-0xFF
Kha-bgt-hsi	Preset	06	Preset 9 intensity	0x00-0xFF
Kha-bgt-hsi	Preset	07	Preset A enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	08	Preset A hue	0x00-0xFF
Kha-bgt-hsi	Preset	09	Preset A saturation	0x00-0xFF
Kha-bgt-hsi	Preset	0A	Preset A intensity	0x00-0xFF
Kha-bgt-hsi	Preset	0B	Preset B enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	0C	Preset B hue	0x00-0xFF
Kha-bgt-hsi	Preset	0D	Preset B saturation	0x00-0xFF
Kha-bgt-hsi	Preset	0E	Preset B intensity	0x00-0xFF
Kha-bgt-hsi	Preset	0F	Preset C enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	10	Preset C hue	0x00-0xFF
Kha-bgt-hsi	Preset	11	Preset C saturation	0x00-0xFF
Kha-bgt-hsi	Preset	12	Preset C intensity	0x00-0xFF
Kha-bgt-hsi	Preset	13	Preset D enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	14	Preset D hue	0x00-0xFF
Kha-bgt-hsi	Preset	15	Preset D saturation	0x00-0xFF
Kha-bgt-hsi	Preset	16	Preset D intensity	0x00-0xFF
Kha-bgt-hsi	Preset	17	Preset E enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	18	Preset E hue	0x00-0xFF
Kha-bgt-hsi	Preset	19	Preset E saturation	0x00-0xFF
Kha-bgt-hsi	Preset	1A	Preset E intensity	0x00-0xFF
Kha-bgt-hsi	Preset	1B	Preset F enabled	0 = Off, 1= On
Kha-bgt-hsi	Preset	1C	Preset F hue	0x00-0xFF
Kha-bgt-hsi	Preset	1D	Preset F saturation	0x00-0xFF
Kha-bgt-hsi	Preset	1E	Preset F intensity	0x00-0xFF
Kha-bgt-kaox	Device	00	Send to device id	0x00-0xFE

REGISTER

Kha-bgt-kaox	Preset	01	Preset 0 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	02	Preset 0 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	03	Preset 1 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	04	Preset 1 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	05	Preset 2 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	06	Preset 2 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	07	Preset 3 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	08	Preset 3 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	09	Preset 4 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	0A	Preset 4 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	0B	Preset 5 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	0C	Preset 5 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	0D	Preset 6 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	0E	Preset 6 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	0F	Preset 7 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	10	Preset 7 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	11	Preset 8 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	12	Preset 8 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	13	Preset 9 enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	14	Preset 9 mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	15	Preset A enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	16	Preset A mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	17	Preset B enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	18	Preset B mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	19	Preset C enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	1A	Preset C mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	1B	Preset D enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	1C	Preset D mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	1D	Preset E enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	1E	Preset E mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-kaox	Preset	1F	Preset F enabled	0 = Off, 1= On
Kha-bgt-kaox	Preset	20	Preset F mode	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-bgt-main	Device	00	Shutdown time out	0x00-0xFF (sec)
Kha-bgt-power	Device	00	Button 0 node dev id	0x01-0xEF Off

REGISTER

Kha-bgt-power	Device	01	Button 0 node reg addr	0x00-0xEE Off
Kha-bgt-power	Device	02	Button 1 node dev id	0x01-0xEF Off
Kha-bgt-power	Device	03	Button 1 node reg addr	0x00-0xEE Off
Kha-bgt-power	Device	04	Button 2 node dev id	0x01-0xEF Off
Kha-bgt-power	Device	05	Button 2 node reg addr	0x00-0xEE Off
Kha-bgt-power	Device	06	Button 3 node dev id	0x01-0xEF Off
Kha-bgt-power	Device	07	Button 3 node reg addr	0x00-0xEE Off
Kha-bgt-power	Preset	08	Preset 0 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	09	Preset 0 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	0A	Preset 0 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	0B	Preset 0 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	0C	Preset 0 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	0D	Preset 1 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	0E	Preset 1 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	0F	Preset 1 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	10	Preset 1 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	11	Preset 1 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	12	Preset 2 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	13	Preset 2 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	14	Preset 2 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	15	Preset 2 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	16	Preset 2 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	17	Preset 3 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	18	Preset 3 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	19	Preset 3 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	1A	Preset 3 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	1B	Preset 3 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	1C	Preset 4 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	1D	Preset 4 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	1E	Preset 4 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	1F	Preset 4 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	20	Preset 4 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	21	Preset 5 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	22	Preset 5 Button 0	0=Off, 1=On, 2=Unchanged

REGISTER

Kha-bgt-power	Preset	23	Preset 5 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	24	Preset 5 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	25	Preset 5 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	26	Preset 6 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	27	Preset 6 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	28	Preset 6 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	29	Preset 6 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	2A	Preset 6 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	2B	Preset 7 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	2C	Preset 7 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	2D	Preset 7 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	2E	Preset 7 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	2F	Preset 7 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	30	Preset 8 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	31	Preset 8 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	32	Preset 8 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	33	Preset 8 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	34	Preset 8 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	35	Preset 9 enabled	0 = Off, 1= On
Kha-bgt-power	Preset	36	Preset 9 Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	37	Preset 9 Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	38	Preset 9 Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	39	Preset 9 Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	3A	Preset A enabled	0 = Off, 1= On
Kha-bgt-power	Preset	3B	Preset A Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	3C	Preset A Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	3D	Preset A Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	3E	Preset A Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	3F	Preset B enabled	0 = Off, 1= On
Kha-bgt-power	Preset	40	Preset B Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	41	Preset B Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	42	Preset B Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	43	Preset B Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	44	Preset C enabled	0 = Off, 1= On

REGISTER

Kha-bgt-power	Preset	45	Preset C Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	46	Preset C Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	47	Preset C Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	48	Preset C Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	49	Preset D enabled	0 = Off, 1= On
Kha-bgt-power	Preset	4A	Preset D Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	4B	Preset D Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	4C	Preset D Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	4D	Preset D Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	4E	Preset E enabled	0 = Off, 1= On
Kha-bgt-power	Preset	4F	Preset E Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	50	Preset E Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	51	Preset E Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	52	Preset E Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	53	Preset F enabled	0 = Off, 1= On
Kha-bgt-power	Preset	54	Preset F Button 0	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	55	Preset F Button 1	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	56	Preset F Button 2	0=Off, 1=On, 2=Unchanged
Kha-bgt-power	Preset	57	Preset F Button 3	0=Off, 1=On, 2=Unchanged
Kha-bgt-preset	Device	00	Button 0 preset code	0x00-0x0F 0xFF
Kha-bgt-preset	Device	01	Button 1 preset code	0x00-0x0F 0xFF
Kha-bgt-preset	Device	02	Button 2 preset code	0x00-0x0F 0xFF
Kha-bgt-preset	Device	03	Button 3 preset code	0x00-0x0F 0xFF
Kha-bgt-rainbow	Device	00	Send to device id	0x00-0xFE
Kha-bgt-rainbow	Preset	01	Preset 0 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	02	Preset 0 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	03	Preset 0 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	04	Preset 0 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	05	Preset 1 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	06	Preset 1 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	07	Preset 1 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	08	Preset 1 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	09	Preset 2 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	0A	Preset 2 anim speed	0x00-0xFF

REGISTER

Kha-bgt-rainbow	Preset	0B	Preset 2 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	0C	Preset 2 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	0D	Preset 3 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	0E	Preset 3 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	0F	Preset 3 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	10	Preset 3 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	11	Preset 4 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	12	Preset 4 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	13	Preset 4 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	14	Preset 4 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	15	Preset 5 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	16	Preset 5 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	17	Preset 5 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	18	Preset 5 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	19	Preset 6 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	1A	Preset 6 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	1B	Preset 6 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	1C	Preset 6 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	1D	Preset 7 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	1E	Preset 7 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	1F	Preset 7 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	20	Preset 7 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	21	Preset 8 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	22	Preset 8 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	23	Preset 8 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	24	Preset 8 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	25	Preset 9 enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	26	Preset 9 anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	27	Preset 9 anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	28	Preset 9 anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	29	Preset A enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	2A	Preset A anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	2B	Preset A anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	2C	Preset A anim enabled	0 = Off, 1= On

REGISTER

Kha-bgt-rainbow	Preset	2D	Preset B enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	2E	Preset B anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	2F	Preset B anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	30	Preset B anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	31	Preset C enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	32	Preset C anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	33	Preset C anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	34	Preset C anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	35	Preset D enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	36	Preset D anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	37	Preset D anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	38	Preset D anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	39	Preset E enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	3A	Preset E anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	3B	Preset E anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	3C	Preset E anim enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	3D	Preset F enabled	0 = Off, 1= On
Kha-bgt-rainbow	Preset	3E	Preset F anim speed	0x00-0xFF
Kha-bgt-rainbow	Preset	3F	Preset F anim width	0x00-0xFF
Kha-bgt-rainbow	Preset	40	Preset F anim enabled	0 = Off, 1= On
Kha-gateway-usb	Device	00	Print Proto	0=Off, 1=On
Kha-gateway-usb	Device	01	Print Human	0=Off, 1=On
Kha-led-ikea-node	Device	00	LED Selection	0=Off, 1=Low, 2=Gradient, 3=Full
Kha-led-ikea-node	Device	01	LED Hue	0x00-0xFF
Kha-led-ikea-node	Device	02	LED Saturation	0x00-0xFF
Kha-led-ikea-node	Device	03	LED Intensity	0x00-0xFF
Kha-led-ikea-node	Device	04	Animation enabled	0=Off, 1=On
Kha-led-ikea-node	Device	05	Animation speed	0x00-0xFF
Kha-led-ikea-node	Device	06	Animation width	0x00-0xFF
Kha-led-ikea-node	Device	07	Show Identification	1=trigger once
Kha-led-ikea-node	Device	08	LED Amount	0x00-0xFF
Kha-led-ikea-node	Device	09	LED Orientation	0 = None, 1 = Vertical, 2 = Horizontal
Kha-led-ikea-node	Device	0A	LED Low Cut	0x00-0xFF
Kha-led-ikea-node	Device	0B	Animation Location	0x00-0xFF

REGISTER

kha-relay-2x3-node	Device	00	Socket 0 enabled	0=Off, 1=On
kha-relay-2x3-node	Device	01	Socket 1 enabled	0=Off, 1=On
kha-relay-2x3-node	Device	02	Socket 2 enabled	0=Off, 1=On
kha-relay-2x3-node	Device	03	Socket 3 enabled	0=Off, 1=On
kha-relay-2x3-node	Device	04	Socket 4 enabled	0=Off, 1=On
kha-relay-2x3-node	Device	05	Socket 5 enabled	0=Off, 1=On
kha-relay-2x3-node	Device	06	Socket 0 power-off timer	0x01-0xFF (min) 0x00 = Off
kha-relay-2x3-node	Device	07	Socket 1 power-off timer	0x01-0xFF (min) 0x00 = Off
kha-relay-2x3-node	Device	08	Socket 2 power-off timer	0x01-0xFF (min) 0x00 = Off
kha-relay-2x3-node	Device	09	Socket 3 power-off timer	0x01-0xFF (min) 0x00 = Off
kha-relay-2x3-node	Device	0A	Socket 4 power-off timer	0x01-0xFF (min) 0x00 = Off
kha-relay-2x3-node	Device	0B	Socket 5 power-off timer	0x01-0xFF (min) 0x00 = Off

REGISTER SETUP

Module	Commands	
Kha-bgt-audio	F2DF B1D503010001000100010001000100 B2D503010001000101010001000100 F2DE	Wipe IN: Always PC OUT: Party Soundbar Save
Kha-bgt-dark	B6DF B6D5000100 B6D5060100 B6DE	Wipe Preset 0 off: Off Preset 3 TV: Low Save
Kha-bgt-guru	B7DF B7D500FF B7D5010A B7DE	Wipe Broadcast to FF Broadcast every 10 minutes Save
Kha-bgt-hsi	B9DF B9D500F1 B9D505010000FF B9D5090100FFFF B9D50D010000FF B9DE	Wipe Send to F1 Preset 1 shutdown: no saturation, full intensity Preset 2 party: full saturation, full intensity Preset 3 tv: no saturation, full intensity Save
Kha-bgt-kaox	B8DF B8D500F1 B8D5010100 B8D5030101 B8D5050103 B8D5070101 B8DE	Wipe Send to F1 Preset 0 off: Off Preset 1 shutdown: Low Preset 2 party: Full Preset 3 TV: Low Save
Kha-bgt-main	B0DF B0D50096 B0DE	Wipe Timeout 150sec for shutdown Save
Kha-bgt-power	F3DF F3DE	

REGISTER SETUP

Kha-bgt-preset	BBDF BBD50002030405 BBDE	Wipe Set presets to party, tv, tinkers, pc Save
Kha-bgt-rainbow	BADF BAD500F1 BAD50101000000 BAD50501000000 BAD50901002001 BAD50D01000000 BAD51101000000 BAD51501000000 BADE	Wipe Send to F1 Save
Kha-gateway-usb	E0DF E0D5000100 E0DE E1DF E1D5000001 E1DE	Wipe Print Proto Save Wipe Print Human Save
Kha-led-ikea-node	F1DF C0D500000000FF C0D50802020200 C1D500000000FF C1D50808010302 C2D500000000FF C2D50802020203 C3D500000000FF C3D50808010305 F1DE	Wipe Set Intensity to Max Set Amount, Orientation, Low Cut, Location Set Intensity to Max Set Amount, Orientation, Low Cut, Location Set Intensity to Max Set Amount, Orientation, Low Cut, Location Set Intensity to Max Set Amount, Orientation, Low Cut, Location Save
kha-relay-2x3-node	F4DF C4D5 C5D5 F4DE	Wipe Save

MPLab MCC Build

NVM	NVM	Generate Flash APIs
NVM	NVM	Generate EEPROM APIs
NVM	NVM	Generate Signature Row APIs
Timer	Delay	
Timer	RTC	PIT Enable
Timer	RTC	RTC Clock Cycles 8
Timer	RTC	Periodic Interrupt Enable
UART	UART0	500000
UART	UART0	Interrupt Driven
UART	UART0	128 / 512
System	CLKCTRL	24Mhz
System	Configuration Bits	Bootsize 32
System	Configuration Bits	Device used in single supply configuration
System	Configuration Bits	Watchdog Timeout Period 4k / 4s
System	Interrupt Manager	RXC
System	Interrupt Manager	RSX
System	Pins	PA 0,1,3 USART0
System	RSTCTRL	Software Reset Enable
System	WDT	Lock

Building: Execute before build: ..\..\tools\kha-timestamp\kha-timestamp.bat

GCC Optimize -s

avr-ld: Additional: -Ttext=0x4000

add kha_version.h

kha-relay-2x3

Node	ID	Box Label	Box Color	Connected
C4	0	1	Green	Light Couch
C4	1	2	Green	LED Marquee
C4	2	3	Green	NFL
C4	3	1	Gray	Floppy
C4	4	2	Gray	Projects
C4	5	3	Gray	-
C5	0	1	Yellow	Light PC
C5	1	2	Yellow	Light Bench
C5	2	3	Yellow	-
C5	3	1	Red	Printer
C5	4	2	Red	Label Printer
C5	5	3	Red	Lab Power Supply