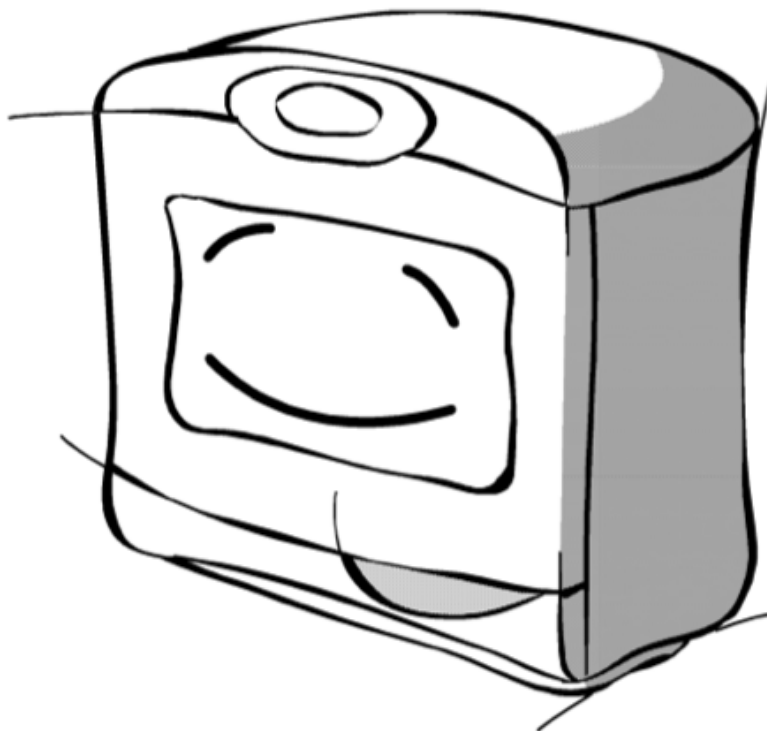 


# Instructions for use

**IL 10**

## INSTALLATION

 
### PRIOR TO CONNECTING

**Check that the voltage** on the rating plate corresponds to the voltage **in your home**.

**Place the oven on a stable, even surface** that is strong enough to hold the oven and the food utensils you put in it. Use care when handling.



**Position the oven at a distance** from other heating sources. The cooling air, which is taken in by the oven, must not exceed 35°C temperature. For sufficient ventilation there must be a space of at least 8-cm above the oven. Ensure that the space underneath, above and around the oven is empty to allow for proper airflow. The oven can operate in an ambient temperature ranging from +5°C to +35°C.

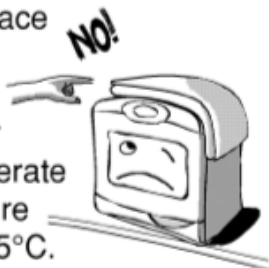


**Ensure that the appliance is not damaged.** Check that the oven door closes firmly against the door support and that the

internal door seal is not damaged. Empty the oven and clean the interior with a soft, damp cloth.

**Do not operate this appliance** if it has a damaged mains cord or plug, if it is not working properly, or if it has been damaged or dropped. Do not immerse the mains cord or plug in water. Keep the cord away from hot surfaces. Electrical shock, fire or other hazards may result.

### AFTER CONNECTING

 **The oven can be operated only** if the oven door is firmly closed.

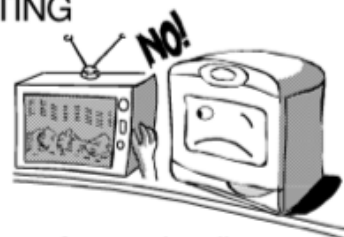

**Poor television reception** and radio interference may result if the oven is located close to a TV, radio or aerial.

**The earthing of this appliance** is compulsory. The manufacturer will accept no responsibility for injury to persons, animals or damage to objects arising from the non-observance of this requirement.

## IMPORTANT SAFETY INSTRUCTIONS

### READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

**Do not heat, or use flammable materials** in or near the oven. Fumes can create a fire hazard or explosion.

**Do not use** corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat or cook food. It is not designed for industrial or laboratory use.

**Do not use your microwave** oven for drying textiles, paper, spices, herbs, wood, flowers, fruit or other combustible materials. Fire could result.

**If material inside / outside the oven should ignite**, keep oven door closed and turn the oven off. Disconnect the power cord or shut off power at the fuse or circuit

**Do not over-cook food.** Fire could result.

**Do not leave the oven unattended**, especially when using paper, plastic or other combustible materials in the cooking process. Paper can char or burn and some plastics can melt if used when heating foods.

### **WARNING!**

**Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.**

 
**Never lean on the door** or allow a child to swing on it.



## IMPORTANT SAFETY INSTRUCTIONS

### ⚠ WARNING!

**Do not use your microwave oven** for heating anything in airtight sealed containers. The pressure increases and may cause damage when opening or may explode.

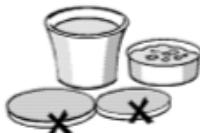

### ⚠ WARNING!

**The door seals and the door seal areas must be regularly inspected for damage. If these areas are damaged the appliance should not be operated until it has been repaired by a trained service technician.**

### EGGS

**Do not use your microwave oven** for cooking or reheating whole eggs with or without shell since they may explode even after microwave heating has ended.



## PRECAUTIONS

### GENERAL

***This appliance is designed for domestic use only!***

***The appliance should not be operated without food in the oven when using microwaves. Operation in this manner is likely to damage the appliance.***

***The ventilation openings on the oven must not be covered. Blocking the air intake or exhaust vents may cause damage to the oven and poor cooking results.***

**If you practice operating the oven**, put a glass of water inside. The water will absorb the microwave energy and the oven will not be damaged.

**Do not store or use this appliance outdoors.** Do not use this product near a kitchen sink, in a wet basement, or near a swimming pool, or similar.

**Do not use the cavity** for any storage purposes.

**Remove wire twist-ties** from paper or plastic bags before placing bag in the oven.



### DEEP-FRYING

**Do not use your microwave oven** for deep-frying, because the oil temperature cannot be controlled.



**Use hot pads or oven mitts** to prevent burns, when touching containers, oven

### LIQUIDS

**E.g. beverages or water** in your microwave oven, overheating the liquid beyond boiling point can occur without evidence of bubbling. This could result in a sudden boil over of the hot liquid.



To prevent this possibility the following steps should be taken:

1. Avoid using straight-sided containers with narrow necks.
2. Stir the liquid before placing the container in the oven and let the teaspoon remain in the container.
3. After heating, allow standing for a short time, stirring again before carefully removing the container from the oven.

### CAREFUL

**Always refer** to a microwave cookbook for details. Especially, if cooking or reheating food that contains alcohol.

**After heating baby food or liquids in a baby bottle or in a baby food jar, always stir and check the temperature before serving. This will ensure that the heat is evenly distributed and the risk of scalding or burns can be avoided. Ensure the Lid and the Teat is removed**



## ACCESSORIES

### GENERAL

**There are** a number of accessories available on the market. Before you buy, ensure they are suitable for microwave use.

**When you put food and accessories** in the microwave oven, ensure that they do not come in contact with the interior of the oven. **This is especially important with accessories made of metal or metal parts.**

**If accessories containing metal** comes in contact with the oven interior, while the oven is in operation, sparking can occur and the oven could be damaged.

**Always ensure** that the turntable is able to turn freely before starting the oven.

**Ensure that the utensils you use** are oven proof and allow microwaves to pass through them before cooking.

### TURNTABLE SUPPORT

**Use the turntable support** under the Glass turntable. Never put any other utensils on the turntable support.

\* Fit the turntable support in the oven.

### GLASS TURNTABLE

**Use the Glass turntable** with all cooking methods. It collects the dripping juices and food particles that otherwise would stain and soil the interior of the oven.

\* Place the Glass turntable on the turntable support.

### BABY BOTTLE HOLDER

**Use the Baby bottle Holder**

when heating baby food in bottles that are too tall to stand-alone in the oven. Please see also, the chapter "Precautions", for more information about heating baby food. (Not available in the UK and Ireland).



## START PROTECTION / CHILD LOCK

**This automatic safety function is activated one minute after** the oven has returned to "stand by mode".

**The door must be opened and closed** e.g. putting food into it, before the safety lock is released.

**If you attempt to operate the oven without putting food into it, the display will show "door".**

## HOW TO PAUSE OR STOP COOKING

### To pause cooking:

The cooking can be paused to check, turn or stir the food by opening the door. The setting will be maintained for 5 minutes.



### To continue cooking:

Close the door and press the Start button ONCE. The cooking is resumed from where it was paused. Pressing the Start button TWICE will



### If you don't want to continue cooking:

Remove the food, close the door and press the STOP button



 
**A beep will signal** once a minute for 5 minutes when the cooking is finished. Press the STOP button or open the door to cancel the signal.



**Note:** The oven will only hold the settings for 30 seconds if the door is opened and



## CLOCK

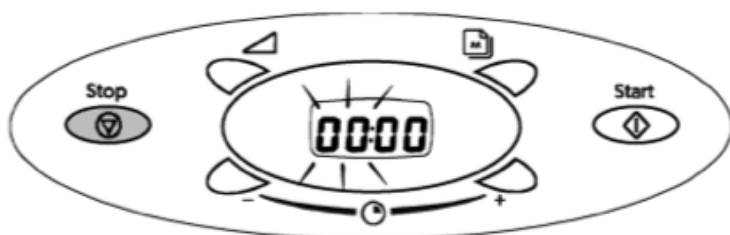

**Keep the door open** while setting the Clock. This gives you 5 minutes to complete the setting of the Clock. Otherwise, each step must be accomplished within 30 seconds.

1. Press the Stop button (3 seconds) until the left-hand digit (hour's) flicker.
  2. Press the +/- buttons to set the hours.
  3. Press the Stop button again. (The two right hand digits (minutes) flicker).
  4. Press the +/- buttons to set the minutes.
  5. Press the Stop button again.
- The Clock is set and in operation.


**Note:** When the appliance is first plugged in or after a power failure, the display is blank. If the clock is not set, the display will remain blank until the cooking time is set.



## TIMER



**Use this function** when you need a kitchen timer to measure exact time for various purposes such as cooking eggs, pasta or letting the dough rise before baking etc.

1. Press the +/- buttons to set the desired length of the timer.
2. Press the power button repeatedly  to set the power to 0 W.
3. Press the Start button.


An acoustic signal will be heard when the timer has finished to count down.



## COOK & REHEAT WITH MICROWAVES




**Use this function** for normal cooking and reheating, such as vegetables, fish, potatoes and meat.


1. Press the +/- buttons to set the time.
2. Press the power button repeatedly  to set the power.
3. Press the Start button.

### Once the cooking process has been started:

The time can easily be increased in 30-second steps by pressing the Start button. Each press increases the time with 30 seconds. You may also alter the time by pressing the +/- buttons to increase or decrease the time.



## MEMORY

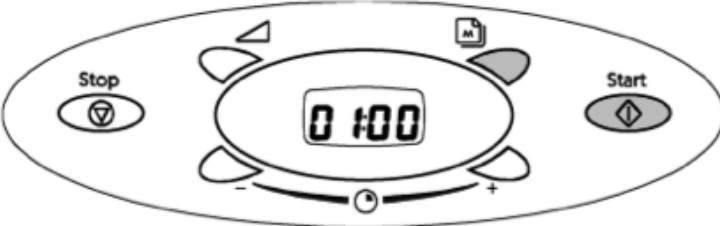

**The Memory function provides** you with an easy way to quickly recall a preferred setting.

**The principle of the Memory function** is to store whatever setting that is currently displayed.

1. Press the Memo button.
2. Press the Start button.

**When the appliance** is plugged in or after a power failure, your Memo function will have stored - 1 minute and 750 W as default setting.

### To store a setting:

1. Set time and power.
2. Keep the Memo button pressed for 3 seconds until an acoustic signal is heard and the word "End" is displayed. The setting is now stored. You may reprogram the memories as many times as you wish.

 
## ENVIRONMENTAL HINTS

**The packing box** may be fully recycled as confirmed by the recycling symbol. Follow local disposal regulations. Keep potentially hazardous packaging (plastic bags, polystyrene etc.) out of the reach of children.



**This appliance** is marked according to the European directive 2002/96/EC on Waste Electrical and Electronic Equipment (WEEE). By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product.

**The symbol** on the product, or on the documents accompanying the product, indicates that this appliance may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment.

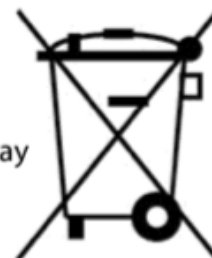

**Disposal** must be carried out in accordance with local environmental regulations for waste disposal.

For more detailed information about treatment, recovery and recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product. Before scrapping, cut off the mains cord so that the appliance cannot be connected to the mains.



## MAINTENANCE & CLEANING

**Cleaning is the only maintenance** normally required. It must be carried out with the microwave oven disconnected.

**Failure to maintain the oven** in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

**Do not use metal scouring pads** on the inside of the oven cavity. They will scratch the surface.



**At regular intervals**, especially if spillovers have occurred, remove the turntable, the turntable support and wipe the base of the oven clean.

**This oven is designed** to operate with the turntable in place.

**Do not** operate the microwave oven when the turntable has been removed for cleaning.

**Use a mild detergent**, water and a soft cloth to clean the interior surfaces, front and rear of the door and the door opening.

**Do not allow grease** or food particles to build up around the door.

**For stubborn stains**, boil a cup of water in the oven for 2 or 3 minutes. Steam will soften the marks.

**Adding some lemon juice to a cup of water**, placing this on the turntable and boiling for a few minutes can eliminate odors inside the oven.

**Abrasive cleansers**, steel-wool pads, gritty wash cloths, etc. can damage the control panel, and the interior and exterior oven surfaces. Use a sponge with a mild detergent or a paper towel with spray glass cleaner. Apply spray glass cleaner to a paper towel.

**Do not spray directly on the oven.**

## DISHWASHER SAFE:

**Turntable support.**

**Glass turntable.**



**Baby Bottle Holder**

(Not available in the UK and Ireland).



## TROUBLE SHOOTING GUIDE

**If the oven does not work**, do not make a service call until you have made the following checks:

- \* The Turntable and turntable support is in place.
- \* The Plug is properly inserted in the wall socket.
- \* The Door is properly closed.
- \* Check your Fuses and ensure that there is power available.
- \* Wait for ten minutes and then try to operate the oven once more.
- \* Open and then close the door before you try again.

**This is to avoid** unnecessary calls for which you will be charged.

When calling for Service, please give the serial number and type number of the oven (see Service label). Consult your warranty booklet for further advice.

### Important:

If the mains cord needs replacing it should be replaced by the original mains cord, which is available via our service organization. The mains cord may only be replaced by a trained service technician.



### WARNING!

**Service only to be carried out by a trained service technician.** It is hazardous for anyone other than a trained person to carry out any service or repair operation, which involves the removal of any cover, which gives protection against exposure to microwave energy.



## CHOOSING POWER LEVEL

Level	To be used for:
750 W	Reheating of beverages, water, clear soups, coffee, tea or other food with a high water content. If the food contains egg or cream choose a lower power. Cooking of vegetables, fish, meat etc.
500 W	More careful cooking e.g. high protein sauces, cheese and egg dishes and to finish cooking casseroles.
350 W	Simmering stews.
160 W	⚡ Defrosting. Softening butter, cheeses and ice cream.
0 W	When using the Timer only.

## TECHNICAL DATA

<b>Model</b>	<b>IL 10</b>
<b>Supply voltage</b>	230 V/50 Hz
<b>Rated Power Input</b>	1300 W
<b>Fuse</b>	10 A (UK 13 A)
<b>MW output power</b>	750 W
	<b>H x W x D</b>
<b>Outer dimensions:</b>	381 x 392 x 321
<b>Oven compartment:</b>	149 x 290 x 290

### In accordance with IEC 705.

The International Electrotechnical Commission, SC. 59H, has developed a standard for comparative testing of heating performance of different microwave ovens. We recommend the following for this oven:

Test	Amount	Approx. time	Power level	Container
12.3.1	750 g	10 min	750 W	Pyrex 3.220
12.3.2	475 g	5 min	750 W	Pyrex 3.827
12.3.3	900 g	14 min	750 W	Pyrex 3.838
13.3.0	500 g	12 min	Defrost 160 W	

