






Serenity Screamer User Guide



 





Internal and external controls on the Serenity Screamer allow for recreation of 4 classic screamer style effects: TS-808, TS-9, TS-10 and the Metal Screamer. Two external switches allow for selection of clipping style and bass response.

EXTERNAL SWITCH SETTINGS

-  Symmertrical Double Diode Clipping (Least Compressed)
-  Asymmertrical Clipping
-  Symmertrical Single Diode Clipping (Most Compressed, standard on all screamers)
- "Nom" Standard bass cut (TS-808, TS-9 and TS-10)
- "Metal" Less bass cut (Metal Screamer)
- "Bass" No bass cut (All of the bass)

SCREAMER SETTINGS

The following settings will configure the Serenity Screamer to clone one of the the 4 screamer versions listed below

Screamer Variant	Internal DIP Switch	External Switch
TS-808	TS808 	 + "Nom"
TS-9	TS9 	 + "Nom"
TS-10	TS10 	 + "Nom"
Metal Screamer	METAL 	 + "Metal"

