






Smart Thermostat Build Guide

Using Your eBay Parts with Web Serial API

Parts Compatibility Analysis

What You Have (All Compatible!)


Part	Status	Notes
Wall Mounted Mobile AC L-2008	✓ Perfect	Your HVAC unit to control
DS18B20 USB Thermometer	✓ Perfect	Works with Web Serial API
CH340 8CH USB Relay Module	✓ Perfect	Already supported in codebase
Onn. Surf 7" Tablet	✓ Perfect	Android tablet for display
24VAC to 12VDC Converter	 Needed	Powers relay module
24VAC to 5VDC USB Converter	 Needed	Powers tablet via USB
USB Cables/Adapters	 Needed	For connections
Tablet Wall Mount	★ Nice to have	For mounting

Optional but Recommended

- **USB Hub** - If connecting both relay + sensor to tablet
- **Wire nuts / electrical connectors** - For safe wiring
- **18-22 AWG wire** - For low-voltage connections
- **Electrical tape** - For safety
- **14-16 AWG wire** - For 120VAC connections
- **Multimeter** - For testing connections

Complete Wiring Diagram

Power Distribution Flow

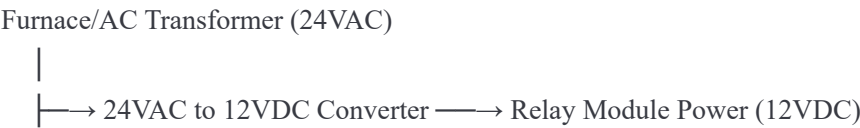




Control Wiring Layout

Relay Module (CH340)	Wall AC Unit
Relay 1 (NO) —————→	Power Control
Relay 2 (NO) —————→	(Reserved)
Relay 3 (NO) —————→	(Reserved)
Common (C) —————→	Common/Neutral


USB Connection Tree

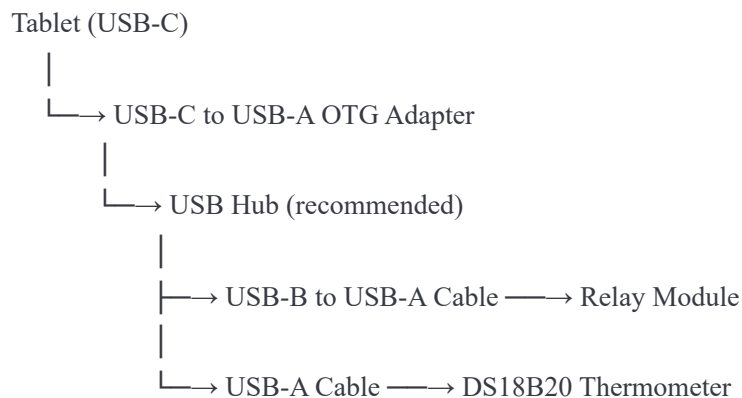

Step-by-Step Setup

Step 1: Power Supply Setup ⚡

For Relay Module (12VDC)

1. **Connect 24VAC to 12VDC converter** to your furnace/AC transformer
 - **Input:** Connect to 24VAC transformer (R and C terminals)
 - **Output:** Connect to relay module's power terminals (+12V and GND)
2.  **Important:** The relay module needs external power even when connected via USB!

For Tablet (5VDC USB)

1. **Connect 24VAC to 5VDC USB converter** to transformer
 - **Input:** Connect to 24VAC transformer (same R and C terminals)
 - **Output:** USB-C connector to tablet

2. This will power the tablet continuously (no battery needed!)
-

Step 2: USB Connections

Option A: Direct Connection (One Device at a Time)

- Connect relay module **OR** temperature sensor (not both simultaneously)
- Use USB-C to USB-A OTG adapter
- Then USB-A to USB-B cable for relay, or USB-A cable for sensor

Option B: USB Hub (Recommended)

- Connect USB hub to tablet via OTG adapter
- Connect relay module to hub (USB-B to USB-A cable)
- Connect temperature sensor to hub (USB-A cable)

 **Tip:** The Onn. Surf tablet may have limited USB OTG power. A powered USB hub is recommended if you experience issues.

Step 3: AC Unit Control Wiring

SAFETY FIRST

Unplug AC unit before wiring!

Understanding Your AC Unit

The Wall-Mounted Mobile AC L-2008 has:

- Power cord (120VAC)
- Control board
- Compressor
- Fan

Option 1: Control Power to Entire Unit (Safest)


How it works:

1. Relay controls the AC's power supply
2. Wire relay in series with the hot wire (120VAC)

3. When relay closes → AC gets power → runs

4. When relay opens → AC loses power → stops

Wiring Diagram:

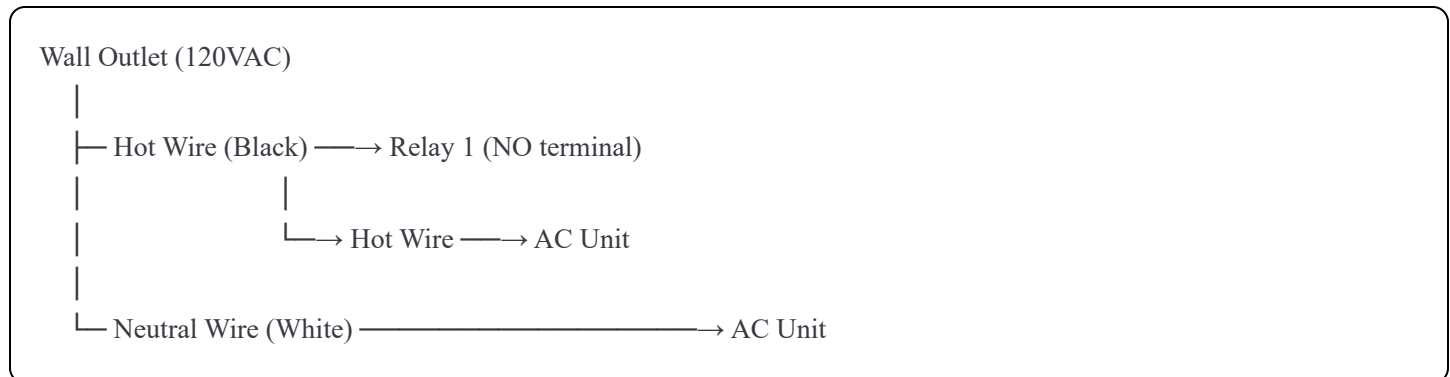

⚠ Critical Safety Checks

- Your relay module is rated for **10A @ 250VAC**
- Check your AC unit's amperage rating (usually 5-15A)
- **If AC draws more than 10A, you MUST use a contactor (heavy-duty relay)**
- Find amperage on AC unit's label/nameplate

Option 2: Control via AC's Control Board (Advanced)

If the AC unit has low-voltage control terminals (like a furnace), you can control it directly. Check the AC unit's manual for control board access.

Step 4: Temperature Sensor Placement 🌡

Optimal Sensor Location

1. **Mount DS18B20 sensor** in a location that represents room temperature:
 - ☒ Away from direct sunlight
 - ☒ Away from AC vents
 - ☒ At average room height (4-5 feet)
 - ☒ Not near heat sources (lamps, computers, stoves)
 - ☒ Good air circulation
2. **Connect USB cable** from sensor to tablet (via hub if using both devices)
3. **Data format:** Sensor sends temperature automatically every 10 seconds in ASCII format

- Example: +25.3C or +77.5F



Software Configuration

Step 1: Enable Web Serial API Support

Your codebase already supports this! Just ensure:

1. **Tablet Browser:** Use Chrome or Edge (Web Serial API support required)
2. **Permissions:** Grant serial port access when prompted
3. **HTTPS:** App must be served over HTTPS or localhost

Step 2: Configure Relay Module

The CH340 relay module uses **AT commands**. Your codebase already supports this!

In Your React App:

```
javascript

import { getWebSerialRelay } from "../lib/webSerialRelay";

const relay = getWebSerialRelay();
await relay.connect();

// Use 'at' command format for CH340 modules
await relay.toggleTerminal("W", true, "at"); // Turn on Heat
await relay.toggleTerminal("Y", true, "at"); // Turn on Cool
await relay.toggleTerminal("G", true, "at"); // Turn on Fan
```

Relay Mapping:

Relay	Terminal	Function	Status
Relay 1	W	Heat/AC Power Control	Active
Relay 2	Y	Cool (Reserved)	Future use
Relay 3	G	Fan (Reserved)	Future use

Step 3: Configure Temperature Sensor

The DS18B20 USB thermometer works automatically with Web Serial API:

1. Connect via serial port
 2. Read incoming data stream
 3. Parse ASCII temperature format (`(+XX.XC)`)
 4. Update display every 10 seconds
-

Testing Procedure


Test 1: USB Connections ✓

1. Connect relay module to tablet
2. Open Chrome/Edge on tablet
3. Navigate to your app
4. Go to "Contactor Demo" or "Short Cycle Test" page
5. Click "Connect Relay"
6. Grant serial port permission
7. Verify connection status shows "Connected"

Expected result:  Connection established, no errors

Test 2: Relay Control ✓

1. With relay connected, toggle relays on/off via app
2. **Listen for relay clicks** (mechanical relays make an audible click)
3. **Check LED indicators** on relay module (if present)
4. Use multimeter to verify relay contacts are closing (continuity test)


Expected result:  Audible clicks, LED changes, continuity when closed

Test 3: Temperature Sensor ✓

1. Connect DS18B20 sensor to tablet
2. Open serial port to sensor in app
3. Wait 10 seconds for first reading

4. Verify temperature data appears (format: +25.3C)

5. Compare with known good room thermometer

Expected result:  Readings appear, within $\pm 1^{\circ}\text{C}$ of reference

Test 4: AC Unit Control ✓


 **SAFETY: Have someone watch the AC unit during testing!**

1. **Wire relay to AC power** (see Step 3 above)
2. **Set AC unit's built-in thermostat to coldest** (or bypass it)
3. **Connect relay module** to tablet
4. **Turn on relay** via app
5. **Verify AC unit starts** (listen for compressor and fan)
6. **Turn off relay** via app
7. **Verify AC unit stops**

Expected result:  AC responds immediately to relay commands

Test 5: Full Thermostat Control ✓

1. **Connect both relay and sensor** to tablet (via USB hub)
2. **Set target temperature** in app (e.g., 72°F)
3. **Set differential** (e.g., 2°F)
4. **Let system run automatically:**
 - When room temp $>$ target + differential \rightarrow AC turns on
 - When room temp $<$ target - differential \rightarrow AC turns off
5. **Monitor for 30 minutes** to verify proper cycling

Expected result:  Automatic temperature control, proper cycling

Electrical Safety

1. **Always unplug AC unit** before wiring
 2. **Use proper wire gauge:**
 - 18-22 AWG for low voltage (24V)
 - 14-16 AWG for 120VAC
 3. **Use wire nuts** for connections (don't just twist wires)
 4. **Wrap connections in electrical tape** for safety
 5. **Test with multimeter** before powering on
 6. **Check relay rating** (10A max) vs AC unit amperage
 7. **Use strain relief** on all connections
 8. **Keep water away** from all electrical connections
-

Power Considerations

1. **Relay module needs external power** (12VDC from converter)
 2. **Tablet needs power** (5VDC USB from converter)
 3. **Both converters need 24VAC input** (from furnace/AC transformer)
 4. **If transformer can't handle load**, use separate 24VAC transformer
 5. **Calculate total load:**
 - Relay module: $\sim 500\text{mA} @ 12\text{V} = 6\text{W}$
 - Tablet: $\sim 2\text{A} @ 5\text{V} = 10\text{W}$
 - Total: $\sim 16\text{W}$ from 24VAC transformer
-

AC Unit Compatibility

Wall-Mounted Mobile AC L-2008 Specifications

You must verify:

- Unit's power rating (watts/amperage) - check nameplate
- Relay can handle the load (10A @ 250VAC max)

- **If unit draws more than 10A, you MUST use a contactor**

Typical AC unit ratings:

- Small (5,000 BTU): 4-5A
 - Medium (8,000 BTU): 7-8A
 - Large (12,000 BTU): 10-12A ⚠ May need contactor
-

Troubleshooting

Relay Module Not Detected

Symptoms: Tablet doesn't see relay module

Solutions:

- ✓ Check USB cable connections (try reseating)
 - ✓ Try different USB cable (cable may be data-only)
 - ✓ Check USB OTG is enabled in tablet settings
 - ✓ Try connecting to computer first to verify module works
 - ✓ Check relay module has external power (12VDC)
 - ✓ Verify CH340 drivers (usually automatic on Android)
-

Temperature Sensor Not Reading

Symptoms: No temperature data

Solutions:

- ✓ Wait 10 seconds (sensor updates every 10s)
 - ✓ Check USB connection
 - ✓ Verify baud rate is 9600
 - ✓ Check sensor is sending data (use serial monitor app)
 - ✓ Try different USB port
 - ✓ Verify sensor has power (LED should be on)
-

AC Unit Not Responding

Symptoms: Relay clicks but AC doesn't start

Solutions:

- ✓ Check wiring connections (loose wire?)
 - ✓ Verify relay contacts are closing (use multimeter)
 - ✓ Check AC unit's built-in thermostat (set to coldest)
 - ✓ Verify AC unit has power (check outlet with lamp)
 - ✓ Check relay rating vs AC unit amperage
 - ✓ Test AC unit directly (bypass relay temporarily)
 - ✓ Check for tripped circuit breaker
-

Tablet Power Issues

Symptoms: Tablet battery drains or won't charge

Solutions:

- ✓ Verify 24VAC to 5VDC converter is working (measure output)
 - ✓ Check converter output (should be 5V, 3A minimum)
 - ✓ Try different USB-C cable (must support power delivery)
 - ✓ Check tablet charging port for damage or debris
 - ✓ Use powered USB hub if needed
 - ✓ Verify converter can supply enough current (3A minimum)
-

Final Checklist

Before Powering On:

- ☐ All wiring connections secure and tight
- ☐ Wire nuts properly installed on all splices
- ☐ Electrical tape on all connections
- ☐ Relay module has external power (12VDC)
- ☐ Tablet has power (5VDC USB)
- ☐ USB connections secure

- ☐ AC unit unplugged during wiring
 - ☐ Multimeter tested all connections
 - ☐ Relay rating checked vs AC amperage
 - ☐ Temperature sensor mounted properly
 - ☐ Software configured for AT commands
 - ☐ Browser permissions granted
 - ☐ No exposed bare wires
 - ☐ Strain relief on all cables
-

Next Steps

Phase 1: Component Testing (1-2 hours)

1. Complete wiring following this guide
2. Test each component individually
3. Verify all connections with multimeter

Phase 2: Integration Testing (1-2 hours)

1. Test full system integration
2. Calibrate temperature sensor (compare with known good thermometer)
3. Verify relay control of AC unit

Phase 3: Tuning & Monitoring (24-48 hours)

1. Tune thermostat settings (differential, min on/off times)
2. Monitor for 24-48 hours to verify stability
3. Check for short cycling issues
4. Optimize temperature differential

Phase 4: Optimization (ongoing)

1. Fine-tune temperature settings based on comfort
 2. Monitor energy usage
 3. Add additional sensors if needed
 4. Implement scheduling features
-

Additional Resources

Documentation Files

- `docs/CH340-RELAY-SETUP.md` - Detailed relay module setup
- `docs/USB-TEMPERATURE-HUMIDITY-SENSORS.md` - Sensor configuration
- `docs/WINDOW-AC-TESTING.md` - AC unit testing procedures
- `scripts/relay-server.js` - Backend relay control script
- `src/lib/webSerialRelay.js` - Web Serial API implementation

Helpful Links

- [Web Serial API Documentation](#)
- [CH340 Driver Downloads](#)
- [DS18B20 Datasheet](#)
- [HVAC Wiring Standards](#)

You're Ready to Build!

All your parts are compatible and the software already supports them. Follow this guide step-by-step, and you'll have a working smart thermostat!

Safety Reminder

- Work safely with electricity
- When in doubt, consult a licensed electrician
- Never work on live circuits
- Use proper tools and safety equipment

Questions? Check the troubleshooting section or review the additional documentation files.

Document Version: 2.0

Last Updated: 2025

Compatibility: Web Serial API, CH340 Relay, DS18B20 Sensor