


Smart Wireless THUM™ Adapter



WirelessHART

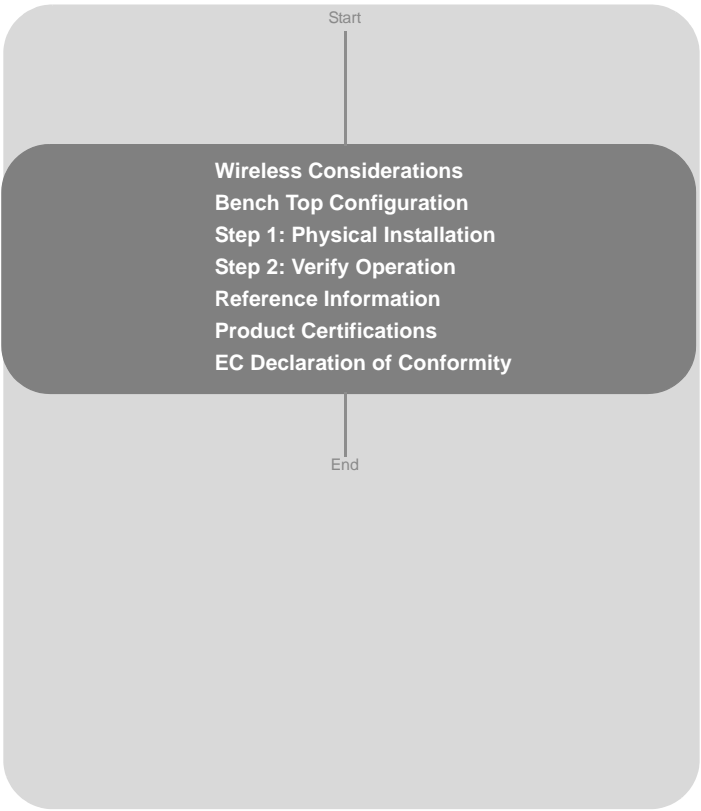

Smart Wireless THUM Adapter

© 2010 Rosemount Inc. All rights reserved. All marks property of owner.

**Emerson Process Management
Rosemount Division**

8200 Market Boulevard
Chanhassen, MN USA 55317
T (US) (800) 999-9307
T (Intl) (952) 906-8888
F (952) 949-7001

Rosemount Temperature GmbH

Frankenstrasse 21
63791 Karlstein
Germany
T 49 (6188) 992 0
F 49 (6188) 992 112

**Emerson Process Management
Asia Pacific Private Limited**

1 Pandan Crescent
Singapore 128461
T (65) 6777 8211
F (65) 6777 0947 / (65) 6777 0743
Enquiries@AP.EmersonProcess.com

⚠ IMPORTANT NOTICE

This installation guide provides basic guidelines for the Smart Wireless THUM Adapter. It does not provide instructions for detailed configuration, diagnostics, maintenance, service, troubleshooting, or installations. Refer to the THUM Adapter Reference Manual (document number 00809-0100-4075) for more instruction. The manual and this QIG are also available electronically on www.rosemount.com.

⚠ WARNING**Explosions could result in death or serious injury:**

Installation of this transmitter in an explosive environment must be in accordance with the appropriate local, national, and international standards, codes, and practices. Please review the Product Certifications section for any restrictions associated with a safe installation.

- Before connecting a Field Communicator in an explosive atmosphere, ensure the instruments are installed in accordance with intrinsically safe or non-incendive field wiring practices.

Electrical shock can result in death or serious injury:

- Avoid contact with the leads and terminals. High voltage that may be present on leads can cause electrical shock.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions. This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation.

This device must be installed to ensure a minimum antenna separation distance of 7.87-in. (20 cm) from all persons.

⚠ IMPORTANT NOTICE

During normal operation, or in fault condition, the THUM Adapter will cause a 2.5 V drop in the connected loop. It is important to ensure that the power supply can provide at least 2.5 V more than the minimum operating voltage of the wired device to make sure it works properly with the THUM Adapter installed. To determine the minimum operating voltage for the wired device, review the wired device operation and installation manual.

WIRELESS CONSIDERATIONS


Power Up Sequence

Power should not be applied to any wireless device until the Smart Wireless Gateway ("Gateway") is installed and functioning properly. Wireless devices should also be powered up in order of proximity from the Gateway, beginning with the closest. This will result in a simpler and faster network installation. Enable Active Advertising on the Gateway to ensure that new devices join the network faster. For more information see the Smart Wireless Gateway Manual (Doc. No. 00809-0200-4420).

THUM Adapter Position

If possible, the THUM Adapter should be positioned vertically, either straight up or straight down, and it should be approximately 3 ft. (1 m) from any large structure, building, or conductive surface to allow for clear communication to other devices. If the THUM Adapter is mounted horizontally wireless communication range may be decreased. See THUM Adapter reference manual (00809-0100-4075) for more information.

Figure 1. THUM Adapter Position

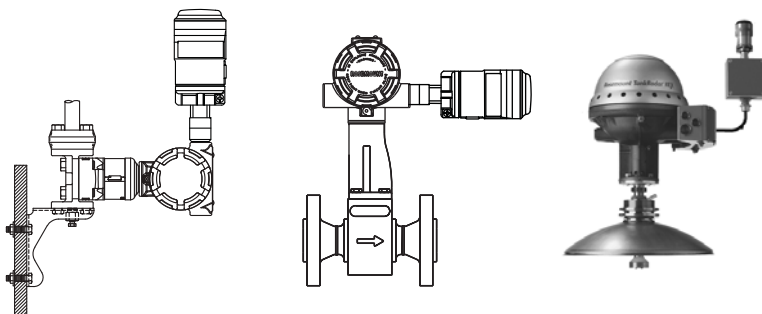

Conduit Entry

When installing the THUM Adapter into the conduit entry of a wired device, use an approved thread sealant. Thread sealant provides a water tight seal. The thread sealant also provides lubrication to ensure easy removal of the THUM Adapter.

M20 Conduit Adapter

When using the M20 Conduit Adapter on the THUM Adapter, use an approved thread sealant and tighten wrench tight to the THUM Adapter. When installing the M20 conduit adapter into a conduit, tighten to 32.5 Nm/25 ft-lb. to ensure water tight seal.

Field Communicator Connections

In order for the Field Communicator to interface with the THUM Adapter, the wired device must be powered. The Field Communicator must be put into poll mode and should use the THUM Adapter address of 63.

Smart Wireless THUM Adapter

Power Supply

Minimum loop load of 250 Ohms.

The THUM Adapter communicates via and derives power from a standard 4-20 mA/HART® loop. The THUM Adapter causes a small voltage drop on the loop which is linear from 2.25 V at 3.5 mA to 1.2 V at 25 mA. Under fault conditions, the maximum voltage drop is 2.5 V. The THUM Adapter will not affect the 4-20 mA signal under normal or fault conditions as long as the loop has at least a 2.5 V margin at the maximum loop current (25 mA for a typical 4-20 mA/HART device).

Limit the power supply to 0.5 Amps maximum, and voltage to 55 Vdc.

Loop Current	THUM Adapter voltage drop
3.5 mA	2.25 V
25 mA	1.2 V


Load Resistor

If required, add a load resistor as shown in Figure 8, 12, and 16. The resistor should be adequately rated for the application (1W minimum) and be compatible with the supplied splice connector which accepts wire sizes from 14 to 22 AWG.

BENCH TOP CONFIGURATION

When performing bench top configuration it is suggested that you connect the THUM Adapter to a wired device. If this is not possible, the following wiring diagrams can be used. For bench top configuration, ensure that the power supply that you are using is limited to 0.5 Amps maximum.

Figure 2. THUM Adapter Only, Powered by a Current Source (Such as a Fluke 744)

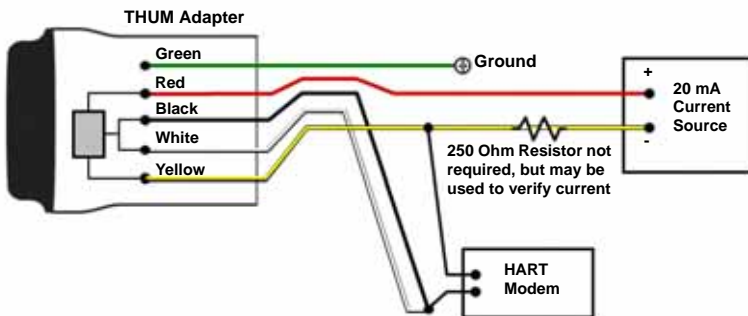


Quick Installation Guide

00825-0100-4075, Rev CA
October 2010

Smart Wireless THUM Adapter

Figure 3. THUM Adapter Only, Powered by a 24 V Power Supply with 1200 Ohm resistor to limit current to 20 mA

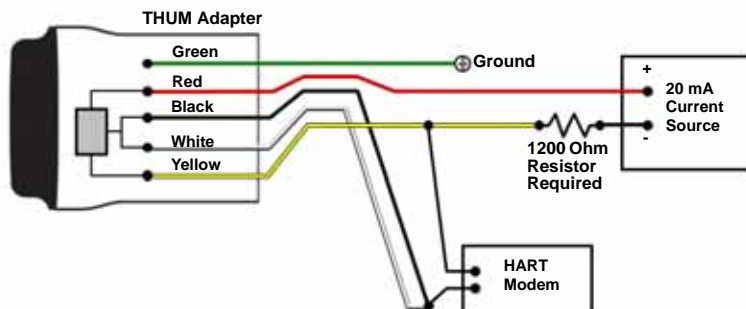


STEP 1: PHYSICAL INSTALLATION

The THUM Adapter can be installed in one of two configurations:

Direct Mount: The THUM Adapter is connected directly to the conduit entry of the wired device.

Figure 4. Direct Mount

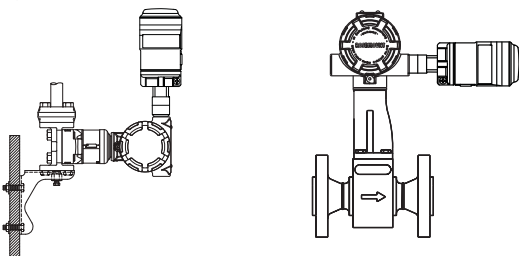

Direct Mount

1. Install the HART device according to standard installation practices and the manufacturer's instructions, being sure to use an approved thread sealant on all connections.
2. Attach the THUM Adapter to the wired device as shown in Figure 4.
3. Connect the THUM Adapter to the HART wired device using the wiring diagrams below. See Figures 21, 8, 10, and 12 on the following pages.
4. Close the housing cover on the HART wired device, so that metal touches metal, but do not over tighten to prevent damaging the unit.

NOTE


Two splice connectors are included with the THUM Adapter. The first is a two connection splice. The second is a three connection splice for use with a resistor, if there is not enough resistance in the loop. Both of these splice connectors can accept 14 to 22 gauge wire. See wired device reference manual for information on the required loop resistance.

Smart Wireless THUM Adapter

Remote Mount

Remote Mount: The THUM Adapter is mounted separate from the wired device housing and then connected to the wired device using conduit or other suitable means.

Figure 5. Remote Mount

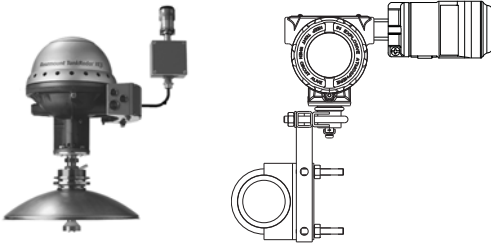

1. Install the HART device according to standard installation practices and the manufacturer's instructions, being sure to use an approved thread sealant on all connections.
2. The THUM Adapter should be mounted as shown in Figure 5 on page 6.
3. Ground the Remote Mount Kit per local practices.
4. Connect the THUM Adapter to the wired device using standard practices. Wire running from the THUM Adapter to the wired device should be shielded or in conduit when installed in electrically noisy environments.
5. Connect the THUM Adapter to the HART wired device using the wiring diagrams below. See Figure 21, 8, 10, and 12 on the following pages.
6. Close the housing cover on the HART wired device, so that metal touches metal, but do not over tighten to prevent damaging the unit.

NOTE

Two splice connectors are included with the THUM Adapter. The first is a two connection splice. The second is a three connection splice for use with a resistor, if there is not enough resistance in the loop. Both of these splice connectors can accept 14 to 22 gauge wire. See wired device reference manual for information on the required loop resistance.

Wiring Diagrams

The following is a list of the figure titles and page numbers for each direct mount and remote mount wiring diagram:

Figure 6 - Direct Mount Wiring Diagram for 2-Wire Device on page 8

Figure 7 - Remote Mount Wiring Diagram for 2-Wire Device on page 8

Figure 8 - Direct Mount Wiring Diagram for 2-Wire Device with Resistor on page 9

Figure 9 - Remote Mount Wiring Diagram for 2-Wire Device with Resistor on page 9

Figure 10 - Direct Mount Wiring Diagram for 4-Wire Passive Device on page 10

Figure 11 - Remote Mount Wiring Diagram for 4-Wire Passive Device on page 10

Figure 12 - Direct Mount Wiring Diagram for 4-Wire Passive Device with Resistor on page 11

Figure 13 - Remote Mount Wiring Diagram for 4-Wire Passive Device with Resistor on page 11

Figure 14 - Direct Mount Wiring Diagram for 4-Wire Active Device on page 12

Figure 15 - Remote Mount Wiring Diagram for 4-Wire Active Device on page 12

Figure 16 - Direct Mount Wiring Diagram for 4-Wire Active Device with Resistor on page 13

Figure 17 - Remote Mount Wiring Diagram for 4-Wire Active Device with Resistor on page 13

Figure 18 - Direct Mount Wiring Diagram for 4-Wire Active Device with No 4-20 mA Loop on page 14


Figure 19 - Remote Mount Wiring Diagram for 4-Wire Active Device with No 4-20 mA Loop on page 14

Figure 20 - THUM Adapter only, Powered by a 24 V Power Supply with 1200 Ohm resistor to limit current to 20 mA on page 15

Figure 21 - THUM Adapter only, Powered by a 24 V Power Supply with 1200 Ohm resistor to limit current to 20 mA on page 15

Smart Wireless THUM Adapter

Figure 6. Direct Mount Wiring Diagram for 2-Wire Device

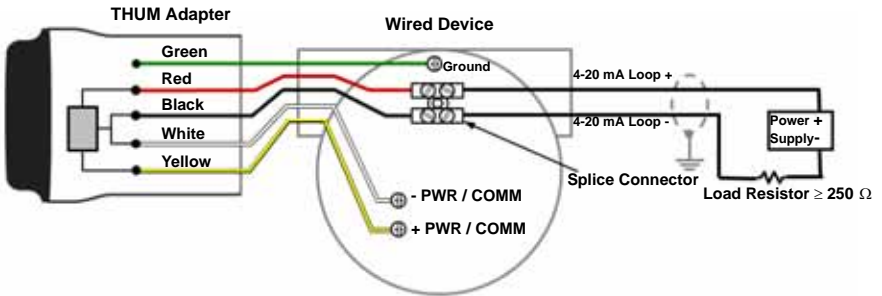

NOTE:

In order for the THUM Adapter to function properly there must be at least 250 Ohms resistance in the loop. If the 4–20 mA loop does not have the required resistance, wire a resistor as shown in Figure 8, 12, or 16 as applicable.

Figure 7. Remote Mount Wiring Diagram for 2-Wire Device

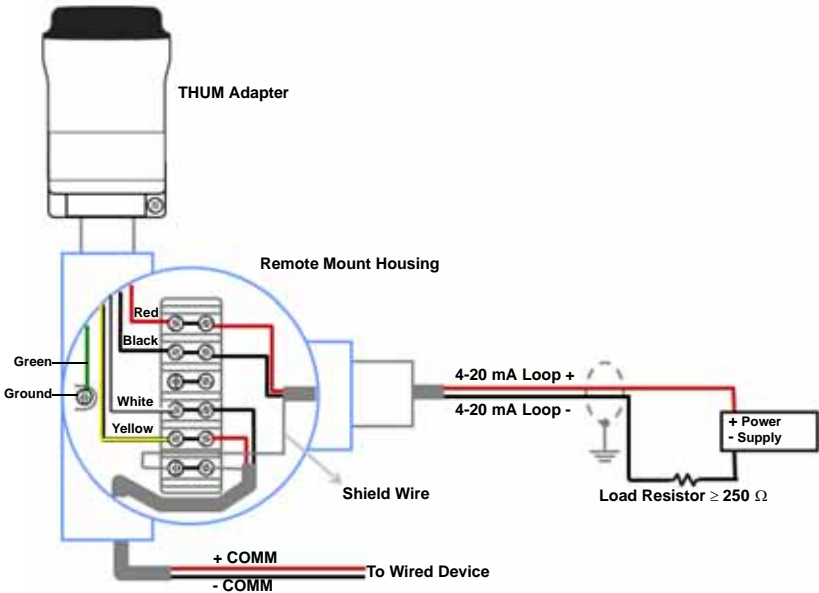


Figure 8. Direct Mount Wiring Diagram for 2-Wire Device with Resistor



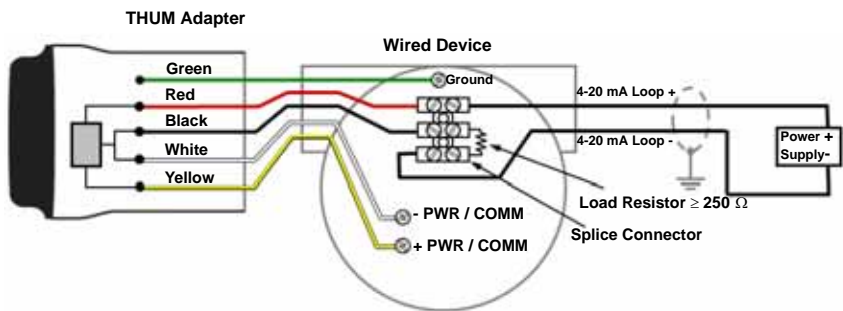


Figure 9. Remote Mount Wiring Diagram for 2-Wire Device with Resistor

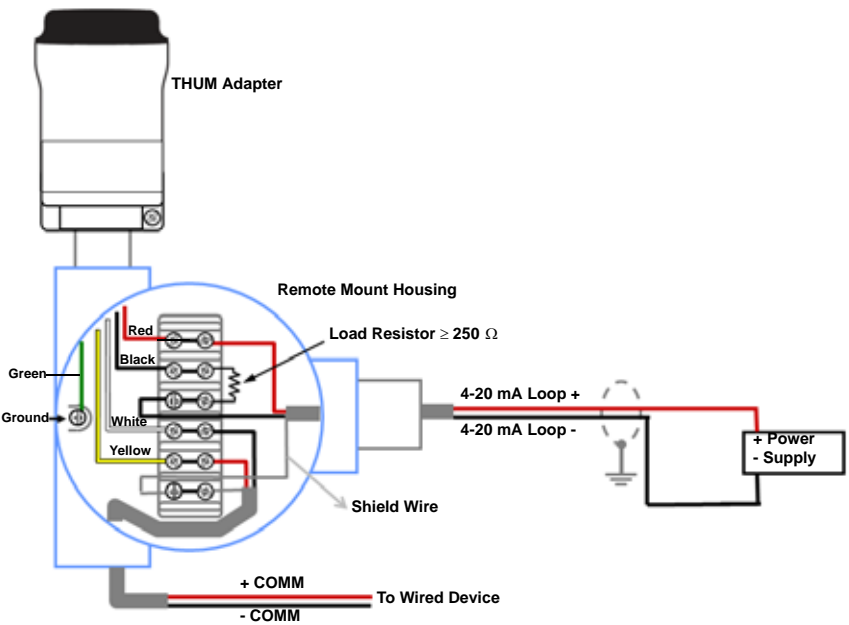

Smart Wireless THUM Adapter

Figure 10. Direct Mount Wiring Diagram for 4-Wire Passive Device

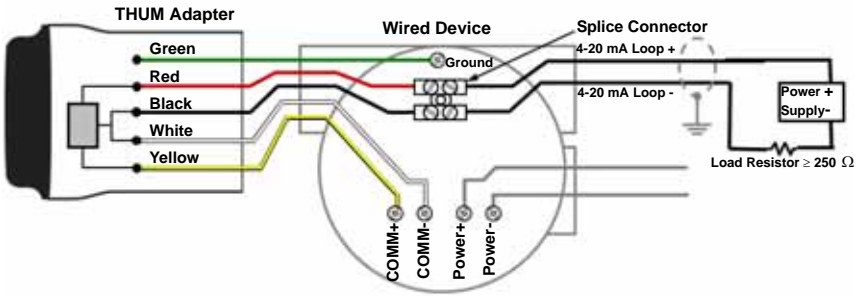

NOTE:

A passive loop exists when the wired device is not supplying power to the 4–20 mA loop. It is important to verify if the wired device is operating in active or passive mode.

Figure 11. Remote Mount Wiring Diagram for 4-Wire Passive Device

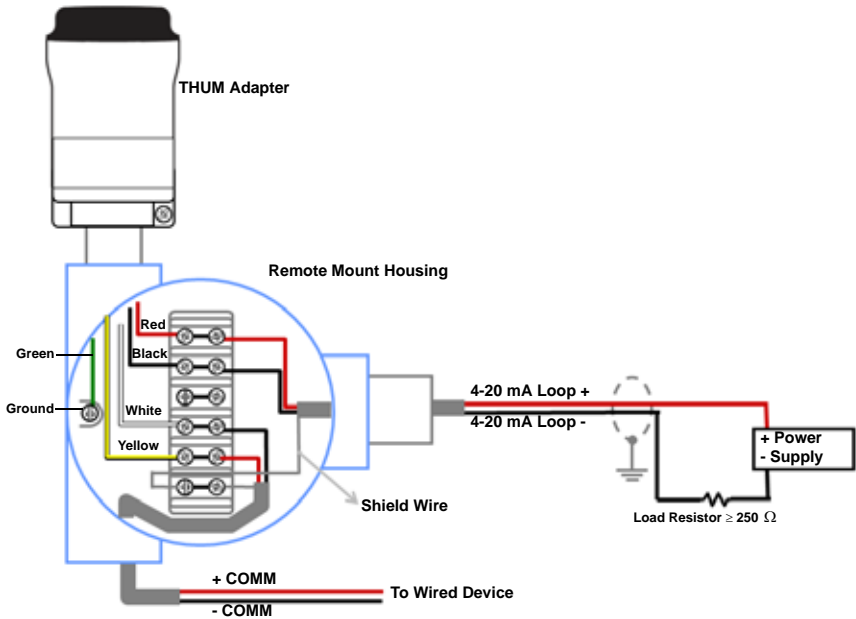


Figure 12. Direct Mount Wiring Diagram for 4-Wire Passive Device with Resistor



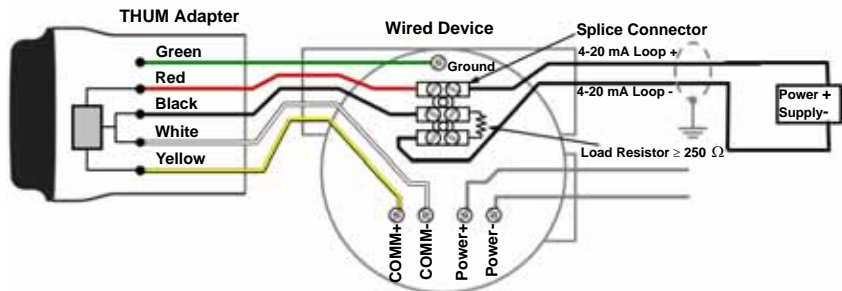


Figure 13. Remote Mount Wiring Diagram for 4-Wire Passive Device with Resistor

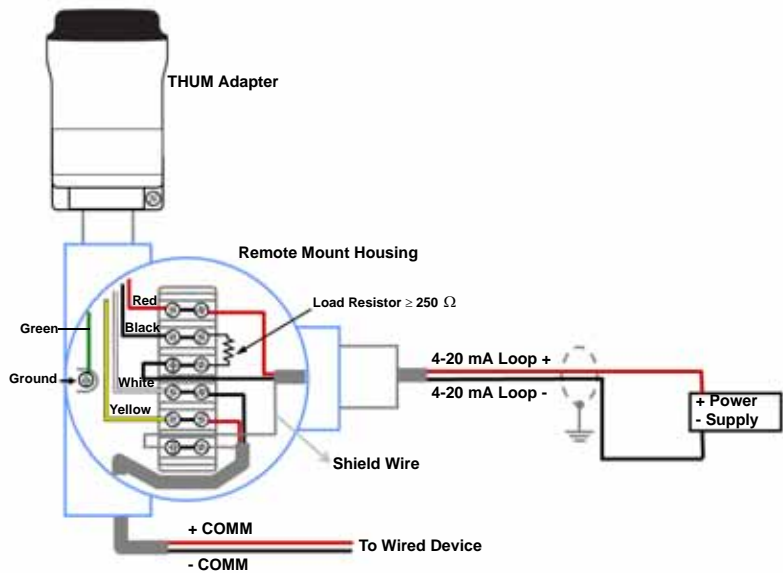

Smart Wireless THUM Adapter

Figure 14. Direct Mount Wiring Diagram for 4-Wire Active Device

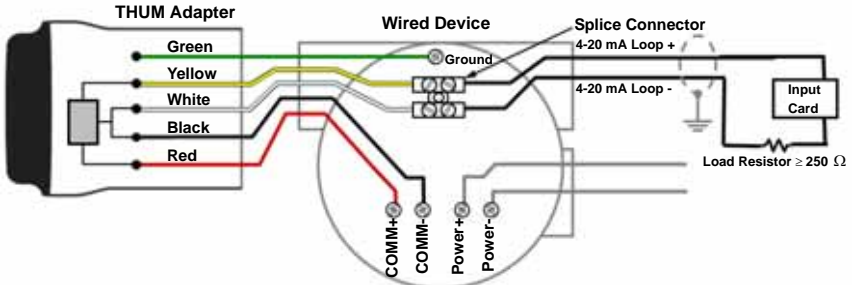

NOTE:

An active loop exists when the wired device is supplying the power to the 4-20 mA loop. It is important to verify if the wired device is operating in active or passive mode.

Figure 15. Remote Mount Wiring Diagram for 4-Wire Active Device

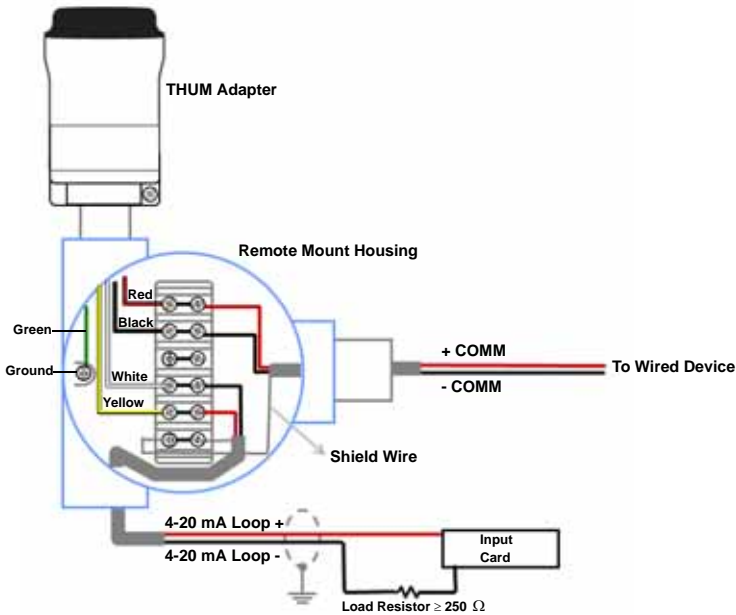


Figure 16. Direct Mount Wiring Diagram for 4-Wire Active Device with Resistor


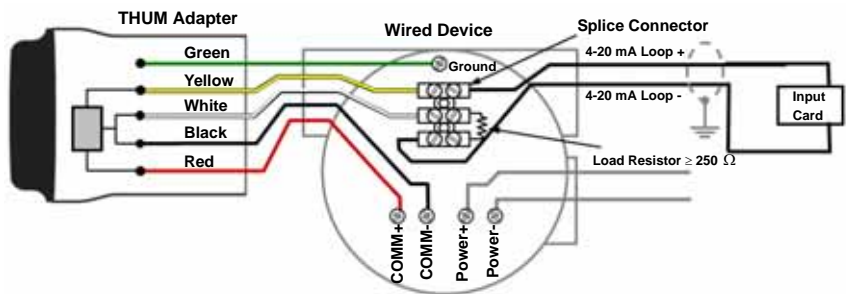


Figure 17. Remote Mount Wiring Diagram for 4-Wire Active Device with Resistor

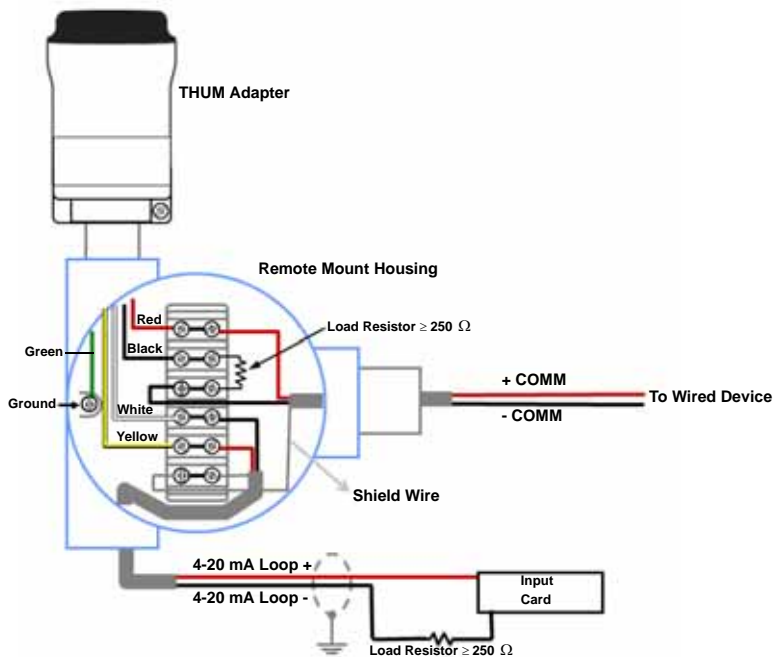

Smart Wireless THUM Adapter

Figure 18. Direct Mount Wiring Diagram for 4-Wire Active Device with No 4-20 mA Loop

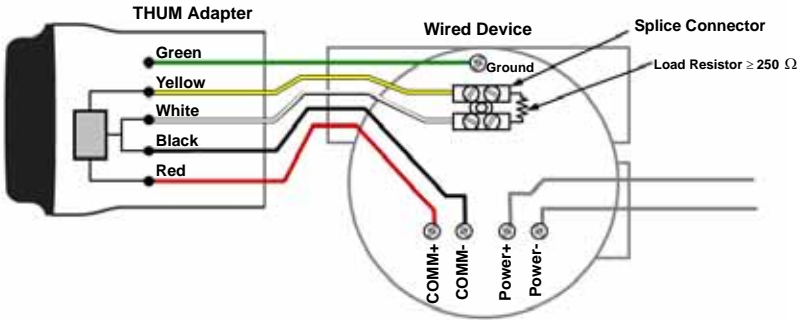


Figure 19. Remote Mount Wiring Diagram for 4-Wire Active Device with No 4-20 mA Loop

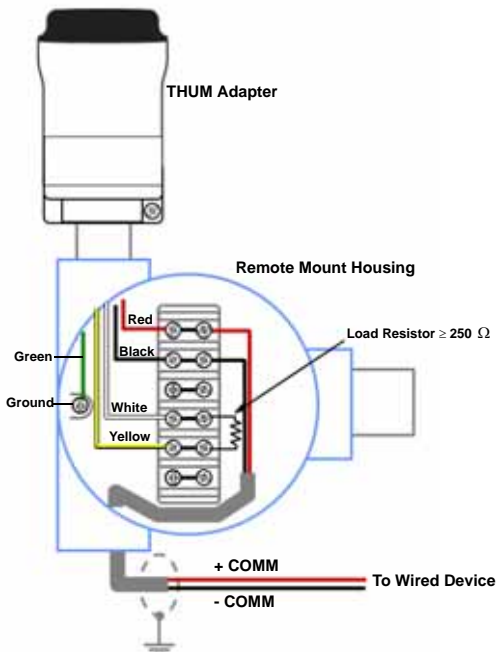


Figure 20. THUM Adapter only, Powered by a 24 V Power Supply with 1200 Ohm resistor to limit current to 20 mA


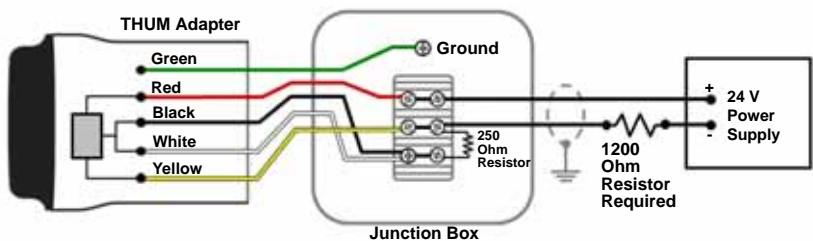


Figure 21. THUM Adapter only, Powered by a 24 V Power Supply with 1200 Ohm resistor to limit current to 20 mA

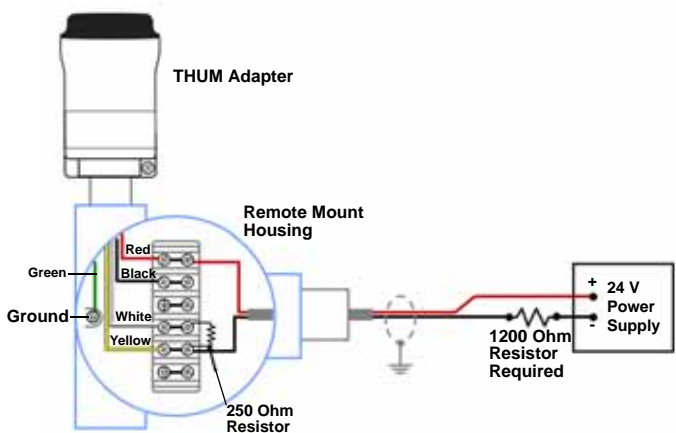

Smart Wireless THUM Adapter

Device Network Configuration

In order to communicate with the Smart Wireless Gateway, and ultimately the Information System, the transmitter must be configured to communicate with the wireless network. This step is the wireless equivalent of connecting wires from a transmitter to the information system. Using a Field Communicator or AMS, enter the **Network ID and Join Key** so that they match the Network ID and Join Key of the gateway and other devices in the network. If the Network ID and Join Key are not identical, the THUM Adapter will not communicate with the network. The Network ID and Join Key may be obtained from the Smart Wireless Gateway on the **Setup>Network>Settings** page on the web server, shown in Figure 22.

Figure 22. Gateway Network Settings

AMS

Right click on the THUM Adapter and select **Configure**. When the menu opens, select **Join Device to Network** and follow the method to enter the Network ID and Join Key.

Field Communicator

The Network ID and Join Key may be changed in the wireless device by using the following Fast Key sequence. Set both Network ID and Join Key.

Function	Key Sequence	Menu Items
Wireless Setup	1,4	Smart Power, Network ID, Set Join Key, Radio State

Loop Current Test

To verify that the THUM Adapter will work under all conditions, a loop current test should be performed. This test will exercise the loop under the highest possible voltage drop conditions.

1. Place loop in manual control.
2. Drive loop to high alarm level. For details, see wired device instruction manual.
 - When the THUM Adapter is connected to a valve, this will need to be done at the current source and not from the valve.
 - When the THUM Adapter is connected to a transmitter, this will need to be performed at the transmitter.
3. Place the THUM Adapter into fixed voltage drop mode.

AMS

Right click on the THUM Adapter and select **Configure**. When the menu opens, select **Manual Setup** from the window on the left and select the *Wired Device* tab on the top. Make sure that the *Time* drop down menu at the bottom of the page has **Current** selected. Under the *Voltage Drop* drop down menu in the *Smart Power Options* box, select **Fixed Voltage Drop**. Hit the **Apply** button to make any changes. See Figure 23 on page 18.

Field Communicator

When communicating to the THUM Adapter select: **Configure - Manual setup - Wired Device - Voltage Drop Mode**. In the method choose **Fixed Voltage Drop**.

Function	Key Sequence	Menu Items
Voltage Drop	2,2,2,2	Voltage Drop

4. Verify that the current on the loop reaches the high alarm levels.
5. Place the THUM Adapter into variable voltage drop mode.

AMS

Right click on the THUM Adapter and select **Configure**. When the menu opens, select **Manual Setup** from the window on the left and select the *Wired Device* tab on the top. Make sure that the *Time* drop down menu at the bottom of the page has **Current** selected. Under the *Voltage Drop* drop down menu in the *Smart Power Options* box, select **Variable Voltage Drop**. Hit the **Apply** button to make any changes. See Figure 23.

Field Communicator


When communicating to the THUM Adapter select: **Configure - Manual setup - Wired Device - Voltage Drop Mode**. In the method choose **Variable Voltage Drop**.

Function	Key Sequence	Menu Items
Voltage Drop	2,2,2,2	Voltage Drop

Smart Wireless THUM Adapter

6. Remove loop from high alarm value.

Figure 23. AMS Configure screen

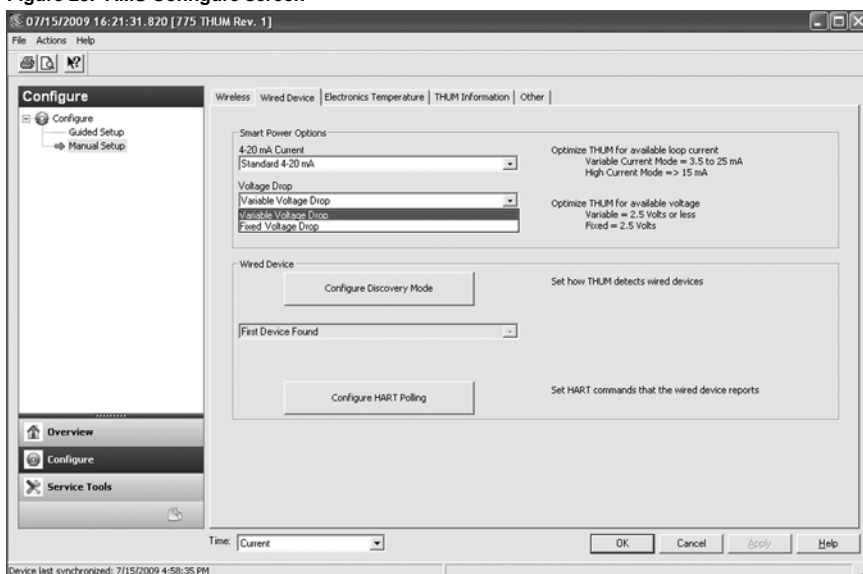

Quick Installation Guide

00825-0100-4075, Rev CA
October 2010

Smart Wireless THUM Adapter

STEP 2: VERIFY OPERATION

Operation can be verified in three locations: by using the Field Communicator, at the Gateway via the Smart Wireless Gateway's integrated web server, or via AMS™ Wireless Configurator.

Field Communicator

For HART Wireless transmitter communication, a THUM Adapter DD is required. The Field Communicator must be put into poll mode using the THUM Adapter address of 63. Use the wired device documentation to connect the Field Communicator to the THUM Adapter.

Figure 24. Field Communicator Connections

Function	Key Sequence	Menu Items
Communications	3, 3	Join Status, Wireless Mode, Join Mode, Number of Available Neighbors, Number of Advertisements Heard, Number of Join Attempts

Smart Wireless Gateway


If the THUM Adapter was configured with the Network ID and Join Key, and sufficient time has passed for network polling, the transmitter will be connected to the network. To verify device operation and connection to the network with the Smart Wireless Gateway's integrated web server, open the Smart Wireless Gateway's integral web interface and navigate to the **Explorer** page.

NOTE:

It may take several minutes for the device to join the network.

AMS Wireless Configurator

When the device has joined the network, it will appear in the Wireless Configurator as illustrated below.

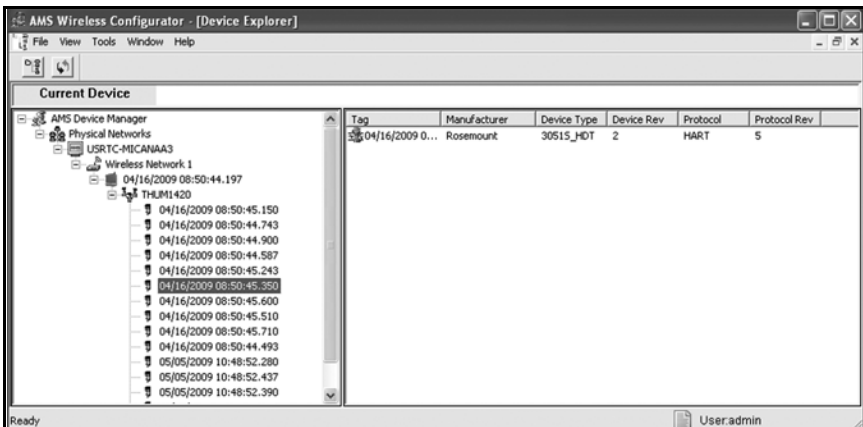

Smart Wireless THUM Adapter

Troubleshooting

If the device is not operating properly, refer to the troubleshooting section of the manual. The most common cause of incorrect operation is the Network ID and Join Key. The Network ID and Join Key in the device must match that of the Smart Wireless Gateway.

The Network ID and Join Key may be obtained from the Smart Wireless Gateway on the **Setup>Network>Settings** page on the web server. The Network ID and Join Key may be changed in the wireless device by using the following Fast Key sequence.

Function	Key Sequence	Menu Items
Wireless Setup	1, 4	Smart Power, Network ID, Set Join Key, Radio State

REFERENCE INFORMATION**NOTE:**

In order to communicate with a Field Communicator, the wired device must be powered.

Table 1. THUM Adapter Fast Key Sequence

Function	Key Sequence	Menu Items
Device Info	2, 2, 4, 3	Manufacturer, Model, Final Assembly Number, Universal, Field Device, Software, Hardware, Descriptor, Message, Date, Model Number I, II, III, SI Unit Restriction, Country
Guided Setup	2, 1	Configure, Guided Setup, Join Device to Network, Configure Update Rate, Zero Trim, Configure Device Display, Configure Process Alarms
Manual Setup	2, 2	Configure, Manual Setup, Wireless, Pressure, Device Temperatures, Device Information, Display, Other
Wireless	2, 2, 1	Network ID, Join Device to Network, Configure Update Rate, Configure Broadcast Power Level, Power Mode, Power Source

PRODUCT CERTIFICATIONS

Approved Manufacturing Locations

Rosemount Inc. – Chanhassen, Minnesota, USA
Emerson Process Management GmbH & Co. - Karlstein, Germany
Emerson Process Management Asia Pacific Private Limited — Singapore

European Directive Information

The EC declaration of conformity for all applicable European directives for this product can be found at www.rosemount.com. A hard copy may be obtained by contacting an Emerson Process Management representative.

ATEX Directive (94/9/EC)

Emerson Process Management complies with the ATEX Directive.

Electro Magnetic Compatibility (EMC) (2004/108/EC)

Emerson Process Management complies with the EMC Directive.

Radio and Telecommunications Terminal Equipment Directive (R&TTE) (1999/5/EC)

Emerson Process Management complies with the R&TTE Directive.

Telecommunication Compliance

All wireless devices require certification to ensure that they adhere to regulations regarding the use of the RF spectrum. Nearly every country requires this type of product certification. Emerson is working with governmental agencies around the world to supply fully compliant products and remove the risk of violating country directives or laws governing wireless device usage.

FCC and IC

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions: This device may not cause harmful interference. This device must accept any interference received, including interference that may cause undesired operation. This device must be installed to ensure a minimum antenna separation distance of 20 cm from all persons.

Ordinary Location Certification for FM

As standard, the transmitter has been examined and tested to determine that the design meets basic electrical, mechanical, and fire protection requirements by FM, a nationally recognized testing laboratory (NRTL) as accredited by the Federal Occupational Safety and Health Administration (OSHA).

Smart Wireless THUM Adapter

Hazardous Locations Certificates

North American Certifications

Factory Mutual (FM) Approvals

- I5** FM Intrinsically Safe and Non-incendive
 Intrinsically Safe for Class I/II/III, Division 1, Groups A, B, C, D, E, F, and G.
 Zone Marking: Class I, Zone 0, AEx ia IIC
 Temperature Codes T4 ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$)
 Non-incendive for Class I, Division 2, Groups A, B, C, and D.
 Intrinsically safe and non-incendive when installed according to Rosemount Drawing 00775-0010.
 Enclosure Type 4X/IP66

CSA - Canadian Standards Association

- I6** CSA Intrinsically Safe
 Intrinsically Safe for Class I, Division 1, Groups A, B, C, and D.
 T3C ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$)
 Intrinsically safe when installed according to Rosemount Drawing 00775-0012.
 Suitable for Class I, Division 2, Groups A, B, C, and D.
 Enclosure Type 4X/IP66

European Certifications



- I1** ATEX Intrinsic Safety
 Certificate No.: Baseefa09ATEX0125X  II 1G
 Ex ia IIC T4 ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$)
 IP66
CE 1180

Table 2. Input Parameters

Loop Power $U_i = 30\text{ V}$ $I_i = 200\text{ mA}$ $P_i = 1.0\text{ W}$ $C_i = 0$ $L_i = 0$ **Special conditions for safe use (X)**

The surface resistivity of the antenna is greater than one gigaohm. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

The enclosure is made of aluminium alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0.

- N1** ATEX Type n
 Certificate No.: Baseefa09ATEX0131  II 3 G
 Ex nA IIC T4 ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$)
 $U_i = 45\text{ Vdc MAX}$
 IP66
CE 1180

Quick Installation Guide

00825-0100-4075, Rev CA
October 2010

Smart Wireless THUM Adapter

IECEX Certifications

- I7** IECEX Intrinsic Safety
Certificate No.: IECEX BAS 09.0050X
Ex ia IIC T4 ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$)
IP66

Table 3. Input Parameters

Loop Power

$U_i = 30\text{ V}$

$I_i = 200\text{ mA}$

$P_i = 1.0\text{ W}$

$C_i = 0$

$L_i = 0$

Special conditions for safe use (X)

The surface resistivity of the antenna is greater than one gigaohm. To avoid electrostatic charge build-up, it must not be rubbed or cleaned with solvents or a dry cloth.

The enclosure is made of aluminium alloy and given a protective polyurethane paint finish; however, care should be taken to protect it from impact or abrasion if located in a zone 0.

- N7** IECEX Type n
Certificate No.: IECEX BAS 09.0058
Ex nA IIC T4 ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$)
 $U_i = 45\text{ Vdc MAX}$
IP66

INMETRO Certifications

- I2** Intrinsic Safety
BR-Ex ia IIC T4 ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$) Ga
- N2** INMETRO Type 'n'
BR-Ex nA IIC T4 Gc ($-50\text{ }^{\circ}\text{C} \leq T_{\text{amb}} \leq 70\text{ }^{\circ}\text{C}$)

China (NEPSI) Certifications

- I3** China (NEPSI) Intrinsic Safety
Ex ia IIC T4

CCoE Certifications

- IW** Intrinsic Safety
Ex ia IIC T4

KOSHA Certifications

- IP** Intrinsic Safety
Ex ia IIC T4

Smart Wireless THUM Adapter

GOST Certifications

IM Intrinsically Safe

Ex ia IIC T4 ($-50\text{ °C} \leq T_{\text{amb}} \leq 70\text{ °C}$)





Ex nA IIC T4 ($-50\text{ °C} \leq T_{\text{amb}} \leq 70\text{ °C}$)

IP66

Quick Installation Guide

00825-0100-4075, Rev CA
October 2010

Smart Wireless THUM Adapter

ROSEMOUNT									
<p align="center">EC Declaration of Conformity No: RMD 1077 Rev. B</p>									
<p><i>We,</i></p> <p>Rosemount Inc. 8200 Market Boulevard Chanhassen, MN 55317-6985 USA</p> <p><i>declare under our sole responsibility that the product,</i></p> <p align="center">Model 775</p> <p><i>manufactured by,</i></p> <table><tr><td>Rosemount Inc. 12001 Technology Drive Eden Prairie, MN 55344-3695 USA</td><td><i>and</i></td><td>8200 Market Boulevard Chanhassen, MN 55317-9687 USA</td></tr></table> <p><i>to which this declaration relates, is in conformity with the provisions of the European Community Directives, including the latest amendments, as shown in the attached schedule.</i></p> <p><i>Assumption of conformity is based on the application of the harmonized standards and, when applicable or required, a European Community notified body certification, as shown in the attached schedule.</i></p> <table><tr><td> _____ (signature)</td><td>02/10/2010 _____ (date of issue)</td></tr><tr><td>Timothy Layer _____ (name - printed)</td><td>Vice President Global Quality & Customer Care _____ (function name - printed)</td></tr></table>			Rosemount Inc. 12001 Technology Drive Eden Prairie, MN 55344-3695 USA	<i>and</i>	8200 Market Boulevard Chanhassen, MN 55317-9687 USA	 _____ (signature)	02/10/2010 _____ (date of issue)	Timothy Layer _____ (name - printed)	Vice President Global Quality & Customer Care _____ (function name - printed)
Rosemount Inc. 12001 Technology Drive Eden Prairie, MN 55344-3695 USA	<i>and</i>	8200 Market Boulevard Chanhassen, MN 55317-9687 USA							
 _____ (signature)	02/10/2010 _____ (date of issue)								
Timothy Layer _____ (name - printed)	Vice President Global Quality & Customer Care _____ (function name - printed)								

Smart Wireless THUM Adapter

ROSEMOUNT	CE
EC Declaration of Conformity No: RMD 1077 Rev. B	
EMC Directive (2004/108/EC) EN 61326-1: 2006	
R&TTE Directive (1999/5/EC) EN 301 489-17: V1.3.2 (2007-6) EN 61010-1: 2001 (Second Addition) EN 300 328 V 1.7.1 (2006-10)	
ATEX Directive (94/9/EC) Model 775 Certificate: Baseefa09ATEX0125X Intrinsically Safe - Group II Category 1 G Ex ia IIC T4 (Ta =-50°C to +70°C) Harmonized Standards Used: EN60079-0:2006; EN60079-11:2007 Certificate: Baseefa09ATEX0131 Type n - Group II Category 3 G Ex nA IIC T4(Ta =-50°C to +70°C) Harmonized Standards Used: EN60079-0:2006; EN60079-15:2005	
File ID: 775 CE Marking	Page 2 of 3
K:\prodappr\EUCDOCS\775_RMD1077B.doc	

ROSEMOUNT	CE
EC Declaration of Conformity No: RMD 1077 Rev. B	
ATEX Notified Bodies for EC Type Examination Certificate	
Baseefa. [Notified Body Number: 1180] Rockhead Business Park Staden Lane Buxton, Derbyshire SK17 9RZ United Kingdom	
ATEX Notified Body for Quality Assurance	
Baseefa. [Notified Body Number: 1180] Rockhead Business Park Staden Lane Buxton, Derbyshire SK17 9RZ United Kingdom	
File ID: 775 CE Marking	K:\prodappr\EUCDOCS\775_RMD1077B.doc

Smart Wireless THUM Adapter