


rotork®

'Q' RANGE

VALVE ACTUATOR ELECTRICAL SPECIFICATIONS

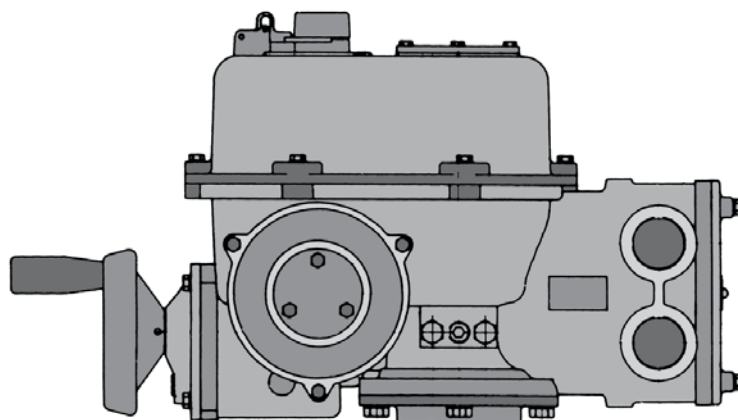

BASIC SPECIFICATION

The 'Q' Range is available in 2 electrical specifications, each with a double sealed IP68 watertight enclosure.

The Q-standard version comprises motor and limit switches and is suitable for open/close quarter turn operation without the need for a reversing contactor.

The Q-pak version contains an electronic control interface to enable remote control from internally or externally derived signals and provides actuator status monitoring outputs.



Power Supply

Single phase

50 Hz:- 110V 220V 240V

60 Hz:- 110V 115V 120V 127V 220V 240V

All the above voltages are subject to a $\pm 10\%$ tolerance. The motor is S2 rated for a 20% duty cycle according to IEC 34.2 with a maximum of 60 starts an hour.

Torque/limit switches

One each for open and closed with normally closed contacts. The torque measurement is derived from the self locking output worm and wheel gearing. One auxiliary limit switch with a change-over contact is provided for end of travel in each direction.

The ratings of the switches on inductive loads are as follows:-

110/240V ac - 15A

110V dc - 0.25A

50V dc - 2.5A

24V dc - 3A

Motor

Single phase capacitor run motors are used with 2, 4 or 6 pole class F insulated windings have an embedded thermostat for overload protection. Note: for Q-standard units a minimum delay of 2 seconds must be allowed when control signals are reversed to ensure motor reversal.

CONTROL AND INDICATION SPECIFICATION

Q-standard

Terminals

The watertight terminal compartment contains the following terminal.

- 18 for control (6-32 UNC)
- 2 for power (10-24 UNC)
- 1 for earth (10-24 UNC)

Conduit Entries: 2 off M32 (1.5p) or 2 off 1 inch NPT

Optional Extras

- Two auxiliary limit switches each independently adjustable to any point in the valve travel.
- Anti condensation heater: 12 watt heater to suit motor supply voltage. Internally connected to line and neutral.
- One watt potentiometer with alternative resistance values of 5K and 25K ohms.
- Current position transmitter (CPT) potentiometer with electronic transducer which provides a 4-20mA analogue position indication signal from an externally fed 15-40 volt supply.
- Integrally mounted open/close control switch with local/stop/remote selector.

Q-pak

Terminals

The following terminals are provided in the watertight terminal compartment.

- 44 for (6-32 UNC)
- 2 for power (10-24 UNC)
- 1 for earth (10-24 UNC)

Conduit entries: 2 off M32 (1.5p) or 2 off 1 inch NPT

Control interface module

This is housed in the cover of the switch compartment and consists of:

- A printed circuit board with logic circuits. Transformer to power the logic circuits and provide a 24 volt dc supply for the remote control.
- Monitor relay with change-over volt free contact.
- Motor running relay with N/O volt free contact.
- Integrally mounted control switches for open/close control and local/stop/remote selection.

The actuator is suitable for local and remote control as selected by the local/stop/remote switch.

In "local", control may be push-to-run or maintained and the required mode should be specified at the order stage.

In "remote", the control circuit may be powered by the actuator 24 volts dc internal supply or be fed from an external supply of 20 to

120 volts ac or dc. Remote control may be push-to-run or actuator maintained by suitable remote connections to the actuator terminals.

Remote signals should have a minimum duration of 300 ms to ensure actuator response. The guaranteed time for maximum length of signal which will be ignored is 5 ms.

Control Signal Threshold Voltages to be a minimum for 'ON' 20V, maximum for 'OFF' 3V.

Emergency shut down (ESD): A terminal is provided for connection of a remote ESD signal to the actuator which will over-ride any existing signal other than local stop whether the actuator is in local or remote mode. The actuator can be supplied either for opening or closing on ESD signal, which must make on ESD and be self maintained. The thermostat can be by-passed during ESD.

Optional extras

- Two auxiliary limit switches each independently adjustable to any point in valve travel.
- Anti-condensation heater: 12 watt heater to suit motor supply voltage internally connected to line and neutral.
- One watt potentiometer with alternative resistance values of 5K and 25K ohms.
- Folomatic proportional controller.
- Pak-Scan 2 wire control field unit.
(See publication AE1/10)
- Current position transmitter (CPT) potentiometer with electronic transducer to provide a 4-20 mA analogue position indication signal fed from the internal 24 volts dc supply. Alternatively, the CPT can be supplied suitable for an external 15-40 volts dc supply.

Zero and Span adjustments are provided over the following ranges:


Zero: 3.33 - 5.5 mA.
Span: 17.7 - 34.34 mA.

The maximum total external impedance must not exceed 200 ohms.


ACTUATOR CONTROL CIRCUITS

Q-standard basic actuator. Diagram 2S00Q00.

Circuits are drawn for a valve in a fully closed position.

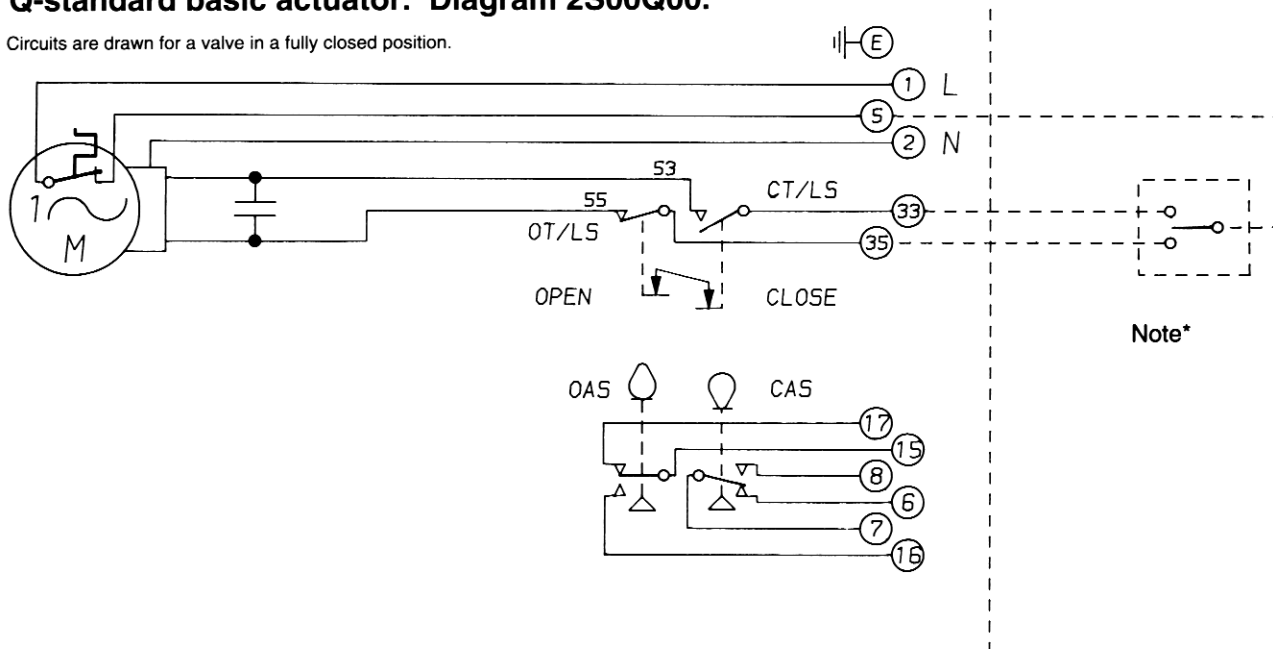

Basic actuator with integral pushbuttons. Diagram 2P00Q00.

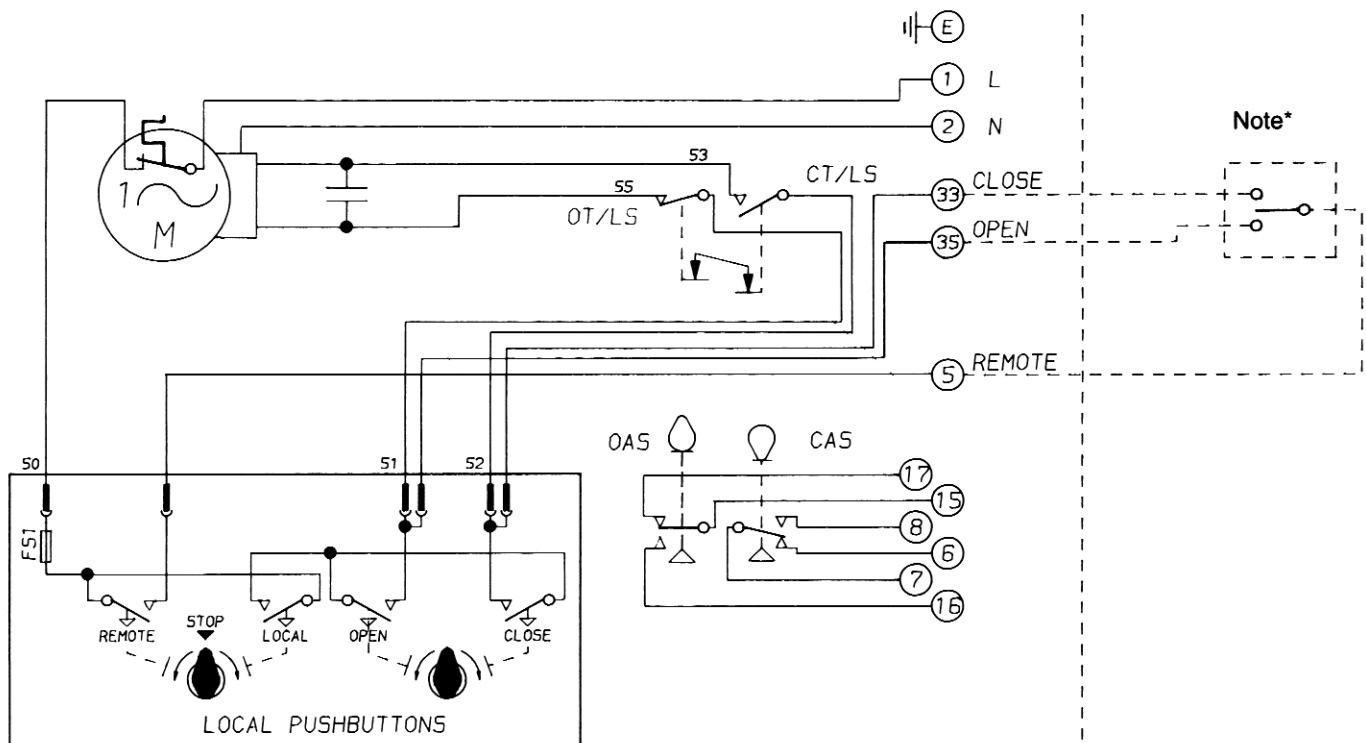



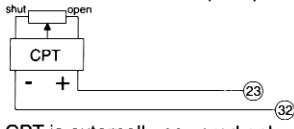
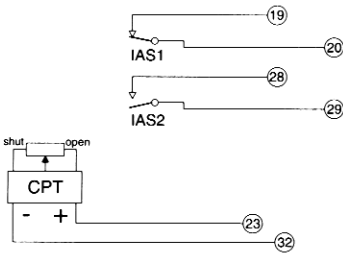
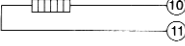
OT/LS - Open Torque/Limit Switch
CT/LS - Close Torque/Limit Switch
OAS - Open Auxiliary Switch
CAS - Close Auxiliary Switch

Wires are identified at each end by terminal number or by number shown.

Q-standard. Allow minimum 2 second delay when control signals are reversed to ensure motor reversal.


*** It is essential that remote control circuits are designed so that an open and close signal can never be applied simultaneously.**

OPTIONAL FEATURES Q-STANDARD

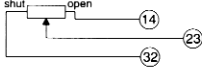Basic		Without pushbuttons	With pushbuttons
Potentiometer only 			
2 intermediate switches 		2S00Q00	2P00Q00
		2S02Q00	2P02Q00
2 intermediate switches and Potentiometer		2S05Q00	2P05Q00
Potentiometer with Current Position Transmitter (CPT)  <p>CPT is externally powered only</p>		2S06Q00	2P06Q00
		2S02Q30	2P02Q30
		2S06Q30	2P06Q30
2 intermediate switches and CPT  <p>CPT is externally powered only</p>		Substitute '3' for '0' in third position on any of the above diagram numbers. e.g. 2S00Q00 becomes 2S30Q00	
12 Watt anti-condensation heater  <p>Heater is externally powered only</p>			

Q-pak basic actuator. Diagram 1P00Q00

Circuit is drawn for a valve in the fully closed position.

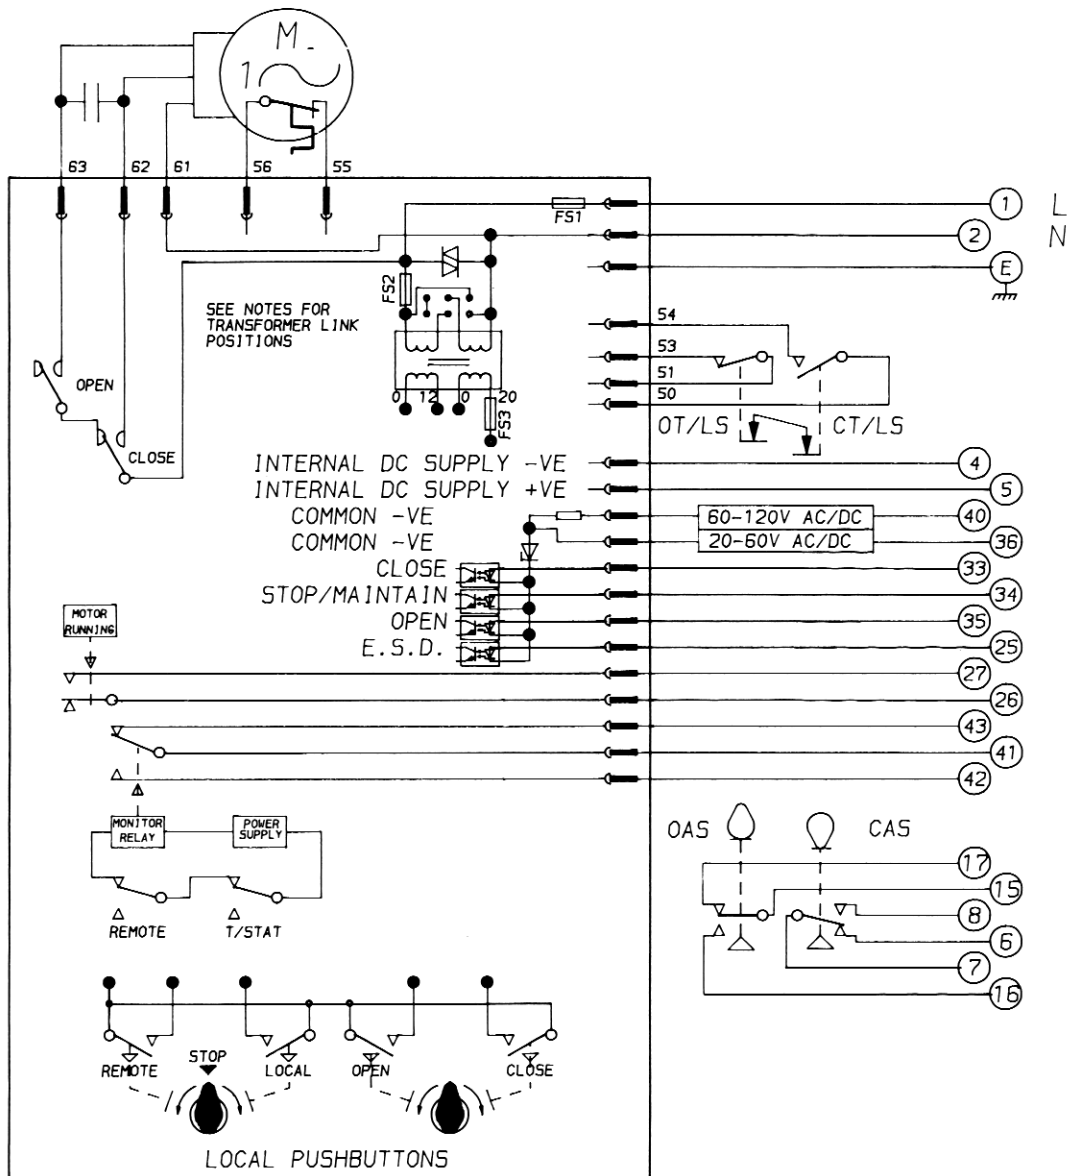

OT/LS - Open Torque/Limit Switch

CT/LS - Close Torque/Limit Switch

OAS - Open Auxiliary Switch

CAS - Close Auxiliary Switch

AS1 & 2 - Intermediate Auxiliary Switches adjustable to make or break at any position.

Wires are identified at each end by terminal number or by number shown.

FS1 - 6.3A
FS2 - 500mA
FS3 - 100mA

Terminals 4 & 5 - fused internally at 100mA

Transformer Links

120V ☐ 240V

120V ☐ 240V







Links shown set for
189V - 264V supplies

120V ☐ 240V

120V ☐ 240V

Links shown set for
99V - 132V supplies

OPTIONAL FEATURES Q-PAK

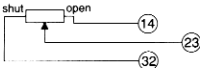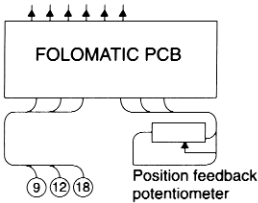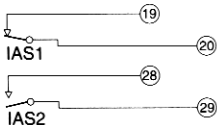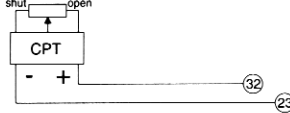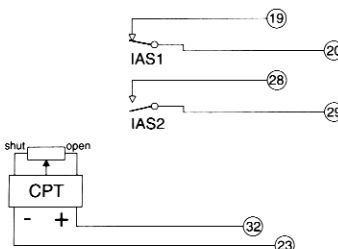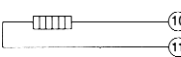Basic	Basic	With Folomatic control		
Potentiometer only				
2 intermediate switches		IP00Q00	—	
2 intermediate switches and Potentiometer		IP02Q00	IP02Q70	
Potentiometer with Current Position Transmitter (CPT)		IP05Q00	—	
		IP06Q00	IP06Q70	
		IP02Q60	IP04Q90	
2 intermediate switches and CPT		IP06Q60	IP03Q90	
12 Watt anti-condensation heater		Substitute '3' for '0' in third position on any of the above diagram numbers. e.g. IP00Q00 becomes IP30Q00		

REMOTE CONTROL CIRCUITS FOR Q-PAK

The 7-switch selector on the PCB enables various different remote control functions to be chosen. Unless specific requirements are stated with the order, actuators will be supplied with all the switches in the 'ON' position giving the functions as shown in the following table.

DIL switch	ON	OFF
1	ESD	No ESD
2	T'stat BP on ESD	No T'stat BP on ESD
3	Maintain in local	No maintain in local
4	Clockwise to close	A'Clockwise to close
5	ESD close	ESD open
6 & 7	Both, close priority	Both, open priority
Otherwise stayput		

The typical remote control circuits shown apply to actuators with switches in the 'ON' positions unless otherwise stated.


All circuits are drawn for valve fully shut.

Internally fed 24V DC circuit

Forms 1a to 1e show typical connections for some of the remote control circuits which can be used with the 24V DC supply available at actuator terminals 4 and 5.


Form 1a

open/close push-to-run control†
(Local control remains self-maintained.
For local control push to run PCB selection:
SW3 -> off)

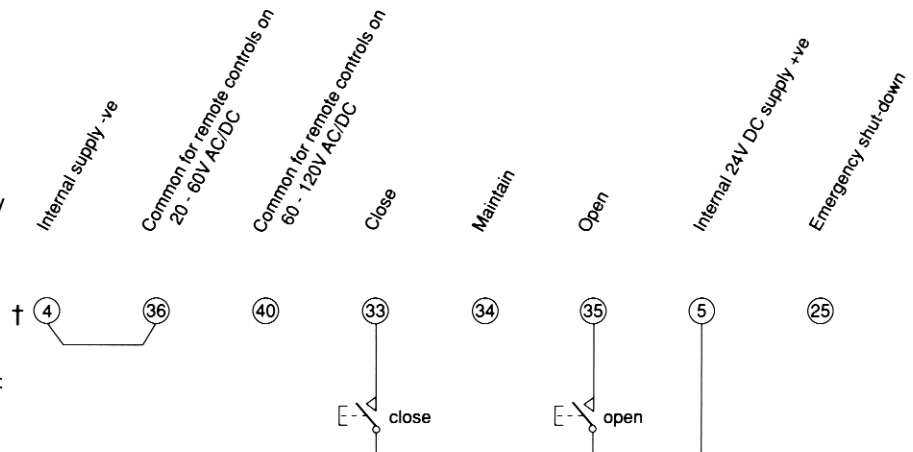


Form 1b

open/close maintained control with mid-travel reversal. Customer to link 5 - 34

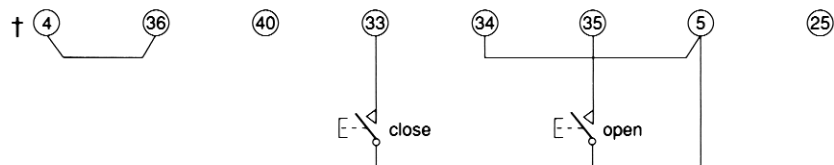


Form 1c

open/stop/close maintained control

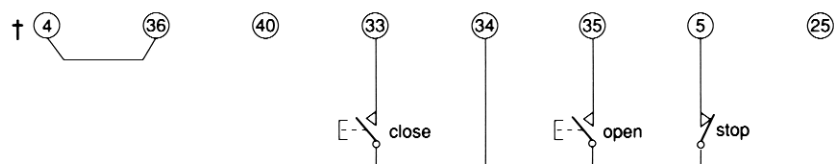


Form 1d

Two-wire control; energise to open, de-energise to close
(PCB selection: SW6 & 7 -> off)
Customer to link 5 - 33

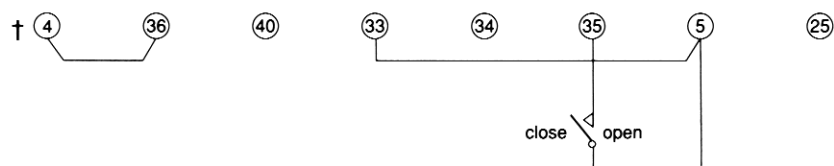

Form 1e

Two-wire control: energize to close, de-energize to open. Customer to link 5 - 35

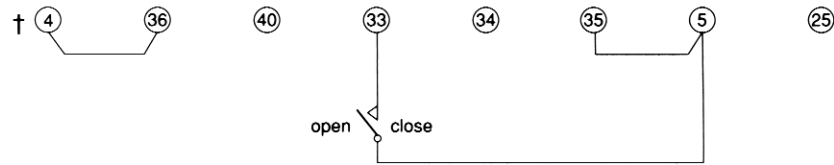

Form 1f

Emergency shut-down overriding any existing signal to close valve. (May be added to any of circuits a to e above).
(For ESD to open PCB selection: SW5 -> off. If thermostat is to be overridden, SW2 -> on)



† Customer to add link 4 - 36

Fig 3


REMOTE CONTROL CIRCUITS cont...

Externally fed circuits

Where the customer prefers to use his own external supply for the remote controls, this can be connected to the actuator as shown typically in the Form 2 circuits, depending on the voltage levels applicable.


Form 2a

open/close push-to-run control (Local control remains self-maintained. For local control push to run PCB selection: SW3-> off)

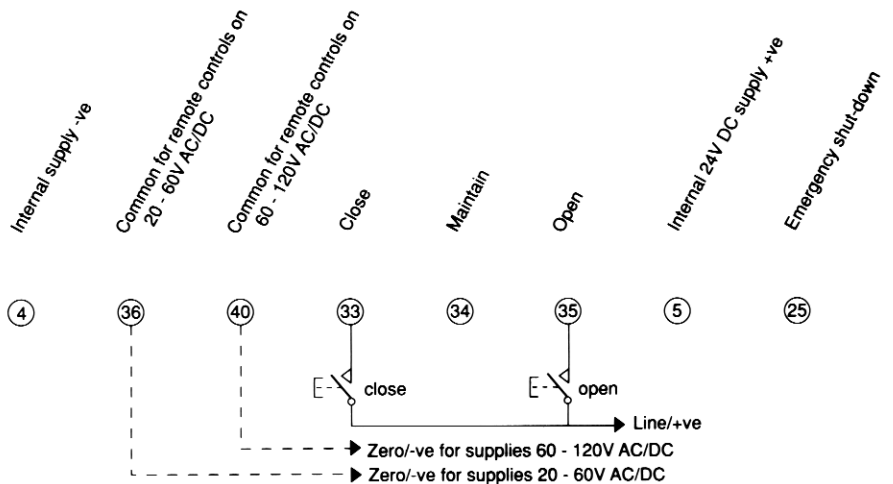


Form 2b

open/close maintained control with mid-travel reversal

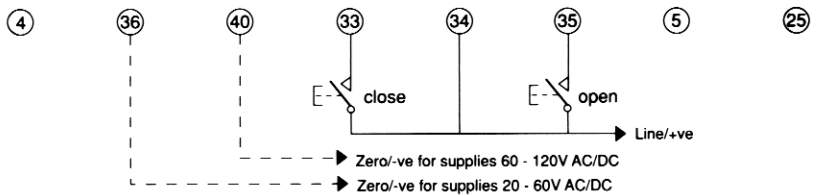


Form 2c

open/stop/close maintained control

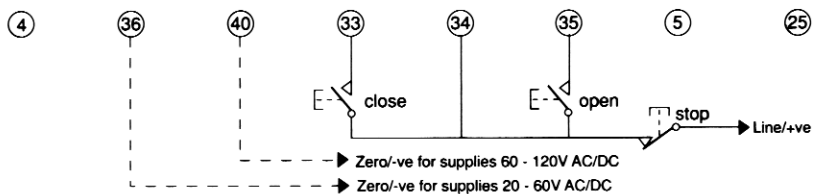


Form 2d

Two-wire control; energise to open, de-energise to close (PCB selection: SW6 & 7 -> off)
Customer to link 4 - 36, 33 - 5

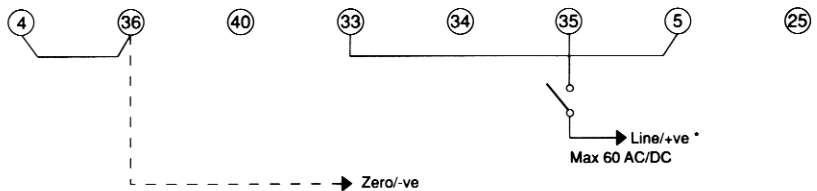

Form 2e

Two-wire control; energise to close, de-energise to open
Customer to link 4 - 36, 35 - 5

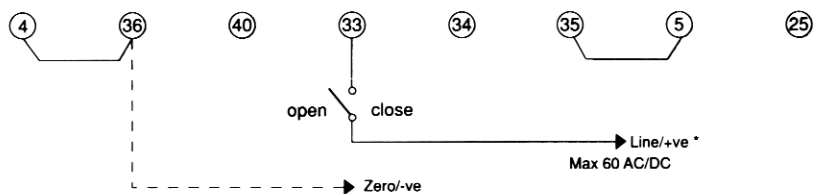

Form 2f

Emergency shut-down to close valve overriding thermostat and any existing signal. (May be added to any of the circuits a to e above).
(For ESD to open; PCB selection: SW5 -> off if thermostat to be overridden. SW2 -> on). Customer to link 4 - 36.

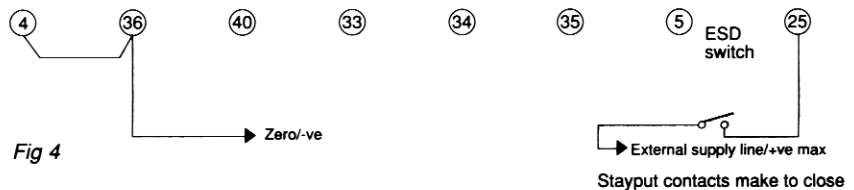



Fig 4

MONITORING CIRCUITS FOR Q-PAK

Monitor relay

The monitor relay will give an alarm on the following: all of which make the actuator not available for remote control:-

 - Loss of power supply
- Motor thermostat tripped
- Local stop selected
- Local/remote selector not in remote



The monitor relay has a change over contact, normally open on terminals 41-42 and one normally closed on terminals 41-43, so that availability for remote control can be monitored.

Motor running and end position indication

The 'motor running' (fig 5), 'exact end position' (fig 6) and 'sequence failure' (fig 7) indication circuits can usually be employed without prejudice to the control facilities or vice versa. However, repeating the motor running relay and auxiliary switches by customers relays or logic circuits when necessary will enable several facilities to be used in combination.

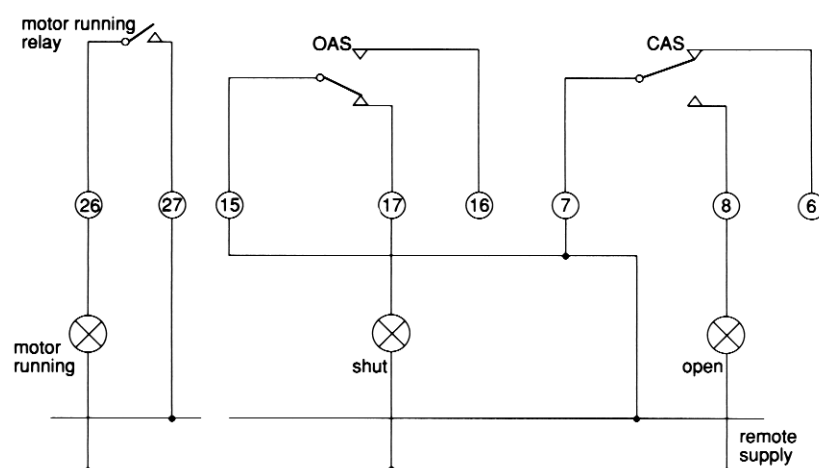


Fig 5
Connections for motor 'running' and approximate end position indication (both lamps illuminated during travel).

Exact end position indication

Particular attention is drawn to the significance of the 'exact end position' indication facility (fig 6) as compared with the normal 'approximate end position' indication (fig 5). When non-maintained push-to-run or incremental control is used, and particularly when derived from a computer, the normal end position indication from an auxiliary limit switch is inadequate. Because it must trip before the valve seats, it will cause premature disconnection of the control signal. Connecting R2 with OAS and CAS gives the required result. With the valve open, for instance, the 'open' lamp will be lit by CAS. Pressing the 'close' button will close R2 which will not affect the indication. Actuator movement will be indicated when OAS resets to 'light' the close lamp. Both lamps will be on during travel and the 'open' lamp will not go out until CAS has been tripped and R2 also drops out. This signifies the disconnection of the relay by its travel limit or torque switch and indicated the exact moment at which the control signal should be removed.

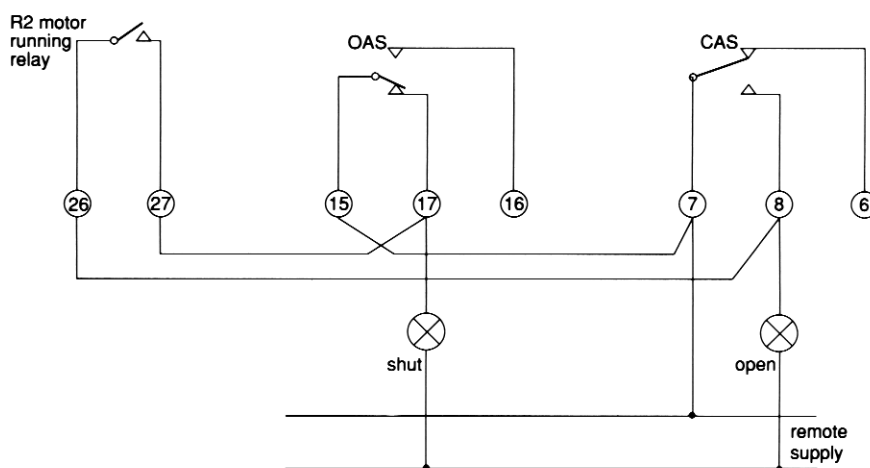


Fig. 6
Exact end position indication (both lamps illuminated during travel). Customer to link 7-15, 8-26, and 17-27.

MONITORING CIRCUITS cont...

Sequence failure alarm

Sequence failure alarm (valve stopped in mid-travel). With automatic sequencing it is important to know if the valve has failed to complete its travel. This may be due to a loss of power supply, loss of control supply, unauthorized local stop or, very rarely, valve obstruction causing torque switch trip in mid-travel. Connecting R2 in parallel with auxiliary limit switches OAS and CAS as shown in fig 7 enables this failure to be detected. An alarm relay normally energized through these contacts will only be de-energized in intermediate position.

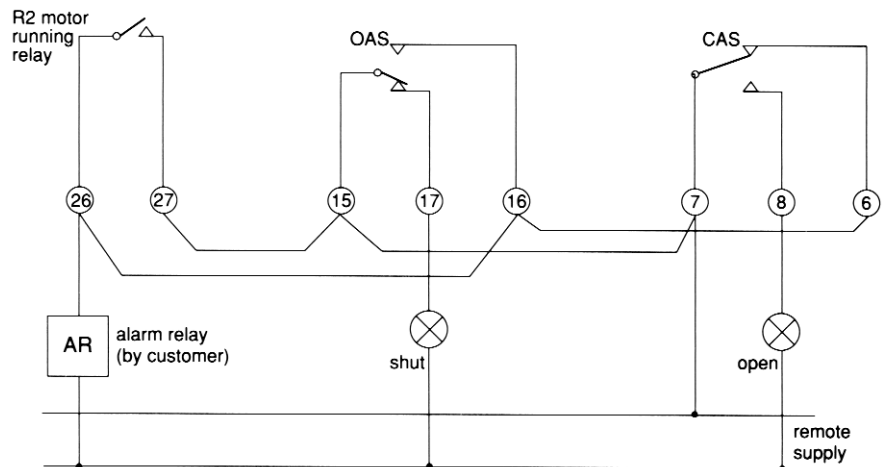


Fig. 7
Connections for 'sequence failure' alarm and approximate end position indication (both lamps illuminated during travel). Customer to link 26-16, 27-15, 15-7 and 16-6.

Potentiometer position transmitter

A potentiometer, gear driven from the actuator output, provides the simplest and most economical method of transmitting an analogue electrical signal for remote valve position indication and may be connected directly to a voltmeter-type position indicating instrument (see section on CPT for Current Signals).

For analogue voltage signal applications, unstabilised AC or DC supplies may normally be used. The indicating instrument should have a full scale deflection with 75% of the nominal supply voltage and be provided with a trimming resistor to cater for the remainder, to compensate for the effects of the line drop and differing potentiometer movements.

Because the potentiometer has to be gear driven from a variable number of valve turns, scale adjustment must be possible to allow for steps of gearing, as well as voltage drops. The scale adjustment should allow for anything between 75% and 100% of full travel of the potentiometer to correspond with 100% valve travel. It is therefore important that full scale deflection of a voltmeter should not be 100% of supply voltage but 75% of it, the trimming resistor catering for the remainder. The trimmer should be located adjacent to the indicator for ease of scale setting; it is not provided as part of the actuator.

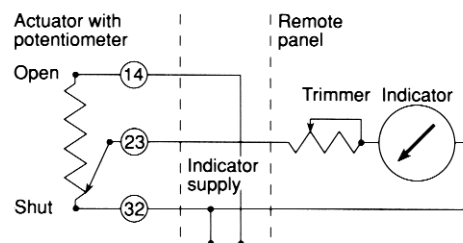


Fig. 8
Standard potentiometer rated at 1 watt with resistance values of 5k or 25k Ohms for a maximum voltage of 50V or 125V respectively.

'Q' RANGE

VALVE ACTUATOR ELECTRICAL SPECIFICATIONS



UK head office
Rotork Controls Limited
telephone Bath 01225 733200
telefax 01225 333467
email mail@rotork.co.uk

USA head office
Rotork Controls Inc
telephone Rochester (585) 328 1550
telefax (585) 328 5848
email info@rotork.com



Rotork Controls Ltd, Bath, UK



Rotork Controls Inc, Rochester, USA

A full listing of our worldwide sales and service network is available on our website at **www.rotork.com**

As part of a process of on-going product development, Rotork reserves the right to amend and change specifications without prior notice.

Published data may be subject to change.

For the very latest version release, visit our website at www.rotork.com

The name Rotork is a registered trademark. Rotork recognizes all registered trademarks. Published and produced in the UK by Rotork Controls Limited.