

## Connections

Bluetooth

Arduino

RX

->

PIN 11

TX

->

PIN 10

GND

->

GND

+5V

->

+5V

EN

->

PIN 9

FIRST UPLOAD THE CODE. AFTER SUCESSFUL UPLOADING OF THE CODE DO ALL THE CONNECTIONS OF BLUETOOTH MODULE EXCEPT +5V CONNECTION.

NOW PRESS THE BUTTON OF THE BLUETOOTH MODULE AND CONNECT THE +5V AT THE SAME TIME.

NOW YOU WILL SE THE RED LIGHT OF THE BLUETOOTH MODULE BLINKING FOR TWO SECOND AND EVERY TWO SECOND.

TIS INDICATES THAT THE BLUETOOTH MODULE HAS ENTERED COMMAND MODE.

NOW RUN THE SERIAL MONITOR AND TYPE THE COMMANDS.....