

USER MANUAL



CTWV2 Window Vacuum

Dear customer,

Congratulations on your purchase of the CTWV2 window vacuum cleaner. Please read the operating instructions carefully before using the window vacuum cleaner. They will help you to efficiently and properly operate the device from the start and to avoid misuse. Please pay special attention to the safety guidelines in these operating instructions. We hope that you are satisfied with your new window vacuum cleaner. Please call us if you have any suggestions regarding our product. The CubeTECH team will be happy to help.

Safety Information

When using an electrical device, basic safety measures should always be observed:

1. Only use this window vacuum cleaner as described in these instructions.
2. Do not store or charge the window vacuum cleaner outdoors.
3. Do not operate the charger with moist or wet hands.
4. Do not insert any objects into the ventilation slots.
5. The window vacuum cleaner is not a toy and should not be used by children.
6. This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Keep the appliance out of the reach of children when it is energised or cooling down. Cleaning and user maintenance should not be undertaken by children without supervision.
7. The window vacuum cleaner should only be charged with the supplied charger.
8. Fully charge the window vacuum cleaner prior to first use (see start-up/charging the battery).
9. Always remove the charger from the socket and window vacuum cleaner after charging.
10. Repairs may only be performed by authorised customer service technicians. Never open the device by yourself. The individual components of the device should not be disassembled, repaired or modified.
11. Unplug the device before cleaning or maintenance. When cleaning, ensure that no liquids make their way into the switches or buttons.
12. The appliance should not be left unattended while it is connected to the mains supply.
13. The appliance should not be used if it has been dropped and there are visible signs of damage or if it is leaking.

ONLY SUITABLE FOR HOUSEHOLD USE!

⚠ Information regarding the battery

1. Short circuit hazard! Do not insert conductive objects (such as screwdrivers or similar) into the charger plug.
2. You may recharge the battery using only the original charger provided with the appliance or a charger approved by CubeTECH.
3. The battery must be removed from the appliance before it is scrapped.
4. The appliance must be disconnected from the mains supply when removing the battery.
5. The battery must be disposed of safely.

⚠ Tips for using the battery charger

1. In case of visual damage, replace the charger and/or charger cable immediately with original parts.
2. Only use and store the charger in dry rooms with ambient temperatures between 5 – 40°C.
3. Never touch the mains plug with wet hands.

 
Information regarding the transport

4. The battery has been tested as per the relevant directives for international transport and can be transported/shipped.

Component Check:

When unpacking please check the product has a complete set of parts and ensure no damage occurred in transit. In case of damage, please contact the retailer or CubeTECH Services.
Content: Window vacuum cleaner (2 parts), Charging cable, Operating manual, Spray Bottle with microfibre cover.

Description:

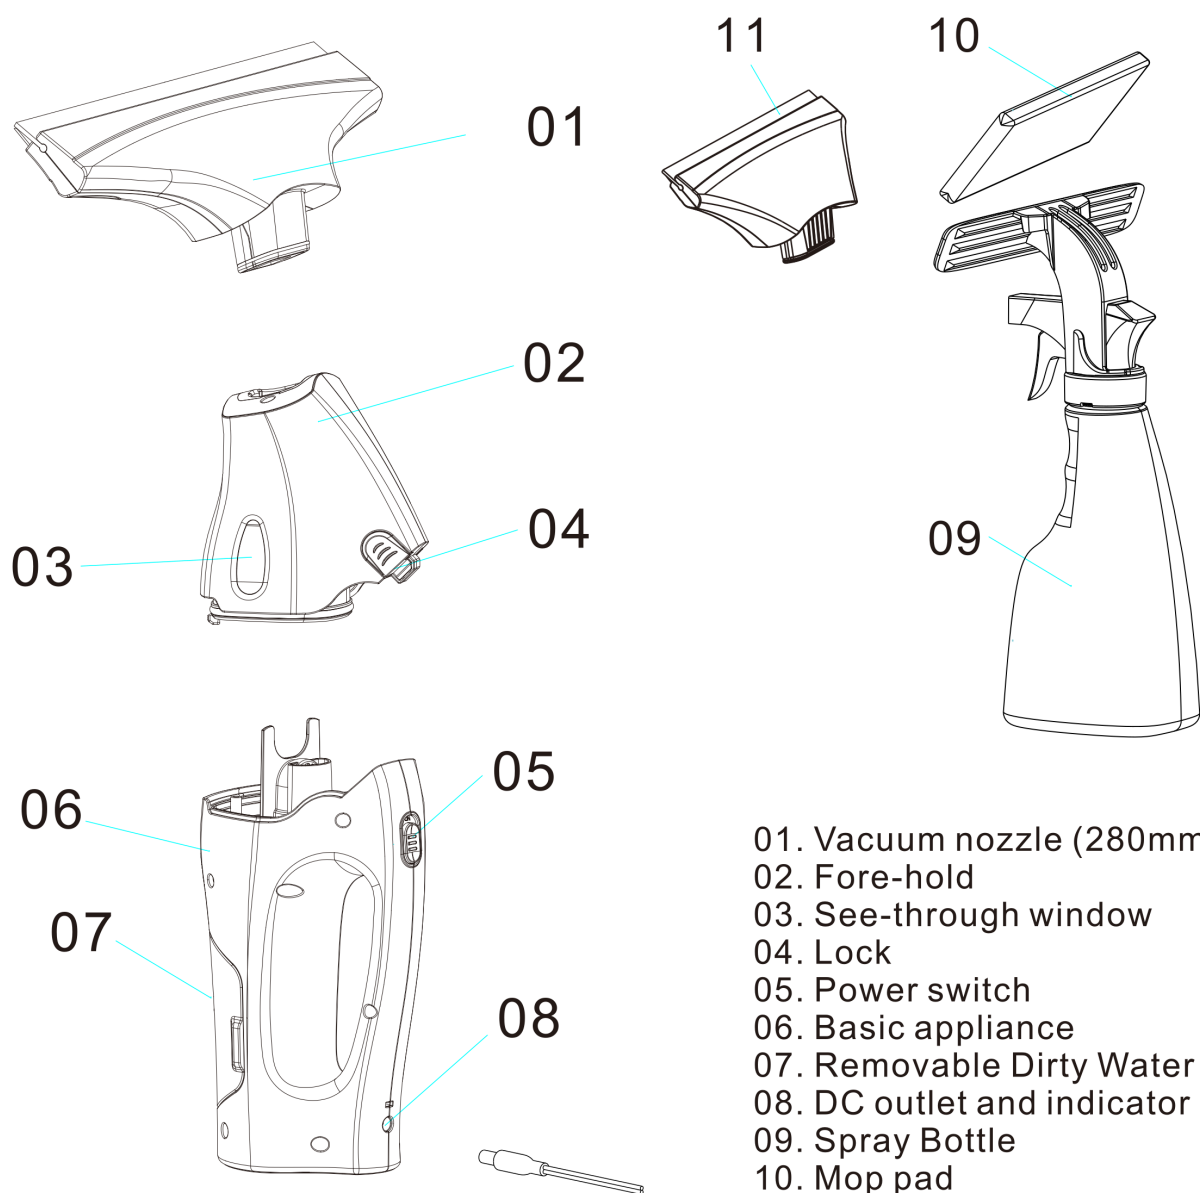

- 01. Vacuum nozzle (280mm)
- 02. Fore-hold
- 03. See-through window
- 04. Lock
- 05. Power switch
- 06. Basic appliance
- 07. Removable Dirty Water Tank
- 08. DC outlet and indicator light
- 09. Spray Bottle
- 10. Mop pad
- 11. Vacuum nozzle (170mm)

Technical Data:

Type of device:	Window Vacuum Cleaner
Volume of direct water reservoir:	120 ml
Operation time of full charging:	>40min
Nominal battery voltage:	3.7V
Rated power of appliance:	12W
Charging current for empty battery:	2.5~3.5 hrs
Output voltage, charger:	5V
Output current, charger:	1A
Sound pressure level:	68 dB(A)
Weight:	770 g
Spray bottle:	350ml
Battery type:	Lithium

All values are approximate.

Use only original window vacuum cleaner rechargeable batteries by CubeTECH

Proper Use:

 
 
 
1. Please note that this product is only intended for household use. CubeTECH does not provide a manufacturer's warranty for commercial use.
2. Only use this device for cleaning wet, smooth surfaces, such as windows, mirrors, and tiles.
3. Avoid sucking in dust and dirt.
4. Do not use the window vacuum cleaner on rough surfaces so as to avoid damage to rubber lip.
5. The device is not suited to vacuum more liquids than 180 ml.
6. Only use this device in connection with conventional window cleaning agents (no spirits, no foam cleaner).
7. Only use this device with accessories and spare parts approved by CubeTECH.

Any other use is considered to be improper. The manufacturer is not liable for damages resulting from improper use. The user alone shall bear the risk of improper use..

Assembling the Appliance:

The window vacuum cleaner is not delivered with a fully charged battery. Therefore, please fully charge the battery prior to the first use.

1. Push the functional part (rubber lip and tank) onto the base unit from above, until the connection locks properly.
2. Before charging the device, please make sure that the device is switched off.
3. Plug the charger into a power outlet and plug the charger plug into the power connector.
4. When the power is connected, the charging indicator will flash red.
5. Charging is complete when the indicator turns solid red. The device is ready for use. The first charge takes approximately 3 hours.
6. The battery may only be charged by the adapter supplied by manufacturer.
7. The charger is only to be used in connection with the CTWV2 window vacuum cleaner.
8. Always charge the rechargeable battery after use and always store the device fully charged.
9. After cleaning, please empty the dirty water tank immediately and store it properly.

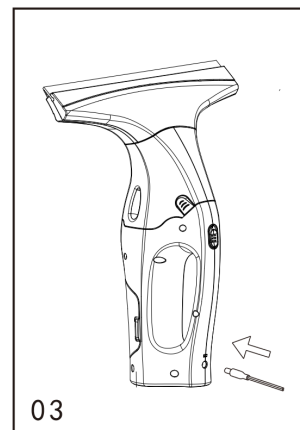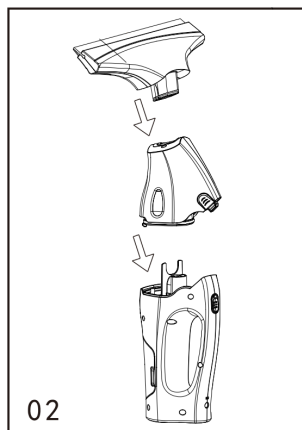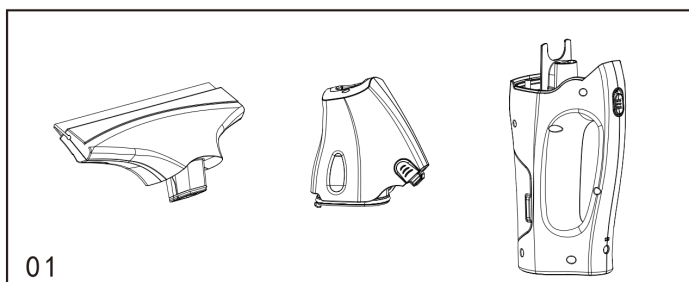

⚠ Danger

Immediate danger that can cause severe injury or even death.

⚠ Warning

Possible hazardous situation that could lead to severe injury or even death.

⚠ Caution

Possible hazardous situation that could lead to mild injury to persons or damage to property.

Operation:

1. Suction clean the surface
 - A. Clean the window as usual with water and a cleaning agent.
 - B. Switch the window vacuum on by the main power switch; the indicator light will be off.
 - C. Low power, indicator light keeps flashing 2 flashes.
 - D. No power, indicator light keeps flashing 5 flashes, and device turns off..
2. When the water in the tank reaches the indicated Max Level, pour out the water.

CAUTION: The device unit contains electrical components.

Therefore, do not clean the basic unit under running water.

NOTES: Do not use the window vacuum cleaner on rough surfaces.

Clean the device with damp cloth.

Never submerge the device in water.

If your product does not work properly under normal conditions, please contact your dealer with your proof of purchase.

Finish Up Your Work:

1. Turn off the appliance.
2. Unlock the suction nozzle first and remove it from the separator, then unlock the separator and remove it too.
3. Clean the separator and the suction nozzle under running water (not dishwasher safe).

Caution: The basic appliance contains electrical components. Do not clean this under running water!

4. Remove the dirty water reservoir, rotate the lock and pull out.
5. Empty the reservoir and rinse with clear water. Close the reservoir again.
6. Remove the wiping cover from the spray bottle and rinse it under running water. The wiping cover can also be washed in the washing machine at a temperature of up to 60°C (without the use of fabric softeners).
7. Let the cleaned appliance dry prior to assembly.
8. Charge the battery.

Disposing of Old Device and Battery Pack:

This appliance includes a built-in battery pack; Please remove this battery pack before disposing of the appliance.

Remove battery pack and dispose

1. The appliance may only be opened in order to dispose of the battery pack.

Caution: when opening the appliance avoid short circuits

2. Remove the battery pack and dispose of it properly (at a collection site or the dealer).

Warning: Do not open the battery as there is a risk of electrical shock. Also, escape of caustic vapours.

Do not expose the battery to direct sunlight, heat or fire, as there is a risk of explosion.

Cleaning:

- Clean the device regularly.
- Before cleaning, switch off the device and unplug the window vacuum cleaner from the socket outlet. Never clean this appliance when it is plugged in!
- Do not immerse the device, power cord, plug or parts of the window vacuum cleaner in water!
- Do not allow any water or other liquid to enter the motor housing. Danger to life from electrocution!
- Take a soft dry cloth to clean the device of dust and fluff.
- Keep the ventilation slots on the back of the motor housing free of dust and fluff.
- Do not use detergents, abrasive cleaning powder or polish of any part of the device, as these can damage the surface finish.
- If you do not use the appliance for any length of time you should clean the window vacuum cleaner of excess dust and dirt.

Storage:

Please keep the original appliance packaging to store window vacuum cleaner when not in use. Store the unit in a clean and packaged state in a cool and dry environment.

Notes:

- This device is not suitable for industrial use.
- Never try to open or repair the device by yourself as this will invalidate the guarantee and could also result in damage to property and injury to people. In case of damage please contact your service station. Repairs should be performed by authorised specialists or through our customer service only.

Guarantee:

If problems occur with the device, never open or repair it yourself. Any attempt to open or repair this device by non authorised operators will lead to the loss of the guarantee. Contact the retailer where you purchased the appliance. The guarantee for this device is based on the guarantee instructions. Damages which occur during transport, overloading, natural erosion, non-observance of the user-instructions or improper treatment will be excluded from the guarantee. Technical changes concerning the device are reserved.

