

**kunft.**<sup>®</sup>

instructions manual  
manual de instrucciones  
manual de instruções



**sandwich toaster**

---

is perfectly enough

KSM3139



Dear client,

Thank you for purchasing this product.

The quality of this appliance has been certified by several laboratory tests. This instructions manual is provided to simplify the use of the appliance as well as to guarantee a safe use.

Please read carefully the instructions and safety measures described in this manual.



We sincerely hope you will be satisfied when using your new appliance.

## INDEX

1. SAFETY INSTRUCTIONS.....	4
1.1. Power Supply .....	6
1.2. Power Cord and Other Cables.....	6
1.3. Humidity and Water .....	6
1.4. Cleaning .....	7
1.5. General Precautions .....	7
2. OPERATING INSTRUCTIONS.....	8
2.1. Product Description.....	9
2.2. Using the Product .....	9
2.3. Maintenance .....	10
2.4. Troubleshooting .....	11
3. TECHNICAL SPECIFICATIONS.....	11
4. POST-SALE SERVICE.....	11
5. ENVIRONMENTAL PROTECTION .....	11



## 1. SAFETY INSTRUCTIONS

	WARNING	
	Risk of Electric Shock Do Not Open	
<p><b>Warning:</b> to avoid the risk of electric shock, do not remove the cover.</p> <p>The interior does not contain any parts that can be repaired by the user. Ask for assistance from qualified personnel.</p>		

### Important Warnings

Before using your appliance read these instructions manual carefully and keep it in a safe place as you may need to consult it in the future.

Before turning on your appliance, and to ensure a safe and correct operation, do not use if:

- It has fallen to the ground;
- You notice any evidence of damage;
- Any anomaly occurs during its operation.

To avoid hazards or deterioration of your appliance through incorrect use it is advisable to read these instructions thoroughly.

Your appliance may not be used for other purposes than the ones intended and solely for household use. Any damage resulting from using the appliance outside this scope, any incorrect use, as well as any manual

modifications to the product will not be covered and automatically voids the warranty.

### Assistance

In case of malfunction, take your appliance to a qualified technician for assistance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years

The appliance is not intended to be operated by means of an external timer or separate remote-control system.



If the power cord is damaged, it must be replaced by the manufacturer, its after-sales service or a qualified technician, to avoid any hazard.

These instructions are also available at **[www.suporteworten.pt](http://www.suporteworten.pt)**

## 1.1. Power Supply

Make sure the main voltage is compatible with the appliances. If this is not the case, please consult the Customer Support Service.

## 1.2. Power Cord and Other Cables

Do not tangle the cord or pull it to disconnect the appliance. Also, keep the cord away from warm surfaces.

Never use the appliance if it has a damaged cable or socket.

Take it to the Technical Support Service for replacement.

## 1.3. Humidity and Water

Do not use your appliance in humid places. Do not allow the appliance to become wet under any circumstances as this may be dangerous. To avoid fire hazard or electric shock do not expose your appliance to humidity or water. Furthermore, do not place your appliance under water (e.g. for cleaning).

## 1.4. Cleaning

Before cleaning, be sure to switch off the appliance and remove the plug from the main power supply. Always allow the unit to cool down before cleaning.

To clean the exterior of the product use a dry soft cloth only.

Regarding how to clean surfaces in contact with food, refer to section <Maintenance>

## 1.5. General Precautions


- Please follow the instructions in the user manual which help to properly install and operate this product and enjoy its advanced features. Please keep the instructions for future reference.
- Read all instructions before using the product.
- Maintenance and service operations are only to be carried out by authorized professionals.
- Any damage caused by manual modifications to the product is not covered by the warranty.
- If this product is used for other purposes than the ones originally intended, or if it is not correctly connected, the product may become damaged and the warranty will be voided.



## 2. OPERATING INSTRUCTIONS

- Ensure the mains voltage is compatible with that on the appliance.
- Never handle this appliance with wet or damp hands.
- Unplug the appliance immediately if it gets wet.
- This appliance is not a toy. Do not allow young children or people with disabilities to play with it.
- Never leave this appliance unattended when in use.
- Check the power cord regularly for any damage.
- Under no circumstances immerse this appliance in water or any other liquid.
- Never put it in the dishwasher.
- Do not place this appliance near hot surfaces.
- Do not use any appliance with damaged cables or plugs, or any type of malfunction or damage.
- Always unplug the appliance from the socket before cleaning.
- Always install the appliance in a dry place.
- Do not use accessories not recommended by the manufacturer. These may pose a danger to the user and could damage the appliance.
- Never move the appliance by pulling on the power cord.
- Ensure there is no risk of the power cord becoming somehow trapped.
- Do not wrap the electric power cord around the appliance and do not bend it.
- Ensure the appliance has cooled down before cleaning and storing.
- Ensure the power cord never comes into contact with the hot parts of the appliance.
- Do not touch the hot parts of this appliance to avoid burns.
- Appliance suitable for household use only.
- To disconnect, remove the power cord from the socket.

## 2.1. Product Description

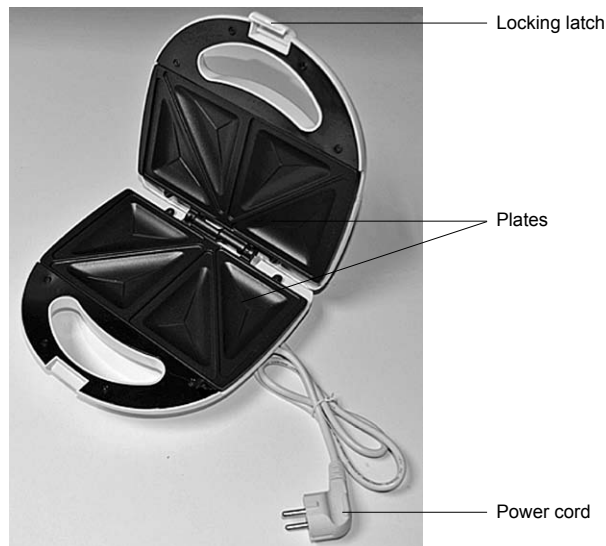

## 2.2. Using the Product

### BEFORE USING THE APPLIANCE FOR THE FIRST TIME

- Wipe the plates with a damp cloth and dry them with a dry, soft cloth.
- When the plates are dry, lightly grease them with butter, margarine or cooking oil.

**NOTE:** This appliance may produce some smoke during first use. This is normal and will disappear with further use.

### USE

- Place the appliance on a flat, stable surface, leaving enough space around it.
- Fully unwind the power cord.
- Plug the appliance to a socket that is in good working condition and earthed to avoid any danger. Ensure the mains voltage is compatible with that on the appliance.
- The pilot light is on and remains on while the appliance is plugged in.



- While the sandwich toaster warms up, prepare the sandwiches to your liking. We suggest you sweep the outer sides of the bread slices with a thin layer of butter.
- As soon as the plates reach the ideal temperature, after about 5 minutes, the heating pilot light turns on.
- Open the sandwich toaster and place the sandwiches, carefully not to burn yourself, in the concavities of the plates (you can put 2 sandwiches at a time).
- Carefully close the sandwich toaster by pressing it slightly until the locking latch blocks.
- During preparation, the heating pilot light turns off and on, indicating that the resistors are turned on and off in order to maintain the correct temperature.
- Open the sandwich toaster 2-3 minutes later to check if the toasts are already golden.

**NOTE:** The toasting time needed to obtain golden toasts depends on the type of bread, the filling and your personal taste.

- When the toasts are ready, remove them carefully to avoid burns.
- Use a plastic or wooden utensil (for example, a spatula) to remove the toasts from the sandwich toaster. Do not use sharp or abrasive metal cookware on this appliance, as these may damage the non-stick coating of the plates.
- Unplug the electric power cord after use and before cleaning or performing maintenance on the appliance.

## 2.3. Maintenance

### CLEANING

- Before cleaning, unplug and wait for the appliance and the plates to cool down.
- Clean the inside with a damp cloth or towel. Dry the inside with a dry, soft cloth.
- Clean the outer surface only with a soft, slightly dampened cloth.
- Do not wipe the inside or outside of the appliance with an abrasive scouring pad or steel wool, as this will damage the coating.
- Never immerse the appliance or the power cord in water or any other liquid.

**NOTE:** All daily maintenance operations must be carried out after disconnecting the appliance from the power supply.

## 2.4. Troubleshooting

Please try the following methods in the event of any unusual situations. If the appliance does not operate normally, please contact your dealer, the shop where you purchased the product or the support service.

Problem	Solution
The appliance does not turn on.	<ol style="list-style-type: none"> <li>1. Check if the appliance is plugged in correctly by removing it from the power socket and reconnecting it.</li> <li>2. Check if the power socket is supplying power.</li> </ol>

## 3. TECHNICAL SPECIFICATIONS

**Model:** KSM3139

Power supply: 220-240 V ~ 50-60 Hz

**Power:** 750 W

## 4. POST-SALE SERVICE

KUNFT has designed this appliance in order to guarantee maximum reliability. However, if a problem occurs do not attempt to open the appliance - there is a risk of electrical shock. If you are not able to solve the problem, please contact the Customer Support Service of any Worten, Modelo or Continente store in order to be assisted. Worten Equipamentos para o Lar provides a 2-year warranty for manufacturing defects from the date of purchase of the appliance.

**WARNING:** Any attempt to repair the appliance without contacting the manufacturer or seller will void the warranty.

All users must be familiar with these instructions. Knowing what could go wrong can help prevent problems from occurring.

## 5. ENVIRONMENTAL PROTECTION



In order to protect the environment we strive to reduce the volume of packaging used, limiting it to three easily sorted materials: cardboard, paper and plastic. The appliance is manufactured using recyclable materials after disassembled by a specialized company. Please comply with local regulations concerning the recycling of all materials.