
CPLD chip download instructions

In order to reduce the failure rate of 50KW and 60KW, all 20-year inverter whose CPLD version is C100 need to be updated to C201 version.



1. Altera USB-bLASTER Drive installation




Connect USB cable of USB-Blaster to PC.




Then select Advanced Install. Select folder "usb-blaster_driver_win7", Click Next.



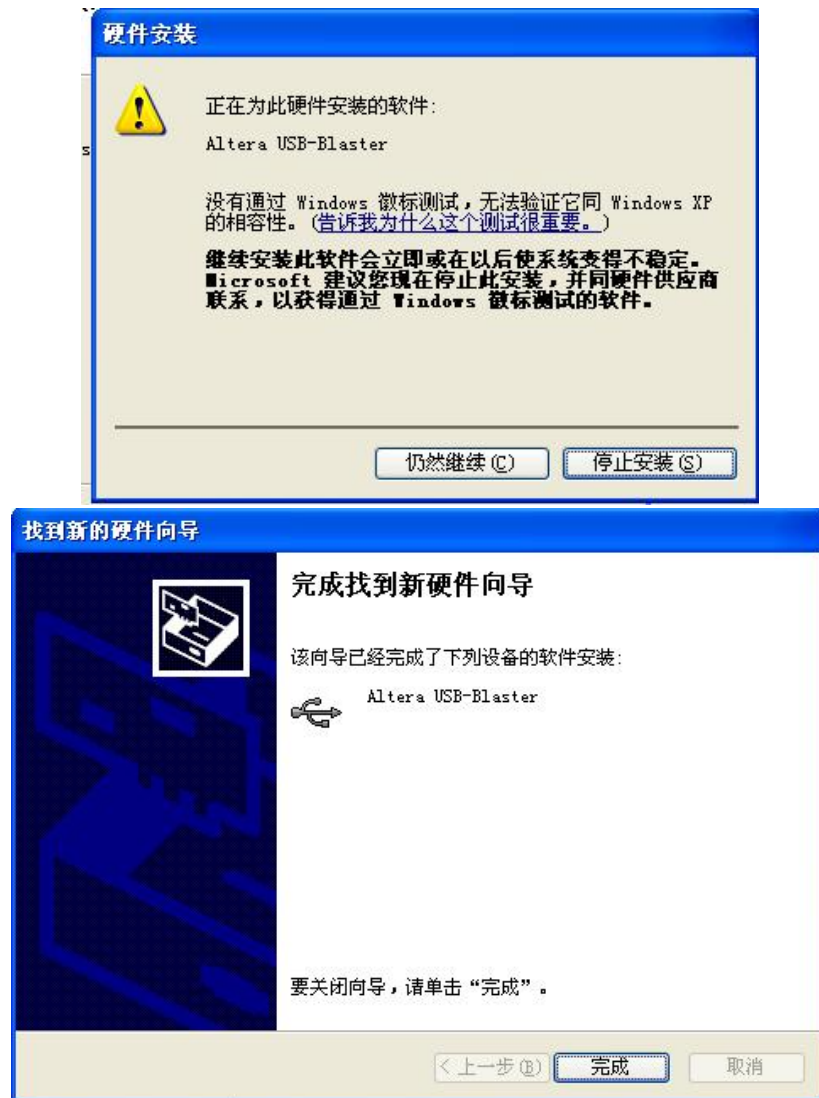


Wait for the installation to complete. This can be seen in the equipment management.

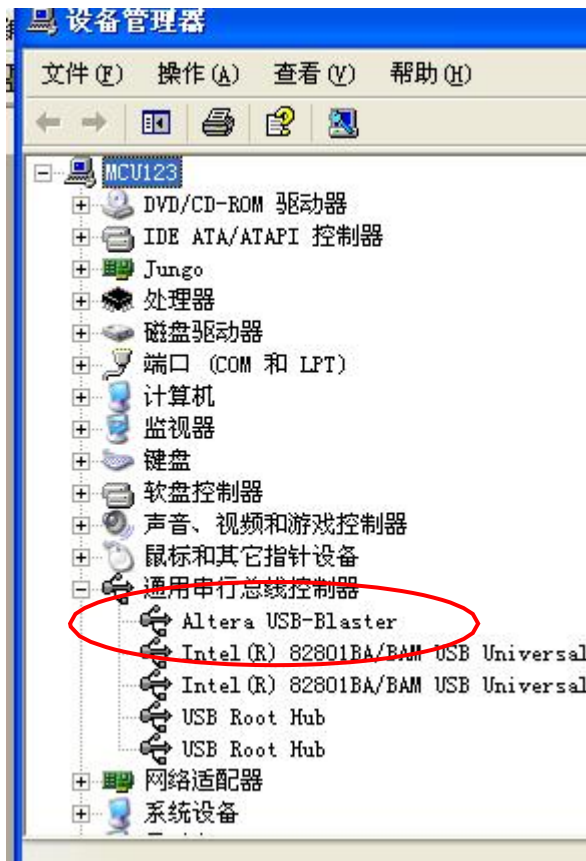


2.Download CPLD program of main control board

1. Turn off the inverter and turn it off. Be sure to turn off the inverter when downloading CPLD program.
2. Connect USB-Blaster to the download port of the main control board;

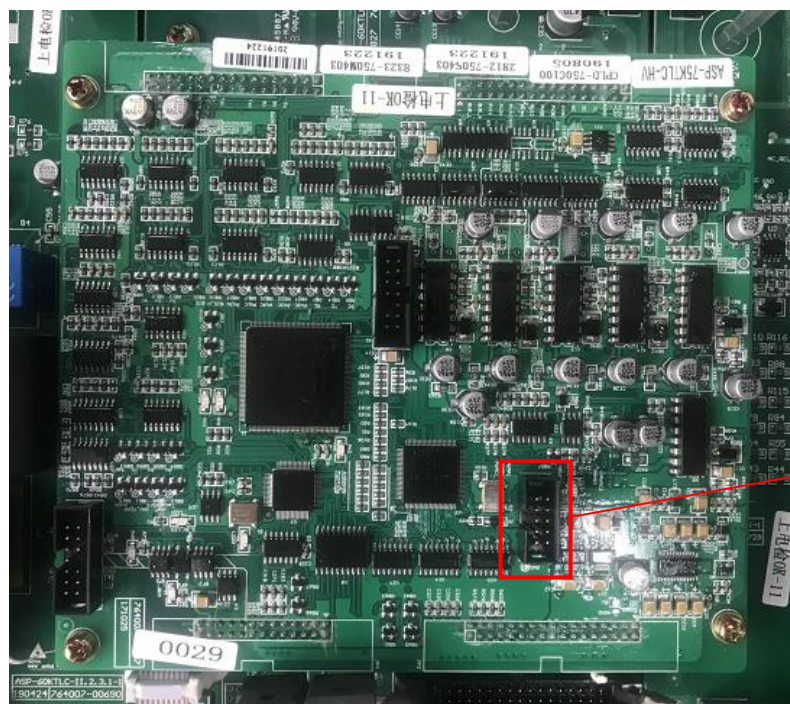

CPLD download port

3. Double click to run **QUARTUS II. Select Tools->Programmer.**

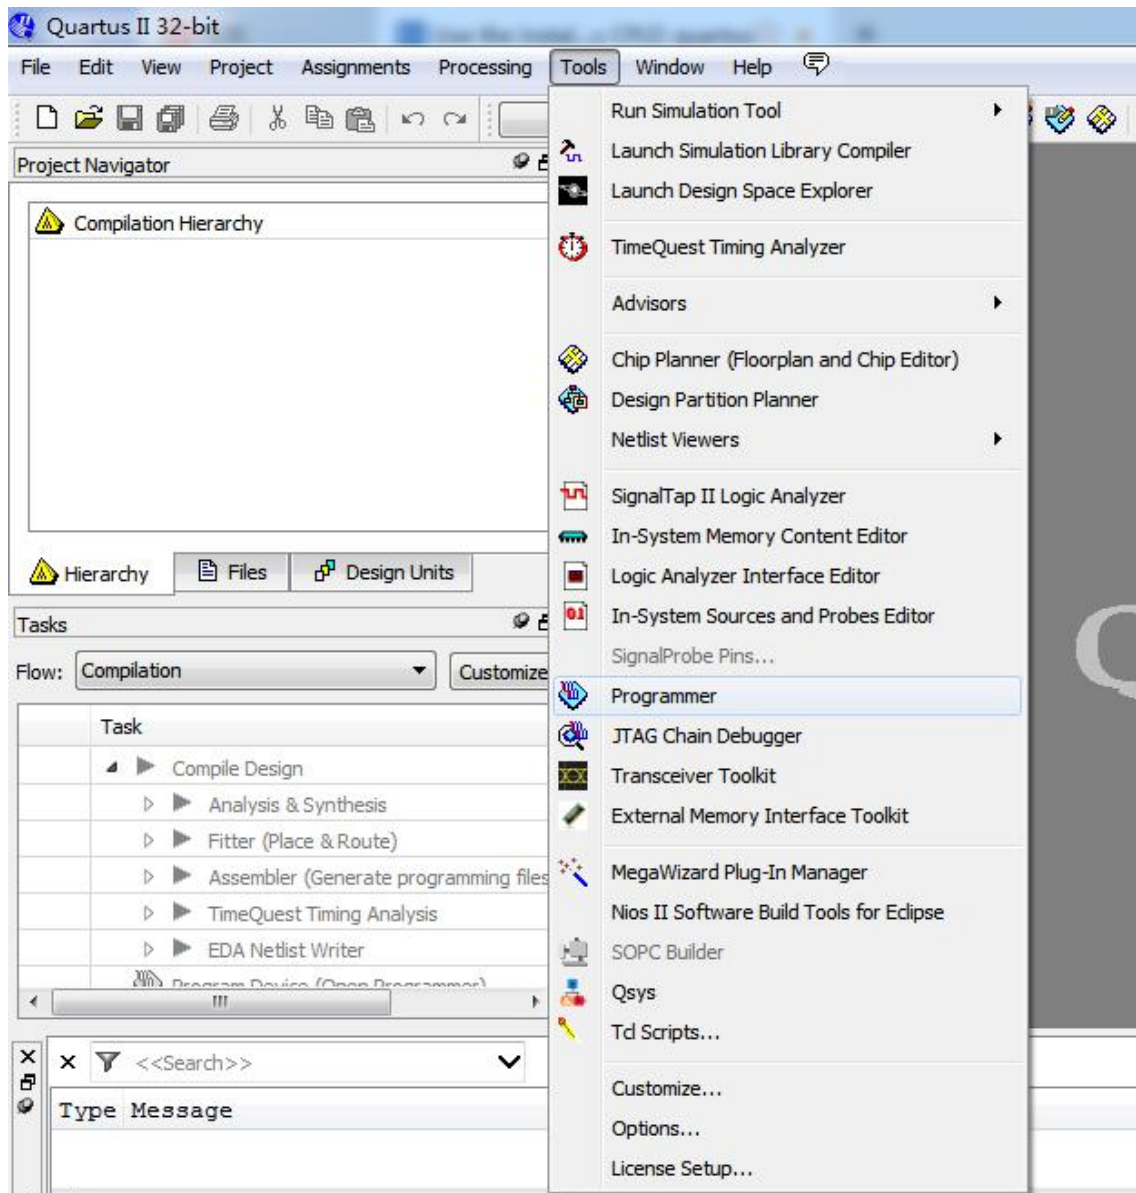

Interface is as follows: Click on **Hardware Setup** , Select the downloader and double-click **USB-Blaster**.

