

# How to run this simulation app

---

Start Matlab.

Change folder to the root directory of runapp.m

Run runapp.m

You may change the initial angle of the pendulum by dragging the slider bar at the top, or type in the initial value in the box beneath the slider and press "Confirm".

Click "Start Simulation" button to start the simulation. The button will be pressed down and its text changes to "Press to Pause". Press the same button again to pause the simulation.

Click "Reset Cart" to stop the simulation and reset the cart to the default state.

By default, the proportional controller is disabled, the system is in "Free Fall" mode.

Select the radio button "PD Controller" in the "Control Mode" block to enable proportional controller.

The default gains of the PD Controller is a stabilizing controller for small deviation from the equilibrium point.

You may type in or click on the up/down button to change the gain for each of the controller gain.

You may click "Reset Gains" button to reset the gains to the default stabilizing controller.