
Author(s) Ds
Restrictions Public Document - no restrictions - suitable for web and publication
Abstract This application note describes the integration of the automatic detection of MAP file names into the Vector XCP driver.

Revision history

Version	Author	Description
1.0	Ds	Documentation started

Table of Contents

1.0	Overview	2
1.1	Configuring the XCP Driver	3
1.2	Writing the Interface Function for the automatic detection	4
2.0	Enabling the automatic detection of the MAP file name in CANape	7
3.0	Automatic detection sequence	10
4.0	Contacts	11

1.0 Overview

With the help of a MAP file, CANape can automatically update the addresses of calibration and measurement objects in the A2L file. The advantage of retrieving its file name from the ECU is to avoid working with the wrong MAP file, or loading the files in the wrong order.

The aim of this document is to demonstrate the integration of the automatic detection of MAP file names into the Vector XCP driver. This is done by giving detailed information as well as a step by step instruction which shows how to integrate the functionality into the XCP driver of a simulated ECU.

An example with source code is part of the XCPsim project of the XCP_BASIC_DRIVER package. It is contained in the subdirectory ".Samples\XCPsim" of the installation directory of this package.

Note: The screen shots in this application note are from CANape V9.0.

The Vector XCP driver is delivered with four files:

xcpProf.c	: Vector XCP driver source code
xcpProf.h	: Header file of the Vector XCP driver
xcp_cfg.h	: File to configure the Vector XCP driver
xcp_par.h	: File to configure the Vector XCP driver

The free XCP driver is delivered with the following three files:

xcpBasic.c	: Vector basic XCP driver source code
xcpBasic.h	: Header file of the Vector basic XCP driver
xcp_cfg.h	: File to configure the Vector basic XCP driver
xcp_par.h	: File to configure the Vector basic XCP driver

The Vector XCP driver is configured by editing the *xcp_cfg.h* file, which contains the definition for the automatic detection of MAP file names.

1.1 Configuring the XCP Driver

The *xcp_cfg.h* file is responsible for the configuration of the Vector XCP driver and must be adjusted manually for the specific ECU.

First of all, the option must be enabled. For the basic XCP driver implementation, this is done by editing the 'XCP_ENABLE_VECTOR_MAPNAMES' 'define' statement in the *xcp_cfg.h* file:

```
...
/*-----*/
/* XCP parameters */
/* Enable the automatic detection of MAP names */

#define XCP_ENABLE_VECTOR_MAPNAMES /* e.g. xcpsim.map*/
```

1.2 Writing the Interface Function for the automatic detection

The function 'ApplXcpGetIdData' is implemented in the *xcpsim.c* file and is called by the xcp driver. It is responsible for building the character array containing the MAP format, the counter and the MAP file name. Additionally, it calculates the size of this array and the number of bytes which need to be uploaded by CANape.

In the following an excerpt from the delivered *xcpsim.c* file is shown:

```
// -----
// ApplXcpGetIdData()
// Callback for xcpProf.c or xcpBasic.c
// -----
#define MAP_FORMAT 29
#define MAP_NAME "xcpsim"

unsigned char MapTest[500];
unsigned int MapTestSize;

vuint32 ApplXcpGetIdData( vuint8 **pData) {

    MapTestSize = sprintf((char*)MapTest,"%c%c%s.map",MAP_FORMAT,0,MAP_NAME);
    // Result: MapTest = "290xcpsim.map\0"

    *pData = MapTest;

    return MapTestSize;
}
// -----
```

'MAP_FORMAT' represents the format of the MAP file. (See the table below).

'0' is the counter which is used by the master in the following communication sequence as address extension to define the corresponding memory address in the ECU. The range of the counter is from zero to 255. (See the 'SHORT_UPLOAD' example).

'MAP_NAME' is the name of the MAP file including the MAP extension and '\0' which marks the end of the block.

For example:

'290xcpsim.map\0': MAP_FORMAT = 29 → 'Microsoft standard'; Counter = 0; MAP_NAME = XCPSIM.MAP\0

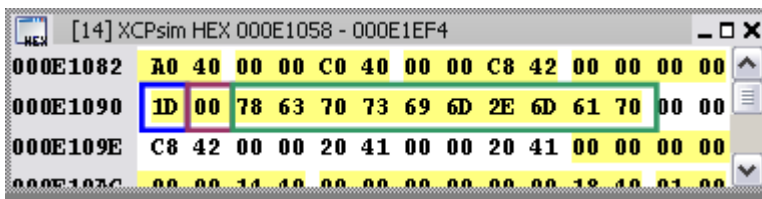


Table of MAP file formats:


1 = "BorlandC 16 Bit"	29 = "Microsoft standard"
2 = "M166"	30 = "ELF/DWARF 16 Bit"
3 = "Watcom"	31 = "ELF/DWARF 32 Bit"
4 = "HiTech HC05"	32 = "Fujitsu Softune 3..8(.mps)"
6 = "IEEE"	33 = "Microware Hawk"
7 = "Cosmic"	34 = "TI C6711"
8 = "SDS"	35 = "Hitachi H8S"
9 = "Fujitsu Softune 1(.mpl)"	36 = "IAR HC12"
10 = "GNU"	37 = "Greenhill Multi 2000"
11 = "Keil 16x"	38 = "LN308(MITSUBISHI) for M16C/80"
12 = "BorlandC 32 Bit"	39 = "COFF settings auto detected"
13 = "Keil 16x (static)"	40 = "NEC CC78K/0 v35"
14 = "Keil 8051"	41 = "Microsoft extended"
15 = "ISI"	42 = "ICCAVR"
16 = "Hiware HC12"	43 = "Omf96 (.m96)"
17 = "TI TMS470"	44 = "COFF/DWARF"
18 = "Archimedes"	45 = "OMF96 Binary (Tasking C196)"
19 = "COFF"	46 = "OMF166 Binary (Keil C166)"
20 = "IAR"	47 = "Microware Hawk Plug&Play ASCII"
21 = "VisualDSP"	48 = "UBROF Binary (IAR)"
22 = "GNU 16x"	49 = "Renesas M32R/M32192 ASCII"
23 = "GNU VxWorks"	50 = "OMF251 Binary (Keil C251)"
24 = "GNU 68k"	51 = "Microsoft standard VC8"
25 = "DiabData"	52 = "Microsoft VC8 Release Build (MATLAB DLL)"
26 = "VisualDSP DOS"	53 = "Microsoft VC8 Debug Build (MATLAB DLL)"
27 = "HEW SH7055"	54 = "Microsoft VC8 Debug file (pdb)"
28 = "Metrowerks"	

Example for the usage of the MAP counter: SHORT_UPLOAD from slave to master

Category Standard, optional
Mnemonic SHORT_UPLOAD

Position	Type	Description
0	BYTE	Command Code = 0xF4
1	BYTE	Number of data elements [AG] [1..MAX_CTO-1]
2	BYTE	Reserved
3	BYTE	Address extension
4..7	DWORD	Address

A data block of the specified length, starting at the specified address will be returned. The MTA pointer is set to the first data byte behind the uploaded data block.

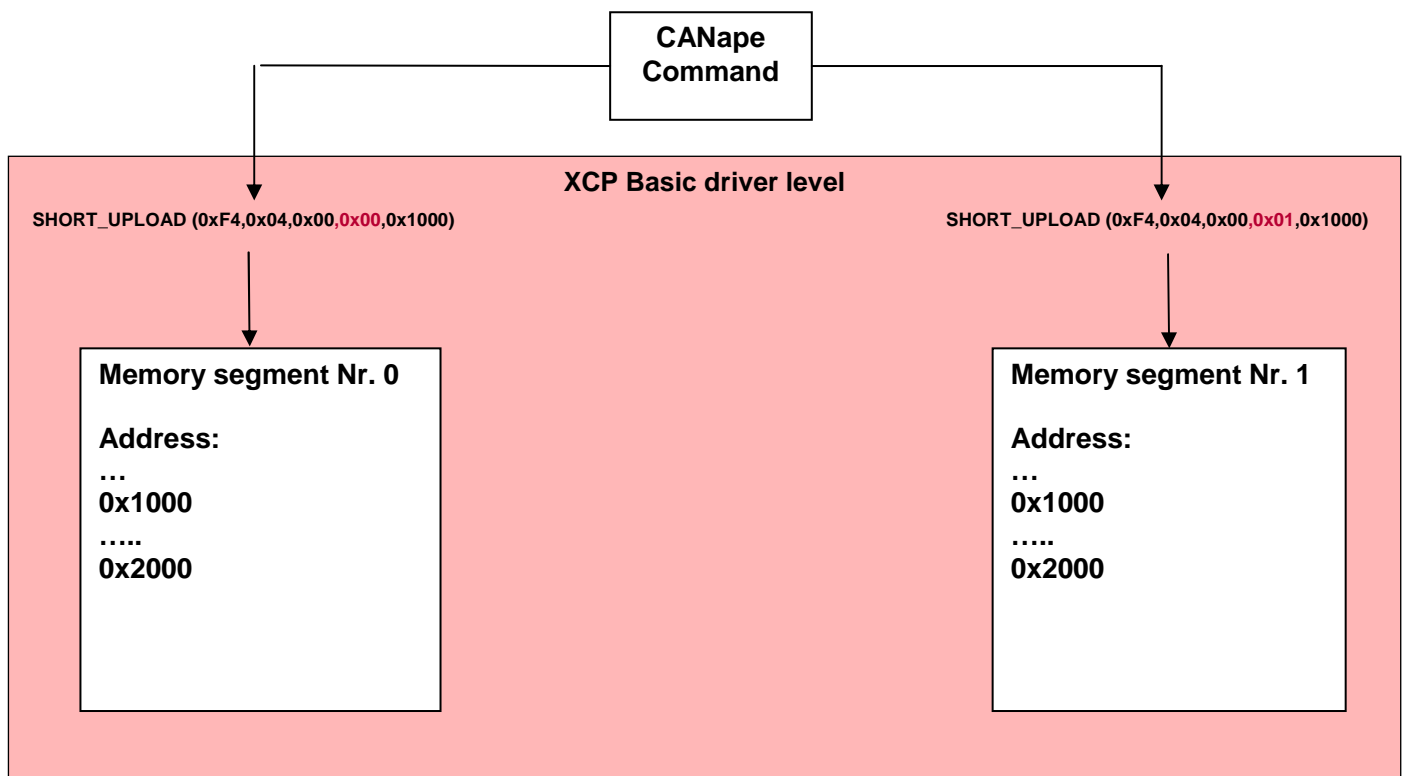


The command can have the same address and byte length but it must have a different address extension – the MAP counter - (red) to identify the appropriate memory block in the ECU.


2.0 Enabling the automatic detection of the MAP file name in CANape

The automatic detection of the MAP file name needs to be activated in the 'Device settings' dialog of the ECU:


- Load the CANape project
- Select 'Device' | 'Device configuration...' in the main menu
- Select the device in the tree on the left-hand side and push the 'Edit' button

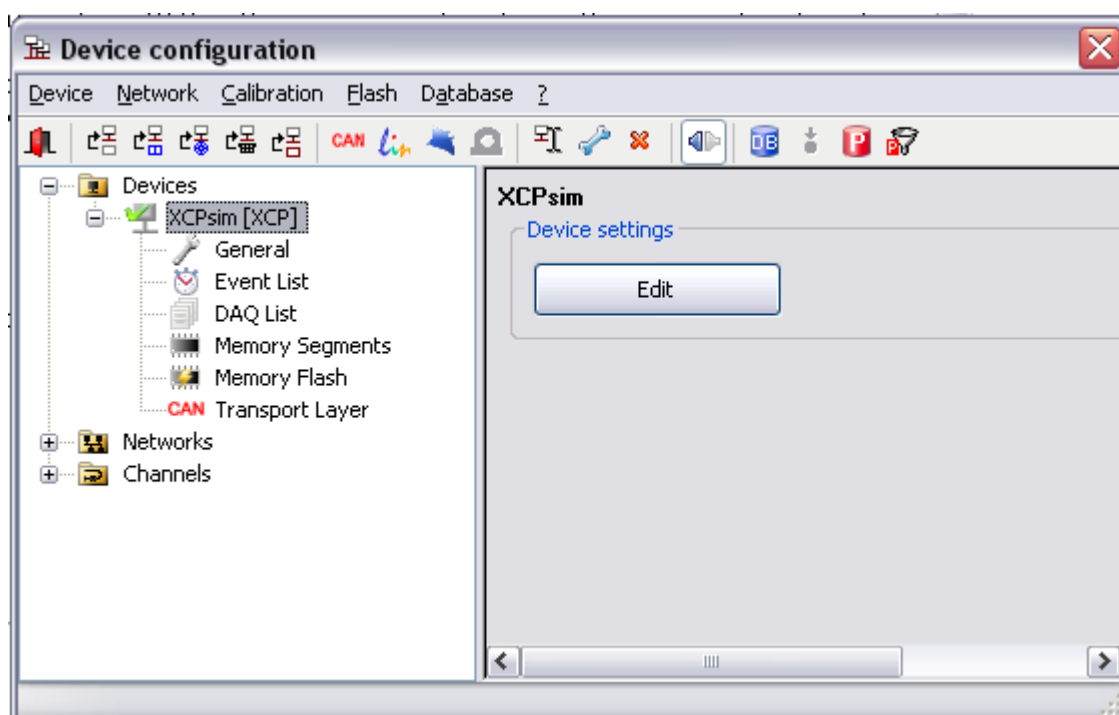

The settings dialog of the device opens up:

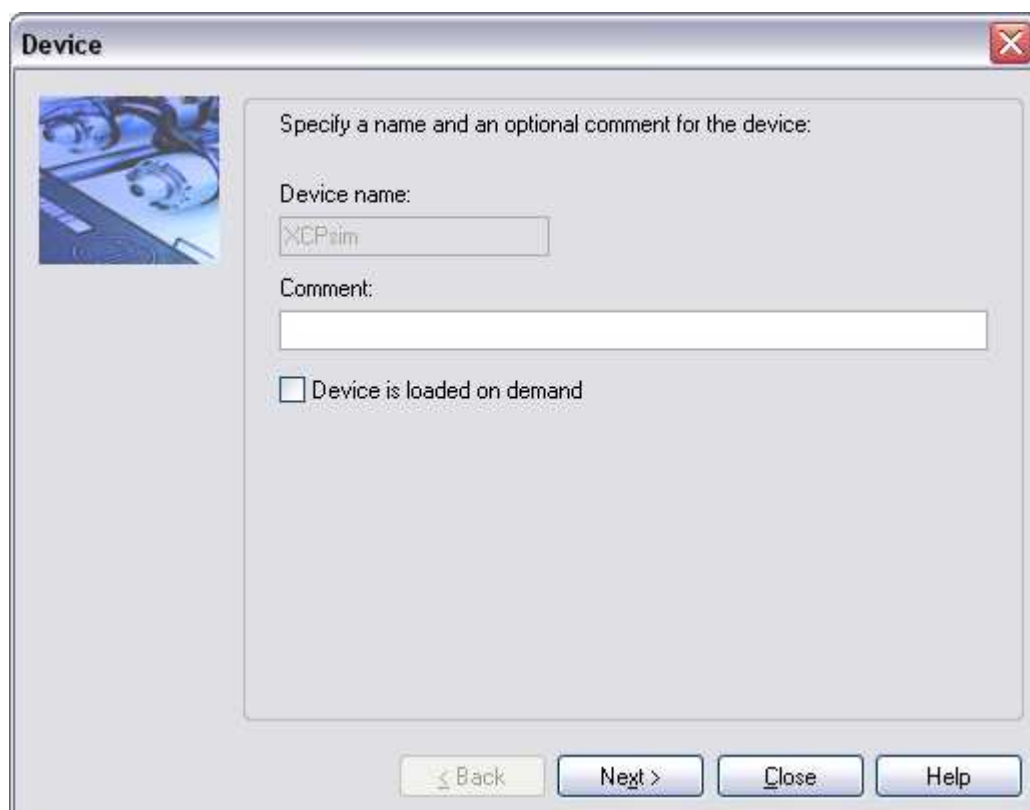

After three clicks on the 'Next' button, the following dialog box appears:

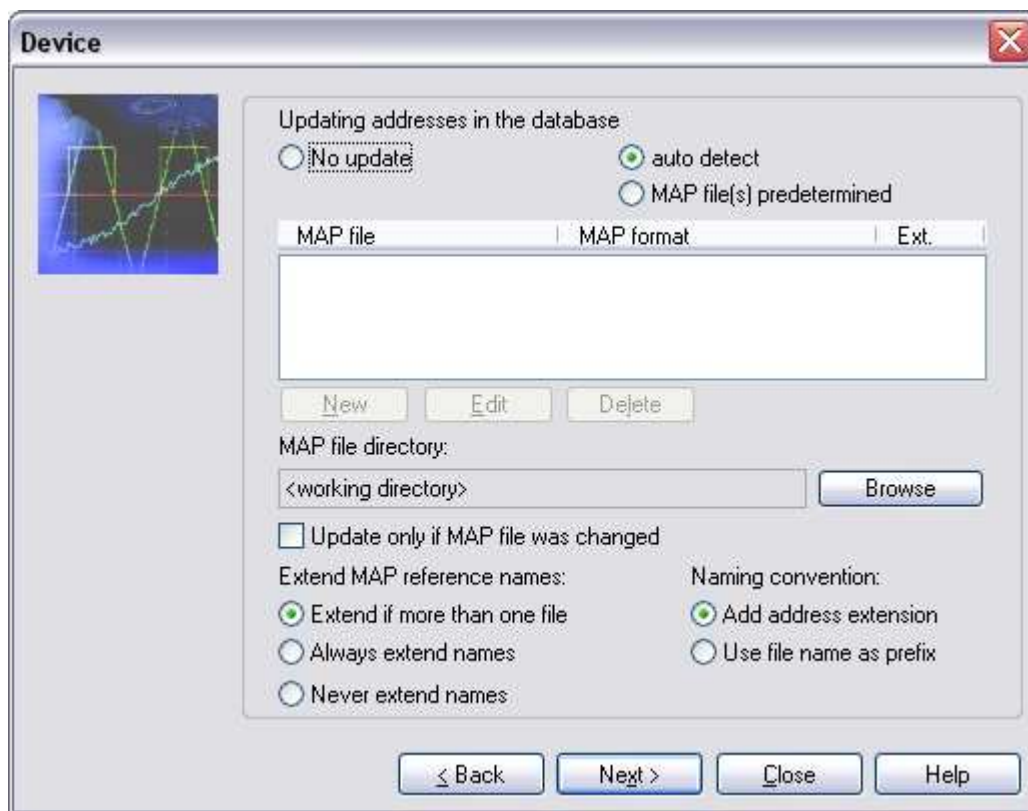

Select 'auto detect'.

If this setting is active, CANape sends the following automatic detection sequence to the ECU when the connection is established, in order to retrieve the MAP file name from the ECU.

3.0 Automatic detection sequence

- The master (CANape) sends the command GET_ID with the idType = 219 (0xDB hex) to the ECU
- The ECU sets the MTA (memory transfer address) pointer to the first byte of the data block containing the MAP file identification and returns the number of bytes which need to be uploaded to the master as well as the counter which defines the appropriate memory segment
- The master requests the specified number of bytes from the ECU by sending UPLOAD commands
- The master looks for the appropriate MAP file in the MAP file directory and updates the addresses in the a2l file accordingly

Command sequence GET_ID

Id of the MAP format

Counter

MAP name

Time	Name	Dir	Len	Data	Command
9:43:23.031146	CMD	Tx	2	F5 06	UPLOAD size=6
9:43:23.031617	RES	Rx	7	FF 58 43 50 53 49 4D	Ok:UPLOAD data=58h
9:43:23.031634	CMD	Tx	2	FA DB	GET_ID idType=219
requested id type = user defined					
9:43:23.031797	RES	Rx	8	FF 00 43 50 0C 00 00 00	Ok:GET_ID mode=0 length=12
mode = 0					
length = 12 bytes					
upload id from MTA					
9:43:23.031808	CMD	Tx	2	F5 07	UPLOAD size=7
number of data elements to upload = 7					
9:43:23.032177	RES	Rx	8	FF 1D 00 78 63 70 73 69	Ok:UPLOAD data=1Dh
data [HEX]: = 1D 00 78 63 70 73 69					
9:43:23.032187	CMD	Tx	2	F5 05	UPLOAD size=5
number of data elements to upload = 5					
9:43:23.032538	RES	Rx	6	FF 6D 2E 6D 61 70	Ok:UPLOAD data=6Dh
data [HEX]: = 6D 2E 6D 61 70					
9:43:23.033242	CMD	Tx	8	F6 00 00 00 24 50 4B 00	SET_MTA addrest=0 addr=004B5024h
9:43:23.03341	RES	Rx	1	FF	Ok:SET_MTA
9:43:23.033418	CMD	Tx	2	F5 07	UPLOAD size=7
9:43:23.033721	RES	Rx	8	FF AA AA 01 02 44 65 66	Ok:UPLOAD data=AAh
9:43:23.033726	CMD	Tx	2	F5 07	UPLOAD size=7
9:43:23.034002	RES	Rx	8	FF 61 75 6C 74 00 00 00	Ok:UPLOAD data=61h

4.0 Contacts

Vector Informatik GmbH

Ingersheimer Straße 24
70499 Stuttgart
Germany
Tel.: +49 711-80670-0
Fax: +49 711-80670-111
Email: info@vector.com

Vector France SAS

168 Boulevard Camélinat
92240 Malakoff
France
Tel: +33 (0)1 42 31 40 00
Fax: +33 (0)1 42 31 40 09
Email: information@vector-france.fr

Vector CANtech, Inc.

39500 Orchard Hill Pl., Ste 550
Novi, MI 48375
USA
Tel: +1-248-449-9290
Fax: +1-248-449-9704
Email: info@vector-cantech.com

Vector Japan Co. Ltd.

Seafort Square Center Bld. 18F
2-3-12, Higashi-shinagawa,
Shinagawa-ku
J-140-0002 Tokyo
Tel.: +81 3 5769 6970
Fax: +81 3 5769 6975
Email: info@vector-japan.co.jp

VecScan AB

Lindholmspiren 5
402 78 Göteborg
Sweden
Tel: +46 (0)31 764 76 00
Fax: +46 (0)31 764 76 19
Email: info@vecscan.com
