

XCP

Version 1.1

Part 2 - Protocol Layer Specification

Part 2 – Protocol Layer Specification



**Association for Standardisation of
Automation and Measuring Systems**

**Dated: 31-03-2008
© ASAM e. V.**

Status of Document

Date:	31-03-2008
Author:	Roel Schuermans, Vector Informatik GmbH Andreas Zeiser, Vector Informatik GmbH Oliver Kitt, Vector Informatik GmbH Hans-Georg Kunz, VDO Automotive AG Hendirk Amsbeck, dSPACE GmbH Bastian Kellers, dSPACE GmbH Boris Ruoff, ETAS GmbH Reiner Motz, Robert Bosch GmbH Dirk Forwick, Robert Bosch GmbH
Version:	Version 1.1
Doc-ID:	
Status:	Release
Type	

Disclaimer of Warranty

Although this document was created with the utmost care it cannot be guaranteed that it is completely free of errors or inconsistencies.

ASAM e. V. makes no representations or warranties with respect to the contents or use of this documentation, and specifically disclaims any expressed or implied warranties of merchantability or fitness for any particular purpose. Neither ASAM nor the author(s) therefore accept any liability for damages or other consequences that arise from the use of this document.

ASAM e. V. reserves the right to revise this publication and to make changes to its content, at any time, without obligation to notify any person or entity of such revisions or changes.

Revision History

This revision history shows only major modifications between release versions.

Date	Author	Filename	Comments
2008-03-31	R.Schuermans		Released document

Table of contents

0	Introduction	11
0.1	The XCP Protocol Family	11
0.2	Documentation Overview	12
0.3	Definitions and Abbreviations	13
0.4	Mapping between XCP Data Types and ASAM Data Types	14
1	The XCP Protocol Layer	15
1.1	The XCP Packet	15
1.1.1	The XCP Packet Types	15
1.1.2	The XCP Packet Format	17
1.1.2.1	The Identification Field	18
1.1.2.2	The Timestamp Field	23
1.1.2.3	The Data Field	25
1.1.3	The CTO Packets	26
1.1.3.1	Command Packet (CMD)	26
1.1.3.2	Command Response packet (RES)	26
1.1.3.3	Error packet (ERR)	27
1.1.3.4	Event packet (EV)	27
1.1.3.5	Service Request packet (SERV)	27
1.1.4	The DTO Packets	28
1.1.4.1	Data Acquisition Packet (DAQ)	28
1.1.4.2	Synchronous Data Stimulation Packet (STIM)	28
1.1.5	The XCP Packet Identifiers	29
1.1.5.1	Master → Slave	29
1.1.5.2	Slave → Master	29
1.2	Table of Event codes (EV)	30
1.3	Table of Service Request codes (SERV)	31
1.4	Table of Command codes (CMD)	32
1.4.1	Standard commands (STD)	33
1.4.2	Calibration commands (CAL)	34
1.4.3	Page switching commands (PAG)	35
1.4.4	Data Acquisition and Stimulation commands (DAQ)	36
1.4.5	Non-volatile memory programming commands (PGM)	37
1.5	Table of bit mask coded parameters	38
1.6	Description of Commands	48
1.6.1	Standard commands (STD)	49
1.6.1.1	Mandatory commands	49

1.6.1.1.1	Set up connection with slave	49
1.6.1.1.2	Disconnect from slave	52
1.6.1.1.3	Get current session status from slave	53
1.6.1.1.4	Synchronize command execution after time-out	55
1.6.1.2	Optional commands	56
1.6.1.2.1	Get communication mode info	56
1.6.1.2.2	Get identification from slave	58
1.6.1.2.3	Request to save to non-volatile memory	60
1.6.1.2.4	Get seed for unlocking a protected resource	62
1.6.1.2.5	Send key for unlocking a protected resource	63
1.6.1.2.6	Set Memory Transfer Address in slave	66
1.6.1.2.7	Upload from slave to master	67
1.6.1.2.8	Upload from slave to master (short version)	69
1.6.1.2.9	Build checksum over memory range	70
1.6.1.3	Auxiliary commands	73
1.6.1.3.1	Refer to transport layer specific command	73
1.6.1.3.2	Refer to user defined command	74
1.6.2	Calibration commands (CAL)	75
1.6.2.1	Mandatory commands	75
1.6.2.1.1	Download from master to slave	75
1.6.2.2	Optional commands	77
1.6.2.2.1	Download from master to slave (Block Mode)	77
1.6.2.2.2	Download from master to slave (fixed size)	78
1.6.2.2.3	Download from master to slave (short version)	79
1.6.2.2.4	Modify bits	80
1.6.3	Page switching commands (PAG)	81
1.6.3.1	Optional commands	81
1.6.3.1.1	Set calibration page	81
1.6.3.1.2	Get calibration page	82
1.6.3.1.3	Get general information on PAG processor	83
1.6.3.1.4	Get specific information for a SEGMENT	84
1.6.3.1.5	Get specific information for a PAGE	86
1.6.3.1.6	Set mode for a SEGMENT	89
1.6.3.1.7	Get mode for a SEGMENT	90
1.6.3.1.8	Copy page	91
1.6.4	Data Acquisition and Stimulation Commands (DAQ)	92
1.6.4.1	Basics	92
1.6.4.1.1	Mandatory commands	92
1.6.4.1.1.1	Set pointer to ODT entry	92
1.6.4.1.1.2	Write element in ODT entry	93
1.6.4.1.1.3	Set mode for DAQ list	94
1.6.4.1.1.4	Start /stop/select DAQ list	96
1.6.4.1.1.5	Start/stop DAQ lists (synchronously)	97
1.6.4.1.2	Optional commands	98
1.6.4.1.2.1	Write multiple elements in ODT	98
1.6.4.1.2.2	Read element from ODT entry	99
1.6.4.1.2.3	Get DAQ clock from slave	100
1.6.4.1.2.4	Get general information on DAQ processor	101
1.6.4.1.2.5	Get general information on DAQ processing resolution	105
1.6.4.1.2.6	Get mode from DAQ list	107
1.6.4.1.2.7	Get specific information for an event channel	109
1.6.4.2	Static DAQ list configuration (stat)	112
1.6.4.2.1	Mandatory command	112
1.6.4.2.1.1	Clear DAQ list configuration	112

1.6.4.2.2	Optional command	113
1.6.4.2.2.1	Get specific information for a DAQ list	113
1.6.4.3	Dynamic DAQ List Configuration (dyn)	115
1.6.4.3.1	Mandatory commands	115
1.6.4.3.1.1	Clear dynamic DAQ configuration	115
1.6.4.3.1.2	Allocate DAQ lists	116
1.6.4.3.1.3	Allocate ODTs to a DAQ list	117
1.6.4.3.1.4	Allocate ODT entries to an ODT	118
1.6.5	Non-volatile Memory Programming (PGM)	119
1.6.5.1	Mandatory commands	119
1.6.5.1.1	Indicate the beginning of a programming sequence	119
1.6.5.1.2	Clear a part of non-volatile memory	121
1.6.5.1.3	Program a non-volatile memory segment	123
1.6.5.1.4	Indicate the end of a programming sequence	125
1.6.5.2	Optional commands	126
1.6.5.2.1	Get general information on PGM processor	126
1.6.5.2.2	Get specific information for a SECTOR	129
1.6.5.2.3	Prepare non-volatile memory programming	131
1.6.5.2.4	Set data format before programming	132
1.6.5.2.5	Program a non-volatile memory segment (Block Mode)	134
1.6.5.2.6	Program a non-volatile memory segment (fixed size)	135
1.6.5.2.7	Program Verify	136
1.7	Communication Error Handling	137
1.7.1	Definitions	137
1.7.1.1	Error	137
1.7.1.2	Pre-action	138
1.7.1.3	Action	139
1.7.1.4	Error severity	140
1.7.2	Time-out Handling	141
1.7.2.1	Standard Communication Model	141
1.7.2.2	Block Communication Model	142
1.7.2.3	Interleaved Communication Model	143
1.7.2.4	Time-Out manipulation	144
1.7.2.4.1	Overruling Time-Out values	144
1.7.2.4.2	Restarting Time-Out detection	145
1.7.3	Error Code Handling	146
1.7.3.1	Table of Error Codes (ERR_*)	147
1.7.3.2	The Error Handling Matrix	148
1.7.3.2.1	Standard commands (STD)	148
1.7.3.2.2	Calibration commands (CAL)	150
1.7.3.2.3	Page switching commands (PAG)	151
1.7.3.2.4	Data Acquisition and Stimulation commands (DAQ)	153
1.7.3.2.5	Non-volatile memory programming commands (PGM)	156
1.8	Description of Events	158
1.8.1	Start in RESUME mode	158
1.8.2	End of DAQ clearing	159
1.8.3	End of DAQ storing	160

1.8.4	End of CAL storing	161
1.8.5	Request to restart time-out detection	162
1.8.6	Indication of DAQ overload	163
1.8.7	Indication of autonomous disconnect	164
1.8.8	Transfer of externally triggered timestamp	165
1.8.9	Indication of time-out at STIM	166
1.8.10	Entering SLEEP mode	167
1.8.11	Leaving SLEEP mode	168
1.8.12	User-defined event	169
1.8.13	Transport layer specific event	170
2	Interface to ASAM MCD 2MC description file	171
2.1	ASAM MCD 2MC AML for XCP (Common_Parameters)	171

Table of diagrams :

Diagram 1 : Communication flow between master and slave devices	15
Diagram 2 : The XCP Packet format	17
Diagram 3 : The XCP Packet Identification Field	18
Diagram 4 : Identification Field Type "CTO Packet Code"	18
Diagram 5 : Identification Field Type "absolute ODT number"	19
Diagram 6 : Identification Field Type "relative ODT number and absolute DAQ list number (BYTE)"	20
Diagram 7 : Identification Field Type "relative ODT number and absolute DAQ list number (WORD)"	20
Diagram 8 : Identification Field Type "relative ODT number and absolute DAQ list number (WORD, aligned)"	21
Diagram 9 : The XCP Packet Timestamp Field	23
Diagram 10 : TS only in first DTO Packet of sample	23
Diagram 11 : Timestamp Field Types	24
Diagram 12 : The XCP Packet Data Field	25
Diagram 13 : The CTO Packet	26
Diagram 14 : The DTO Packet	28
Diagram 15 : The XCP Packet IDentifiers from Master to Slave	29
Diagram 16 : The XCP Packet IDentifiers from Slave to Master	29
Diagram 17 : short GET_SEED+UNLOCK sequence	64
Diagram 18 : long GET_SEED+UNLOCK sequence	65
Diagram 19 : UPLOAD 3 bytes	68
Diagram 20 : UPLOAD 7 bytes	68
Diagram 21 : UPLOAD 16 bytes in block mode	68
Diagram 22 : DOWNLOAD 6 bytes	76
Diagram 23 : DOWNLOAD 14 bytes in block mode	77
Diagram 24 : Time-out Handling in Standard Communication Model	141
Diagram 25 : Time-out Handling in Master Block Transfer Mode	142
Diagram 26 : Time-out Handling in Slave Block Transfer Mode	142
Diagram 27 : Time-out Handling in Interleaved Communication Model	143
Diagram 28 : Restarting Time-out detection with EV_CMD_PENDING	145

0 INTRODUCTION


0.1 THE XCP PROTOCOL FAMILY

This document is based on experiences with the **CAN Calibration Protocol (CCP)** version 2.1 as described in feedback from the companies Accurate Technologies Inc., Compact Dynamics GmbH, DaimlerChrysler AG, dSPACE GmbH, ETAS GmbH, Kleinknecht Automotive GmbH, Robert Bosch GmbH, Siemens VDO Automotive AG and Vector Informatik GmbH.

The XCP Specification documents describe an improved and generalized version of CCP.

The generalized protocol definition serves as standard for a protocol family and is called “XCP” (Universal Measurement and **C**alibration **P**rotocol).

The “**X**” generalizes the “various” transportation layers that are used by the members of the protocol family e.g “XCP on CAN”, “XCP on TCP/IP”, “XCP on UDP/IP”, “XCP on USB” and so on.

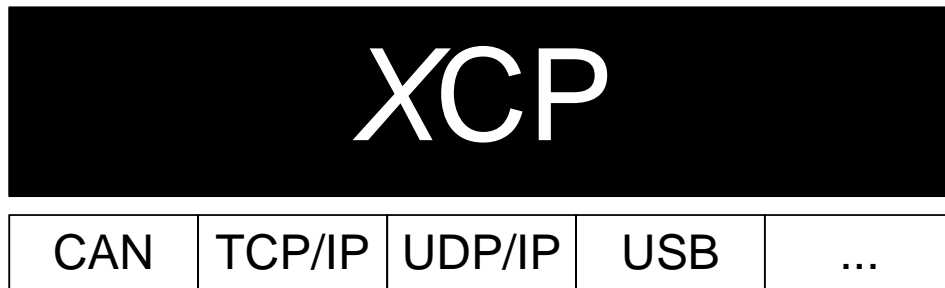

0.2 DOCUMENTATION OVERVIEW

The XCP specification consists of 5 parts. Each part is a separate document and has the following contents:

Part 1 “Overview” gives an overview over the XCP protocol family, the XCP features and the fundamental protocol definitions.

Part 2 “Protocol Layer Specification” defines the generic protocol, which is independent from the transportation layer used (this document).

Part 3 “Transport Layer Specification” defines the way how the XCP protocol is transported by a particular transportation layer like CAN, TCP/IP and UDP/IP.

Part 4 “Interface Specification” defines the interfaces from an XCP master to an ASAM MCD 2MC description file and for calculating Seed & Key algorithms and checksums.

Part 5 “Example Communication Sequences” gives example sequences for typical actions performed with XCP.

Everything not explicitly mentioned in this document, should be considered as implementation specific.

0.3 DEFINITIONS AND ABBREVIATIONS

The following table gives an overview about the most commonly used definitions and abbreviations throughout this document.

Abbreviation	Description
A2L	File Extension for an ASAM 2MC Language File
AML	ASAM 2 Meta Language
ASAM	A ssociation for S tandardization of A utomation and M easuring Systems
BYP	BYP assing
CAL	CAL ibration
CAN	C ontroller A rea N etwork
CCP	C an C alibration P rotocol
CMD	CoMmanD
CS	C heck S um
CTO	C ommand T ransfer O bject
CTR	CounTeR
DAQ	D ata AcQ uisition, D ata AcQ uisition Packet
DTO	D ata T ransfer O bject
ECU	E lectronic C ontrol U nit
ERR	ERR or Packet
EV	E vent Packet
LEN	LEN gth
MCD	M easurement C alibration and D iagnostics
MTA	M emory T ransfer A ddress
ODT	O bject D escriptor T able
PAG	PAG ing
PGM	ProGraM ming
PID	P acket ID entifier
RES	command RES ponse packet
SERV	SERV ice request packet
SPI	S erial P eripheral I nterface
STD	STanD ard
STIM	Data STIM ulation packet
TCP/IP	T ransfer C ontrol P rotocol / I nternet P rotocol
TS	T ime S tamp
UDP/IP	U nified D ata P rotocol / I nternet P rotocol
USB	U niversal S erial B us
XCP	Universal C alibration P rotocol

Table 1: Definitions and Abbreviations

0.4 MAPPING BETWEEN XCP DATA TYPES AND ASAM DATA TYPES

The following table defines the mapping between data types used in this specification and ASAM data types defined by the Project Data Harmonization Version 2.0 (ref. www.asam.net).

XCP Data Type	ASAM Data Type
BYTE	A_UINT8
WORD	A_UINT16
DWORD	A_UINT32
DLONG	A_UINT64

1 THE XCP PROTOCOL LAYER

1.1 THE XCP PACKET

1.1.1 THE XCP PACKET TYPES

All XCP communication is transferred as data objects called XCP Packets.

There are 2 basic Packet types:

- 1) Packet for transferring generic control commands : **CTO**
- 2) Packet for transferring synchronous data : **DTO**

The **CTO** (**C**ommand **T**ransfer **O**bject) is used for transferring generic control commands. It is used for carrying out protocol commands (CMD), transferring command responses (RES), error (ERR) packets, event (EV) packets and for service request packets (SERV).

The **DTO** (**D**ata **T**ransfer **O**bject) is used for transmitting synchronous data acquisition data (DAQ) and for transmitting synchronous data stimulation data (STIM).

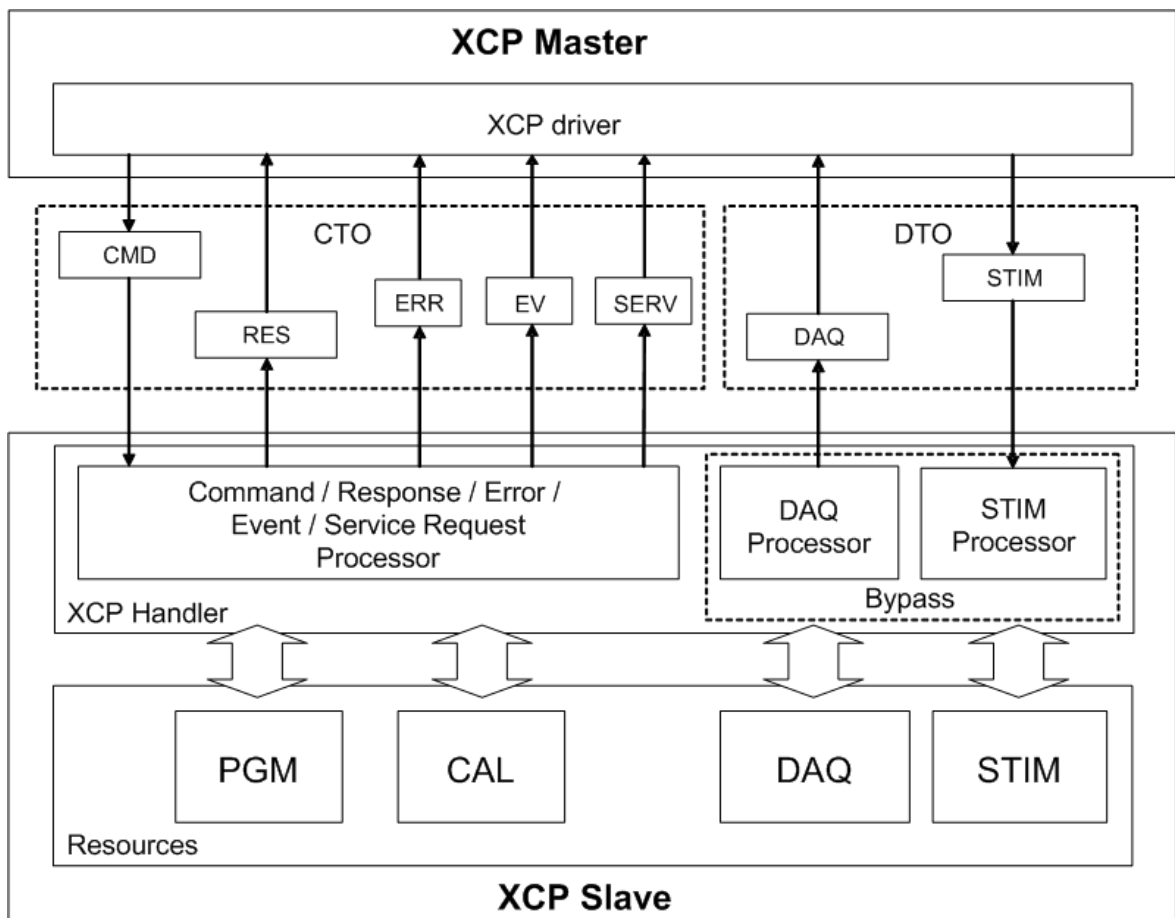


Diagram 1 : Communication flow between master and slave devices

A Command Packet must always be answered by a Command Response Packet or an Error Packet.

Event, Service Request and Data Acquisition Packets are send asynchronously, therefore it may not be guaranteed that the master device will receive them when using a non acknowledged transportation link like e.g. UDP/IP.

The XCP Handler may not always have access to the resources of the XCP slave.
With `ERR_RESOURCE_TEMPORARY_NOT_ACCESSIBLE` the XCP Handler can indicate this situation to the master.

1.1.2 THE XCP PACKET FORMAT

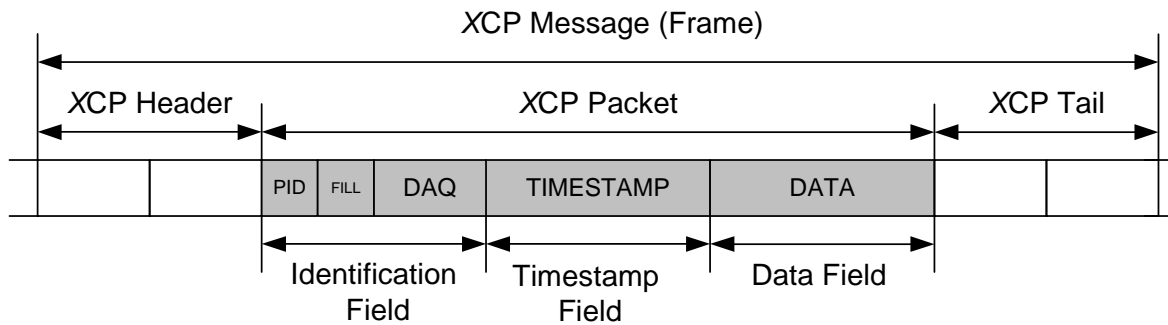


Diagram 2 : The XCP Packet format


The XCP Packet contains the generic part of the protocol, which is independent from the transport layer used.

An XCP Packet consists of an Identification Field, an optional Timestamp Field and a Data Field.

MAX_CTO indicates the maximum length of a CTO packet in bytes.

MAX_DTO indicates the maximum length of a DTO packet in bytes.

1.1.2.1 THE IDENTIFICATION FIELD

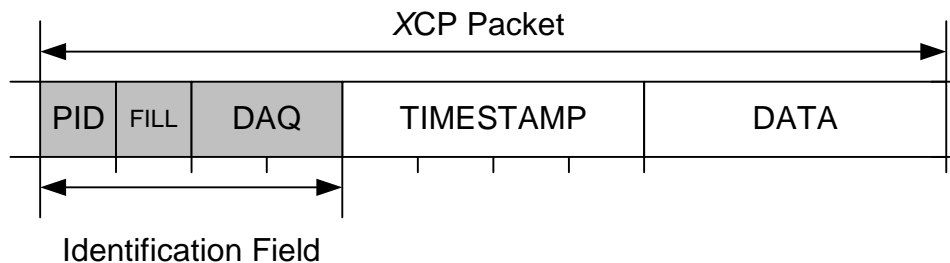**Diagram 3 : The XCP Packet Identification Field**


When exchanging XCP Packets, both master and slave always have to be able to unambiguously identify any transferred XCP Packet concerning its Type and the contents of its Data Field.

For this purpose, an XCP Packet basically always starts with an Identification Field which as first byte contains the **P**acket **I**dentifier (PID).

Identification Field Type “CTO Packet Code”

For CTO Packets, the Identification Field should be able to identify the packets concerning their Type, distinguishing between protocol commands (CMD), command responses (RES), error packets (ERR), event packets (EV) and service request packets (SERV).

For CTO Packets, the Identification Field just consists of the PID, containing the CTO Packet code.

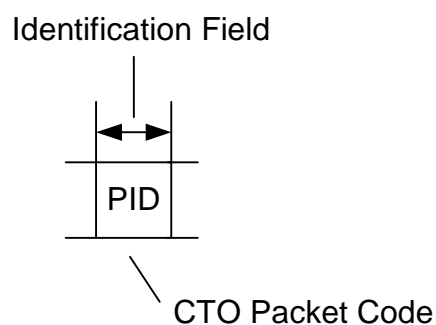**Diagram 4 : Identification Field Type "CTO Packet Code"**

For DTO Packets, the Identification Field should be able to identify the packets concerning their Type, distinguishing between DTO Packets for Synchronous Data Acquisition or for Synchronous Data Stimulation

For DTO Packets, the Identification Field should be able to identify unambiguously the DAQ list and the ODT within this DAQ list, that describe the contents of the Data Field.

For every DAQ list the numbering of the ODTs through ODT_NUMBER restarts from 0:

DAQ list 0	DAQ list 1	...
ODT 0	ODT 0	...
ODT 1	...	

so the scope for ODT_NUMBER is local for a DAQ list and ODT numbers are not unique within one and the same slave device.

Identification Field Type “absolute ODT number”

One possibility to map the relative and not unique ODT numbers to unambiguously identifiable DTO Packets, is to map the relative ODT numbers to absolute ODT numbers by means of a “FIRST_PID for this DAQ list”, and then transfer the absolute ODT numbers within the DTO Packet.

The following mapping from relative_ODT_NUMBER to absolute_ODT_NUMBER applies:

$$\begin{aligned} &\text{absolute_ODT_NUMBER(ODT } i \text{ in DAQ list } j) \\ &= \text{FIRST_PID(DAQ list } j) + \text{relative_ODT_NUMBER(ODT } i) \end{aligned}$$

FIRST_PID is the PID in the DTO Packet of the first ODT transferred by this DAQ list.

FIRST_PID is determined by the slave device and sent to the master upon START_STOP_DAQ_LIST(DAQ list j).

When allocating the FIRST_PIDs, the slave has to make sure that for every ODT there's a unique absolute ODT number.

All PIDs also have to be in the available ranges for PID(DAQ) and PID(STIM).

For DTO Packets with Identification Field Type “absolute ODT number”, the Identification Field just consists of the PID, containing the absolute ODT number.

Identification Field

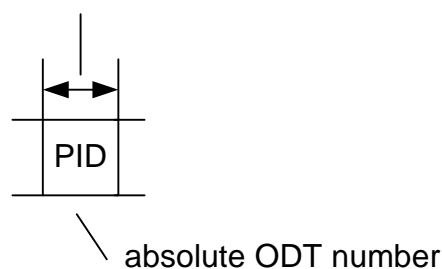



Diagram 5 : Identification Field Type "absolute ODT number"

Identification Field Type “relative ODT number and absolute DAQ list number”

Another possibility to map the relative and not unique ODT numbers to unambiguously identifiable DTO Packets, is to transfer the absolute DAQ list number together with the relative ODT number within the DTO Packet.


For DTO Packets with Identification Field Types “relative ODT number and absolute DAQ list number”, the Identification Field consists of the PID, containing the relative ODT number, DAQ bits, containing the absolute DAQ list number, and an optional FILL byte.

One possibility is to transfer the DAQ list number as BYTE, which reduces the number of theoretically possible Packets since the DAQ_LIST_NUMBER parameter is coded as WORD.

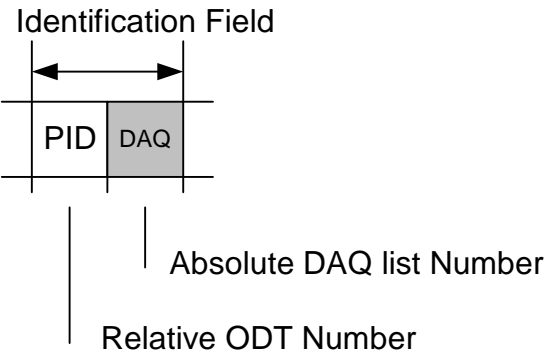

**Diagram 6 : Identification Field Type
"relative ODT number and absolute DAQ list number (BYTE)"**

For fully exploring the limits of performance, there's the possibility to transfer the DAQ list number as WORD

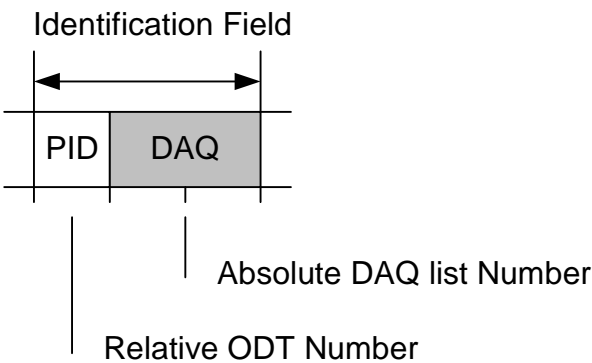

**Diagram 7 : Identification Field Type
"relative ODT number and absolute DAQ list number (WORD)"**

If for the XCP Packet certain alignment conditions have to be met, there's the possibility to transfer an extra FILL byte.

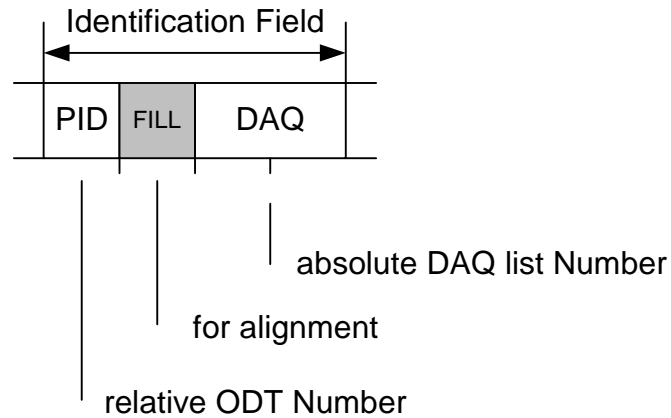


Diagram 8 : Identification Field Type
"relative ODT number and absolute DAQ list number (WORD, aligned)"

With the DAQ_KEY_BYTE at GET_DAQ_PROCESSOR_INFO, the slave informs the master about the Type of Identification Field the slave will use when transferring DAQ Packets to the master. The master has to use the same Type of Identification Field when transferring STIM Packets to the slave.

Empty Identification Field

A DAQ list can have the property that it can transmit DTO Packets without Identification Field (ref. PID_OFF_SUPPORTED flag in DAQ_PROPERTIES at GET_DAQ_PROCESSOR_INFO).

Turning off the transmission of the Identification Field is only allowed if the Identification Field Type is "absolute ODT number". If the Identification Field is not transferred in the XCP Packet, the unambiguous identification has to be done on the level of the Transport Layer. This can be done e.g. on CAN with separate CAN-Ids for each DAQ list and only one ODT for each DAQ list. In this case turning off the Identification Field would allow the transmission of 8 byte signals on CAN.

1.1.2.2 THE TIMESTAMP FIELD

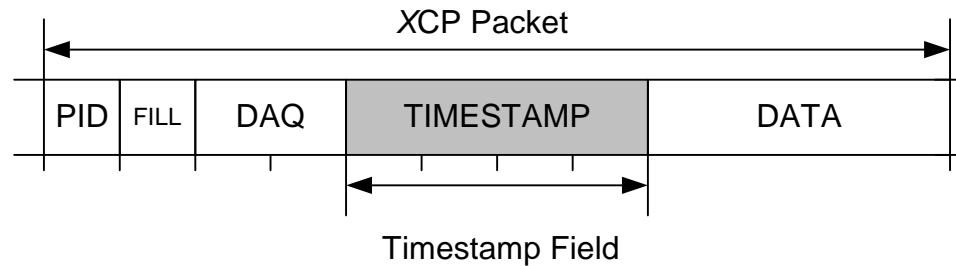


Diagram 9 : The XCP Packet Timestamp Field

An XCP Packet optionally might contain a Timestamp Field.

For CTO Packets, the Timestamp Field is not available.

DTO Packets directly after the Identification Field might have a Timestamp Field which contains a TimeStamp (TS).

The `TIMESTAMP_SUPPORTED` flag at `GET_DAQ_PROCESSOR_INFO` indicates whether the slave supports time stamped data acquisition and stimulation.

With the `TIMESTAMP` flag at `SET_DAQ_LIST_MODE`, the master can set a DAQ list into time stamped mode.

The `TIMESTAMP_FIXED` flag in `TIMESTAMP_MODE` at `GET_DAQ_RESOLUTION_INFO` indicates that the Slave always will send DTO Packets in time stamped mode. The Master can not switch off the time stamp with `SET_DAQ_LIST_MODE`.

For `DIRECTION = DAQ`, time stamped mode means that the slave device transmits the current value of its clock in the DTO Packet for the first ODT of a DAQ cycle.

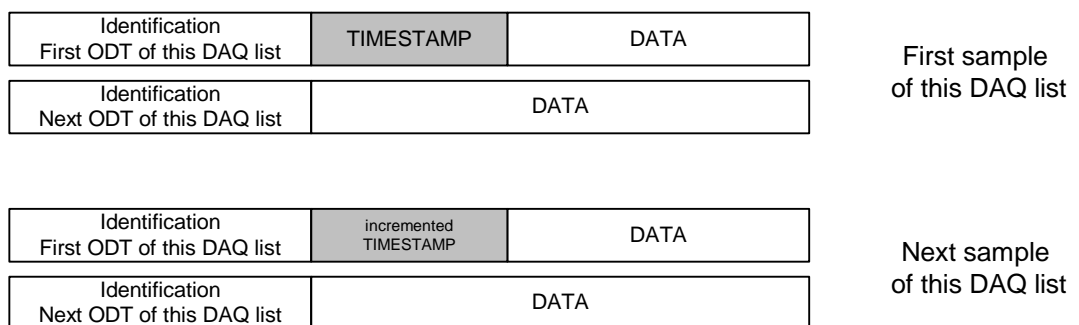


Diagram 10 : TS only in first DTO Packet of sample

The `TIMESTAMP` flag can be used as well for `DIRECTION = DAQ` as for `DIRECTION = STIM`.

Timestamp Field Types

The Timestamp Field always consists of the TS, containing the current value of the synchronous data transfer clock

The synchronous data transfer clock is a free running counter in the slave, which is never reset or modified.

Depending on the Timestamp Field Type, the TS is transferred as BYTE, WORD or DWORD value.

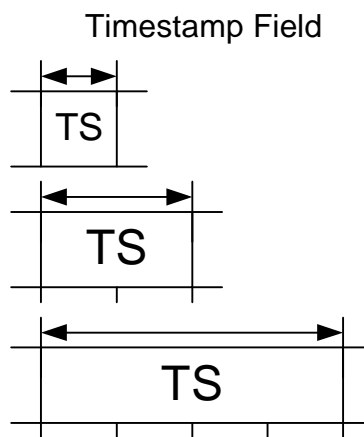


Diagram 11 : Timestamp Field Types

With `TIMESTAMP_MODE` and `TIMESTAMP_TICKS` at `GET_DAQ_RESOLUTION_INFO`, the slave informs the master about the Type of Timestamp Field the slave will use when transferring DAQ Packets to the master. The master has to use the same Type of Timestamp Field when transferring STIM Packets to the slave. `TIMESTAMP_MODE` and `TIMESTAMP_TICKS` contain information on the resolution of the data transfer clock.

1.1.2.3 THE DATA FIELD

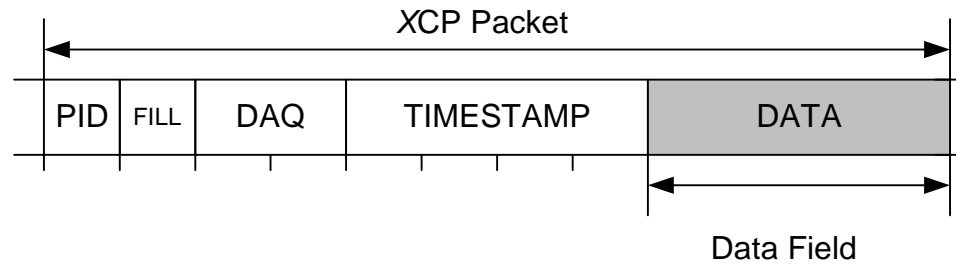


Diagram 12 : The XCP Packet Data Field

An XCP Packet finally contains a Data Field.

For CTO Packets, the Data Field contains the specific parameters for the different types of CTO packet.

For DTO Packets, the Data Field contains the data for synchronous acquisition and stimulation.

1.1.3 THE CTO PACKETS

The **CTO** is used for transferring generic control commands.

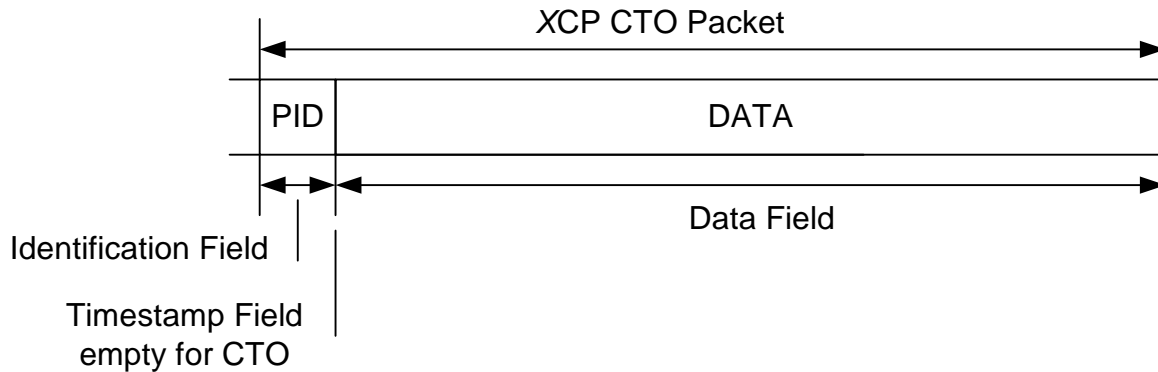


Diagram 13 : The CTO Packet

The Identification Field just consists of the PID, containing the CTO Packet code.

The Timestamp Field is not available.

The Data Field contains the specific parameters for the different types of CTO packet.

1.1.3.1 COMMAND PACKET (CMD)

Position	Type	Description
0	BYTE	Packet Identifier = CMD 0xC0...0xFF
1..MAX_CTO-1	BYTE	Command Data

The PID contains the **ComManD** Packet code in the range **0xC0 <= CMD <= 0xFF**.

All possible command codes are defined in the section "Table of Command Codes (CMD)" in this paper. The structure of all possible commands is defined in the "Description of Commands" section of this paper.

1.1.3.2 COMMAND RESPONSE PACKET (RES)

Position	Type	Description
0	BYTE	Packet Identifier = RES 0xFF
1..MAX_CTO-1	BYTE	Command response data

The PID contains the Command Positive **RES**ponse Packet code **RES = 0xFF**.

The RES is sent as an answer to a CMD if the command has been successfully executed.

1.1.3.3 ERROR PACKET (ERR)

Position	Type	Description
0	BYTE	Packet Identifier = ERR 0xFE
1	BYTE	Error code
2..MAX_CTO-1	BYTE	Optional error information data

The PID contains the **ERR**or Packet code **ERR = 0xFE**.

The ERR is sent as an answer to a CMD if the command has not been successfully executed. The second byte contains the Error code. Error codes are defined in the section "Table of Error codes (ERR_*)" in this paper.

The Error code **0x00** is used for synchronization purposes (ref. description of command SYNCH).

An Error code **ERR_* >= 0x01** is used for Error packets.

Error packets normally only contain an error code.

However, in some cases the error packet contains additional information.

At BUILD_CHECKSUM the error packet with error code 0x22 = ERR_OUT_OF_RANGE contains the maximum allowed block size as DWORD as additional information.

If the error code is 0x31 = ERR_GENERIC, the error packet contains an implementation specific slave device error code as WORD as additional information.

1.1.3.4 EVENT PACKET (EV)

Position	Type	Description
0	BYTE	Packet Identifier = EV 0xFD
1	BYTE	Event code
2..MAX_CTO-1	BYTE	Optional event information data

The PID contains the **EV**ent Packet code **EV = 0xFD**.

The EV is sent if the slave wants to report an asynchronous event packet. The second byte contains the Event code.

All possible event codes are defined in the section "Table of Event Codes (EV)" in this paper. The structure of all possible events is defined in the "Description of Events" section of this paper.

The implementation is optional. Event packets sent from the slave device to the master device are not acknowledged, therefore the transmission is not guaranteed.

1.1.3.5 SERVICE REQUEST PACKET (SERV)

Position	Type	Description
0	BYTE	Packet Identifier = SERV 0xFC
1	BYTE	Service request code
2..MAX_CTO-1	BYTE	Optional service request data

The PID contains the **SERV**ice Request Packet code **SERV = 0xFC**.

The SERV requests some action to be performed by the master device. The second byte contains the service request code. Possible service request codes are defined in the section "Table of Service Request codes" in this paper.

1.1.4 THE DTO PACKETS

The **DTO** is used for transmitting synchronous data acquisition data (DAQ), and for transmitting synchronous data stimulation data (STIM).

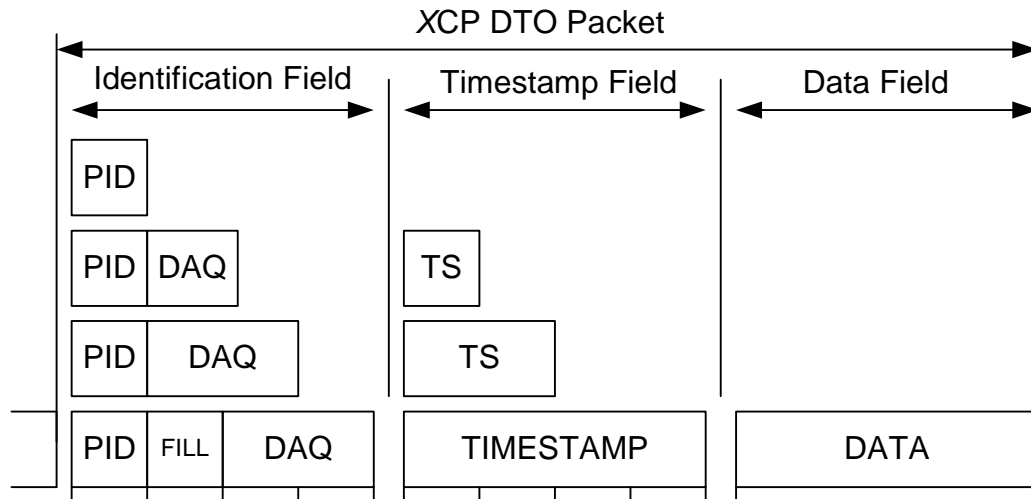


Diagram 14 : The DTO Packet

The contents of the Identification Field varies depending upon the Identification Field Type.
 The contents of the Timestamp Field varies depending upon the Timestamp Field Type.
 Any combination of Identification Field Type and Timestamp Field Type is possible.
 The Data Field contains the data for synchronous acquisition and stimulation.

1.1.4.1 DATA ACQUISITION PACKET (DAQ)

Position	Type	Description
0	BYTE	Packet Identifier = DAQ 0x00...0xFB
1..n	BYTE	Rest of Identification Field
n+1..MAX.DTO-1	BYTE	Data

$$n = f(\text{Identification Field Type, Timestamp Field Type})$$

The PID contains the (absolute or relative) ODT number in the range **0x00 <= DAQ <= 0xFB**.
 The ODT number refers to an **Object Descriptor Table (ODT)** that describes which data acquisition elements are contained in the remaining data bytes.

1.1.4.2 SYNCHRONOUS DATA STIMULATION PACKET (STIM)

Position	Type	Description
0	BYTE	Packet Identifier = STIM 0x00...0xBF
1..n	BYTE	Rest of Identification Field
n+1..MAX.DTO-1	BYTE	Data

$$n = f(\text{Identification Field Type, Timestamp Field Type})$$

The PID contains the (absolute or relative) ODT number in the range **0x00 <= STIM <= 0xBF**.
 The ODT number refers to a corresponding **Object Descriptor Table (ODT)** that describes which data stimulation elements are contained in the remaining data bytes.

1.1.5 THE XCP PACKET IDENTIFIERS

The following tables give an overview of all possible Packet IDentifiers for transferring Packets from Master to Slave and from Slave to Master.

1.1.5.1 MASTER → SLAVE

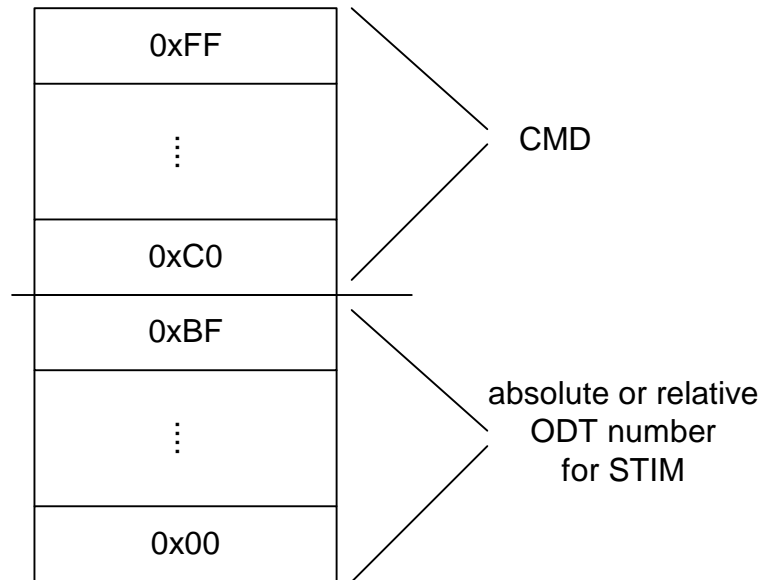


Diagram 15 : The XCP Packet IDentifiers from Master to Slave

1.1.5.2 SLAVE → MASTER

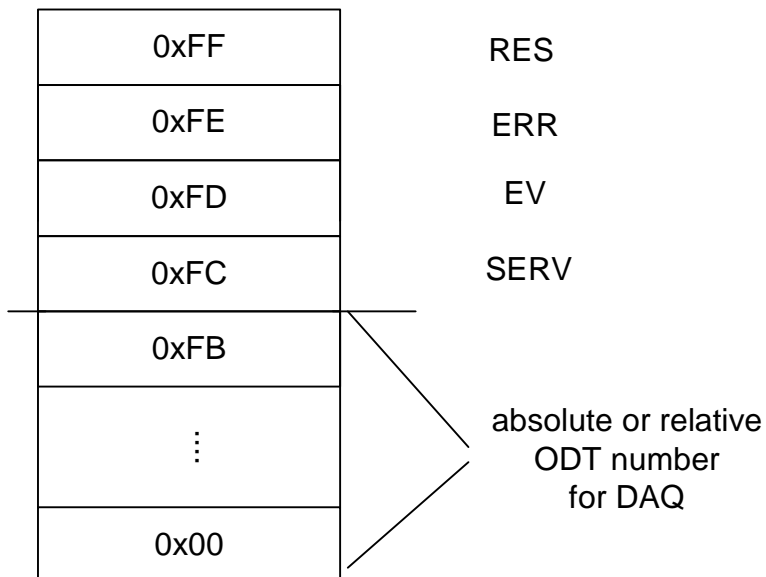


Diagram 16 : The XCP Packet IDentifiers from Slave to Master

1.2 TABLE OF EVENT CODES (EV)

The Event packet codes in the table below may be sent as an asynchronous packet with PID 0xFD.

The implementation is optional. Event packets sent from the slave device to the master device are not acknowledged, therefore the transmission is not guaranteed.

Event	Code	Description	Severity
EV_RESUME_MODE	0x00	Slave starting in RESUME mode	S0
EV_CLEAR_DAQ	0x01	The DAQ configuration in non-volatile memory has been cleared.	S0
EV_STORE_DAQ	0x02	The DAQ configuration has been stored into non-volatile memory.	S0
EV_STORE_CAL	0x03	The calibration data has been stored into non-volatile memory.	S0
EV_CMD_PENDING	0x05	Slave requesting to restart time-out	S1
EV_DAQ_OVERLOAD	0x06	DAQ processor overload.	S1
EV_SESSION_TERMINATED	0x07	Session terminated by slave device.	S3
EV_TIME_SYNC	0x08	Transfer of externally triggered timestamp	S0
EV_STIM_TIMEOUT	0x09	Indication of a STIM timeout	S0-S3
EV_SLEEP	0x0A	Slave entering SLEEP mode	S1
EV_WAKE_UP	0x0B	Slave leaving SLEEP mode	S1
EV_USER	0xFE	User-defined event	S0
EV_TRANSPORT	0xFF	Transport layer specific event	Ref. Part3

1.3 TABLE OF SERVICE REQUEST CODES (SERV)

The service request packet codes in the table below may be sent as an asynchronous packet with PID 0xFC.

The implementation is optional for the slave device, but mandatory for the master device. Service request packets sent from the slave device to the master device are not acknowledged, therefore the transmission is not guaranteed.

Service Request	Code	Description
SERV_RESET	0x00	Slave requesting to be reset
SERV_TEXT	0x01	Slave transferring a byte stream of plain ASCII text. The line separator is LF or CR/LF. The text can be transferred in consecutive packets. The end of the overall text is indicated by the last packet containing a Null terminated string.

1.4 TABLE OF COMMAND CODES (CMD)

An attempt to execute a not implemented optional command will return ERR_CMD_UNKNOWN and does not have any effect.

This lets the master device detect not implemented optional commands easily.

If GET_SEED is implemented, UNLOCK is required.

If SET_CAL_PAGE is implemented, GET_CAL_PAGE is required.

1.4.1 STANDARD COMMANDS (STD)

Command	Code	Is Optional
CONNECT	0xFF	no
DISCONNECT	0xFE	no
GET_STATUS	0xFD	no
SYNCH	0xFC	no

Command	Code	Is Optional
GET_COMM_MODE_INFO	0xFB	yes
GET_ID	0xFA	yes
SET_REQUEST	0xF9	yes
GET_SEED	0xF8	yes
UNLOCK	0xF7	yes
SET_MTA	0xF6	yes
UPLOAD	0xF5	yes
SHORT_UPLOAD	0xF4	yes
BUILD_CHECKSUM	0xF3	yes

Command	Code	Is Optional
TRANSPORT_LAYER_CMD	0xF2	yes
USER_CMD	0xF1	yes

1.4.2 CALIBRATION COMMANDS (CAL)

Command	Code	Is Optional
DOWNLOAD	0xF0	no

Command	Code	Is Optional
DOWNLOAD_NEXT	0xEF	yes
DOWNLOAD_MAX	0xEE	yes
SHORT_DOWNLOAD	0xED	yes
MODIFY_BITS	0xEC	yes

1.4.3 PAGE SWITCHING COMMANDS (PAG)

Command	Code	Is Optional
SET_CAL_PAGE	0xEB	yes
GET_CAL_PAGE	0xEA	yes
GET_PAG_PROCESSOR_INFO	0xE9	yes
GET_SEGMENT_INFO	0xE8	yes
GET_PAGE_INFO	0xE7	yes
SET_SEGMENT_MODE	0xE6	yes
GET_SEGMENT_MODE	0xE5	yes
COPY_CAL_PAGE	0xE4	yes

1.4.4 DATA ACQUISITION AND STIMULATION COMMANDS (DAQ)

Basics

Command	Code	Is Optional
SET_DAQ_PTR	0xE2	no
WRITE_DAQ	0xE1	no
SET_DAQ_LIST_MODE	0xE0	no
START_STOP_DAQ_LIST	0xDE	no
START_STOP_SYNCH	0xDD	no

Command	Code	Is Optional
WRITE_DAQ_MULTIPLE	0xC7	yes
READ_DAQ	0xDB	yes
GET_DAQ_CLOCK	0xDC	yes
GET_DAQ_PROCESSOR_INFO	0xDA	yes
GET_DAQ_RESOLUTION_INFO	0xD9	yes
GET_DAQ_LIST_MODE	0xDF	yes
GET_DAQ_EVENT_INFO	0xD7	yes

Static configuration

Command	Code	Is Optional
CLEAR_DAQ_LIST	0xE3	no

Command	Code	Is Optional
GET_DAQ_LIST_INFO	0xD8	yes

Dynamic configuration

Command	Code	Is Optional
FREE_DAQ	0xD6	no
ALLOC_DAQ	0xD5	no
ALLOC_ODT	0xD4	no
ALLOC_ODT_ENTRY	0xD3	no

1.4.5 NON-VOLATILE MEMORY PROGRAMMING COMMANDS (PGM)

Command	Code	Is Optional
PROGRAM_START	0xD2	no
PROGRAM_CLEAR	0xD1	no
PROGRAM	0xD0	no
PROGRAM_RESET	0xCF	no

Command	Code	Is Optional
GET_PGM_PROCESSOR_INFO	0xCE	yes
GET_SECTOR_INFO	0xCD	yes
PROGRAM_PREPARE	0xCC	yes
PROGRAM_FORMAT	0xCB	yes
PROGRAM_NEXT	0xCA	yes
PROGRAM_MAX	0xC9	yes
PROGRAM_VERIFY	0xC8	yes

1.5 TABLE OF BIT MASK CODED PARAMETERS

RESOURCE parameter in CONNECT and GET_SEED

Bit							
7	6	5	4	3	2	1	0
x	x	x	PGM	STIM	DAQ	x	CAL/PAG

COMM_MODE_BASIC parameter in CONNECT

Bit							
7	6	5	4	3	2	1	0
OPTIONAL	SLAVE_BLOCK_MODE	x	x	x	ADDRESS_GRANULARITY_1	ADDRESS_GRANULARITY_0	BYTE_ORDER

COMM_MODE_OPTIONAL parameter in GET_COMM_MODE_INFO

Bit							
7	6	5	4	3	2	1	0
x	x	x	x	x	x	INTERLEAVED_MODE	MASTER_BLOCK_MODE

COMM_MODE_PGM parameter in PROGRAM_START

Bit	7	6	5	4	3	2	1	0
	X							
	SLAVE_BLOCK_MODE							
			X					
				X				
					X			
						X		
	INTERLEAVED_MODE							
	MASTER_BLOCK_MODE							

Mode parameter in GET_ID

Bit	7	6	5	4	3	2	1	0
	X	X	X	X	X	X	COMPRESSED_ENCRYPTED	TRANSFER_MODE

Current Resource Protection Status parameter in GET_STATUS and UNLOCK

Bit	7	6	5	4	3	2	1	0
	x	x	x	PGM	STIM	DAQ	x	CAL/PAG

Mode parameter in SET_REQUEST

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	CLEAR_DAQ_REQ	STORE_DAQ_REQ_RESUME	STORE_DAQ_REQ_NO_RESUME	STORE_CAL_REQ

Current Session Status parameter in GET_STATUS

Bit	7	6	5	4	3	2	1	0
RESUME								
DAQ RUNNING								
			x					
				x				
CLEAR_DAQ_REQ								
STORE_DAQ_REQ								
							x	
STORE_CAL_REQ								

DAQ_KEY_BYTE parameter in GET_DAQ_PROCESSOR_INFO

Bit	7	6	5	4	3	2	1	0
Identification_Field_Type_1								
Identification_Field_Type_0								
Address_Extension_DAQ								
Address_Extension_ODT								
Optimisation_Type_3								
Optimisation_Type_2								
Optimisation_Type_1								
Optimisation_Type_0								

DAQ_PROPERTIES parameter in GET_DAQ_PROCESSOR_INFO

Bit	7	6	5	4	3	2	1	0
OVERLOAD_EVENT								
OVERLOAD_MSB								
PID_OFF_SUPPORTED								
TIMESTAMP_SUPPORTED								
BIT_STIM_SUPPORTED								
RESUME_SUPPORTED								
PRESCALER_SUPPORTED								
DAQ_CONFIG_TYPE								

Mode parameter in SET_DAQ_LIST_MODE

Bit	7	6	5	4	3	2	1	0
x								
x								
PID_OFF								
TIMESTAMP								
x								
x								
DIRECTION								
ALTERNATING								

Current Mode parameter in GET_DAQ_LIST_MODE

Bit	7	6	5	4	3	2	1	0
RESUME								
RUNNING								
PID_OFF								
TIMESTAMP								
x								
x								
DIRECTION								
SELECTED								

DAQ_LIST_PROPERTIES parameter in GET_DAQ_LIST_INFO

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	STIM	DAQ	EVENT_FIXED	PREDEFINED

DAQ_EVENT_PROPERTIES parameter in GET_DAQ_EVENT_INFO

Bit	7	6	5	4	3	2	1	0
CONSISTENCY_EVENT								
CONSISTENCY_DAQ								
			x	x	STIM	DAQ	x	x

TIMESTAMP_MODE parameter in GET_DAQ_RESOLUTION_INFO

Bit	7	6	5	4	3	2	1	0
	Unit_3	Unit_2	Unit_1	Unit_0	TIMESTAMP_FIXED	Size_2	Size_1	Size_0

PAG_PROPERTIES parameter in GET_PAG_PROCESSOR_INFO

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	x	x	x	FREEZE_SUPPORTED

Mode parameter in SET_SEGMENT_MODE

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	x	x	x	FREEZE

Current Mode parameter in GET_SEGMENT_MODE

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	x	x	x	FREEZE

PAGE_PROPERTIES parameter in GET_PAGE_INFO

7	Bit
6	x
5	x
4	XCP_WRITE_ACCESS_WITH_ECU
3	XCP_WRITE_ACCESS_WITHOUT_ECU
2	XCP_READ_ACCESS_WITH_ECU
1	XCP_READ_ACCESS_WITHOUT_ECU
0	ECU_ACCESS_WITH_XCP
	ECU_ACCESS_WITHOUT_XCP

Mode parameter in SET_CAL_PAGE:

Bit							
7	6	5	4	3	2	1	0
All	x	x	x	x	x	XCP	ECU

1.6 DESCRIPTION OF COMMANDS

The following chapters are a description of all possible XCP command packets and their responses.

Unused data bytes, marked as „reserved“, may have arbitrary values.

Command parameters in WORD (2 Byte) format, are always aligned to a position that can be divided by 2. Command parameters in DWORD (4 Bytes) format, are always aligned to a position that can be divided by 4.

The byte format (MOTOROLA, INTEL) of multi byte parameters is slave device dependent.

The structure of the command description is always as follows:

Command CMD:

Position	Type	Description
0	BYTE	Command Packet Code CMD
1..MAX_CTO-1	BYTE	Command specific Parameters

Command Positive Response RES:

Position	Type	Description
0	BYTE	Command Positive Response Packet Code = RES 0xFF
1..MAX_CTO-1	BYTE	Command specific Parameters

Command Negative Response ERR:

Position	Type	Description
0	BYTE	Error Packet Code = 0xFE
1	BYTE	Error code
2..MAX_CTO-1	BYTE	Command specific Parameters

To simplify this documentation, in the following sections of this document, positive and negative responses are not explicitly described unless they have parameters.

1.6.1 STANDARD COMMANDS (STD)

1.6.1.1 MANDATORY COMMANDS

1.6.1.1.1 Set up connection with slave

Category Standard, mandatory
Mnemonic CONNECT

Position	Type	Description
0	BYTE	Command Code = 0xFF
1	BYTE	Mode 00 = Normal 01 = user defined

This command establishes a **continuous, logical, point-to-point connection** with a slave device.

During a running XCP session (CONNECTED) this command has no influence on any configuration of the XCP slave driver.

A slave device does not respond to any other commands (except auto detection) unless it is in the state CONNECTED.

With a CONNECT(Mode = Normal), the master can start an XCP communication with the slave.

With a CONNECT(Mode = user defined), the master can start an XCP communication with the slave and at the same time tell the slave that it should go into a special (user defined) mode.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	RESOURCE
2	BYTE	COMM_MODE_BASIC
3	BYTE	MAX_CTO, Maximum CTO size [BYTE]
4	WORD	MAX_DTO, Maximum DTO size [BYTE]
6	BYTE	XCP Protocol Layer Version Number (most significant byte only)
7	BYTE	XCP Transport Layer Version Number (most significant byte only)

The RESOURCE parameter is a bit mask described below :

Bit	7	6	5	4	3	2	1	0
	x	x	x	PGM	STIM	DAQ	x	CAL/PAG

Flag	Description
CAL/PAG	CALibration and PAGing 0 = calibration/ paging not available 1 = calibration/ paging available
DAQ	DAQ lists supported 0 = DAQ lists not available 1 = DAQ lists available
STIM	STIMulation 0 = stimulation not available 1 = stimulation available data stimulation mode of a DAQ list available
PGM	ProGraMming 0 = Flash programming not available 1 = Flash programming available

If a resource is available, the mandatory commands of this resource must be supported. For the allocation of commands to resources please refer to 1.4 Table of Command codes (CMD).


Regardless of the resource flag set, it may happen that the XCP handler cannot access the requested resource.

An Error Packet with ERR_RESOURCE_TEMPORARY_NOT_ACCESSIBLE then will be sent to the master to indicate this situation.

The COMM_MODE_BASIC parameter is a bit mask described below :

Bit	7	6	5	4	3	2	1	0
	OPTIONAL	SLAVE_BLOCK_MODE	x	x	x	ADDRESS_GRANULARITY_1	ADDRESS_GRANULARITY_0	BYTE_ORDER

BYTE_ORDER indicates the byte order used for transferring multi-byte parameters in an XCP Packet. BYTE_ORDER = 0 means Intel format, BYTE_ORDER = 1 means Motorola format. Motorola format means MSB on lower address/position.

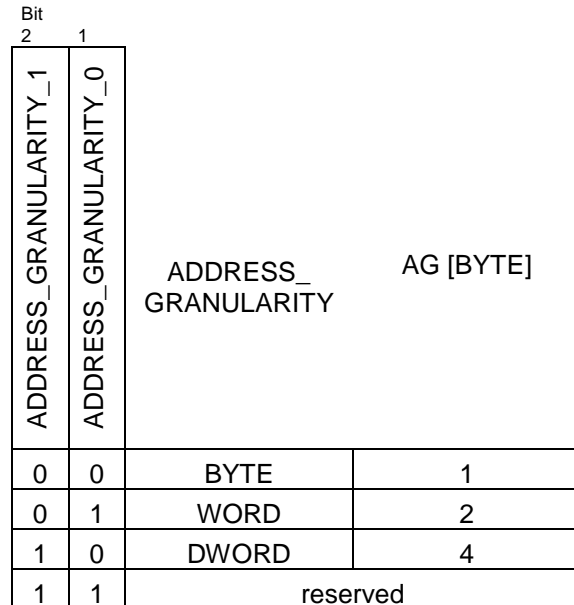

The address granularity indicates the size of an element contained at a single address. It is needed if the master has to do address calculation.

Granularity	BYTE	WORD	
Address n	Byte 00	Byte 00	Byte 01
Address n+1	Byte 01	Byte 02	Byte 03

The SLAVE_BLOCK_MODE flag indicates whether the Slave Block Mode is available. The OPTIONAL flag indicates whether additional information on supported types of Communication mode is available. The master can get that additional information with GET_COMM_MODE_INFO.

MAX_CTO is the maximum CTO packet size in bytes.

MAX_DTO is the maximum DTO packet size in bytes.

The following relations must always be fulfilled

$$\text{MAX_CTO} \bmod \text{AG} = 0$$

$$\text{MAX_DTO} \bmod \text{AG} = 0$$

All length information which refers to the address range of the slave itself is based on the AG (ELEMENTS). If the length information refers to the data stream (XCP Protocol), it is based on bytes.

The XCP Protocol Layer Version Number indicates the major version of the Protocol Layer Specification.

The XCP Transport Layer Version Number indicates the major version of the Specification of the current Transport Layer.

1.6.1.1.2 Disconnect from slave

Category Standard, mandatory
Mnemonic DISCONNECT

Position	Type	Description
0	BYTE	Command Code = 0xFE

Brings the slave to the “DISCONNECTED” state.

The “DISCONNECTED” state is described in Part 1, chapter “state machine”.

Negative Response:

If DISCONNECT is currently not possible, ERR_CMD_BUSY will be returned.

1.6.1.1.3 Get current session status from slave

Category Standard, mandatory
Mnemonic GET_STATUS

Position	Type	Description
0	BYTE	Command Code = 0xFD

This command returns all current status information of the slave device. This includes the status of the resource protection, pending store requests and the general status of data acquisition and stimulation.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID = 0xFF
1	BYTE	Current session status
2	BYTE	Current resource protection status
3	BYTE	Reserved
4	WORD	Session configuration id

The Current Session Status parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	RESUME	DAQ_RUNNING	x	x	CLEAR_DAQ_REQ	STORE_DAQ_REQ	x	STORE_CAL_REQ

Flag	Description
STORE_CAL_REQ	REQuest to STORE CALibration data 0 = STORE_CAL_REQ mode is reset. 1 = STORE_CAL_REQ mode is set
STORE_DAQ_REQ	REQuest to STORE DAQ list 0 = STORE_DAQ_REQ mode is reset. 1 = STORE_DAQ_REQ mode is set
CLEAR_DAQ_REQ	REQuest to CLEAR DAQ configuration 0 = CLEAR_DAQ_REQ is reset. 1 = CLEAR_DAQ_REQ is set
DAQ_RUNNING	Data Transfer 0 = Data transfer is not running 1 = Data transfer is running.
RESUME	RESUME Mode 0 = Slave is not in RESUME mode 1 = Slave is in RESUME mode

The STORE_CAL_REQ flag indicates a pending request to save the calibration data into non-volatile memory. As soon as the request has been fulfilled, the slave will reset the appropriate bit. The slave device may indicate this by transmitting an EV_STORE_CAL event packet.

The STORE_DAQ_REQ flag indicates a pending request to save the DAQ list setup into non-volatile memory. As soon as the request has been fulfilled, the slave will reset the appropriate bit. The slave device may indicate this by transmitting an EV_STORE_DAQ event packet.

The CLEAR_DAQ_REQ flag indicates a pending request to clear all DAQ lists in non-volatile memory. All ODT entries reset to address = 0, extension = 0, size = 0 and bit_offset = FF. Session configuration ID reset to 0. As soon as the request has been fulfilled, the slave will reset the appropriate bit. The slave device may indicate this by transmitting an EV_CLEAR_DAQ event packet.

If the slave device does not support the requested mode, an ERR_OUT_OF_RANGE will be returned.

The DAQ_RUNNING flag indicates that at least one DAQ list has been started and is in RUNNING mode.

The RESUME flag indicates that the slave is in RESUME mode.

The Current Resource Protection Status parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	X	x	x	PGM	STIM	DAQ	x	CAL/PAG

Flag	Protected Commands
CAL/PAG	CALibration/PAGing commands 0 = CALibration/PAGing commands are not protected with SEED & Key mechanism 1 = CALibration/PAGing commands are protected with SEED & Key mechanism
DAQ	DAQ list commands (DIRECTION = DAQ) 0 = DAQ list commands are not protected with SEED & Key mechanism 1 = DAQ list commands are protected with SEED & Key mechanism
STIM	DAQ list commands (DIRECTION = STIM) 0 = DAQ list commands are not protected with SEED & Key mechanism 1 = DAQ list commands are protected with SEED & Key mechanism
PGM	ProGraMming commands 0 = ProGraMming commands are not protected with SEED & Key mechanism 1 = ProGraMming commands are protected with SEED & Key mechanism

The commands of the standard group are NEVER protected

The Resource protection flags indicate that all commands allocated to the respective resource are protected and will return an ERR_ACCESS_LOCKED upon an attempt to execute the command without a previous successful GET_SEED/UNLOCK sequence. For the allocation of commands to resources please refer to 1.4 Table of Command codes (CMD).

Session configuration id:

The session configuration id has to be set by a prior SET_REQUEST command with STORE_DAQ_REQ set. This allows the master device to verify that automatically started DAQ lists contain the expected data transfer configuration.

1.6.1.1.4 Synchronize command execution after time-out

Category Standard, mandatory
Mnemonic SYNCH

Position	Type	Description
0	BYTE	Command Code = 0xFC

This command is used to synchronize command execution after timeout conditions. The SYNCH command will always have a negative response with the error code ERR_CMD_SYNCH. There is no other command using this error code, therefore the response to a SYNCH command may be distinguished from the response to any other command.

For a detailed explanation of the purpose of the SYNCH command, please refer to the chapter “time-out handling”.

Negative Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFE
1	BYTE	Error Code = ERR_CMD_SYNCH

1.6.1.2 OPTIONAL COMMANDS

1.6.1.2.1 Get communication mode info

Category Standard, optional
Mnemonic GET_COMM_MODE_INFO


Position	Type	Description
0	BYTE	Command Code = 0xFB

This command returns optional information on different Communication Modes supported by the slave.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Reserved
2	BYTE	COMM_MODE_OPTIONAL
3	BYTE	Reserved
4	BYTE	MAX_BS
5	BYTE	MIN_ST
6	BYTE	QUEUE_SIZE
7	BYTE	XCP Driver Version Number

The COMM_MODE_OPTIONAL parameter is a bit mask described below :

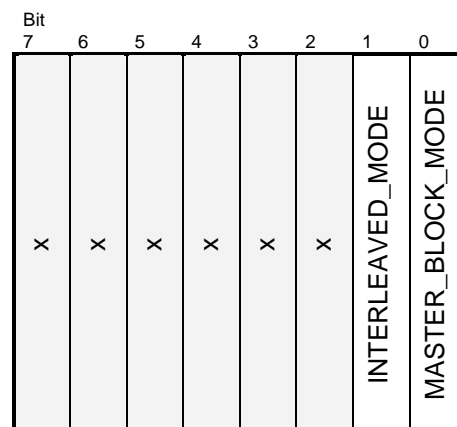

The MASTER_BLOCK_MODE flag indicates whether the Master Block Mode is available.

If the master device block mode is supported, MAX_BS indicates the maximum allowed block size as the number of consecutive command packets (DOWNLOAD_NEXT) in a block sequence. MIN_ST indicates the required minimum separation time between the packets of a block transfer from the master device to the slave device in units of 100 microseconds.

The INTERLEAVED_MODE flag indicates whether the Interleaved Mode is available.

If interleaved mode is available, QUEUE_SIZE indicates the maximum number of consecutive command packets the master can send to the receipt queue of the slave.

The *XCP Driver Version Number* indicates the version number of the *XCP* driver in the slave. The major driver version is the high nibble of the version number, the minor driver version is the low nibble.

1.6.1.2.2 Get identification from slave

Category Standard, optional
Mnemonic GET_ID

Position	Type	Description
0	BYTE	Command Code = 0xFA
1	BYTE	Requested Identification Type

This command is used for automatic session configuration and for slave device identification. The following identification types may be requested:

Type	Description
0	ASCII text
1	ASAM-MC2 filename without path and extension
2	ASAM-MC2 filename with path and extension
3	URL where the ASAM-MC2 file can be found
4	ASAM-MC2 file to upload
128..255	User defined

Which types are supported by the slave device is implementation specific.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Mode
2	WORD	Reserved
4	DWORD	Length [BYTE]
8	BYTE 1	first byte of Identification (if mode = 1)
..
8+Length-1	BYTE n	n th byte of identification

The parameter Length specifies the number of bytes in the identification. If length is 0, the requested identification type is not available. The following rule applies: Length mod AG = 0

The Mode parameter is a bit mask described below :

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	x	x	COMPRESSED_ENCRYPTED	TRANSFER_MODE

If TRANSFER_MODE is 1, the identification is transferred in the remaining bytes of the response.

If TRANSFER_MODE is 0, the slave device sets the *Memory Transfer Address* (MTA) to the location from which the master device may upload the requested identification using one or more UPLOAD commands. For the initial UPLOAD command, the following rule applies:

$$\text{Number of Data Elements UPLOAD [AG]} = (\text{Length GET_ID [BYTE]}) / \text{AG}$$

If COMPRESSED_ENCRYPTED is 1, the transferred data are compressed and/or encrypted. This is only allowed for Identification Type 4, i.e. "ASAM-MC2 file to upload". The XCP master must decompress and/or decrypt the data using an implementation specific algorithm, implemented in an externally calculated function. The interface is described in XCP Part 4.

The identification string is a byte stream of plain ASCII text, it does not have 0 termination.

Examples:

1: test

2: c:\database\test.a2l

3: ftp://ftp.oem.com\data_repository/project_xcp/test.a2l

1.6.1.2.3 Request to save to non-volatile memory

Category Standard, optional
Mnemonic SET_REQUEST

Position	Type	Description
0	BYTE	Command Code = 0xF9
1	BYTE	Mode
2	WORD	Session configuration id

The Mode parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	CLEAR_DAQ_REQ	STORE_DAQ_REQ_RESUME	STORE_DAQ_REQ_NO_RESUME	STORE_CAL_REQ

Flag	Description
STORE_CAL_REQ	REquest to STORE CALibration data 0 = STORE_CAL_REQ is not set. 1 = STORE_CAL_REQ is set
STORE_DAQ_REQ_NO_RESUME	REquest to STORE DAQ list, no RESUME 0 = STORE_DAQ_REQ_NO_RESUME is not set. 1 = STORE_DAQ_REQ_NO_RESUME is set
STORE_DAQ_REQ_RESUME	REquest to STORE DAQ list, RESUME enabled 0 = STORE_DAQ_REQ_RESUME is not set. 1 = STORE_DAQ_REQ_RESUME is set
CLEAR_DAQ_REQ	REquest to CLEAR DAQ configuration 0 = CLEAR_DAQ_REQ is not set. 1 = CLEAR_DAQ_REQ is set

STORE_CAL_REQ sets a request to save calibration data into non-volatile memory. The STORE_CAL_REQ bit obtained by GET_STATUS will be reset by the slave, when the request is fulfilled. The slave device may indicate this by transmitting an EV_STORE_CAL event packet.

STORE_DAQ_REQ_x sets a request to save all DAQ lists, which have been selected with START_STOP_DAQ_LIST(Select) into non-volatile memory. The slave also has to store the session configuration id in non-volatile memory.

Upon saving, the slave first has to clear any DAQ list configuration that might already be stored in non-volatile memory.

The `STORE_DAQ_REQ` bit obtained by `GET_STATUS` will be reset by the slave, when the request is fulfilled. The slave device may indicate this by transmitting an `EV_STORE_DAQ` event packet.

The `STORE_DAQ_REQ_NO_RESUME` does not set the slave into `RESUME` mode. The DAQ lists later on can be started by the `XCP` master at any time within an established `XCP` session.

The `STORE_DAQ_REQ_RESUME` sets a request to save all selected DAQ lists to memory, but at the same time implicitly sets the slave into `RESUME` mode.

`CLEAR_DAQ_REQ` is used to clear all DAQ lists in non-volatile memory. All ODT entries reset to address = 0, extension = 0, size = 0 and bit_offset = FF. Session configuration ID reset to 0.

The `CLEAR_DAQ_REQ` bit obtained by `GET_STATUS` will be reset by the slave, when the request is fulfilled. The slave device may indicate this by transmitting an `EV_CLEAR_DAQ` event packet.

If the slave device does not support the requested mode, an `ERR_OUT_OF_RANGE` will be returned.

1.6.1.2.4 Get seed for unlocking a protected resource

Category Standard, optional (ref. UNLOCK)
Mnemonic GET_SEED

Position	Type	Description
0	BYTE	Command Code = 0xF8
1	BYTE	Mode 0 = (first part of) seed 1 = remaining part of seed
2	BYTE	Mode=0: Resource Mode=1: Don't care

With Mode = 0, the master requests the slave to transmit (the first part of) the seed. The slave answers with (the first part of) the seed and the total length of the seed.

With Mode = 1, the master has to request the remaining part(s) of the seed from the slave if the total length of the seed is bigger than MAX_CTO-2.

The master has to use GET_SEED(Mode=1) in a defined sequence together with GET_SEED(Mode=0). If the master sends a GET_SEED(Mode=1) directly without a previous GET_SEED(Mode=0), the slave returns an ERR_SEQUENCE as negative response.

See command GET_STATUS (resource protection status) for a description for the values of the resource parameter (CAL/PAG, DAQ, STIM, PGM) and the related commands.

Only one resource may be requested with one GET_SEED command. If more than one resource has to be unlocked, the (GET_SEED+UNLOCK) sequence has to be performed multiple times. If the master does not request any resource or requests multiple resources at the same time, the slave will respond with an ERR_OUT_OF_RANGE.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Length of seed [BYTE] Length = 0 resource unprotected Mode = 0 : total length of seed Mode = 1 : remaining length of seed
2..MAX_CTO-1	BYTE	Seed

Length indicates the (remaining) number of seed bytes. If Length = 0, the resource is unprotected and no UNLOCK command is necessary.

A GET_SEED sequence returns the 'seed' data for a **Seed&Key** algorithm computing the 'key' to unlock the requested resource category for authorized access (see the UNLOCK command).

The master has to calculate the key by calling an external function file. There's only 1 external function file which might contain from 1 up to 4 different algorithms, one algorithm for each of the resources CAL/PAG, DAQ, STIM or PGM.

The external function file supplier can enable/disable the use of each of these 4 algorithms. The master can get the information about the ability of the algorithms directly from the external function file.

The external function file supplier can compile different versions of the external function file by making different combinations of enabled algorithms.

The master gets the name of the external function file to be used for this slave, from the ASAM MCD 2MC description file. The API for communicating with the external function file is specified in Part 4 "Interfacing" of the XCP specification.

1.6.1.2.5 Send key for unlocking a protected resource

Category Standard, optional (ref. GET_SEED)
Mnemonic UNLOCK

Position	Type	Description
0	BYTE	Command Code = 0xF7
1	BYTE	(remaining) Length of key in bytes
2..MAX_CTO-1	BYTE	Key

Unlocks the slave device's security protection using a 'key' computed from the 'seed' obtained by a previous GET_SEED sequence. See the description of the GET_SEED command.

Length indicates the (remaining) number of key bytes.

The master has to use UNLOCK in a defined sequence together with GET_SEED.

The master only can send an UNLOCK sequence if previously there was a GET_SEED sequence.

The master has to send the first UNLOCK after a GET_SEED sequence with a Length containing the total length of the key.

If the total length of the key is bigger than MAX_CTO-2, the master has to send the remaining key bytes with (a) consecutive UNLOCK command(s) containing the remaining length of the key.

If the master does not respect this sequence, the slave returns an ERR_SEQUENCE as negative response.

The key is checked after completion of the UNLOCK sequence. If the key is not accepted, ERR_ACCESS_LOCKED will be returned. The slave device will then go to disconnected state. A repetition of an UNLOCK sequence with a correct key will have a positive response and no other effect.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Current resource protection status

The answer upon UNLOCK contains the Current Resource Protection Mask as described at GET_STATUS.

Example 1 :

MAX_CTO = 8 bytes (CAN)

TotalLengthOf(seed) = 4 bytes

TotalLengthOf(key) = 2 bytes

Seed = 11 22 33 44

Key = 43 21

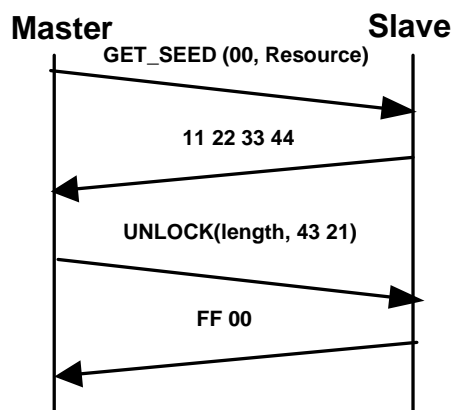


Diagram 17 : short GET_SEED+UNLOCK sequence

Example 2 :

MAX_CTO = 8 bytes (CAN)

TotalLengthOf(seed) = 19 bytes

TotalLengthOf(key) = 10 bytes

Seed = 99 88 77 66 55 44 33 22 11 00 11 22 33 44 55 66 77 88 99

Key = 98 76 54 32 10 01 23 45 67 89

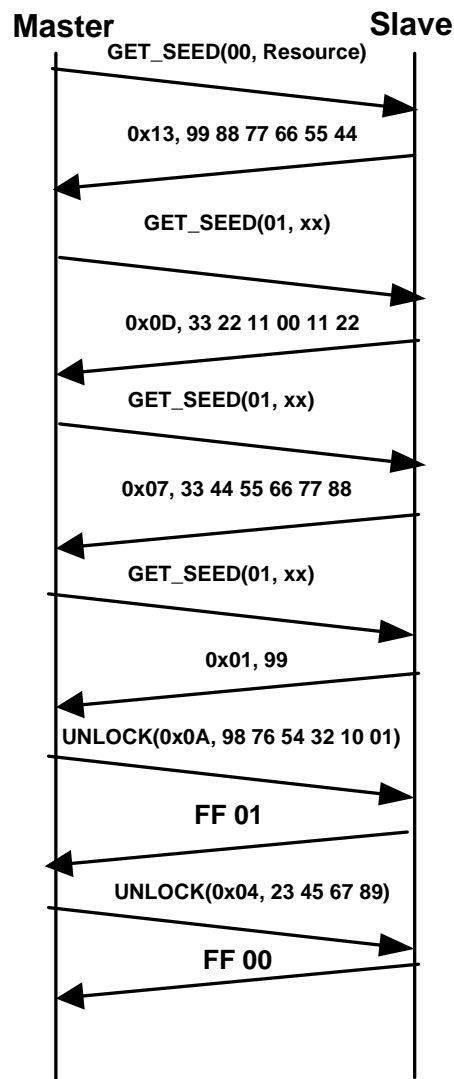


Diagram 18 : long GET_SEED+UNLOCK sequence

1.6.1.2.6 Set Memory Transfer Address in slave

Category Standard, optional
Mnemonic SET_MTA

Position	Type	Description
0	BYTE	Command Code = 0xF6
1	WORD	Reserved
3	BYTE	Address extension
4	DWORD	Address

This command will initialize a pointer (32Bit address + 8Bit extension) for following memory transfer commands.

The MTA is used by the commands BUILD_CHECKSUM, UPLOAD, DOWNLOAD, DOWNLOAD_NEXT, DOWNLOAD_MAX, MODIFY_BITS, PROGRAM_CLEAR, PROGRAM, PROGRAM_NEXT and PROGRAM_MAX.

1.6.1.2.7 Upload from slave to master

Category Standard, optional
Mnemonic UPLOAD

Position	Type	Description
0	BYTE	Command Code = 0xF5
1	BYTE	n = Number of data elements [AG] [1..MAX_CTO/AG -1] Standard mode [1..255] Block mode

A data block of the specified length, starting at the current MTA, will be returned. The MTA will be post-incremented by the given number of data elements.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
..	BYTES	Used for alignment only if AG > 1
AG	ELEMENT 1	1 st data element
..
n*AG	ELEMENT n	n th data element

Depending on AG 1, 2 or 3 alignment bytes must be used in order to meet alignment requirements.

ELEMENT is BYTE. WORD or DWORD, depending upon AG.

If the slave device does not support block transfer mode, all uploaded data are transferred in a single response packet. Therefore the number of data elements parameter in the request has to be in the range [1..MAX_CTO/AG-1]. An ERR_OUT_OF_RANGE will be returned, if the number of data elements is more than MAX_CTO/AG-1.

If block transfer mode is supported, the uploaded data are transferred in multiple responses on the same request packet. For the master there are no limitations allowed concerning the maximum block size. Therefore the number of data elements (n) can be in the range [1..255]. The slave device will transmit $((n*AG)-1) / (MAX_CTO-AG) + 1$ response packets. The separation time between the response packets is depending on the slave device implementation. It's the responsibility of the master device to keep track of all packets and to check for lost packets. It is slave device implementation specific if the data in different response packets are consistent. For instance, this has to be considered, when block upload mode is used to obtain 8 byte floating point objects.

Examples:

MAX_CTO=8

AG=1

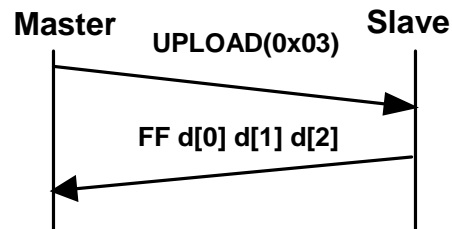


Diagram 19 : UPLOAD 3 bytes

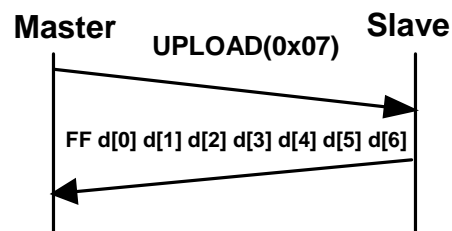


Diagram 20 : UPLOAD 7 bytes

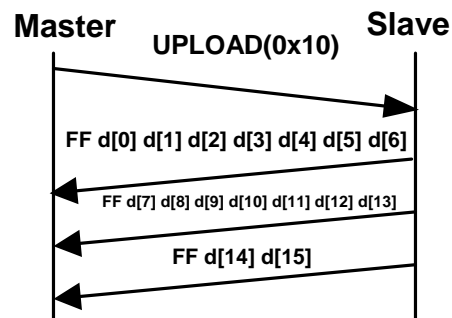


Diagram 21 : UPLOAD 16 bytes in block mode

1.6.1.2.8 Upload from slave to master (short version)

Category Standard, optional
Mnemonic SHORT_UPLOAD

Position	Type	Description
0	BYTE	Command Code = 0xF4
1	BYTE	n = Number of data elements [AG] [1..MAX_CTO/AG]
2	BYTE	Reserved
3	BYTE	Address extension
4	DWORD	Address

A data block of the specified length, starting at address will be returned. The MTA pointer is set to the first data byte behind the uploaded data block. The error handling and the response structure is identical to the UPLOAD command.

ELEMENT is BYTE. WORD or DWORD, depending upon AG.

This command does not support block transfer and it must not be used within a block transfer sequence.

1.6.1.2.9 Build checksum over memory range

Category Standard, optional
Mnemonic BUILD_CHECKSUM

Position	Type	Description
0	BYTE	Command Code = 0xF3
1	BYTE	reserved
2	WORD	reserved
4	DWORD	Block size [AG]

Returns a checksum result of the memory block that is defined by the MTA and Block size. The MTA will be post-incremented by the block size.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Checksum type
2	WORD	Reserved
4	DWORD	Checksum

The following checksum types are defined:

Type	Name	Description
0x01	XCP_ADD_11	Add BYTE into a BYTE checksum, ignore overflows
0x02	XCP_ADD_12	Add BYTE into a WORD checksum, ignore overflows
0x03	XCP_ADD_14	Add BYTE into a DWORD checksum, ignore overflows
0x04	XCP_ADD_22	Add WORD into a WORD checksum, ignore overflows, blocksize must be modulo 2
0x05	XCP_ADD_24	Add WORD into a DWORD checksum, ignore overflows, blocksize must be modulo 2
0x06	XCP_ADD_44	Add DWORD into DWORD, ignore overflows, blocksize must be modulo 4

Type	Name	Description
0x07	XCP_CRC_16	See CRC error detection algorithms
0x08	XCP_CRC_16_CITT	See CRC error detection algorithms
0x09	XCP_CRC_32	See CRC error detection algorithms

Type	Name	Description
0xFF	XCP_USER_DEFINED	User defined algorithm, in externally calculated function

The result is always given as a DWORD, regardless of the checksum type.

With the Checksum Type "XCP_USER_DEFINED", the Slave can indicate that the Master for calculating the checksum has to use a user-defined algorithm implemented in an externally calculated function (e.g. Win32 DLL, UNIX[®] shared object file,...)

The master gets the name of the external function file to be used for this slave, from the ASAM MCD 2MC description file.

The API for communicating with the external function file is specified in Part 4 "Interfacing" of the XCP specification.

Negative Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFE
1	BYTE	Error code
2	WORD	reserved
4	DWORD	Maximum block size [AG]

If the blocksize exceeds the allowed maximum value, an ERR_OUT_OF_RANGE will be returned. The maximum block size will be returned in the checksum field.

The CRC algorithms are specified by the following parameters :

Name	Width	Poly	Init	Refin	Refout	XORout
XCP_CRC_16	16	0x8005	0x0000	TRUE	TRUE	0x0000
XCP_CRC16_CITT	16	0x1021	0xFFFF	FALSE	FALSE	0x0000
XCP_CRC_32	32	0x04C11DB7	0xFFFFFFFF	TRUE	TRUE	0xFFFFFFFF

Name:

this is the name given to the algorithm. A string value starting with "XCP_".

Width:

this is the width of the algorithm expressed in bits. This is one less than the width of the poly.

Poly:

This parameter is the polynomial. This is a binary value that should be specified as a hexadecimal number. The top bit of the poly should be omitted. For example, if the poly is 10110, you should specify 0x06. An important aspect of this parameter is that it represents the unreflected poly; the bottom of this parameter is always the LSB of the divisor during the division, regardless of whether the algorithm is reflected.

Init:

This parameter specifies the initial value of the register when the algorithm starts. This is the value that is to be assigned to the register in the direct table algorithm. In the table algorithm, we may think of the register always commencing with the value zero, and this value being XORed into the register after the N'th bit iteration. This parameter should be specified as a hexadecimal number.

Refin:

This is a Boolean parameter. If it is FALSE, input bytes are processed with bit 7 being treated as the most significant bit (MSB) and bit 0 being treated as the least significant bit. If this parameter is TRUE, each byte is reflected before being processed.

Refout:

This is a boolean parameter. If it is set to FALSE, the final value in the register is fed into the XORout stage directly. If this parameter is TRUE, the final register value is reflected first.

XORout:

This is a width-bit value that should be specified as hexadecimal number. It is XORed to the final register value (after the Refout stage) before the value is returned as the official checksum.

For more detailed information about CRC algorithms, please refer to :

http://www.repairfaq.org/filipg/LINK/F_crc_v34.html

The following tables provide information for validating the checksum calculation algorithms. The test pattern is the hexadecimal representation of the contents of a 32-byte binary file/data stream, starting with the lowest address, ending with the highest address.

Test pattern																															
0x01	0x02	0x03	0x04	0x05	0x06	0x07	0x08	0x09	0x0A	0x0B	0x0C	0x0D	0x0E	0x0F	0x10	0xF1	0xF2	0xF3	0xF4	0xF5	0xF6	0xF7	0xF8	0xF9	0xFA	0xFB	0xFC	0xFD	0xFE	0xFF	0x00

Name	Expected checksum Intel	Expected checksum Motorola
XCP_ADD_11	0x10	0x10
XCP_ADD_12	0x0F10	0x0F10
XCP_ADD_14	0x00000F10	0x00000F10
XCP_ADD_22	0x1800	0x0710
XCP_ADD_24	0x00071800	0x00080710
XCP_ADD_44	0x140C03F8	0xFC040B10

Name	Expected checksum Intel	Expected checksum Motorola
XCP_CRC_16	0xC76A	0xC76A
XCP_CRC_16_CITT	0x9D50	0x9D50
XCP_CRC_32	0x89CD97CE	0x89CD97CE

1.6.1.3 AUXILIARY COMMANDS

1.6.1.3.1 Refer to transport layer specific command

Category Standard, auxiliary
Mnemonic TRANSPORT_LAYER_CMD

Position	Type	Description
0	BYTE	Command Code = 0xF2
1	BYTE	Sub command code
2...	BYTE	Parameters

This command is defined in the Transport Layer specification. It is used to perform Transport Layer specific actions.

Example:

Category CAN only, optional
Mnemonic GET_SLAVE_ID

Position	Type	Description
0	BYTE	Command Code = TRANSPORT_LAYER_CMD = 0xF2
1	BYTE	Sub Command Code = 0xFF
2	BYTE	0x58 (ASCII = X)
3	BYTE	0x43 (ASCII = C)
4	BYTE	0x50 (ASCII = P)
5	BYTE	Mode 0 = identify by echo 1 = confirm by inverse echo

1.6.1.3.2 Refer to user defined command

Category Standard, auxiliary
Mnemonic USER_CMD

Position	Type	Description
0	BYTE	Command Code = 0xF1
1	BYTE	Sub command code
2...	BYTE	Parameters

This command is user defined. It mustn't be used to implement functionalities done by other services.

1.6.2 CALIBRATION COMMANDS (CAL)

1.6.2.1 MANDATORY COMMANDS

1.6.2.1.1 Download from master to slave

Category Calibration, mandatory
Mnemonic DOWNLOAD

Position	Type	Description
0	BYTE	Command Code = 0xF0
1	BYTE	n = Number of data elements [AG] [1..(MAX_CTO-2)/AG] Standard mode [1..min(MAX_BS*(MAX_CTO-2)/AG,255)] Block mode
..	BYTES	Used for alignment, only if AG > 2
AG=1: 2 AG>1: AG	ELEMENT 1	1 st data element
..
AG=1: n+1 AG>1: n*AG	ELEMENT n	n th data element

If AG = DWORD, 2 alignment bytes must be used in order to meet alignment requirements.

ELEMENT is BYTE, WORD or DWORD depending upon AG.

The data block of the specified length (size) contained in the CMD will be copied into memory, starting at the MTA. The MTA will be post-incremented by the number of data elements.

If the slave device does not support block transfer mode, all downloaded data are transferred in a single command packet. Therefore the number of data elements parameter in the request has to be in the range [1..MAX_CTO/AG-2]. An ERR_OUT_OF_RANGE will be returned, if the number of data elements is more than MAX_CTO/AG-2.

After receiving a DOWNLOAD command the XCP slave first has to check whether there are enough resources available in order to cover the complete download request. If the XCP slave does not have enough resources, it has to send ERR_MEMORY_OVERFLOW and does not execute any single download request. If a DOWNLOAD request will be rejected, there have been no changes to the slave's memory contents at all.

If block transfer mode is supported, the downloaded data are transferred in multiple command packets. For the slave however, there might be limitations concerning the maximum number of consecutive command packets (block size MAX_BS). Therefore the number of data elements (n) can be in the range [1..min(MAX_BS*(MAX_CTO-2)/AG,255)].


If AG=1 the master device has to transmit $\lfloor ((n*AG)-1) / (MAX_CTO-2) \rfloor$ additional, consecutive DOWNLOAD_NEXT command packets.

If AG>1 the master device has to transmit $\lfloor ((n*AG)-1) / (MAX_CTO-AG) \rfloor$ additional, consecutive DOWNLOAD_NEXT command packets.

Without any error, the slave device will acknowledge only the last DOWNLOAD_NEXT command packet. The separation time between the command packets and the maximum number of packets are specified in the response for the GET_COMM_MODE_INFO command (MAX_BS, MIN_ST).

If the XCP slave detects an internal problem during a block mode transfer, it can send a negative response at once. If block transfer mode is requested and not enough resources are available, the XCP slave can send the negative response code already after the initial DOWNLOAD command of the XCP master.

Example: MAX_CTO=8

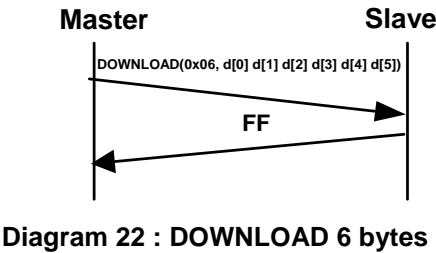

1.6.2.2 OPTIONAL COMMANDS

1.6.2.2.1 Download from master to slave (Block Mode)

Category Calibration, optional
Mnemonic DOWNLOAD_NEXT

Position	Type	Description
0	BYTE	Command Code = 0xEF
1	BYTE	n = Number of data elements [AG] [1..min(MAX_BS*(MAX_CTO-2)/AG,255)-(MAX_CTO-2)/AG]
..	BYTES	Used for alignment, only if AG >2
AG=1: 2 AG>1: AG	ELEMENT 1	1 st data element
..
AG=1: n+1 AG>1: n*AG	ELEMENT n	n th data element

If AG = 4, 2 alignment bytes must be used in order to meet alignment requirements.

ELEMENT is BYTE, WORD or DWORD, depending upon AG.

This command is used to transmit consecutive data elements for the DOWNLOAD command in block transfer mode.

The DOWNLOAD_NEXT command has exactly the same structure as the DOWNLOAD command. It contains the remaining number of data elements to transmit. The slave device will use this information to detect lost packets. If a sequence error has been detected, the error code ERR_SEQUENCE will be returned.

Negative Response:

If the number of data elements does not match the expected value, the error code ERR_SEQUENCE will be returned. The negative response will contain the expected number of data elements.

Position	Type	Description
0	BYTE	Packet ID: 0xFE
1	BYTE	ERR_SEQUENCE
2	BYTE	Number of expected data elements

Example:

MAX_CTO=8

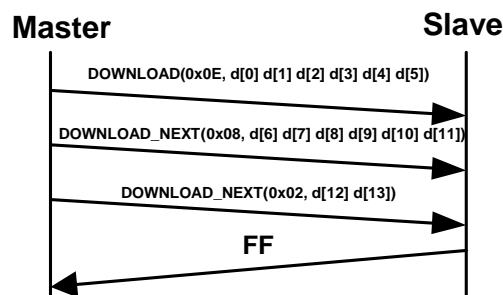


Diagram 23 : DOWNLOAD 14 bytes in block mode

1.6.2.2.2 Download from master to slave (fixed size)

Category Calibration, optional
Mnemonic DOWNLOAD_MAX

Position	Type	Description
0	BYTE	Command Code = 0xEE
..	BYTES	Used for alignment, only if AG >1
AG	ELEMENT 1	1 st data element
..
MAX_CTO-AG	ELEMENT n	n th data element

Depending upon AG, 1 or 3 alignment bytes must be used in order to meet alignment requirements.

ELEMENT is BYTE, WORD or DWORD, depending upon AG.

The data block with the fixed length n of MAX_CTO/AG-1 elements contained in the CMD will be copied into memory, starting at the MTA. The MTA will be post-incremented by MAX_CTO/AG-1.

After receiving a DOWNLOAD_MAX command the XCP slave first has to check whether there are enough resources available in order to cover the complete download request. If the XCP slave does not have enough resources, it has to send ERR_MEMORY_OVERFLOW and does not execute any single download request. If a DOWNLOAD_MAX request will be rejected, there have been no changes to the slave's memory contents at all.

This command does not support block transfer and it must not be used within a block transfer sequence.

1.6.2.2.3 Download from master to slave (short version)

Category Calibration, optional
Mnemonic SHORT_DOWNLOAD

Position	Type	Description
0	BYTE	Command Code = 0xED
1	BYTE	Number of data elements $[0..(MAX_CTO-8)/AG]$
2	BYTE	Reserved
3	BYTE	Address extension
4	DWORD	Address
8	ELEMENT	Data elements

ELEMENT is BYTE, WORD or DWORD, depending upon AG.

A data block of the specified length, starting at address will be written. The MTA pointer is set to the first data element behind the downloaded data block. If the number of elements exceeds $(MAX_CTO-8)/AG$, the error code ERR_OUT_OF_RANGE will be returned.

After receiving a SHORT_DOWNLOAD command the XCP slave first has to check whether there are enough resources available in order to cover the complete download request. If the XCP slave does not have enough resources, it has to send ERR_MEMORY_OVERFLOW and does not execute any single download request. If a SHORT_DOWNLOAD request will be rejected, there have been no changes to the slave's memory contents at all.

This command does not support block transfer and it mustn't be used within a block transfer sequence.

Please note that this command will have no effect (no data bytes can be transferred) if $MAX_CTO = 8$ (e.g. XCP on CAN).

1.6.2.2.4 Modify bits

Category Calibration, optional
Mnemonic MODIFY_BITS

Position	Type	Description
0	BYTE	Command Code = 0xEC
1	BYTE	Shift Value (S)
2	WORD	AND Mask (MA)
4	WORD	XOR Mask (MX)

The 32 Bit memory location A referred by the MTA will be modified using the formula below:

$$A = (A \& ((\sim((\text{dword})((\text{word})\sim\text{MA})\ll S))) \wedge ((\text{dword})(\text{MX}\ll S)))$$

The AND Mask (MA) specifies all the bits of A which have to be set to “0” by setting the corresponding bit in MA to “0” and all untouched bits to “1”.

The XOR Mask (MX) specifies all bits of A which has to be toggled by setting the corresponding bit in MX to “1” and all untouched bits to “0”.

To set bit 0 to “0”, use MA = 0xFFFE and MX = 0x0000.

To set bit 0 to “1” first set it to “0” and then toggle it, so MA = 0xFFFE and MX = 0x0001.

Via the masks MA and MX it is only possible to access a 16 bit wide memory location. Thus the shift parameter S is used to move both masks together with the specified number of bits into the more significant direction.

Example:

MSB
LSB
A = 1111 1111 1111 0000 1111 1111 1111 1111

To set bit 30 to “0” and bit 16 to “1” the parameters are:

S=16
A = 1111 1111 1111 0000 1111 1111 1111 1111
MA = 1011 1111 1111 1110
MX = 0000 0000 0000 0001

Result:
A = 1011 1111 1111 0001 1111 1111 1111 1111

The MTA will not be affected.

1.6.3 PAGE SWITCHING COMMANDS (PAG)

1.6.3.1 OPTIONAL COMMANDS

1.6.3.1.1 Set calibration page

Category	Page switching, optional
Mnemonic	SET_CAL_PAGE

This command sets the access mode for a calibration data segment, if the slave device supports calibration data page switching (PAG flag in the resource availability mask).

Position	Type	Description
0	BYTE	Command Code = 0xEB
1	BYTE	Mode
2	BYTE	Logical data segment number
3	BYTE	Logical data page number

A calibration data segment and its pages are specified by logical numbers.

The Mode parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	All	x	x	x	x	x	XCP	ECU

Flag	Description
ECU	The given page will be used by the slave device application.
XCP	The slave device XCP driver will access the given page.
ALL	The logical segment number is ignored. The command applies to all segments

Both flags ECU and XCP may be set simultaneously or separately.

If the calibration data page cannot be set to the given mode, an ERR_MODE_NOT_VALID will be returned.

If the calibration data page is not available, a ERR_PAGE_NOT_VALID or ERR_SEGMENT_NOT_VALID will be returned.

1.6.3.1.2 Get calibration page

Category Page switching, optional
Mnemonic GET_CAL_PAGE

Position	Type	Description
0	BYTE	Command Code = 0xEA
1	BYTE	Access Mode
2	BYTE	Logical data segment number

This command returns the logical number for the calibration data page that is currently activated for the specified access mode and data segment. Mode may be 0x01 (ECU access) or 0x02 (XCP access). All other values are invalid.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	reserved
2	BYTE	reserved
3	BYTE	Logical data page number

1.6.3.1.3 Get general information on PAG processor

Category Paging, optional
Mnemonic GET_PAG_PROCESSOR_INFO

Position	Type	Description
0	BYTE	Command Code = 0xE9


This command returns general information on paging.

Positive response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	MAX_SEGMENT total number of available segments
2	BYTE	PAG_PROPERTIES General properties for paging

MAX_SEGMENT is the total number of segments in the slave device

The PAG_PROPERTIES parameter is a bit mask described below:

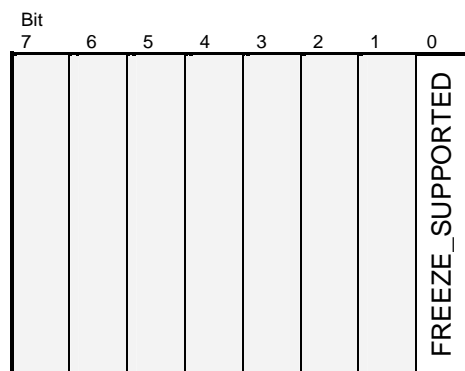

Flag	Description
FREEZE_SUPPORTED	0 = SEGMENTS can not be set to FREEZE mode. 1 = SEGMENTS can be set to FREEZE mode.

The FREEZE_SUPPORTED flag indicates that all SEGMENTS can be put in FREEZE mode.

1.6.3.1.4 Get specific information for a SEGMENT

Category Page switching, optional
Mnemonic GET_SEGMENT_INFO

Position	Type	Description
0	BYTE	Command Code = 0xE8
1	BYTE	Mode 0 = get basic address info for this SEGMENT 1 = get standard info for this SEGMENT 2 = get address mapping info for this SEGMENT
2	BYTE	SEGMENT_NUMBER [0,1,..MAX_SEGMENT-1]
3	BYTE	SEGMENT_INFO Mode 0: 0 = address 1 = length Mode 1: don't care Mode 2: 0 = source address 1 = destination address 2 = length address
4	BYTE	MAPPING_INDEX [0,1,..MAX_MAPPING-1] Mode 0: don't care Mode 1: don't care Mode 2: identifier for address mapping range that MAPPING_INFO belongs to

GET_SEGMENT_INFO returns information on a specific SEGMENT.

If the specified SEGMENT is not available, ERR_OUT_OF_RANGE will be returned.

For Mode = 0 and Mode = 2, SEGMENT_INFO contains address range information.

If Mode = 1, SEGMENT_INFO is "don't care".

For Mode = 2, MAPPING_INDEX indicates the range MAPPING_INFO belongs to.

For Mode = 0 and Mode = 1, MAPPING_INDEX is "don't care"

If Mode = 0, SEGMENT_INFO indicates the kind of segment information that is requested from the slave for this SEGMENT.

Positive response: (mode = 0)

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	reserved
2	WORD	reserved
4..7	DWORD	BASIC_INFO 0 = address of this SEGMENT 1 = length of this SEGMENT

If Mode = 0, the response contains address information about this SEGMENT.

If SEGMENT_INFO = 0 , this command returns the address of this SEGMENT in BASIC_INFO.

If SEGMENT_INFO = 1 , this command returns the length of this SEGMENT in BASIC_INFO.

Positive response: (mode = 1)

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	MAX_PAGES number of PAGEs for this SEGMENT
2	BYTE	ADDRESS_EXTENSION address extension for this SEGMENT
3	BYTE	MAX_MAPPING number of mapped address ranges within this SEGMENT
4	BYTE	Compression method
5	BYTE	Encryption method

If Mode = 1, the response contains standard information about this SEGMENT.

MAX_PAGES indicates the number of available PAGEs for this SEGMENT.

ADDRESS_EXTENSION is used in SET_MTA, SHORT_UPLOAD and SHORT_DOWNLOAD when accessing a PAGE within this SEGMENT.

MAX_MAPPING indicates the number of address ranges within this SEGMENT that should have an address mapping applied.

The compression and the encryption method of the slave segment must correspond to the compression and the encryption method of the segment of the new flashware.

If Mode = 2, SEGMENT_INFO indicates the kind of mapping information that is requested from the slave for the range referenced by MAPPING_INDEX.

Positive response: (mode = 2)

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	reserved
2	WORD	reserved
4..7	DWORD	MAPPING_INFO 0 = source address for this MAPPING_INDEX 1 = destination address for this MAPPING_INDEX 2 = length for this MAPPING_INDEX

If Mode = 2, the response contains mapping information about this SEGMENT for the range indicated with MAPPING_INDEX.

If SEGMENT_INFO = 0 , this command returns the source address for this MAPPING_INDEX in MAPPING_INFO.

If SEGMENT_INFO = 1 , this command returns the destination address for this MAPPING_INDEX in MAPPING_INFO.

If SEGMENT_INFO = 2 , this command returns the length for this MAPPING_INDEX in MAPPING_INFO.

1.6.3.1.5 Get specific information for a PAGE

Category Page switching, optional
Mnemonic GET_PAGE_INFO

Position	Type	Description
0	BYTE	Command Code = 0xE7
1	BYTE	Reserved
2	BYTE	SEGMENT_NUMBER [0,1,..MAX_SEGMENT-1]
3	BYTE	PAGE_NUMBER [0,1,..MAX_PAGE-1]

GET_PAGE_INFO returns information on a specific PAGE.
If the specified PAGE is not available, ERR_OUT_OF_RANGE will be returned.

Positive response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	PAGE_PROPERTIES
2	BYTE	INIT_SEGMENT [0,1,..MAX_SEGMENT-1] SEGMENT that initializes this PAGE

The PAGE_PROPERTIES parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	x	x	XCP_WRITE_ACCESS_WITH_ECU	XCP_WRITE_ACCESS_WITHOUT_ECU	XCP_READ_ACCESS_WITH_ECU	XCP_READ_ACCESS_WITHOUT_ECU	ECU_ACCESS_WITH_XCP	ECU_ACCESS_WITHOUT_XCP


The ECU_ACCESS_x flags indicate whether and how the ECU can access this page. If the ECU can access this PAGE, the ECU_ACCESS_x flags indicate whether the ECU can access this PAGE only if the XCP master does NOT access this PAGE at the same time, only if the XCP master accesses this page at the same time, or the ECU doesn't care whether the XCP master accesses this page at the same time or not.

Bit		
1	0	
ECU_ACCESS_WITH_XCP	ECU_ACCESS_WITHOUT_XCP	ECU_ACCESS_TYPE
0	0	ECU access not allowed
0	1	without XCP only
1	0	with XCP only
1	1	don't care

The XCP_x_ACCESS_y flags indicate whether and how the XCP master can access this page. The flags make a distinction for the XCP_ACCESS_TYPE depending on the kind of access the XCP master can have on this page (READABLE and/or WRITEABLE).

Bit		
3	2	
XCP_READ_ACCESS_WITH_ECU	XCP_READ_ACCESS_WITHOUT_ECU	XCP_READ_ACCESS_TYPE
0	0	XCP READ access not allowed
0	1	without ECU only
1	0	with ECU only
1	1	don't care

If the XCP master can access this PAGE, the XCP_READ_ACCESS_x flags indicate whether the XCP master can read from this PAGE only if the ECU does NOT access this PAGE at the same time, only if the ECU accesses this page at the same time, or the XCP master doesn't need to care whether the ECU accesses this page at the same time or not.

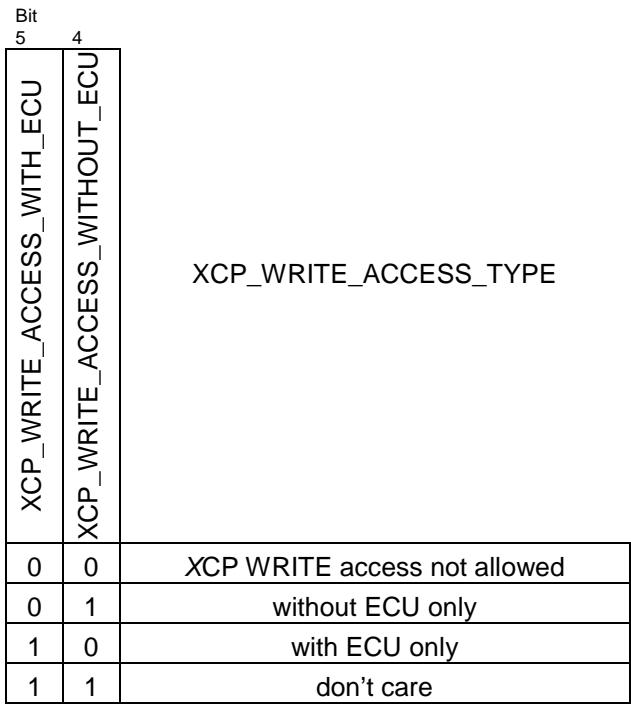

If the XCP master can access this PAGE, the XCP_WRITE_ACCESS_x flags indicate whether the XCP master can write to this PAGE only if the ECU does NOT access this PAGE at the same time, only if the ECU accesses this page at the same time, or the XCP master doesn't need to care whether the ECU accesses this page at the same time or not.

PAGE 0 of the INIT_SEGMENT of a PAGE contains the initial data for this PAGE.


1.6.3.1.6 Set mode for a SEGMENT

Category Page switching, optional
Mnemonic SET_SEGMENT_MODE

Position	Type	Description
0	BYTE	Command Code = 0xE6
1	BYTE	Mode
2	BYTE	SEGMENT_NUMBER [0,1,..MAX_SEGMENT-1]

If the specified SEGMENT is not available, ERR_OUT_OF_RANGE will be returned.

The Mode parameter is a bit mask described below:

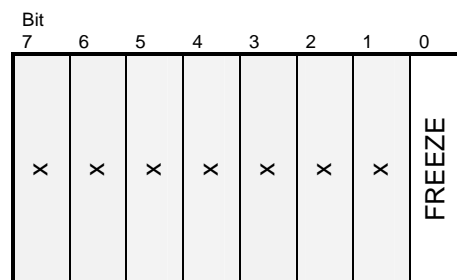

Flag	Description
FREEZE	0 = disable FREEZE Mode 1 = enable FREEZE Mode

The FREEZE flag selects the SEGMENT for freezing through STORE_CAL_REQ.

1.6.3.1.7 Get mode for a SEGMENT

Category Page switching, optional
Mnemonic GET_SEGMENT_MODE


Position	Type	Description
0	BYTE	Command Code = 0xE5
1	BYTE	Reserved
2	BYTE	SEGMENT_NUMBER [0,1,..MAX_SEGMENT-1]

If the specified SEGMENT is not available, ERR_OUT_OF_RANGE will be returned.

Positive response:

Position	Type	Description
0	BYTE	Command Code = 0xFF
1	BYTE	reserved
2	BYTE	Mode

The Mode parameter is a bit mask described below:

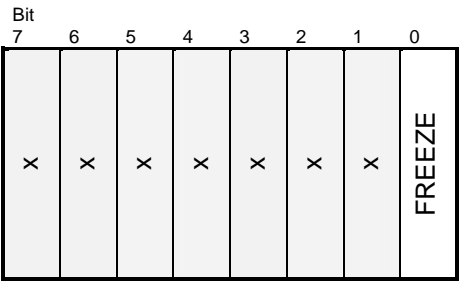

1.6.3.1.8 Copy page

Category Page switching, optional
Mnemonic COPY_CAL_PAGE

This command forces the slave to copy one calibration page to another.

This command is only available if more than one calibration page is defined.

Position	Type	Description
0	BYTE	Command Code = 0xE4
1	BYTE	Logical data segment number source
2	BYTE	Logical data page number source
3	BYTE	Logical data segment number destination
4	BYTE	Logical data page number destination

In principal any page of any segment can be copied to any page of any segment. However, restrictions might be possible.

If calibration data page cannot be copied to the given destination, e.g. because the location of destination is a flash segment, an ERR_WRITE_PROTECTED will be returned. In this case Flash programming procedure has to be performed.

If the calibration data page is not available, an ERR_PAGE_NOT_VALID or ERR_SEGMENT_NOT_VALID will be returned.

1.6.4 DATA ACQUISITION AND STIMULATION COMMANDS (DAQ)

1.6.4.1 BASICS

1.6.4.1.1 Mandatory commands

1.6.4.1.1.1 Set pointer to ODT entry

Category Data acquisition and stimulation, basic, mandatory
Mnemonic SET_DAQ_PTR

Position	Type	Description
0	BYTE	Command Code = 0xE2
1	BYTE	Reserved
2	WORD	DAQ_LIST_NUMBER [0,1,..MAX_DAQ-1]
4	BYTE	ODT_NUMBER [0,1,..MAX_ODT(DAQ list)-1]
5	BYTE	ODT_ENTRY_NUMBER [0,1,..MAX_ODT_ENTRIES(DAQ list)-1]

Initializes the DAQ list pointer for a subsequent operation with WRITE_DAQ or READ_DAQ.
If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

ODT_NUMBER is the relative ODT number within this DAQ list.

ODT_ENTRY_NUMBER is the relative ODT entry number within this ODT.

1.6.4.1.1.2 Write element in ODT entry

Category Data acquisition and stimulation, basic, mandatory
Mnemonic WRITE_DAQ

Position	Type	Description
0	BYTE	Command Code = 0xE1
1	BYTE	BIT_OFFSET [0..31] Position of bit in 32-bit variable referenced by the address and extension below
2	BYTE	Size of DAQ element [AG] 0 ≤ size ≤ MAX_ODT_ENTRY_SIZE_x
3	BYTE	Address extension of DAQ element
4	DWORD	Address of DAQ element

Writes one ODT entry to a DAQ list defined by the DAQ list pointer (see SET_DAQ_PTR).

WRITE_DAQ is only possible for elements in configurable DAQ lists. Therefore the DAQ_LIST_NUMBER used in the previous SET_DAQ_PTR has to be in the range [MIN_DAQ, MIN_DAQ+1,..MAX_DAQ-1]. Otherwise the slave will return an ERR_WRITE_PROTECTED as negative response upon WRITE_DAQ.

The BIT_OFFSET field allows the transmission of data stimulation elements that represent the status of a bit. For a MEASUREMENT that's in a DAQ list with DIRECTION = DAQ, the key word BIT_MASK describes the mask to be applied to the measured data to find out the status of a single bit. For a MEASUREMENT that's in a DAQ list with DIRECTION = STIM, the key word BIT_MASK describes the position of the bit that has to be stimulated. The Master has to transform the BIT_MASK to the BIT_OFFSET

e.g Bit7 → BIT_MASK = 0x80 → BIT_OFFSET = 0x07

When BIT_OFFSET = FF, the field can be ignored and the WRITE_DAQ applies to a normal data element with size expressed in AG. If the BIT_OFFSET is from 0x00 to 0x1F, the ODT entry describes an element that represents the status of a bit. In this case, the Size of DAQ element always has to be equal to the GRANULARITY_ODT_ENTRY_SIZE_x. If the value of this element = 0, the value for the bit = 0. If the value of the element > 0, the value for the bit = 1.

The size of an ODT entry has to fulfill the rules for granularity and maximum value. (ref. GET_DAQ_RESOLUTION_INFO).

The DAQ list pointer is auto post incremented to the next ODT entry within one and the same ODT. After writing to the last ODT entry of an ODT, the value of the DAQ pointer is undefined. The master has to make sure the correct position of the DAQ pointer when writing to the next ODT respectively the next DAQ list.

1.6.4.1.1.3 Set mode for DAQ list

Category Data acquisition and stimulation, basic, mandatory
Mnemonic SET_DAQ_LIST_MODE

Position	Type	Description
0	BYTE	Command Code = 0xE0
1	BYTE	Mode
2	WORD	DAQ_LIST_NUMBER [0,1,..MAX_DAQ-1]
4	WORD	Event channel number [0,1,..MAX_EVENT_CHANNEL-1]
6	BYTE	Transmission rate prescaler (=>1)
7	BYTE	DAQ list priority (FF Highest)

This command can be used for PREDEFINED and for configurable DAQ lists, so the range for DAQ_LIST_NUMBER is [0,1,..MAX_DAQ-1].

If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

The Mode parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	x	x	PID_OFF	TIMESTAMP	x	x	DIRECTION	ALTERNATING

Flag	Description
ALTERNATING	0 = disable alternating display mode 1 = enable alternating display mode
DIRECTION	0 = DAQ set to Data Acquisition Mode (Slave → Master) 1 = STIM set to Data Stimulation Mode (Master → Slave)
TIMESTAMP	0 = disable timestamp 1 = enable timestamp
PID_OFF	0 = transmit DTO with Identification Field 1 = transmit DTO without Identification Field

The DIRECTION flag sets the DAQ list into synchronized data acquisition or synchronized data stimulation mode.

The master is not allowed to set the ALTERNATING flag and the TIMESTAMP flag at the same time. Therefore, a slave in its ASAM MCD 2MC description file is not allowed to use TIMESTAMP_FIXED and DAQ_ALTERNATING_SUPPORTED at the same time.

The master can set the ALTERNATING flag only when setting DIRECTION=DAQ at the same time.

The **TIMESTAMP** and **PID_OFF** flags can be used as well for **DIRECTION = DAQ** as for **DIRECTION = STIM**.

The **TIMESTAMP** flag sets the DAQ list into time stamped mode.

The **TIMESTAMP_FIXED** flag in **TIMESTAMP_MODE** at **GET_DAQ_RESOLUTION_INFO** indicates that the Master can not switch off the time stamp with **SET_DAQ_LIST_MODE**. If the Master nevertheless tries to do so, the Slave will answer with an **ERR_CMD_SYNTAX**.

For **DIRECTION = DAQ**, time stamped mode means that the slave device transmits the current value of its clock in the first ODT of the DAQ cycle.

The **PID_OFF** flag turns off the transmission of the Identification Field in each DTO packet. Turning off the transmission of the Identification Field is only allowed if the Identification Field Type is "absolute ODT number". If the Identification Field is not transferred in the XCP Packet, the unambiguous identification has to be done on the level of the Transport Layer. This can be done e.g. on CAN with separate CAN-Ids for each DAQ list and only one ODT for each DAQ list. In this case turning off the Identification Field would allow the transmission of 8 byte signals on CAN.

The Event Channel Number specifies the generic signal source that effectively determines the data transmission timing.

To allow reduction of the desired transmission rate, a transmission rate prescaler may be applied to the DAQ lists. Without reduction, the prescaler value must equal 1. For reduction, the prescaler has to be greater than 1. The use of a prescaler is only used for DAQ lists with **DIRECTION = DAQ**.

The DAQ list priority specifies the priority of this DAQ list if this DAQ list is processed together with other DAQ lists. The slave device driver may use this information to prioritize the transmission of data packets. DAQ list priority = 0 means that the slave may buffer the data and process them in a background task. DAQ list priority > 0 means that the slave has to process the data as fast as possible within the current raster. The DAQ-list with DAQ list priority = FF has the highest priority

If the ECU doesn't support the prioritization of DAQ lists, a DAQ list priority > 0 is not allowed and will be indicated by returning **ERR_OUT_OF_RANGE**.

1.6.4.1.1.4 Start /stop/select DAQ list

Category Data acquisition and stimulation, basic, mandatory
Mnemonic START_STOP_DAQ_LIST

Position	Type	Description
0	BYTE	Command Code = 0xDE
1	BYTE	Mode 00 = stop 01 = start 02 = select
2	WORD	DAQ_LIST_NUMBER [0,1,..MAX_DAQ-1]

This command can be used for PREDEFINED and for configurable DAQ lists, so the range for DAQ_LIST_NUMBER is [0,1,..MAX_DAQ-1].

If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

This command is used to start, stop or to prepare a synchronized start of the specified DAQ_LIST_NUMBER.

The mode parameter allows to start or stop this specific DAQ list.

The select mode configures the DAQ list with the provided parameters but does not start the data transmission of the specified list. This mode is used for a synchronized start/stop of all configured DAQ lists (ref. START_STOP_SYNCH) or for preparing the slave for storing DAQ lists (ref. SET_REQUEST).

The slave has to reset the SELECTED flag in the mode at GET_DAQ_LIST_MODE as soon as the related START_STOP_SYNCH or SET_REQUEST have been acknowledged.

If at least one DAQ list has been started, the slave device is in data transfer mode. The GET_STATUS command will return the DAQ_RUNNING status bit set.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	FIRST_PID

If the DTO Packets have an Identification Field Type “absolute ODT number”, FIRST_PID is the absolute ODT number in the DTO Packet of the first ODT transferred by this DAQ list.

The absolute ODT number for any other ODT can be determined by:

$$\begin{aligned} & \text{Absolute_ODT_number(ODT } i \text{ in DAQ list } j) \\ &= \text{FIRST_PID(DAQ list } j) + \text{relative_ODT_NUMBER(ODT } i) \end{aligned}$$

If the DTO Packets have an Identification Field Type “relative ODT number and absolute DAQ list number”, FIRST_PID can be ignored.

1.6.4.1.1.5 Start/stop DAQ lists (synchronously)

Category Data acquisition and stimulation, basic, mandatory
Mnemonic START_STOP_SYNC

Position	Type	Description
0	BYTE	Command Code = 0xDD
1	BYTE	Mode 00 = stop all 01 = start selected 02 = stop selected

This command is used to perform a synchronized start/stop of the transmission of DAQ lists.

The parameter Mode indicates the action and whether the command applies to all DAQ lists or to the selected ones only (previously configured with START_STOP_DAQ_LIST(select)). The slave device software has to reset the mode SELECTED of a DAQ list after successful execution of a START_STOP_SYNC.

1.6.4.1.2 Optional commands

1.6.4.1.2.1 Write multiple elements in ODT

Category Data acquisition and stimulation, basic, optional
Mnemonic WRITE_DAQ_MULTIPLE

Position	Type	Description
0	BYTE	Command Code = 0xC7
1	BYTE	n = NoDAQ, number of consecutive DAQ elements
2	BYTE	BIT_OFFSET [0..31] of 1 st element Position of bit in 32-bit variable referenced by the address and extension below
3	BYTE	Size of 1 st DAQ element 0 <= size <= MAX_ODT_ENTRY_SIZE_DAQ_x
4	DWORD	Address of 1 st DAQ element
8	BYTE	Address extension of 1 st DAQ element
9	BYTE	Dummy for alignment of the next element
10	BYTE	BIT_OFFSET [0..31] of 2 nd element Position of bit in 32-bit variable referenced by the address and extension below
11	BYTE	Size of 2 nd DAQ element 0 <= size <= MAX_ODT_ENTRY_SIZE_DAQ_x
12	DWORD	Address of 2 nd DAQ element
16	BYTE	Address extension of 2 nd DAQ element
17	BYTE	Dummy for alignment of the next element
..
(n-1)*8+2	BYTE	BIT_OFFSET [0..31] of n th element Position of bit in 32-bit variable referenced by the address and extension below
(n-1)*8+3	BYTE	Size of n th DAQ element 0 <= size <= MAX_ODT_ENTRY_SIZE_DAQ_x
(n-1)*8+4	DWORD	Address of n th DAQ element
n*8	BYTE	Address extension of n th DAQ element
n*8+1	BYTE	Dummy of the last element

This command is used to write consecutive ODT entries to a DAQ list defined by the DAQ list pointer (see SET_DAQ_PTR).

NoDAQ is the number of consecutively written DAQ elements. NoDAQ is limited by the maximum command packet size MAX_CTO.

The dummy byte at the end of each DAQ element must be used for alignment issues, even for the last element.

In general WRITE_DAQ_MULTIPLE has the same restrictions as the WRITE_DAQ command. All DAQ entries within one WRITE_DAQ_MULTIPLE must be written into one ODT. WRITE_DAQ_MULTIPLE must not be used to write over ODT borders.

The error handling is identical to the one for WRITE_DAQ. However, it is not possible to detect which entry caused the error. In that case the whole configuration is invalid.

If the optional command WRITE_DAQ_MULTIPLE is used, the requirement MAX_CTO>=10 has to be fulfilled.

1.6.4.1.2.2 Read element from ODT entry

Category Data acquisition and stimulation, basic, optional
Mnemonic READ_DAQ

Position	Type	Description
0	BYTE	Command Code = 0xDB

Reads one ODT entry of a DAQ list defined by the DAQ list pointer. The DAQ list pointer is auto post incremented within one and the same ODT (See WRITE_DAQ).

READ_DAQ is possible for elements in PREDEFINED and configurable DAQ lists. Therefore the DAQ_LIST_NUMBER used in the previous SET_DAQ_PTR can be in the range [0,1,..MAX_DAQ-1].

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	BIT_OFFSET [0..31] Position of bit in 32-bit variable referenced by the address and extension below
2	BYTE	Size of DAQ element [AG] 0<= size <=MAX_ODT_ENTRY_SIZE_x
3	BYTE	Address extension of DAQ element
4	DWORD	Address of DAQ element

The size of an ODT entry has to fulfill the rules for granularity and maximum value. (ref. GET_DAQ_RESOLUTION_INFO).

1.6.4.1.2.3 Get DAQ clock from slave

Category Data acquisition and stimulation, basic, optional
Mnemonic GET_DAQ_CLOCK

Position	Type	Description
0	BYTE	Command Code = 0xDC

This command is used to synchronize the free running data acquisition clock of the slave device with the data acquisition clock in the master device. It is optional, if the slave device does not support timestamped data acquisition.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	reserved
2	WORD	reserved
4	DWORD	Receive Timestamp

The returned receive timestamp has the format specified by the GET_DAQ_RESOLUTION_INFO command. It contains the current value of the data acquisition clock, when the GET_DAQ_CLOCK command packet has been received. The accuracy of the time synchronization between the master and the slave device is depending on the accuracy of this value.

On CAN based systems, the master device would be able to determine when the GET_DAQ_CLOCK command packet has been transmitted. This value corresponds to the point in time, when it has been received in the slave device. Based on the returned timestamp, the master device can calculate the time offset between the master and the slave device clock.

Compensating the time drift between the master and the slave device clocks is in the responsibility of the master device

1.6.4.1.2.4 Get general information on DAQ processor

Category Data acquisition and stimulation, basic, optional
Mnemonic GET_DAQ_PROCESSOR_INFO

Position	Type	Description
0	BYTE	Command Code = 0xDA

This command returns general information on DAQ lists.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	DAQ_PROPERTIES General properties of DAQ lists
2	WORD	MAX_DAQ Total number of available DAQ lists
4	WORD	MAX_EVENT_CHANNEL Total number of available event channels
6	BYTE	MIN_DAQ Total number of predefined DAQ lists
7	BYTE	DAQ_KEY_BYTE

The DAQ_PROPERTIES parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	OVERLOAD_EVENT	OVERLOAD_MSB	PID_OFF_SUPPORTED	TIMESTAMP_SUPPORTED	BIT_STIM_SUPPORTED	RESUME_SUPPORTED	PRESCALER_SUPPORTED	DAQ_CONFIG_TYPE

Flag	Description
DAQ_CONFIG_TYPE	0 = static DAQ list configuration 1 = dynamic DAQ list configuration
PRESCALER_SUPPORTED	0 = Prescaler not supported 1 = prescaler supported
RESUME_SUPPORTED	0 = DAQ lists can not be set to RESUME mode. 1 = DAQ lists can be set to RESUME mode.
BIT_STIM_SUPPORTED	0 = bitwise data stimulation not supported 1 = bitwise data stimulation supported
TIMESTAMP_SUPPORTED	0 = time stamped mode not supported 1 = time stamped mode supported
PID_OFF_SUPPORTED	0 = Identification Field can not be switched off 1 = Identification Field may be switched off

The DAQ_CONFIG_TYPE flag indicates whether the DAQ lists that are not PREDEFINED shall be configured statically or dynamically.

The PRESCALER_SUPPORTED flag indicates that all DAQ lists support the prescaler for reducing the transmission period.

The RESUME_SUPPORTED flag indicates that all DAQ lists can be put in RESUME mode.

The BIT_STIM_SUPPORTED flag indicates whether bitwise data stimulation through BIT_OFFSET in WRITE_DAQ is supported.

The TIMESTAMP_SUPPORTED flag indicates whether the slave supports time stamped data acquisition and stimulation. If the slave doesn't support a time stamped mode, the parameters TIMESTAMP_MODE and TIMESTAMP_TICKS (GET_DAQ_RESOLUTION_INFO) are invalid.

The OVERLOAD_MSB and OVERLOAD_EVENT flags indicate the used overload indication method:

Bit		Overload indication type
7	6	
OVERLOAD_EVENT	OVERLOAD_MSB	
0	0	No overload indication
0	1	overload indication in MSB of PID
1	0	overload indication by Event Packet
1	1	not allowed

For indicating an overload situation, the slave may set the Most Significant Bit (MSB) of the PID of the next successfully transmitted packet. When the MSB of the PID is used, the maximum number of (absolute or relative) ODT numbers is limited and has to be in the range

$$0x00 \leq \text{ODT_NUMBER}(\text{DAQ with overrun_msb}) < 0x7C$$

Alternatively the slave may transmit an „EV_DAQ_OVERLOAD,, event packet. The slave must take care not to overload another cycle with this additional packet.

MAX_DAQ is the total number of DAQ lists available in the slave device. It includes the predefined DAQ lists that are not configurable (indicated with PREDEFINED at GET_DAQ_LIST_INFO) and the ones that are configurable. If DAQ_CONFIG_TYPE = dynamic, MAX_DAQ equals MIN_DAQ+DAQ_COUNT.

MIN_DAQ is the number of predefined DAQ lists. For predefined DAQ lists, DAQ_LIST_NUMBER is in the range [0,1,..MIN_DAQ-1].

DAQ_COUNT is the number of dynamically allocated DAQ lists.

MAX_DAQ-MIN_DAQ is the number of configurable DAQ lists. For configurable DAQ lists, DAQ_LIST_NUMBER is in the range [MIN_DAQ,MIN_DAQ+1,..MAX_DAQ-1].

MAX_EVENT_CHANNEL is the number of available event channels.

MAX_EVENT_CHANNEL = 0x00 means that the number of events in the slave is unknown.

The DAQ_KEY_BYTE parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
Identification_Field_Type_1								
Identification_Field_Type_0								
Address_Extension_DAQ								
Address_Extension_ODT								
Optimisation_Type_3								
Optimisation_Type_2								
Optimisation_Type_1								
Optimisation_Type_0								

The Optimisation_Type is defined as follows:

Bit	3	2	1	0	Optimisation Type
Optimisation_Type_3					
Optimisation_Type_2					
Optimisation_Type_1					
Optimisation_Type_0					
0	0	0	0	0	OM_DEFAULT
0	0	0	0	1	OM_ODT_TYPE_16
0	0	0	1	0	OM_ODT_TYPE_32
0	0	0	1	1	OM_ODT_TYPE_64
0	1	0	0	0	OM_ODT_TYPE_ALIGNMENT
0	1	0	0	1	OM_MAX_ENTRY_SIZE

The Optimisation_Type flags indicate the Type of Optimisation Method the master preferably should use.

The Address_Extension is defined as follows:

Bit		Address_Extension Type
5	4	
Address_Extension_DAQ	Address_Extension_ODT	
0	0	address extension can be different within one and the same ODT
0	1	address extension to be the same for all entries within one ODT
1	0	Not allowed
1	1	address extension to be the same for all entries within one DAQ

The ADDR_EXTENSION flag indicates whether the address extension of all entries within one ODT or within one DAQ must be the same.

The Identification_Field_Type is defined as follows:

Bit		Identification Field Type
7	6	
Identification_Field_Type_1	Identification_Field_Type_0	
0	0	Absolute ODT number
0	1	Relative ODT number, absolute DAQ list number (BYTE)
1	0	Relative ODT number, absolute DAQ list number (WORD)
1	1	Relative ODT number, absolute DAQ list number (WORD, aligned)

The Identification_Field_Type flags indicate the Type of Identification Field the slave will use when transferring DAQ Packets to the master. The master has to use the same Type of Identification Field when transferring STIM Packets to the slave.

The PID_OFF_SUPPORTED flag in DAQ_PROPERTIES indicates that transfer of DTO Packets without Identification Field is possible.

Turning off the transfer of the Identification Field is only allowed if the Identification Field Type is "absolute ODT number".

1.6.4.1.2.5 Get general information on DAQ processing resolution

Category Data acquisition and stimulation, basic, optional
Mnemonic GET_DAQ_RESOLUTION_INFO

Position	Type	Description
0	BYTE	Command Code = 0xD9

This command returns information on the resolution of DAQ lists.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	GRANULARITY_ODT_ENTRY_SIZE_DAQ Granularity for size of ODT entry (DIRECTION = DAQ)
2	BYTE	MAX_ODT_ENTRY_SIZE_DAQ Maximum size of ODT entry (DIRECTION = DAQ)
3	BYTE	GRANULARITY_ODT_ENTRY_SIZE_STIM Granularity for size of ODT entry (DIRECTION = STIM)
4	BYTE	MAX_ODT_ENTRY_SIZE_STIM Maximum size of ODT entry (DIRECTION = STIM)
5	BYTE	TIMESTAMP_MODE Timestamp unit and size
6	WORD	TIMESTAMP_TICKS Timestamp ticks per unit

The possible values for GRANULARITY_ODT_ENTRY_SIZE_x are {1,2,4,8}.

For the address of the element described by an ODT entry, the following has to be fulfilled :

$$\text{Address mod GRANULARITY_ODT_ENTRY_SIZE_x} = 0$$

For every size of the element described by an ODT entry, the following has to be fulfilled :

$$\text{SizeOf(element described by ODT entry) mod GRANULARITY_ODT_ENTRY_SIZE_x} = 0$$

The MAX_ODT_ENTRY_SIZE_x parameters indicate the upper limits for the size of the element described by an ODT entry.

For every size of the element described by an ODT entry the following has to be fulfilled :

$$\text{SizeOf(element described by ODT entry)} \leq \text{MAX_ODT_ENTRY_SIZE_x}$$

If the slave doesn't support a time stamped mode (no TIMESTAMP_SUPPORTED in GET_DAQ_PROCESSOR_INFO), the parameters TIMESTAMP_MODE and TIMESTAMP_TICKS are invalid.

If the slave device supports a time stamped mode, TIMESTAMP_MODE and TIMESTAMP_TICKS contain information on the resolution of the data acquisition clock. The data acquisition clock is a free running counter, which is never reset or modified and wraps around if an overflow occurs.

$$t_{\text{physical}}^{k+1} = t_{\text{physical}}^k + [(t_{\text{protocol}}^{k+1} - t_{\text{protocol}}^k) * \text{TIMESTAMP_UNIT} * \text{TIMESTAMP_TICKS}]$$

The **TIMESTAMP_MODE** parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	Unit_3	Unit_2	Unit_1	Unit_0	TIMESTAMP_FIXED	Size_2	Size_1	Size_0

Size is defined as follows:

Bit	2	1	0	
	Size_2	Size_1	Size_0	Timestamp size [bytes]
	0	0	0	No time stamp
	0	0	1	1
	0	1	0	2
	0	1	1	Not allowed
	1	0	0	4

The **TIMESTAMP_FIXED** flag indicates that the Slave always will send DTO Packets in time stamped mode.

Unit is defined as follows:

Bit	7	6	5	4	
	Unit_3	Unit_2	Unit_1	Unit_0	Timestamp unit
	0	0	0	0	DAQ_TIMESTAMP_UNIT_1NS 1 NS = 1 nanosecond = 10^{-9} second
	0	0	0	1	DAQ_TIMESTAMP_UNIT_10NS
	0	0	1	0	DAQ_TIMESTAMP_UNIT_100NS
	0	0	1	1	DAQ_TIMESTAMP_UNIT_1US 1 US = 1 microsecond = 10^{-6} second
	0	1	0	0	DAQ_TIMESTAMP_UNIT_10US
	0	1	0	1	DAQ_TIMESTAMP_UNIT_100US
	0	1	1	0	DAQ_TIMESTAMP_UNIT_1MS 1 MS = 1 millisecond = 10^{-3} second
	0	1	1	1	DAQ_TIMESTAMP_UNIT_10MS
	1	0	0	0	DAQ_TIMESTAMP_UNIT_100MS
	1	0	0	1	DAQ_TIMESTAMP_UNIT_1S 1 S = 1 second = 1 second
	1	0	1	0	DAQ_TIMESTAMP_UNIT_1PS 1 PS = 1 picosecond = 10^{-12} second
	1	0	1	1	DAQ_TIMESTAMP_UNIT_10PS
	1	1	0	0	DAQ_TIMESTAMP_UNIT_100PS

1.6.4.1.2.6 Get mode from DAQ list

Category Data acquisition and stimulation, basic, optional
Mnemonic GET_DAQ_LIST_MODE

Position	Type	Description
0	BYTE	Command Code = 0xDF
1	BYTE	Reserved
2	WORD	DAQ_LIST_NUMBER [0,1,..MAX_DAQ-1]

Returns information on the current mode of the specified DAQ list. This command can be used for PREDEFINED and for configurable DAQ lists, so the range for DAQ_LIST_NUMBER is [0,1,..MAX_DAQ-1].

If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Current Mode
2	WORD	Reserved
4	WORD	Current Event Channel Number
6	BYTE	Current Prescaler
7	BYTE	Current DAQ list Priority

The Current Mode parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	RESUME	RUNNING	PID_OFF	TIMESTAMP	x	x	DIRECTION	SELECTED

Flag	Description
SELECTED	0 = DAQ list not selected 1 = DAQ list selected
DIRECTION	0 = DAQ Data Acquisition Mode (Slave → Master) is set 1 = STIM Data Stimulation Mode (Master → Slave) is set
TIMESTAMP	0 = timestamp is disabled 1 = timestamp is enabled
PID_OFF	0 = DTO is transmitted with Identification Field 1 = DTO is transmitted without Identification Field
RUNNING	0 = DAQ list is inactive 1 = DAQ list is active
RESUME	0 = this DAQ list is not part of a configuration used in RESUME mode 1 = this DAQ list is part of a configuration used in RESUME mode

The **SELECTED** flag indicates that the DAQ list has been selected by a previous **START_STOP_DAQ_LIST(select)**. If the next command is **START_STOP_SYNC**, this will start/stop this DAQ list synchronously with other DAQ lists that are in the mode **SELECTED**. If the next command is **SET_REQUEST**, this will make the DAQ list to be part of a configuration that afterwards will be cleared or stored into non-volatile memory.

The **DIRECTION** flag indicates whether this DAQ list is configured for synchronous data acquisition or stimulation.

The **RUNNING** flag indicates that the DAQ list has been started actively by the master by a **START_STOP_DAQ_LIST** or **START_STOP_SYNC**, or that the slave being in **RESUME** mode started the DAQ list automatically.

The **RESUME** flag indicates that this DAQ list is part of a configuration used in **RESUME** mode.

1.6.4.1.2.7 Get specific information for an event channel

Category Data acquisition and stimulation, basic, optional
Mnemonic GET_DAQ_EVENT_INFO

Position	Type	Description
0	BYTE	Command Code = 0xD7
1	BYTE	Reserved
2	WORD	Event channel number [0,1,..MAX_EVENT_CHANNEL-1]

GET_DAQ_EVENT_INFO returns information on a specific event channel. A number in a range from 0 to MAX_EVENT_CHANNEL-1 addresses the event channel. If the specified event channel is not available, ERR_OUT_OF_RANGE will be returned.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	DAQ_EVENT_PROPERTIES Specific properties for this event channel
2	BYTE	MAX_DAQ_LIST [0,1,2,..255] maximum number of DAQ lists in this event channel
3	BYTE	EVENT_CHANNEL_NAME_LENGTH in bytes 0 – If not available
4	BYTE	EVENT_CHANNEL_TIME_CYCLE 0 – Not cyclic
5	BYTE	EVENT_CHANNEL_TIME_UNIT don't care if Event channel time cycle = 0
6	BYTE	EVENT_CHANNEL_PRIORITY (FF highest)

The DAQ_EVENT_PROPERTIES parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
CONSISTENCY_EVENT								
CONSISTENCY_DAQ								
			x					
				x				
STIM								
DAQ								
							x	
								x

The DAQ and STIM flags indicate what kind of DAQ list can be allocated to this event channel :

3	2	EVENT_CHANNEL_TYPE
STIM	DAQ	
0	0	Not allowed
0	1	only DAQ lists with DIRECTION = DAQ supported
1	0	only DAQ lists with DIRECTION = STIM supported
1	1	both kind of DAQ lists (simultaneously)

The CONSISTENCY_DAQ flag indicates that for this Event Channel all data that belong to one and the same DAQ list are processed consistently.

The CONSISTENCY_EVENT flag indicates that for this Event Channel all data are processed consistently.

7	6	CONSISTENCY
CONSISTENCY_EVENT	CONSISTENCY_DAQ	
0	0	Consistency on ODT level (default)
0	1	Consistency on DAQ list level
1	0	Consistency on Event Channel level

If there's only one DAQ list associated with this Event Channel, CONSISTENCY_DAQ has the same meaning as CONSISTENCY_EVENT.

If more than one DAQ List is associated with this Event Channel, CONSISTENCY_DAQ implies that the data of every specific DAQ list in this Event Channel are processed consistently within this DAQ list. However, there's no data consistency between data that are processed in different DAQ lists.

If more than one DAQ list is associated with this Event Channel, CONSISTENCY_EVENT implies that all data of DAQ lists in this Event Channel are processed consistently.

MAX_DAQ_LIST indicates the maximum number of DAQ lists that can be allocated to this event channel. MAX_DAQ_LIST = 0x00 means this event is available but currently can't be used. MAX_DAQ_LIST = 0xFF means there's no limitation.

This command automatically sets the Memory Transfer Address (MTA) to the location from which the master device may upload the event channel name as ASCII text, using one or more UPLOAD commands. For the initial UPLOAD command, the following rule applies:

Number of Data Elements UPLOAD [AG] = (Length GET_DAQ_EVENT_INFO [BYTE]) / AG

The EVENT_CHANNEL_NAME_LENGTH specifies the number of ASCII bytes in the name. There must be no 0 termination.

The EVENT_CHANNEL_TIME_CYCLE indicates with what sampling period the slave processes this event channel.

The EVENT_CHANNEL_TIME_UNIT is defined as follows:

Bit					
3	2	1	0		
Unit_3	Unit_2	Unit_1	Unit_0	EVENT_CHANNEL_TIME_UNIT	
0	0	0	0	EVENT_CHANNEL_TIME_UNIT_1NS	1 NS = 1 nanosecond = 10^{-9} second
0	0	0	1	EVENT_CHANNEL_TIME_UNIT_10NS	
0	0	1	0	EVENT_CHANNEL_TIME_UNIT_100NS	
0	0	1	1	EVENT_CHANNEL_TIME_UNIT_1US	1 US = 1 microsecond = 10^{-6} second
0	1	0	0	EVENT_CHANNEL_TIME_UNIT_10US	
0	1	0	1	EVENT_CHANNEL_TIME_UNIT_100US	
0	1	1	0	EVENT_CHANNEL_TIME_UNIT_1MS	1 MS = 1 millisecond = 10^{-3} second
0	1	1	1	EVENT_CHANNEL_TIME_UNIT_10MS	
1	0	0	0	EVENT_CHANNEL_TIME_UNIT_100MS	
1	0	0	1	EVENT_CHANNEL_TIME_UNIT_1S	1 S = 1 second = 1 second
1	0	1	0	EVENT_CHANNEL_TIME_UNIT_1PS	1 PS = 1 picosecond = 10^{-12} second
1	0	1	1	EVENT_CHANNEL_TIME_UNIT_10PS	
1	1	0	0	EVENT_CHANNEL_TIME_UNIT_100PS	

Please note that the EVENT_CHANNEL_TIME_UNIT is coded in the **lower nibble** of the parameter. This coding differs from the one used for the Timestamp unit, which is in the higher nibble of the parameter.

The EVENT_CHANNEL_PRIORITY specifies the priority of this event channel when the slave processes the different event channels. This prioritization is a fixed attribute of the slave and therefore read-only. The event channel with EVENT_CHANNEL_PRIORITY = FF has the highest priority

1.6.4.2 STATIC DAQ LIST CONFIGURATION (STAT)

1.6.4.2.1 Mandatory command

1.6.4.2.1.1 Clear DAQ list configuration

Category Data acquisition and stimulation, static, mandatory
Mnemonic CLEAR_DAQ_LIST

Position	Type	Description
0	BYTE	Command Code = 0xE3
1	BYTE	reserved
2	WORD	DAQ_LIST_NUMBER [0,1..MAX_DAQ-1]

This command can be used for PREDEFINED and for configurable DAQ lists, so the range for DAQ_LIST_NUMBER is [0,1,..MAX_DAQ-1].

If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

CLEAR_DAQ_LIST clears the specified DAQ list. For a configurable DAQ list, all ODT entries will be reset to address=0, extension=0 and size=0 (if valid : bit_offset = 0xFF). For PREDEFINED and configurable DAQ lists, the running Data Transmission on this list will be stopped and all DAQ list states are reset.

1.6.4.2.2 Optional command

1.6.4.2.2.1 Get specific information for a DAQ list

Category Data acquisition and stimulation, static, optional
Mnemonic GET_DAQ_LIST_INFO

Position	Type	Description
0	BYTE	Command Code = 0xD8
1	BYTE	reserved
2	WORD	DAQ_LIST_NUMBER [0,1,...,MAX_DAQ-1]

GET_DAQ_LIST_INFO returns information on a specific DAQ list.

This command can be used for PREDEFINED and for configurable DAQ lists, so the range for DAQ_LIST_NUMBER is [0,1,..MAX_DAQ-1].

If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	DAQ_LIST_PROPERTIES Specific properties for this DAQ list
2	BYTE	MAX_ODT Number of ODTs in this DAQ list
3	BYTE	MAX_ODT_ENTRIES Maximum number of entries in an ODT
4	WORD	FIXED_EVENT Number of the fixed event channel for this DAQ list

The DAQ_LIST_PROPERTIES parameter is a bit mask described below:

Bit	7	6	5	4	3	2	1	0
	x	x	x	x	STIM	DAQ	EVENT_FIXED	PREDEFINED

Flag	Description
PREDEFINED	0 = DAQ list configuration can be changed 1 = DAQ list configuration is fixed
EVENT_FIXED	0 = Event Channel can be changed 1 = Event Channel is fixed

The PREDEFINED flag indicates that the configuration of this DAQ list can not be changed.

The DAQ list is predefined and fixed in the slave device's memory.

The EVENT_FIXED flag indicates that the Event Channel for this DAQ list can not be changed.

The DAQ and STIM flags indicate which DIRECTION can be used for this DAQ list

3	2	DAQ_LIST_TYPE
STIM	DAQ	
0	0	Not allowed
0	1	only DIRECTION = DAQ supported
1	0	only DIRECTION = STIM supported
1	1	both DIRECTIONS supported (but not simultaneously)

If DAQ lists are configured statically, MAX_ODT specifies the number of ODTs for this DAQ list and MAX_ODT_ENTRIES specifies the number of ODT entries in each ODT.

FIXED_EVENT indicates the number of the fixed event channel to be used for this DAQ list.

1.6.4.3 DYNAMIC DAQ LIST CONFIGURATION (DYN)

1.6.4.3.1 Mandatory commands

1.6.4.3.1.1 Clear dynamic DAQ configuration

Category	Data acquisition and stimulation, dynamic, optional
Mnemonic	FREE_DAQ

Position	Type	Description
0	BYTE	Command Code = 0xD6

This command clears all DAQ lists and frees all dynamically allocated DAQ lists, ODTs and ODT entries.

At the start of a dynamic DAQ list configuration sequence, the master always first has to send a FREE_DAQ.

1.6.4.3.1.2 Allocate DAQ lists

Category Data acquisition and stimulation, dynamic, optional
Mnemonic ALLOC_DAQ

Position	Type	Description
0	BYTE	Command Code = 0xD5
1	BYTE	reserved
2	WORD	DAQ_COUNT number of DAQ lists to be allocated

This command allocates a number of DAQ lists for this XCP slave device.

If there's not enough memory available to allocate the requested DAQ lists an ERR_MEMORY_OVERFLOW will be returned as negative response.

The master has to use ALLOC_DAQ in a defined sequence together with FREE_DAQ, ALLOC_ODT and ALLOC_ODT_ENTRY. If the master sends an ALLOC_DAQ directly after an ALLOC_ODT without a FREE_DAQ in between, the slave returns an ERR_SEQUENCE as negative response.

If the master sends an ALLOC_DAQ directly after an ALLOC_ODT_ENTRY without a FREE_DAQ in between, the slave returns an ERR_SEQUENCE as negative response.

1.6.4.3.1.3 Allocate ODTs to a DAQ list

Category Data acquisition and stimulation, dynamic, optional
Mnemonic ALLOC_ODT

Position	Type	Description
0	BYTE	Command Code = 0xD4
1	BYTE	Reserved
2	WORD	DAQ_LIST_NUMBER [MIN_DAQ, MIN_DAQ+1,..MIN_DAQ+DAQ_COUNT-1]
4	BYTE	ODT_COUNT number of ODTs to be assigned to DAQ list

This command allocates a number of ODTs and assigns them to the specified DAQ list.

This command can only be used for configurable DAQ lists, so the range for DAQ_LIST_NUMBER is [MIN_DAQ, MIN_DAQ+1,..MIN_DAQ+DAQ_COUNT-1].

If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

If there's not enough memory available to allocate the requested ODTs an ERR_MEMORY_OVERFLOW will be returned as negative response.

The master has to use ALLOC_ODT in a defined sequence together with FREE_DAQ, ALLOC_DAQ and ALLOC_ODT_ENTRY. If the master sends an ALLOC_ODT directly after a FREE_DAQ without an ALLOC_DAQ in between, the slave returns an ERR_SEQUENCE as negative response.

If the master sends an ALLOC_ODT directly after an ALLOC_ODT_ENTRY without a FREE_DAQ in between, the slave returns an ERR_SEQUENCE as negative response.

1.6.4.3.1.4 Allocate ODT entries to an ODT

Category Data acquisition and stimulation, dynamic, optional
Mnemonic ALLOC_ODT_ENTRY

Position	Type	Description
0	BYTE	Command Code = 0xD3
1	BYTE	Reserved
2	WORD	DAQ_LIST_NUMBER [MIN_DAQ, MIN_DAQ+1,..MIN_DAQ+DAQ_COUNT-1]
4	BYTE	ODT_NUMBER [0,1,..ODT_COUNT(DAQ list)-1]
5	BYTE	ODT_ENTRIES_COUNT number of ODT entries to be assigned to ODT

This command allocates a number of ODT entries and assigns them to the specific ODT in this specific DAQ list.

This command can only be used for configurable DAQ lists, so the range for DAQ_LIST_NUMBER is [MIN_DAQ, MIN_DAQ+1,..MIN_DAQ+DAQ_COUNT-1].

If the specified list is not available, ERR_OUT_OF_RANGE will be returned.

ODT_NUMBER is the relative ODT number within this DAQ list.

If there's not enough memory available to allocate the requested ODT entries an ERR_MEMORY_OVERFLOW will be returned as negative response.

The master has to use ALLOC_ODT_ENTRY in a defined sequence together with FREE_DAQ and ALLOC_ODT. If the master sends an ALLOC_ODT_ENTRY directly after a FREE_DAQ without an ALLOC_DAQ in between, the slave returns an ERR_SEQUENCE as negative response.

If the master sends an ALLOC_ODT_ENTRY directly after an ALLOC_DAQ without an ALLOC_ODT in between, the slave returns an ERR_SEQUENCE as negative response.

1.6.5 NON-VOLATILE MEMORY PROGRAMMING (PGM)

1.6.5.1 MANDATORY COMMANDS

1.6.5.1.1 Indicate the beginning of a programming sequence

Category Non-volatile memory programming, mandatory
Mnemonic PROGRAM_START

Position	Type	Description
0	BYTE	Command Code = 0xD2

This command is used to indicate the begin of a non-volatile memory programming sequence. If the slave device is not in a state which permits programming, a ERR_GENERIC will be returned. The memory programming commands PROGRAM_CLEAR, PROGRAM, PROGRAM_MAX or PROGRAM_NEXT are not allowed, until the PROGRAM_START command has been successfully executed. The end of a non-volatile memory programming sequence is indicated by a PROGRAM_RESET command.

Memory programming may have implementation specific preconditions (slave device in a secure physical state, additional code downloaded, ...) and the execution of other commands may be restricted during a programming sequence (data acquisition may not run, calibration may be restricted, ...). The following commands must always be available during a memory programming sequence:

SET_MTA
PROGRAM_CLEAR
PROGRAM
PROGRAM_MAX or PROGRAM_NEXT

The following commands are optional (for instance to verify memory contents):


UPLOAD
BUILD_CHECKSUM

If non-volatile memory programming requires the download of additional code, the download has to be finished before the PROGRAM_START command is executed. The MTA must point to the entry point of the downloaded routine.

Positive Response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Reserved
2	BYTE	COMM_MODE_PGM
3	BYTE	MAX_CTO_PGM [BYTES] Maximum CTO size for PGM
4	BYTE	MAX_BS_PGM
5	BYTE	MIN_ST_PGM
6	BYTE	QUEUE_SIZE_PGM

The COMM_MODE_PGM parameter is a bit mask described below :

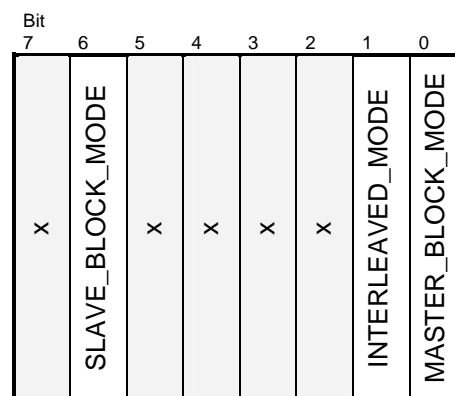

The MASTER_BLOCK_MODE flag indicates whether the Master Block Mode is available during Programming.

The INTERLEAVED_MODE flag indicates whether the Interleaved Mode is available during Programming.

The SLAVE_BLOCK_MODE flag indicates whether the Slave Block Mode is available during Programming.

The communication parameters MAX_CTO, MAX_BS, MIN_ST and QUEUE_SIZE may change when the slave device is in memory programming mode. The new communication parameters MAX_CTO_PGM, MAX_BS_PGM, MIN_ST_PGM and QUEUE_SIZE_PGM are returned in the positive response.

1.6.5.1.2 Clear a part of non-volatile memory

Category Non-volatile memory programming, mandatory
Mnemonic PROGRAM_CLEAR

Position	Type	Description
0	BYTE	Command Code = 0xD1
1	BYTE	Mode
2	WORD	reserved
4	DWORD	clear range

This command is used to clear a part of non-volatile memory prior to reprogramming.
The work flow depends on mode byte

Mode Byte	Description
0x00	the absolute access mode is active (default)
0x01	the functional access mode is active

Absolute Access mode

Parameter	Description
MTA	The MTA points to the start of a memory sector inside the slave. Memory sectors are described in the ASAM MCD 2MC slave device description file. If multiple memory sectors shall be cleared in a certain sequence, the master device must repeat the PROGRAM_CLEAR service with a new MTA. In this case the master must keep the order information given by the Clear Sequence Number of the sectors.
Clear range	The Clear Range indicates the length of the memory part to be cleared. The PROGRAM_CLEAR service clears a complete sector or multiple sectors at once.

Functional Access mode

Parameter	Description
MTA	The MTA has no influence on the clearing functionality
clear range	This parameter should be interpreted bit after bit: <u>basic use-cases:</u> 0x00000001 : clear all the calibration data area(s) 0x00000002 : clear all the code area(s) (the boot area is not covered) 0x00000004 : clear the NVRAM area(s) 0x00000008 .. 0x00000080: reserved <u>project specific use-cases:</u> 0x00000100 ... 0xFFFFFFFF00 : user defined

Example

If the project divides the calibration area into different areas, it is useful to define the project specific higher nibble as follow:

0x00000100 : clear calibration data area 1
0x00000200 : clear calibration data area 2
0x00000400 : clear calibration data area 3

...

In this use case the different calibration areas can be reprogrammed without further information of the memory mapping and the flash organisation. These parameters must be specified in the project specific programming flow control.

1.6.5.1.3 Program a non-volatile memory segment

Category Non-volatile memory programming, mandatory
Mnemonic PROGRAM

Position	Type	Description
0	BYTE	Command Code = 0xD0
1	BYTE	n = Number of data elements [AG] [1..(MAX_CTO_PGM-2)/AG]
..	BYTES	Used for alignment, only if AG = 4
AG=1: 2 AG>1: AG	ELEMENT 1	1 st data element
..
AG=1: n+1 AG>1: n*AG	ELEMENT n	n th data element

If ADDRESS_GRANULYRITY = DWORD, 2 alignment bytes must be used in order to meet alignment requirements.

ELEMENT is BYTE. WORD or DWORD, depending upon AG.

This command is used to program data inside the slave. Depending on the access mode (defined by PROGRAM_FORMAT) 2 different concepts are supported.

The end of the memory segment is indicated, when the number of data elements is 0.

The end of the overall programming sequence is indicated by a PROGRAM_RESET command. The slave device will go to disconnected state. Usually a hardware reset of the slave device is executed.

If the slave device does not support block transfer mode, all programmed data are transferred in a single command packet. Therefore the number of data elements parameter in the request has to be in the range [1..MAX_CTO_PGM/AG-2]. An ERR_OUT_OF_RANGE will be returned, if the number of data elements is more than MAX_CTO_PGM/AG-2.

If block transfer mode is supported, the programmed data are transferred in multiple command packets. For the slave however, there might be limitations concerning the maximum number of consecutive command packets (block size MAX_BS_PGM).

Therefore the number of data elements (n) can be in the range [1..min(MAX_BS_PGM*(MAX_CTO_PGM-2)/AG,255)].

If AG=1 the master device has to transmit $\lfloor ((n*AG)-1) / (MAX_CTO_PGM-2) \rfloor$ additional, consecutive PROGRAM_NEXT command packets.

If AG>1 the master device has to transmit $\lfloor ((n*AG)-1) / (MAX_CTO_PGM-AG) \rfloor$ additional, consecutive PROGRAM_NEXT command packets.

The slave device will acknowledge only the last PROGRAM_NEXT command packet. The separation time between the command packets and the maximum number of packets are specified in the response for the PROGRAM_START command (MAX_BS_PGM, MIN_ST_PGM).

Absolute Access mode

The data block of the specified length (size) contained in the CTO will be programmed into non-volatile memory, starting at the MTA. The MTA will be post-incremented by the number of data bytes.

If multiple memory sectors shall be programmed, the master device must keep the order information given in the IF_DATA description called Programming Sequence Number of the sector.

Functional Access mode

The data block of the specified length (size) contained in the CTO will be programmed into non-volatile memory. The ECU software knows the start address for the new flash content automatically. It depends on the PROGRAM_CLEAR command. The ECU expects the new flash content in one data stream and the assignment is done by the ECU automatically.

The MTA works as a Block Sequence Counter and it is counted inside the master and the server. The Block Sequence Counter allows an improved error handling in case a programming service fails during a sequence of multiple programming requests. The Block Sequence Counter of the server shall be initialized to one (1) when receiving a PROGRAM_FORMAT request message. This means that the first PROGRAM request message following the PROGRAM_FORMAT request message starts with a Block Sequence Counter of one (1). Its value is incremented by 1 for each subsequent data transfer request. At the maximum value the Block Sequence Counter rolls over and starts at 0x00 with the next data transfer request message.

1.6.5.1.4 Indicate the end of a programming sequence

Category Non-volatile memory programming, mandatory
Mnemonic PROGRAM_RESET

Position	Type	Description
0	BYTE	Command Code = 0xCF

This optional command indicates the end of a non-volatile memory programming sequence. It may or may not have a response. In either case, the slave device will go to the disconnected state.

This command may be used to force a slave device reset for other purposes.

1.6.5.2 OPTIONAL COMMANDS

1.6.5.2.1 Get general information on PGM processor

Category Programming, optional
Mnemonic GET_PGM_PROCESSOR_INFO

Position	Type	Description
0	BYTE	Command Code = 0xCE

This command returns general information on programming.

Positive response:

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	PGM_PROPERTIES General properties for programming
2	BYTE	MAX_SECTOR total number of available sectors

The PGM_PROPERTIES parameter is a bit mask described below:

7	6	5	4	3	2	1	0
NON_SEQ_PGM_REQUIRED	NON_SEQ_PGM_SUPPORTED	ENCRYPTION_REQUIRED	ENCRYPTION_SUPPORTED	COMPRESSION_REQUIRED	COMPRESSION_SUPPORTED	FUNCTIONAL_MODE	ABSOLUTE_MODE

The ABSOLUTE_MODE and FUNCTIONAL_MODE flags indicate the clear/programming mode that can be used

Bit			
1	0		
FUNCTIONAL_MODE	ABSOLUTE_MODE		
0	0	Not allowed	
0	1	Only Absolute mode supported	
1	0	Only Functional mode supported	
1	1	Both modes supported	

The COMPRESSION_x flags indicate which compression state of the incoming data the slave can process. The answer is a summary (OR operation) for all programmable segments and/or sectors.

Bit			
3	2		
COMPRESSION_REQUIRED	COMPRESSION_SUPPORTED		
0	0	Not supported	
0	1	supported	
1	0	Supported and required	
1	1		

The ENCRYPTION_x flags indicate which encryption state of the incoming data the slave can process. The answer is a summary (OR operation) for all programmable segments and/or sectors.

Bit			
5	4		
ENCRYPTION_REQUIRED	ENCRYPTION_SUPPORTED	encryption	
0	0	Not supported	
0	1	supported	
1	0	Supported and required	
1	1		

The NON_SEQ_PGM_x flags indicate whether the slave can process different kind of sequence regarding the incoming data. The answer is a summary (OR operation) for all programmable segments and/or sectors.

Bit			
7	6		
NON_SEQ_PGM_REQUIRED	NON_SEQ_PGM_SUPPORTED	non sequential programming	
0	0	Not supported	
0	1	supported	
1	0	Supported and required	
1	1		

MAX_SECTOR is the total number of sectors in the slave device

1.6.5.2.2 Get specific information for a SECTOR

Category Programming, optional
Mnemonic GET_SECTOR_INFO

Position	Type	Description
0	BYTE	Command Code = 0xCD
1	BYTE	Mode 0 = get start address for this SECTOR 1 = get length of this SECTOR [BYTE] 2 = get name length of this SECTOR
2	BYTE	SECTOR_NUMBER [0,1,..MAX_SECTOR-1]

GET_SECTOR_INFO returns information on a specific SECTOR.

If the specified SECTOR is not available, ERR_OUT_OF_RANGE will be returned.

This optional command is only helpful for the programming method 'absolute access mode'.

Positive response (mode = 0 or mode = 1):

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	Clear Sequence Number
2	BYTE	Program Sequence Number
3	BYTE	Programming method
4	DWORD	SECTOR_INFO mode = 0 : Start address for this SECTOR mode = 1 : Length of this SECTOR [BYTE]

The Clear Sequence Number and Program Sequence Number describe, in which subsequential order the master has to clear and program flash memory sectors. Each sequence number must be unique. Sectors, which do not have to be programmed, can be skipped in the programming flow control.

Example 1: In this example the memory must be cleared from small to great sector numbers and then reprogrammed from great to small sector numbers.

Sector		Returned Value for Clear/Program Sequence Number

Sector 0		0 / 5
Sector 1		1 / 4
Sector 2		2 / 3

Example 2: In this example the memory sectors must be alternately cleared and reprogrammed from small to great sector numbers.

Sector		Returned Value for Clear/Program Sequence Number

Sector 0		0 / 1
Sector 1		2 / 3
Sector 2		4 / 5

If Mode = 0 , this command returns the start address for this SECTOR in SECTOR_INFO.

If Mode = 1, this command returns in bytes the length of this SECTOR in SECTOR_INFO.

The following rule applies: Length mod AG = 0.

Positive response (mode = 2):

Position	Type	Description
0	BYTE	Packet ID: 0xFF
1	BYTE	SECTOR_NAME_LENGTH in bytes 0 – if not available

If Mode = 2, this command automatically sets the Memory Transfer Address (MTA) to the location from which the Master may upload the SECTOR name as ASCII text, using one or more UPLOAD commands. For the initial UPLOAD command, the following rule applies:

Number of Data Elements UPLOAD [AG] = (Length GET_SECTOR_INFO [BYTE]) / AG

The SECTOR_NAME_LENGTH specifies the number of ASCII bytes in the name. There must be no 0 termination.

1.6.5.2.3 Prepare non-volatile memory programming

Category Non-volatile memory programming, optional
Mnemonic PROGRAM_PREPARE

Position	Type	Description
0	BYTE	Command Code = 0xCC
1	BYTE	Not used
2	WORD	Codesize [AG]

This optional command is used to indicate the begin of a code download as a precondition for non-volatile memory programming. The MTA points to the begin of the volatile memory location where the code will be stored. The parameter Codesize specifies the size of the code that will be downloaded. The download itself is done by using subsequent standard commands like SET_MTA and DOWNLOAD.

Codesize is expressed in BYTE, WORD or DWORD depending upon AG.

The slave device has to make sure that the target memory area is available and it is in a operational state which permits the download of code. If not, a ERR_GENERIC will be returned.

1.6.5.2.4 Set data format before programming

Category Non-volatile memory programming, optional
Mnemonic PROGRAM_FORMAT

Position	Type	Description
0	BYTE	Command Code = 0xCB
1	BYTE	Compression method
2	BYTE	Encryption method
3	BYTE	Programming method
4	BYTE	access method

This command describes the format of following, uninterrupted data transfer. The data format is set direct at begin of the programming sequence and is valid till end of this sequence. The sequence will be terminated by other commands e.g. SET_MTA.

If this command isn't transmitted at begin of a sequence, unmodified data and absolute address access method is supposed.

If modified data transmission is expected by the slave and no PROGRAM_FORMAT command is transmitted, the slave responds with ERR_SEQUENCE.

The reformatting methods are described as follows :

Parameter	Hex	Description
Compression method	0x00	Data uncompressed (default)
	0x80...0xFF	User defined
Encryption method	0x00	Data not encrypted (default)
	0x80...0xFF	User defined
Programming method	0x00	Sequential Programming (default)
	0x80...0xFF	User defined
Access method	0x00	Absolute Access Mode (default) The MTA uses physical addresses
	0x01	Functional Access Mode The MTA functions as a block sequence number of the new flash content file.
	0x80...0xFF	User defined
		It is possible to use different access modes for clearing and programming.

The master will not perform the reformatting. The master just is getting the values that identify the reformatting methods from the ASAM MCD-MC2 description file and passing them to the slave.

Affected Commands

PROGRAM, PROGRAM_MAX, PROGRAM_NEXT, SET_MTA

Example

```
...  
SET_MTA          program code, encrypted  
PROGRAM_FORMAT  
PROGRAM  
PROGRAM_NEXT1..n  
...
```

1.6.5.2.5 Program a non-volatile memory segment (Block Mode)

Category Non-volatile memory programming, optional
Mnemonic PROGRAM_NEXT

Position	Type	Description
0	BYTE	Command Code = 0xCA
1	BYTE	n = Number of data elements [AG] [1..(MAX_CTO_PGM-2)/AG]
..	BYTES	Used for alignment, only if AG = 4
AG=1: 2 AG>1: AG	ELEMENT 1	1 st data element
..
AG=1: n+1 AG>1: n* AG	ELEMENT n	n th data element

If AG = DWORD, 2 alignment bytes must be used in order to meet alignment requirements.

ELEMENT is BYTE, WORD or DWORD, depending upon AG.

This command is used to transmit consecutive data bytes for the PROGRAM command in block transfer mode.

Negative Response:

If the number of data elements does not match the expected value, the error code ERR_SEQUENCE will be returned. The negative response will contain the expected number of data elements.

Position	Type	Description
0	BYTE	Packet ID: 0xFE
1	BYTE	ERR_SEQUENCE
2	BYTE	Number of expected data elements

1.6.5.2.6 Program a non-volatile memory segment (fixed size)

Category Non-volatile memory programming, optional
Mnemonic PROGRAM_MAX

Position	Type	Description
0	BYTE	Command Code = 0xC9
..	BYTES	Used for alignment, only if AG >1
AG	ELEMENT 1	1 st data element
..
MAX_CTO_PGM-AG	ELEMENT n	n th data element

Depending upon AG, 1 or 3 alignment bytes must be used in order to meet alignment requirements.

ELEMENT is BYTE, WORD or DWORD, depending upon AG.

The data block with the fixed length of MAX_CTO_PGM-1 elements contained in the CTO will be programmed into non-volatile memory, starting at the MTA. The MTA will be post-incremented by MAX_CTO_PGM-1.

This command does not support block transfer and it must not be used within a block transfer sequence.

1.6.5.2.7 Program Verify

Category Non-volatile memory programming, optional
Mnemonic PROGRAM_VERIFY

Position	Type	Description
0	BYTE	Command Code = 0xC8
1	BYTE	Verification mode 00 = request to start internal routine 01 = sending Verification Value
2	WORD	Verification Type
4	DWORD	Verification Value

With Verification Mode = 00 the master can request the slave to start internal test routines to check whether the new flash contents fits to the rest of the flash. Only the result is of interest. With Verification Mode = 01, the master can tell the slave that he will be sending a Verification Value to the slave.

The definition of the Verification Mode is project specific. The master is getting the Verification Mode from the project specific programming flow control and passing it to the slave.

The tool needs no further information about the details of the project specific check routines. The XCP parameters allow a wide range of project specific adaptations.

The Verification Type is a bit mask described below:

Verification Type	Description
0x0001	calibration area(s) of the flash
0x0002	code area(s) of the flash
0x0004	complete flash content
0x0008 ... 0x0080	reserved
0x0100 ... 0xFF00	user defined

The Verification Type is specified in the project specific programming flow control. The master is getting this parameter and passing it to the slave.

The definition of the Verification Value is project specific and the use is defined in the project specific programming flow control.

1.7 COMMUNICATION ERROR HANDLING

1.7.1 DEFINITIONS

1.7.1.1 ERROR

When the master sends a command CMD to the slave, no error occurs if the slave within a specified time answers with a positive response RES.

A Time-out Error occurs if the slave doesn't answer with any response within a specified time.

An Error Code Error occurs if the slave answers within a specified time with a negative response ERR.

1.7.1.2 PRE-ACTION

When trying to recover from an Error, the master first has to perform a Pre-Action and then an Action.

The Pre-Action brings the slave in a well defined state that allows the master to perform the Action.

The XCP Protocol supports the following kind of Pre-Actions :

- Wait t_7
- SYNCH
- GET_SEED / UNLOCK
- SET_MTA
- SET_DAQ_PTR
- START_STOP_x
- Reinitialise DAQ

1.7.1.3 ACTION

With the Action, the master tries to recover from the Error State.

The XCP Protocol supports the following kind of Actions :

- Display error
- Retry other syntax
- Retry other parameter
- Use ASAM MCD 2MC Description File
- Use alternative
- Repeat 2 times
- Repeat ∞ times
- Restart session
- Terminate session

1.7.1.4 ERROR SEVERITY

Error and Event messages are classified according to their Severity Level.

The XCP Protocol defines the following Severity Levels :

Severity	Description
S0	Information
S1	Warning / Request
S2	Resolvable Error
S3	Fatal Error

The Severity Level gives the master information about a possible Transition in the State-machine and for deciding about an appropriate reaction upon the ERR or EV.

1.7.2 TIME-OUT HANDLING

A Time-out Error occurs if the slave within a specified time doesn't answer with any response to a command sent from master to slave.

When sending a command, the master has to start a timer. For each command, the maximum value the timer can reach is given by the Time-Out Value t_x . If the master receives an answer before the timer reaches its maximal value, the master has to reset the timer. If the timer reaches its maximum value without the master receiving an answer from the slave, the master has to detect this as a Time-Out Error.

The XCP Protocol supports 7 different Time-Out Values t_1 till t_7 .

The master can get the values for t_1 till t_7 from the ASAM MCD 2MC Description File.

The specific t_x for each command is indicated in the chapter "Error Handling Matrix".

1.7.2.1 STANDARD COMMUNICATION MODEL

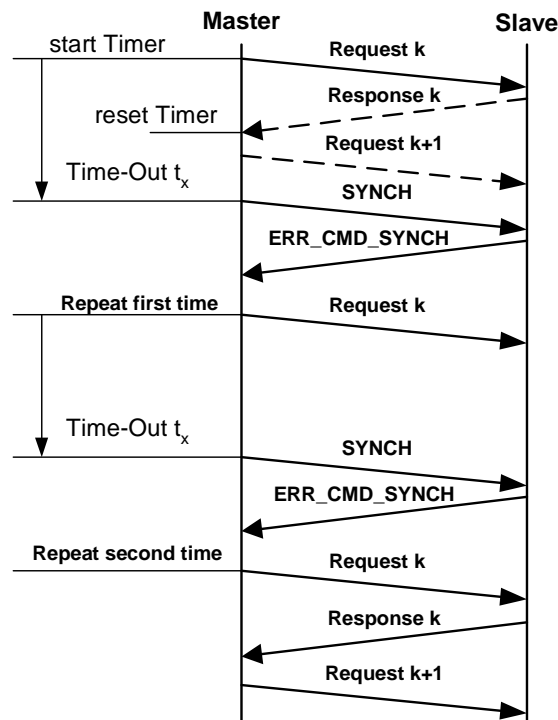


Diagram 24 : Time-out Handling in Standard Communication Model

If the Master detects a Time-out in the Standard Communication Model, the master has to perform the Pre-Action and Action. This sequence (pre-action, action) has to be tried 2 times.

If the master then still detects a Time-out Error, the master can decide about an appropriate reaction by himself.

In the usual case, the (pre-action, action) consists of a SYNCH command to re-synchronize command execution between master and slave followed by a repetition of the command. For some special commands, the pre-action brings the slave in a well defined state e.g. by sending again SET_MTA or SET_DAQ_PTR before repeating the command.

1.7.2.2 BLOCK COMMUNICATION MODEL

If the Master detects a Time-out in the Block Communication Model, the master has to perform the same Error Handling as for the Standard Communication Model.

In Master Block Transfer Mode, the master has to start the timer used for Time-out detection when sending the last frame of a block that builds a command.

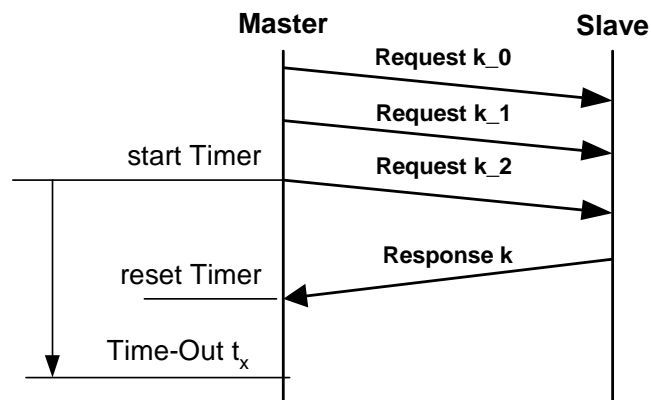


Diagram 25 : Time-out Handling in Master Block Transfer Mode

In Master Block Transfer Mode, the master has to use the same Time-Out Value t_x it uses when sending the same command in Standard Communication mode.

When repeating a command, the master always has to repeat the complete block that builds the command.

In Slave Block Transfer Mode, the master has to reset the timer used for Time-out detection when receiving the last frame of a block that builds a response.

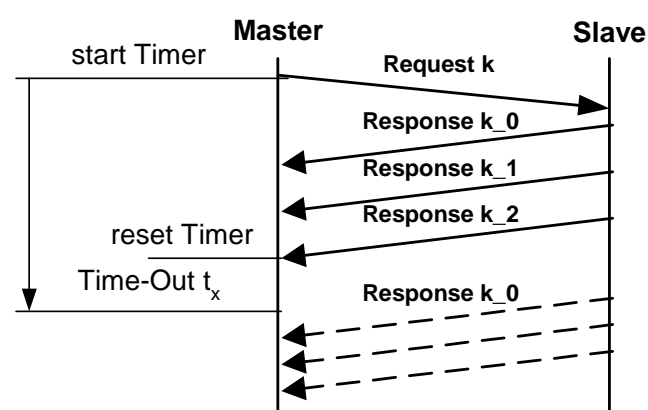


Diagram 26 : Time-out Handling in Slave Block Transfer Mode

In Slave Block Transfer Mode, the master has to use the same Time-Out Value t_x it uses when receiving the same response in Standard Communication mode.

1.7.2.3 INTERLEAVED COMMUNICATION MODEL

If the Master detects a Time-out in the Interleaved Communication Model, the master has to perform the same Error Handling as for the Standard Communication Model.

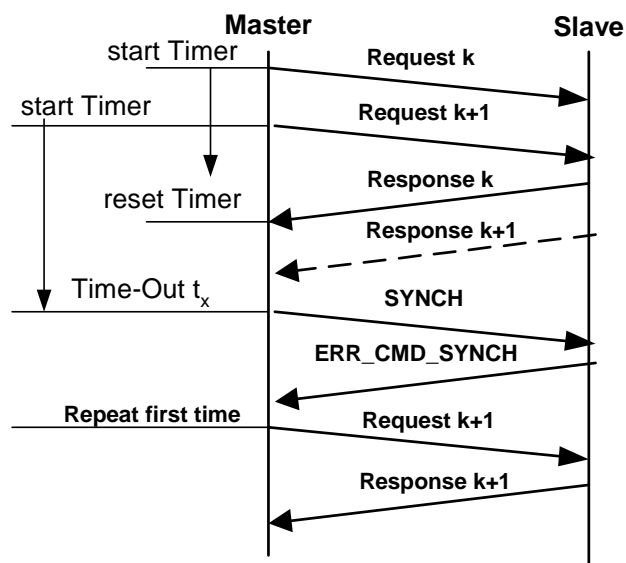


Diagram 27 : Time-out Handling in Interleaved Communication Model

1.7.2.4 TIME-OUT MANIPULATION

The master gets the default values for t_1 till t_6 from the ASAM MCD 2MC Description File.
For special purposes, XCP allows to overrule these Time-Out Values.

With EV_CMD_PENDING, the slave can request the master to restart the time-out detection.

1.7.2.4.1 Overruling Time-Out values

For bypassing, it might be necessary to change the Time-Out Values used by the slave.
The setting of these values is done by standard calibration methods. No special XCP commands are needed for this.

1.7.2.4.2 Restarting Time-Out detection

With EV_CMD_PENDING, the slave can request the master to restart the time-out detection.

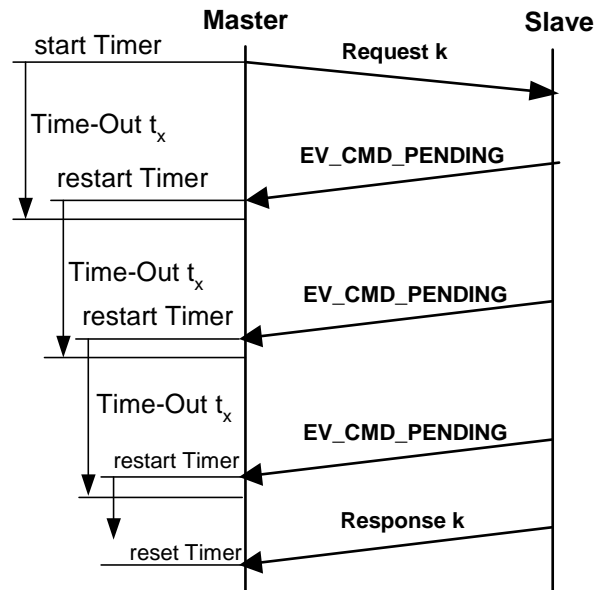


Diagram 28 : Restarting Time-out detection with EV_CMD_PENDING

The EV_CMD_PENDING allows the slave to inform the master that the request was correctly received and the parameters in the request are valid. However, the slave currently is not able of generating a response yet.

If the master receives an EV_CMD_PENDING from the slave, the master shall not repeat the request.

If the master receives an EV_CMD_PENDING from the slave, the master has to restart the timer used for time-out detection.

As soon as the slave has been able to process the request, it has to send a (positive or negative) response RES or ERR to the master.

1.7.3 ERROR CODE HANDLING

An Error Code Error occurs if the slave answers within a specified time with a negative response ERR.

If the master sends a command which belongs to a not supported resource, the slave responds with an ERR_CMD_UNKNOWN.

If the master receives an ERR when sending a CMD, it has to check the "Error Handling Matrix" that for each CMD defines a specific "Pre-Action" and "Action" for a specific ERR. If the master after performing the "Pre-Action" and "Action" still detects an Error Code Error, the master can decide about an appropriate reaction by himself.

If for a specific CMD, the specific ERR is not mentioned in the "Error Handling Matrix", the master has to check the Severity of this ERR in the "Table of Error Codes" and decide about an appropriate reaction.

If an error occurs during a multi-command sequence, the master can decide about an appropriate reaction.

1.7.3.1 TABLE OF ERROR CODES (ERR_*)

The Error packet codes in the table below can be sent as an Error packet with PID 0xFE as an answer to a CMD if the command has not been successfully executed.

The Error code **0x00** is used for synchronization purposes (ref. description of SYNCH).

Error	Code	Description	Severity
ERR_CMD_SYNCH	0x00	Command processor synchronization.	S0

An Error code **ERR_* >= 0x01** is used for Error packets.

Error	Code	Description	Severity
ERR_CMD_BUSY	0x10	Command was not executed.	S2
ERR_DAQ_ACTIVE	0x11	Command rejected because DAQ is running.	S2
ERR_PGM_ACTIVE	0x12	Command rejected because PGM is running.	S2

Error	Code	Description	Severity
ERR_CMD_UNKNOWN	0x20	Unknown command or not implemented optional command.	S2
ERR_CMD_SYNTAX	0x21	Command syntax invalid	S2
ERR_OUT_OF_RANGE	0x22	Command syntax valid but command parameter(s) out of range.	S2
ERR_WRITE_PROTECTED	0x23	The memory location is write protected.	S2
ERR_ACCESS_DENIED	0x24	The memory location is not accessible.	S2
ERR_ACCESS_LOCKED	0x25	Access denied, Seed & Key is required	S2
ERR_PAGE_NOT_VALID	0x26	Selected page not available	S2
ERR_MODE_NOT_VALID	0x27	Selected page mode not available	S2
ERR_SEGMENT_NOT_VALID	0x28	Selected segment not valid	S2
ERR_SEQUENCE	0x29	Sequence error	S2
ERR_DAQ_CONFIG	0x2A	DAQ configuration not valid	S2

Error	Code	Description	Severity
ERR_MEMORY_OVERFLOW	0x30	Memory overflow error	S2
ERR_GENERIC	0x31	Generic error.	S2
ERR_VERIFY	0x32	The slave internal program verify routine detects an error.	S3
ERR_RESOURCE TEMPORARY_NOT_ACCESSIBLE	0x33	Access to the requested resource is temporary not possible	S2

1.7.3.2 THE ERROR HANDLING MATRIX

1.7.3.2.1 Standard commands (STD)

Command	Error	Pre-Action	Action
CONNECT(NORMAL)	timeout t1 ERR_RES_TEMP_NOT_A.	- display error	repeat ∞ times repeat
CONNECT(USER_DEFINED)	timeout t6	wait t7	repeat ∞ times
DISCONNECT	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE	SYNCH wait t7 wait t7	repeat 2 times repeat ∞ times repeat ∞ times
GET_STATUS	timeout t1 ERR_RES_TEMP_NOT_A.	SYNCH display error	repeat 2 times repeat
SYNCH	timeout t1 ERR_CMD_SYNCH ERR_CMD_UNKNOWN ERR_RES_TEMP_NOT_A.	- - - display error	repeat 2 times - restart session repeat

Command	Error	Pre-Action	Action
GET_COMM_MODE_INFO	timeout t1 ERR_CMD_BUSY ERR_CMD_SYNTAX ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - -	repeat 2 times repeat ∞ times retry other syntax skip
GET_ID	timeout t1 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - - -	repeat 2 times repeat ∞ times display error retry other syntax skip
SET_REQUEST	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter repeat
GET_SEED	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter repeat
UNLOCK	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - - - GET_SEED display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter restart session repeat 2 times repeat

Command	Error	Pre-Action	Action
SET_MTA	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter repeat
UPLOAD	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH + SET_MTA wait t7 wait t7 - - - - Unlock slave display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter display error repeat 2 times repeat
SHORT_UPLOAD	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - - Unlock slave display error	repeat 2 times repeat ∞ times repeat ∞ times use alternative retry other syntax retry other parameter display error repeat 2 times repeat
BUILD_CHECKSUM	timeout t2 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH + SET_MTA wait t7 wait t7 - - - - Unlock slave display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter display error repeat 2 times repeat
Command	Error	Pre-Action	Action
TRANSPORT_LAYER_CMD	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - display error	repeat 2 times repeat ∞ times repeat ∞ times retry other syntax retry other parameter repeat
USER_CMD	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - display error	repeat 2 times repeat ∞ times repeat ∞ times retry other syntax retry other parameter repeat

1.7.3.2.2 Calibration commands (CAL)

Command	Error	Pre-Action	Action
DOWNLOAD	timeout t1	SYNCH + SET_MTA	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_OUT_OF_RANGE	-	retry other parameter
	ERR_ACCESS_DENIED	-	display error
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
	ERR_WRITE_PROTECTED	-	display error
	ERR_MEMORY_OVERFLOW	-	display error
	ERR_RES_TEMP_NOT_A.	display error	repeat

Command	Error	Pre-Action	Action
DOWNLOAD_NEXT	timeout t1	SYNCH + DOWNLOAD	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_UNKNOWN	SET_MTA	use alternative
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_OUT_OF_RANGE	-	retry other parameter
	ERR_ACCESS_DENIED	-	display error
	ERR_ACCESS_LOCKED	unlock slave	repeat 2 times
	ERR_WRITE_PROTECTED	-	display error
	ERR_MEMORY_OVERFLOW	SET_MTA	display error
DOWNLOAD_MAX	timeout t1	SYNCH + SET_MTA	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_UNKNOWN	SET_MTA	use alternative
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_OUT_OF_RANGE	-	retry other parameter
	ERR_ACCESS_DENIED	-	display error
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
	ERR_WRITE_PROTECTED	-	display error
	ERR_MEMORY_OVERFLOW	-	display error
SHORT_DOWNLOAD	timeout t1	SYNCH	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_UNKNOWN	-	use alternative
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_OUT_OF_RANGE	-	retry other parameter
	ERR_ACCESS_DENIED	-	display error
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
	ERR_WRITE_PROTECTED	-	display error
	ERR_MEMORY_OVERFLOW	-	display error
MODIFY_BITS	timeout t1	SYNCH + SET_MTA	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_UNKNOWN	UPLOAD + DOWNLOAD	use alternative
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_OUT_OF_RANGE	-	retry other parameter
	ERR_ACCESS_DENIED	-	display error
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
	ERR_WRITE_PROTECTED	-	display error
	ERR_MEMORY_OVERFLOW	-	display error
	ERR_RES_TEMP_NOT_A.	display error	repeat

1.7.3.2.3 Page switching commands (PAG)

Command	Error	Pre-Action	Action
SET_CAL_PAGE	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_PAGE_NOT_VALID ERR_MODE_NOT_VALID ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - Unlock slave - - - display error	repeat 2 times repeat ∞ times repeat ∞ times retry other syntax repeat 2 times retry other parameter retry other parameter retry other parameter repeat
GET_CAL_PAGE	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_PAGE_NOT_VALID ERR_MODE_NOT_VALID ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - Unlock slave - - - display error	repeat 2 times repeat ∞ times repeat ∞ times retry other syntax repeat 2 times retry other parameter retry other parameter retry other parameter repeat

Command	Error	Pre-Action	Action
GET_PAG_PROCESSOR_INFO	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - Unlock slave -	repeat 2 times repeat ∞ times repeat ∞ times use ASAP2 retry other syntax repeat 2 times skip
GET_SEGMENT_INFO	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - Unlock slave - -	repeat 2 times repeat ∞ times repeat ∞ times use ASAP2 retry other syntax retry other parameter repeat 2 times retry other parameter skip
GET_PAGE_INFO	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_PAGE_NOT_VALID ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - Unlock slave - - -	repeat 2 times repeat ∞ times repeat ∞ times use ASAP2 retry other syntax repeat 2 times retry other parameter retry other parameter skip
SET_SEGMENT_MODE	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_MODE_NOT_VALID ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - Unlock slave - - display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax repeat 2 times retry other parameter retry other parameter repeat
GET_SEGMENT_MODE	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - Unlock slave - display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax repeat 2 times retry other parameter repeat

COPY_CAL_PAGE	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_PAGE_NOT_VALID ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - Unlock slave - - display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax repeat 2 times retry other parameter retry other parameter repeat
---------------	--	--	---

1.7.3.2.4 Data Acquisition and Stimulation commands (DAQ)

Command	Error	Pre-Action	Action
SET_DAQ_PTR	timeout t1 ERR_CMD_BUSY ERR_DAQ_ACTIVE ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - wait t7 - - Unlock slave display error	repeat 2 times repeat ∞ times repeat 2 times repeat ∞ times retry other syntax retry other parameter repeat 2 times repeat
WRITE_DAQ	timeout t1 ERR_CMD_BUSY ERR_DAQ_ACTIVE ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_WRITE_PROTECTED ERR_DAQ_CONFIG ERR_RES_TEMP_NOT_A.	SYNCH + SET_DAQ_PTR wait t7 START_STOP_x wait t7 - - - unlock slave - - display error	repeat 2 times repeat ∞ times repeat 2 times repeat ∞ times retry other syntax retry other parameter display error repeat 2 times display error display error repeat
SET_DAQ_LIST_MODE	timeout t1 ERR_CMD_BUSY ERR_DAQ_ACTIVE ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_MODE_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 START_STOP_x wait t7 - - Unlock slave - display error	repeat 2 times repeat ∞ times repeat 2 times repeat ∞ times retry other syntax retry other parameter repeat 2 times retry other parameter repeat
START_STOP_DAQ_LIST	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_MODE_NOT_VALID ERR_DAQ_CONFIG ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - Unlock slave - - display error	repeat 2 times repeat ∞ times repeat ∞ times retry other syntax retry other parameter repeat 2 times retry other parameter display error repeat
START_STOP_SYNCH	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_MODE_NOT_VALID ERR_DAQ_CONFIG ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - Unlock slave - - display error	repeat 2 times repeat ∞ times repeat ∞ times retry other syntax repeat 2 times retry other parameter display error repeat

Command	Error	Pre-Action	Action
CLEAR_DAQ_LIST	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - unlock slave display error	repeat 2 times repeat ∞ times repeat ∞ times retry other syntax retry other parameter display error repeat 2 times repeat
GET_DAQ_LIST_INFO	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - Unlock slave -	repeat 2 times repeat ∞ times repeat ∞ times use ASAP2 retry other syntax retry other parameter repeat 2 times skip

Command	Error	Pre-Action	Action
WRITE_DAQ_MULTIPLE	timeout t1	SYNCH +	repeat 2 times
	ERR_CMD_BUSY	SET_DAQ_PTR	
	ERR_DAQ_ACTIVE	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	START_STOP_x	repeat 2 times
	ERR_CMD_SYNTAX	wait t7	repeat ∞ times
	ERR_OUT_OF_RANGE	-	retry other syntax
	ERR_ACCESS_DENIED	-	retry other parameter
	ERR_ACCESS_LOCKED	-	display error
	ERR_WRITE_PROTECTED	unlock slave	repeat 2 times
	ERR_DAQ_CONFIG	-	display error
	ERR_RES_TEMP_NOT_A.	-	display error
		display error	repeat

Command	Error	Pre-Action	Action
READ_DAQ	timeout t1	SYNCH +	repeat 2 times
	ERR_CMD_BUSY	SET_DAQ_PTR	
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_UNKNOWN	wait t7	repeat ∞ times
	ERR_CMD_SYNTAX	-	display error
	ERR_ACCESS_LOCKED	-	retry other syntax
GET_DAQ_CLOCK	ERR_RES_TEMP_NOT_A.	Unlock slave	repeat 2 times
		display error	repeat
	timeout t1	SYNCH	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_UNKNOWN	-	display error
GET_DAQ_PROCESSOR_INFO	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
	ERR_RES_TEMP_NOT_A.	-	skip
	timeout t1	SYNCH	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
GET_DAQ_RESOLUTION_INFO	ERR_CMD_UNKNOWN	-	use ASAP2
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
	ERR_RES_TEMP_NOT_A.	-	skip
	timeout t1	SYNCH	repeat 2 times
	ERR_CMD_BUSY	wait t7	repeat ∞ times
GET_DAQ_LIST_MODE	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_OUT_OF_RANGE	-	retry other parameter
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
	ERR_RES_TEMP_NOT_A.	display error	repeat
	timeout t1	SYNCH	repeat 2 times
GET_DAQ_EVENT_INFO	ERR_CMD_BUSY	wait t7	repeat ∞ times
	ERR_PGM_ACTIVE	wait t7	repeat ∞ times
	ERR_CMD_UNKNOWN	-	use ASAP2
	ERR_CMD_SYNTAX	-	retry other syntax
	ERR_OUT_OF_RANGE	-	retry other parameter
	ERR_ACCESS_LOCKED	Unlock slave	repeat 2 times
GET_DAQ_EVENT_INFO	ERR_RES_TEMP_NOT_A.	-	skip

Command	Error	Pre-Action	Action
FREE_DAQ	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - Unlock slave display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax repeat 2 times repeat
ALLOC_DAQ	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_MEMORY_OVERFLOW ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - Unlock slave reinit DAQ reinit DAQ display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter repeat 2 times repeat 2 times retry other parameter repeat
ALLOC_ODT	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_MEMORY_OVERFLOW ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - Unlock slave reinit DAQ reinit DAQ display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter repeat 2 times repeat 2 times retry other parameter repeat
ALLOC_ODT_ENTRY	timeout t1 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_MEMORY_OVERFLOW ERR_RES_TEMP_NOT_A.	SYNCH wait t7 wait t7 - - - Unlock slave reinit DAQ reinit DAQ display error	repeat 2 times repeat ∞ times repeat ∞ times display error retry other syntax retry other parameter repeat 2 times repeat 2 times retry other parameter repeat

1.7.3.2.5 Non-volatile memory programming commands (PGM)

Command	Error	Pre-Action	Action
PROGRAM_START	timeout t3 ERR_CMD_BUSY ERR_DAQ_ACTIVE ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_GENERIC ERR_RES_TEMP_NOT_A.	SYNCH wait t7 START_STOP_x - unlock slave - display error	repeat 2 times repeat ∞ times repeat 2 times retry other syntax repeat 2 times restart session repeat
PROGRAM_CLEAR	timeout t4 ERR_CMD_BUSY ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_RES_TEMP_NOT_A.	SYNCH+SET_MTA wait t7 - - - unlock slave - display error	repeat 2 times repeat ∞ times retry other syntax retry other parameter display error repeat 2 times repeat 2 times repeat
PROGRAM	timeout t5 ERR_CMD_BUSY ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_MEMORY_OVERFLOW ERR_RES_TEMP_NOT_A.	SYNCH+SET_MTA wait t7 - - - unlock slave - - display error	repeat 2 times repeat ∞ times retry other syntax retry other parameter display error repeat 2 times repeat 2 times display error repeat
PROGRAM_RESET	timeout t5 ERR_CMD_BUSY ERR_PGM_ACTIVE ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - - Unlock slave - display error	repeat 2 times repeat ∞ times repeat 2 times - retry other syntax repeat 2 times repeat 2 times repeat

Command	Error	Pre-Action	Action
GET_PGM_PROCESSOR_INFO	timeout t1 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - - Unlock slave -	repeat 2 times repeat ∞ times use ASAP2 retry other syntax repeat 2 times skip
GET_SECTOR_INFO	timeout t1 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_ACCESS_LOCKED ERR_MODE_NOT_VALID ERR_SEGMENT_NOT_VALID ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - - Unlock slave - - -	repeat 2 times repeat ∞ times use ASAP2 retry other syntax repeat 2 times retry other parameter retry other parameter skip
PROGRAM_PREPARE	timeout t3 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_GENERIC ERR_RES_TEMP_NOT_A.	SYNCH+SET_MTA wait t7 - - - Unlock slave - - display error	repeat 2 times repeat ∞ times display error retry other syntax retry other parameter repeat 2 times repeat 2 times restart session repeat
PROGRAM_FORMAT	timeout t1 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - - - Unlock slave - display error	repeat 2 times repeat ∞ times display error retry other syntax retry other parameter repeat 2 times repeat 2 times repeat

Command	Error	Pre-Action	Action
PROGRAM_NEXT	timeout t5 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_DENIED ERR_ACCESS_LOCKED ERR_MEMORY_OVERFLOW ERR_SEQUENCE ERR_RES_TEMP_NOT_A.	SYNCH+PROGRAM wait t7 - - - unlock slave - - display error	repeat 2 times repeat ∞ times use alternative retry other syntax retry other parameter display error repeat 2 times display error repeat 2 times repeat
PROGRAM_MAX	timeout t5 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_MEMORY_OVERFLOW ERR_RES_TEMP_NOT_A.	SYNCH+SET_MTA wait t7 - Unlock slave - - display error	repeat 2 times repeat ∞ times use alternative repeat 2 times repeat 2 times display error repeat

Command	Error	Pre-Action	Action
PROGRAM_VERIFY	timeout t3 ERR_CMD_BUSY ERR_CMD_UNKNOWN ERR_CMD_SYNTAX ERR_OUT_OF_RANGE ERR_ACCESS_LOCKED ERR_SEQUENCE ERR_GENERIC ERR_VERIFY ERR_RES_TEMP_NOT_A.	SYNCH wait t7 - - - Unlock slave - - display error	repeat 2 times repeat ∞ times display error retry other syntax retry other parameter repeat 2 times repeat 2 times restart session new flashware version necessary repeat

1.8 DESCRIPTION OF EVENTS

The following chapters are a description of all possible XCP event packets.

Unused data bytes, marked as „reserved“, may have arbitrary values.

Event parameters in WORD (2 Byte) format, are always aligned to a position that can be divided by 2. Event parameters in DWORD (4 Bytes) format, are always aligned to a position that can be divided by 4.

The byte format (MOTOROLA, INTEL) of multi byte parameters is slave device dependent.

1.8.1 START IN RESUME MODE

Category Event, optional
Mnemonic EV_RESUME_MODE

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x00
2	WORD	Session Configuration Id from slave
4	DWORD	Current slave Timestamp (optional)

With EV_RESUME_MODE the slave indicates that it is starting in RESUME mode.

If the slave has the TIMESTAMP_SUPPORTED flag set in GET_DAQ_PROCESSOR_INFO, in Current slave Timestamp the EV_RESUME_MODE also has to contain the current value of the data acquisition clock. The Current slave Timestamp has the format specified by the GET_DAQ_RESOLUTION_INFO command.

1.8.2 END OF DAQ CLEARING

Category Event, optional
Mnemonic EV_CLEAR_DAQ

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x01

With EV_CLEAR_DAQ the slave indicates that the DAQ configuration in non-volatile memory has been cleared.

1.8.3 END OF DAQ STORING

Category Event, optional
Mnemonic EV_STORE_DAQ

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x02

With EV_STORE_DAQ the slave indicates that the DAQ configuration has been stored into non-volatile memory.

1.8.4 END OF CAL STORING

Category Event, optional
Mnemonic EV_STORE_CAL

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x03

With EV_STORE_CAL the slave indicates that calibration data have been stored into non-volatile memory.

1.8.5 REQUEST TO RESTART TIME-OUT DETECTION

Category Event, optional
Mnemonic EV_CMD_PENDING

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x05

With EV_CMD_PENDING the slave requests the master to restart the time-out detection.

1.8.6 INDICATION OF DAQ OVERLOAD

Category Event, optional
Mnemonic EV_DAQ_OVERLOAD

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x06

With EV_DAQ_OVERLOAD the slave may indicate an overload situation when transferring DAQ lists.

1.8.7 INDICATION OF AUTONOMOUS DISCONNECT

Category Event, optional
Mnemonic EV_SESSION_TERMINATED

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x07

With EV_SESSION_TERMINATED the slave indicates to the master that it autonomously decided to disconnect the current XCP session.

1.8.8 TRANSFER OF EXTERNALLY TRIGGERED TIMESTAMP

Category Event, optional
Mnemonic EV_TIME_SYNC

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x08
2	BYTE	reserved
3	BYTE	reserved
4	DWORD	Timestamp

The generation of a timestamp can be triggered by an external sync line. This can be used for highly accurate time synchronization with the master without relying on the GET_DAQ_CLOCK mechanism.

The slave in this case with EV_TIME_SYNC sends its current time stamp to the master. The returned timestamp has the format specified by the GET_DAQ_RESOLUTION_INFO command.

This event is not available if the slave does not support timestamps.

1.8.9 INDICATION OF TIME-OUT AT STIM

Category Event, optional
Mnemonic EV_STIM_TIMEOUT

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x09
2	BYTE	Info Type 0 = Event channel number 1 = DAQ list number
3	BYTE	reserved
4	WORD	Event channel number or DAQ list number depending on Info Type.

If the slave detects a STIM timeout, it can notify the master by sending EV_STIM_TIMEOUT. Info type defines whether the event channel or the DAQ list could not or just partially be stimulated.

The severity is implementation specific.

1.8.10 ENTERING SLEEP MODE

Category Event, optional
Mnemonic EV_SLEEP

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x0A

With EV_SLEEP the slave indicates to the master that it enters SLEEP mode.

In SLEEP mode the slave stays in CONNECTED state but is not able of processing any commands. The slave will not send any ERR_CMD_BUSY nor EV_CMD_PENDING.

If the master receives an EV_SLEEP, it must suspend sending commands until an EV_WAKE_UP is received.

Pending commands have to be discarded on both sides.

1.8.11 LEAVING SLEEP MODE

Category Event, optional
Mnemonic EV_WAKE_UP

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0x0B

With EV_WAKE_UP the slave indicates to the master that it leaves SLEEP mode and continues its normal operation.

1.8.12 USER-DEFINED EVENT

Category Event, optional
Mnemonic EV_USER

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0xFE

EV_USER is a carrier for user-defined events.

1.8.13 TRANSPORT LAYER SPECIFIC EVENT

Category Event, optional
Mnemonic EV_TRANSPORT

Position	Type	Description
0	BYTE	Event = 0xFD
1	BYTE	Event Code = 0xFF

EV_TRANSPORT is a carrier for Transport Layer specific events.

2 INTERFACE TO ASAM MCD 2MC DESCRIPTION FILE

The following chapter describes the parameters that are independent from the Transport Layer used.

For referencing to them in the higher level *.AML (ref. Part 4 "Interface to ASAM MCD 2MC Description File"), they are grouped under the tag "Common_Parameters" in a file **XCP_common_vX_Y.aml**. (vX_Y being the current XCP Protocol Layer Version Number).

2.1 ASAM MCD 2MC AML FOR XCP (COMMON_PARAMETERS)

```

/*****
/*
/* ASAP2 meta language for XCP protocol layer V1.0
/*
/* 2003-03-03
/*
/* Vector Informatik, Schuermans
/*
/* Datatypes:
/*
/* A2ML      ASAP2      Windows  description
/* -----
/* uchar     UBYTE      BYTE     unsigned 8 Bit
/* char      SBYTE      char      signed 8 Bit
/* uint      UWORD      WORD      unsigned integer 16 Bit
/* int       SWORD      int       signed integer 16 Bit
/* ulong     ULONG      DWORD     unsigned integer 32 Bit
/* long      SLONG      LONG      signed integer 32 Bit
/* float     FLOAT32_IEEE      float 32 Bit
/*
*****/
/***** start of PROTOCOL_LAYER *****/

```

```

struct Protocol_Layer { /* At MODULE */

    uint;                /* XCP protocol layer version */
                        /* e.g. "1.0" = 0x0100 */

    uint;                /* T1 [ms] */
    uint;                /* T2 [ms] */
    uint;                /* T3 [ms] */
    uint;                /* T4 [ms] */
    uint;                /* T5 [ms] */
    uint;                /* T6 [ms] */
    uint;                /* T7 [ms] */

    uchar;               /* MAX_CTO */
    uint;               /* MAX_DTO */

    enum {               /* BYTE_ORDER */
        "BYTE_ORDER_MSB_LAST" = 0,
        "BYTE_ORDER_MSB_FIRST" = 1
    };

```

```

enum {
    /* ADDRESS_GRANULARITY */
    "ADDRESS_GRANULARITY_BYTE"    = 1,
    "ADDRESS_GRANULARITY_WORD"    = 2,
    "ADDRESS_GRANULARITY_DWORD"   = 4
};

taggedstruct {
    /* optional */

    ("OPTIONAL_CMD" enum {
        /* XCP-Code of optional command */
        /* supported by the slave */

        "GET_COMM_MODE_INFO"      = 0xFB,
        "GET_ID"                   = 0xFA,
        "SET_REQUEST"              = 0xF9,
        "GET_SEED"                 = 0xF8,
        "UNLOCK"                   = 0xF7,
        "SET_MTA"                  = 0xF6,
        "UPLOAD"                   = 0xF5,
        "SHORT_UPLOAD"             = 0xF4,
        "BUILD_CHECKSUM"           = 0xF3,
        "TRANSPORT_LAYER_CMD"      = 0xF2,
        "USER_CMD"                 = 0xF1,
        "DOWNLOAD"                 = 0xF0,
        "DOWNLOAD_NEXT"            = 0xEF,
        "DOWNLOAD_MAX"             = 0xEE,
        "SHORT_DOWNLOAD"           = 0xED,
        "MODIFY_BITS"              = 0xEC,
        "SET_CAL_PAGE"             = 0xEB,
        "GET_CAL_PAGE"             = 0xEA,
        "GET_PAG_PROCESSOR_INFO"   = 0xE9,
        "GET_SEGMENT_INFO"         = 0xE8,
        "GET_PAGE_INFO"            = 0xE7,
        "SET_SEGMENT_MODE"         = 0xE6,
        "GET_SEGMENT_MODE"         = 0xE5,
        "COPY_CAL_PAGE"            = 0xE4,
        "CLEAR_DAQ_LIST"           = 0xE3,
        "SET_DAQ_PTR"              = 0xE2,
        "WRITE_DAQ"                = 0xE1,
        "SET_DAQ_LIST_MODE"        = 0xE0,
        "GET_DAQ_LIST_MODE"        = 0xDF,
        "START_STOP_DAQ_LIST"      = 0xDE,
        "START_STOP_SYNCH"         = 0xDD,
        "GET_DAQ_CLOCK"            = 0xDC,
        "READ_DAQ"                 = 0xDB,
        "GET_DAQ_PROCESSOR_INFO"   = 0xDA,
        "GET_DAQ_RESOLUTION_INFO"  = 0xD9,
        "GET_DAQ_LIST_INFO"        = 0xD8,
        "GET_DAQ_EVENT_INFO"       = 0xD7,
        "FREE_DAQ"                 = 0xD6,
        "ALLOC_DAQ"                = 0xD5,
        "ALLOC_ODT"                = 0xD4,
        "ALLOC_ODT_ENTRY"          = 0xD3,
        "PROGRAM_START"            = 0xD2,
        "PROGRAM_CLEAR"            = 0xD1,
        "PROGRAM"                  = 0xD0,
        "PROGRAM_RESET"            = 0xCF,
        "GET_PGM_PROCESSOR_INFO"   = 0xCE,
        "GET_SECTOR_INFO"          = 0xCD,
        "PROGRAM_PREPARE"          = 0xCC,
    })

```

```

"PROGRAM_FORMAT"          = 0xCB,
"PROGRAM_NEXT"            = 0xCA,
"PROGRAM_MAX"             = 0xC9,
"PROGRAM_VERIFY"          = 0xC8,
"WRITE_DAQ_MULTIPLE"      = 0xC7

});

"COMMUNICATION_MODE_SUPPORTED" taggedunion { /* optional modes supported */

    "BLOCK" taggedstruct {

        "SLAVE";          /* Slave Block Mode supported */
        "MASTER" struct { /* Master Block Mode supported */

            uchar; /* MAX_BS */
            uchar; /* MIN_ST */

        };

    };

    "INTERLEAVED" uchar; /* QUEUE_SIZE */
};

"SEED_AND_KEY_EXTERNAL_FUNCTION" char[256]; /* Name of the Seed&Key function */
                                           /* including file extension */
                                           /* without path */

};

}; /****** end of PROTOCOL_LAYER *****/

/****** start of DAQ *****/
struct Daq {
    /* DAQ supported, at MODULE*/

    enum {
        /* DAQ_CONFIG_TYPE */
        "STATIC" = 0,
        "DYNAMIC" = 1
    };

    uint; /* MAX_DAQ */
    uint; /* MAX_EVENT_CHANNEL */
    uchar; /* MIN_DAQ */

    enum {
        /* OPTIMISATION_TYPE */
        "OPTIMISATION_TYPE_DEFAULT" = 0,
        "OPTIMISATION_TYPE_ODT_TYPE_16" = 1,
        "OPTIMISATION_TYPE_ODT_TYPE_32" = 2,
        "OPTIMISATION_TYPE_ODT_TYPE_64" = 3,
        "OPTIMISATION_TYPE_ODT_TYPE_ALIGNMENT" = 4,
        "OPTIMISATION_TYPE_MAX_ENTRY_SIZE" = 5
    };

    enum {
        /* ADDRESS_EXTENSION */
        "ADDRESS_EXTENSION_FREE" = 0,
        "ADDRESS_EXTENSION_ODT" = 1,
        "ADDRESS_EXTENSION_DAQ" = 3
    };
};

```

```

enum {
    /* IDENTIFICATION_FIELD */
    "IDENTIFICATION_FIELD_TYPE_ABSOLUTE" = 0,
    "IDENTIFICATION_FIELD_TYPE_RELATIVE_BYTE" = 1,
    "IDENTIFICATION_FIELD_TYPE_RELATIVE_WORD" = 2,
    "IDENTIFICATION_FIELD_TYPE_RELATIVE_WORD_ALIGNED" = 3
};

enum {
    /* GRANULARITY_ODT_ENTRY_SIZE_DAQ */
    "GRANULARITY_ODT_ENTRY_SIZE_DAQ_BYTE" = 1,
    "GRANULARITY_ODT_ENTRY_SIZE_DAQ_WORD" = 2,
    "GRANULARITY_ODT_ENTRY_SIZE_DAQ_DWORD" = 4,
    "GRANULARITY_ODT_ENTRY_SIZE_DAQ_DLONG" = 8
};

uchar; /* MAX_ODT_ENTRY_SIZE_DAQ */

enum {
    /* OVERLOAD_INDICATION */
    "NO_OVERLOAD_INDICATION" = 0,
    "OVERLOAD_INDICATION_PID" = 1,
    "OVERLOAD_INDICATION_EVENT" = 2
};

taggedstruct { /* optional */

    "DAQ_ALTERNATING_SUPPORTED" uint; /* Display_Event_Channel_Number */

    "PRESCALER_SUPPORTED";
    "RESUME_SUPPORTED";
    "STORE_DAQ_SUPPORTED";

    block "STIM" struct { /* STIM supported */

        enum {
            /* GRANULARITY_ODT_ENTRY_SIZE_STIM */
            "GRANULARITY_ODT_ENTRY_SIZE_STIM_BYTE" = 1,
            "GRANULARITY_ODT_ENTRY_SIZE_STIM_WORD" = 2,
            "GRANULARITY_ODT_ENTRY_SIZE_STIM_DWORD" = 4,
            "GRANULARITY_ODT_ENTRY_SIZE_STIM_DLONG" = 8
        };
        uchar; /* MAX_ODT_ENTRY_SIZE_STIM */

        taggedstruct { /* bitwise stimulation */
            "BIT_STIM_SUPPORTED";
            "MIN_ST_STIM" uchar; /* separation time between DTOs */
            /* time in units of 100 microseconds */
        };
    };

    block "TIMESTAMP_SUPPORTED" struct {
        uint; /* TIMESTAMP_TICKS */
        enum { /* TIMESTAMP_SIZE */
            "NO_TIME_STAMP" = 0,
            "SIZE_BYTE" = 1,
            "SIZE_WORD" = 2,
            "SIZE_DWORD" = 4
        };
    };
};

```

```

enum { /* RESOLUTION OF TIMESTAMP */
    "UNIT_1NS"    = 0,
    "UNIT_10NS"   = 1,
    "UNIT_100NS"  = 2,
    "UNIT_1US"    = 3,
    "UNIT_10US"   = 4,
    "UNIT_100US"  = 5,
    "UNIT_1MS"    = 6,
    "UNIT_10MS"   = 7,
    "UNIT_100MS"  = 8,
    "UNIT_1S"     = 9,
    "UNIT_1PS"    = 10,
    "UNIT_10PS"   = 11,
    "UNIT_100PS"  = 12
};

taggedstruct {
    "TIMESTAMP_FIXED";
};

};

"PID_OFF_SUPPORTED";

/***** start of DAQ_LIST *****/

(block "DAQ_LIST" struct {
    /* DAQ_LIST */
    /* multiple possible */
    uint;
    /* DAQ_LIST_NUMBER */

    taggedstruct {
        /* optional */

        "DAQ_LIST_TYPE" enum {
            "DAQ"      = 1,
            "STIM"     = 2,
            "DAQ_STIM" = 3
            /* DIRECTION = DAQ only */
            /* DIRECTION = STIM only */
            /* both directions possible */
            /* but not simultaneously */

        };

        "MAX_ODT"      uchar;
        "MAX_ODT_ENTRIES" uchar;

        "FIRST_PID" uchar;
        "EVENT_FIXED" uint;

        block "PREDEFINED" taggedstruct {
            /* predefined */
            /* not configurable DAQ_LIST */

            (block "ODT" struct {
                uchar;
                taggedstruct {
                    ("ODT_ENTRY" struct {
                        uchar;
                        ulong;
                        uchar;
                        uchar;
                        uchar;
                    });
                };
            });
        };
    };
};

/**** end of DAQ_LIST *****/

```

```

/***** start of EVENT *****/
(block "EVENT" struct {
    /* EVENT */
    /* multiple possible */
    char[101]; /* EVENT_CHANNEL_NAME */
    char[9]; /* EVENT_CHANNEL_SHORT_NAME */
    uint; /* EVENT_CHANNEL_NUMBER */

    enum {
        "DAQ" = 1, /* only DAQ_LISTs */
        /* with DIRECTION = DAQ */
        "STIM" = 2, /* only DAQ_LISTs */
        /* with DIRECTION = STIM */
        "DAQ_STIM" = 3 /* both kind of DAQ_LISTs */
    };

    uchar; /* MAX_DAQ_LIST */
    uchar; /* EVENT_CHANNEL_TIME_CYCLE */
    uchar; /* EVENT_CHANNEL_TIME_UNIT */
    uchar; /* EVENT_CHANNEL_PRIORITY */

    taggedstruct { /* optional */
        "COMPLEMENTARY_BYPASS_EVENT_CHANNEL_NUMBER" uint;
        "CONSISTENCY" enum {
            "DAQ" = 0,
            "EVENT" = 1
        };
    };
}); /****** end of EVENT *****/

}; /*end of optional at DAQ */

}; /****** end of DAQ *****/

/***** start of DAQ_EVENT *****/
taggedunion Daq_Event { /* at MEASUREMENT */
    "FIXED_EVENT_LIST" taggedstruct {
        ("EVENT" uint)*;
    };
    "VARIABLE" taggedstruct {
        block "AVAILABLE_EVENT_LIST" taggedstruct {
            ("EVENT" uint)*;
        };
        block "DEFAULT_EVENT_LIST" taggedstruct {
            ("EVENT" uint)*;
        };
    };
}; /****** end of DAQ_EVENT *****/

/***** start of PAG *****/
struct Pag { /* PAG supported, at MODULE */
    uchar; /* MAX_SEGMENTS */

    taggedstruct { /* optional */
        "FREEZE_SUPPORTED";
    };
}; /****** end of PAG *****/

```



```

/***** start of PGM *****/

struct Pgm {          /* PGM supported, at MODULE */

enum {
    "PGM_MODE_ABSOLUTE"           = 1,
    "PGM_MODE_FUNCTIONAL"         = 2,
    "PGM_MODE_ABSOLUTE_AND_FUNCTIONAL" = 3
};

uchar;                /* MAX_SECTORS */

uchar;                /* MAX_CTO_PGM */

taggedstruct {        /* optional */

    (block "SECTOR" struct {      /* SECTOR */
                                   /* multiple possible */
        char[101];                /* SECTOR_NAME */
        uchar;                    /* SECTOR_NUMBER */

        ulong;                    /* Address */
        ulong;                    /* Length */

        uchar;                    /* CLEAR_SEQUENCE_NUMBER */
        uchar;                    /* PROGRAM_SEQUENCE_NUMBER */

        uchar;                    /* PROGRAM_METHOD */
    }); /* end of SECTOR */

    "COMMUNICATION_MODE_SUPPORTED" taggedunion { /* optional modes supported */

        "BLOCK" taggedstruct {

            "SLAVE";                /* Slave Block Mode supported */
            "MASTER" struct {       /* Master Block Mode supported */

                uchar; /* MAX_BS_PGM */
                uchar; /* MIN_ST_PGM */

            };

        };

        "INTERLEAVED" uchar; /* QUEUE_SIZE_PGM */
    };

};

/***** end of PGM *****/

```

```

/***** start of SEGMENT *****/

struct Segment {          /* at MEMORY_SEGMENT */

    uchar;                /* SEGMENT_NUMBER */
    uchar;                /* number of pages */
    uchar;                /* ADDRESS_EXTENSION */

    uchar;                /* COMPRESSION_METHOD */
    uchar;                /* ENCRYPTION_METHOD */

    taggedstruct {        /* optional */

        block "CHECKSUM" struct {

            enum {        /* checksum type */
                "XCP_ADD_11"      = 1,
                "XCP_ADD_12"      = 2,
                "XCP_ADD_14"      = 3,
                "XCP_ADD_22"      = 4,
                "XCP_ADD_24"      = 5,
                "XCP_ADD_44"      = 6,
                "XCP_CRC_16"      = 7,
                "XCP_CRC_16_CITT" = 8,
                "XCP_CRC_32"      = 9,
                "XCP_USER_DEFINED" = 255
            };

            taggedstruct {
                "MAX_BLOCK_SIZE"    ulong ; /* maximum block size */
                                           /* for checksum calculation */
                "EXTERNAL_FUNCTION" char[256]; /* Name of the Checksum function */
                                           /* including file extension */
                                           /* without path */
            };
        };

        (block "PAGE" struct {          /* PAGES for this SEGMENT */
                                           /* multiple possible */
            uchar;                      /* PAGE_NUMBER */

            enum { /* ECU_ACCESS_TYPE */
                "ECU_ACCESS_NOT_ALLOWED"      = 0,
                "ECU_ACCESS_WITHOUT_XCP_ONLY" = 1,
                "ECU_ACCESS_WITH_XCP_ONLY"    = 2,
                "ECU_ACCESS_DONT_CARE"        = 3
            };

            enum { /* XCP_READ_ACCESS_TYPE */
                "XCP_READ_ACCESS_NOT_ALLOWED" = 0,
                "XCP_READ_ACCESS_WITHOUT_ECU_ONLY" = 1,
                "XCP_READ_ACCESS_WITH_ECU_ONLY" = 2,
                "XCP_READ_ACCESS_DONT_CARE" = 3
            };
        };
    };
};

```

```
enum { /* XCP_WRITE_ACCESS_TYPE */
    "XCP_WRITE_ACCESS_NOT_ALLOWED" = 0,
    "XCP_WRITE_ACCESS_WITHOUT_ECU_ONLY" = 1,
    "XCP_WRITE_ACCESS_WITH_ECU_ONLY" = 2,
    "XCP_WRITE_ACCESS_DONT_CARE" = 3
};

taggedstruct {
    "INIT_SEGMENT" uchar; /* references segment that initialises this page */
};

}}*; /* end of PAGE */

(block "ADDRESS_MAPPING" struct { /* multiple possible */
    ulong; /* source address */
    ulong; /* destination address */
    ulong; /* length */
})*;

"PGM_VERIFY" ulong; /* verification value for PGM */

}; /* end of optional */

}; /****** end of SEGMENT *****/

/***** start of Common Parameters *****/

taggedstruct Common_Parameters {

    block "PROTOCOL_LAYER" struct Protocol_Layer;

    block "SEGMENT" struct Segment;

    block "DAQ" struct Daq;
    block "PAG" struct Pag;
    block "PGM" struct Pgm;

    block "DAQ_EVENT" taggedunion Daq_Event;

}; /****** end of Common Parameters *****/
```


ASAM e.V.
Arnikastraße 2
D-85635 Höhenkirchen
Germany

Tel.: (+49) 08102 / 8953 17
Fax.: (+49) 08102 / 8953 10
E-mail: info@asam.net
Internet: www.asam.net