

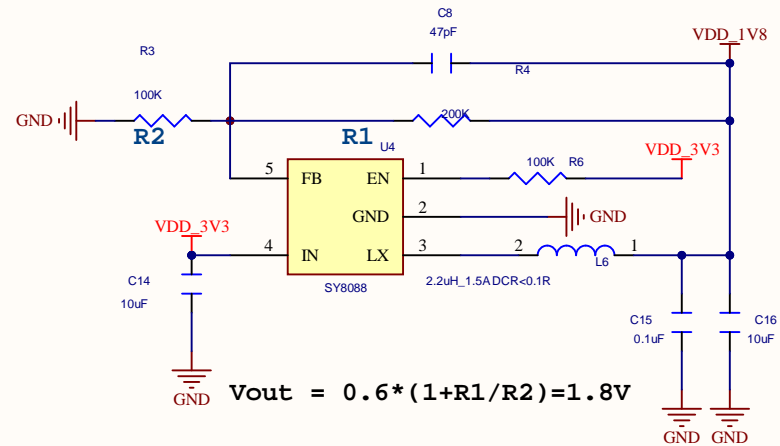
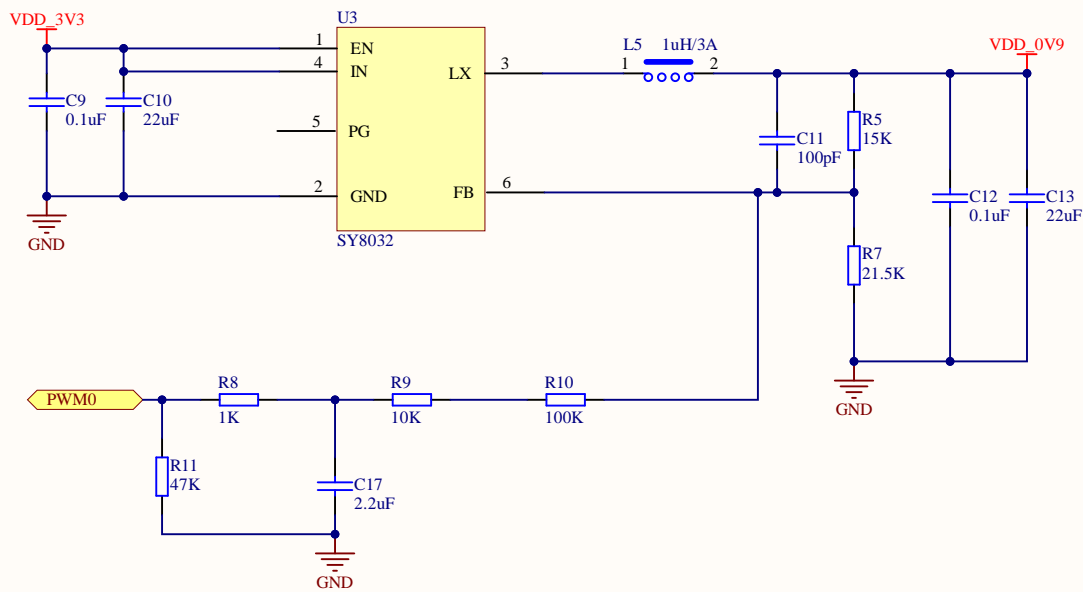




| Title | | |
|------------|------------------------------|-----------|
| Size A4 | Number | Revision |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\...\03- RS232.SchDoc | Drawn By: |

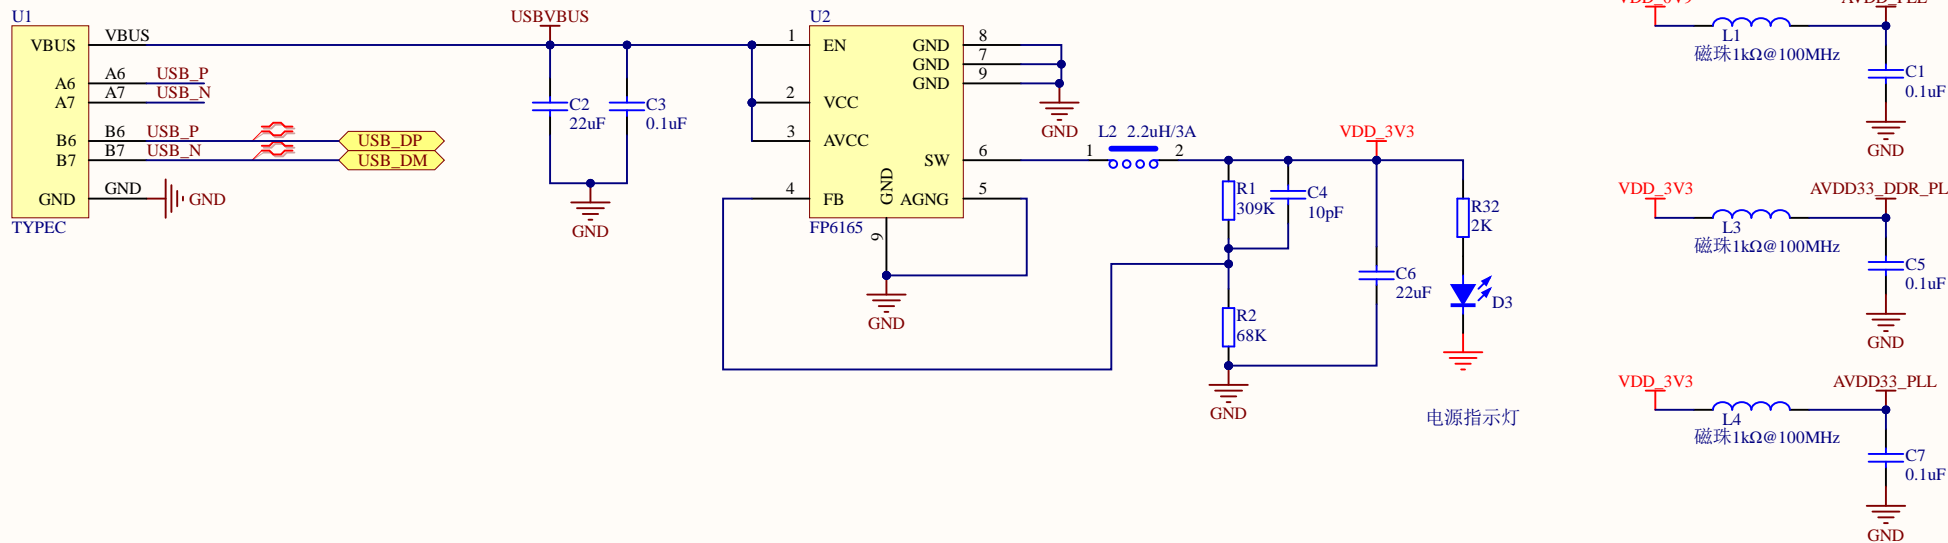


| Title | | |
|-------|-----------------------------|-----------|
| Size | Number | Revision |
| A4 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\...\01-POWER.SchDoc | Drawn By: |

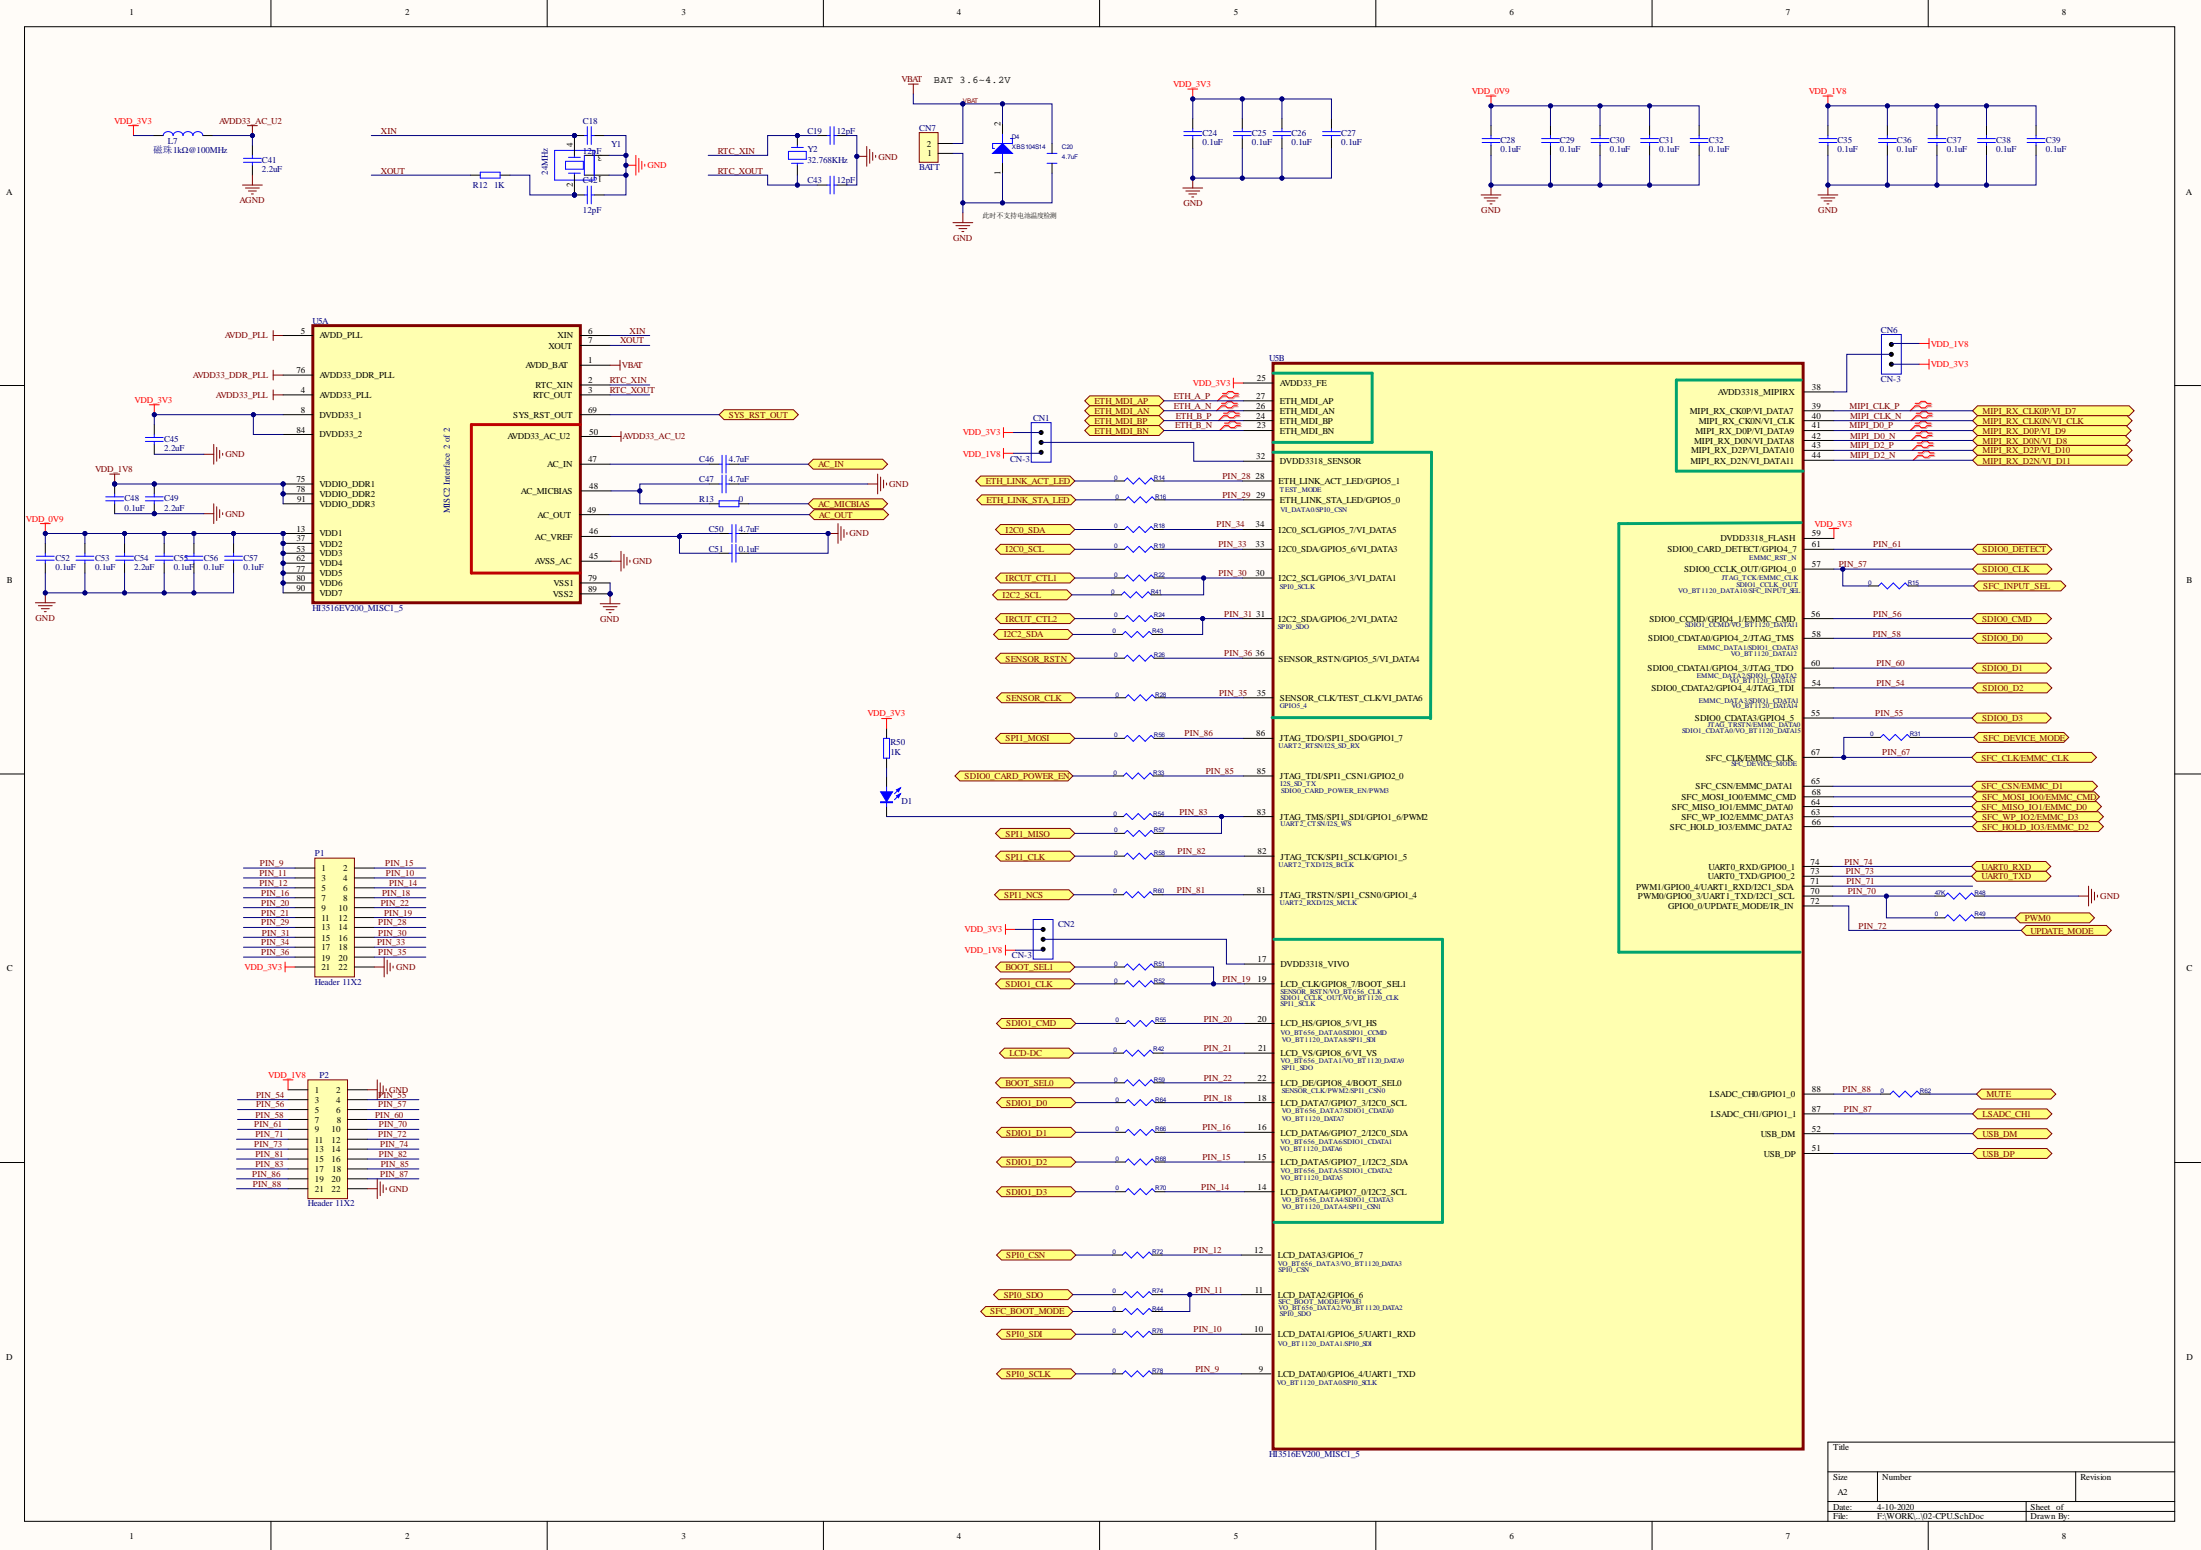

| | | |
|-------|------------------------|-----------|
| Title | | |
| Size | Number | Revision |
| A2 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\102-CPU\SchDoc | Drawn By: |
| | | |

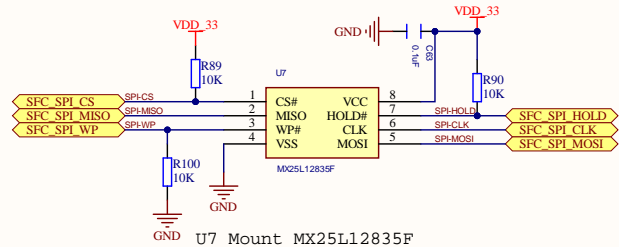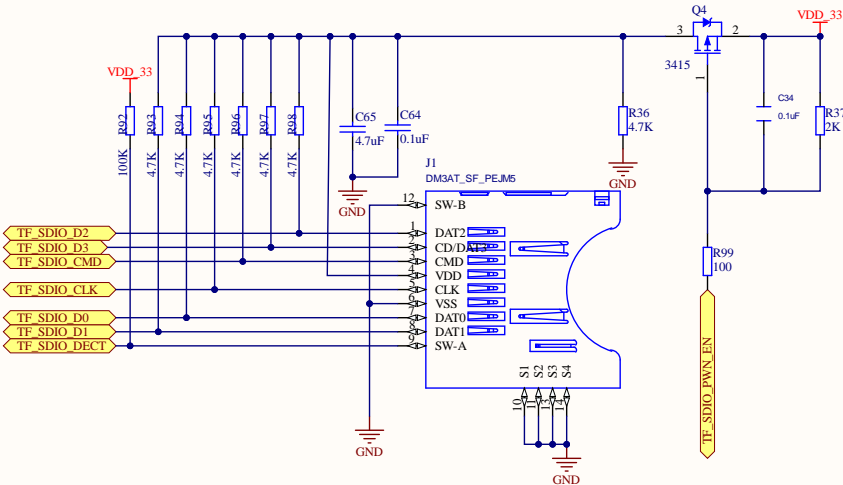


NOR /NAND FLASH

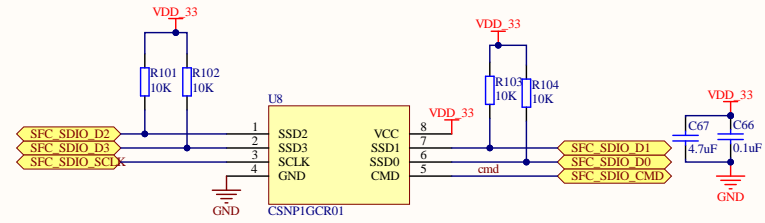


SD NAND FLASH


| | | |
|-------|------------------------------|-----------|
| Title | | |
| Size | Number | Revision |
| A3 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\...\04- FLASH.SchDoc | Drawn By: |

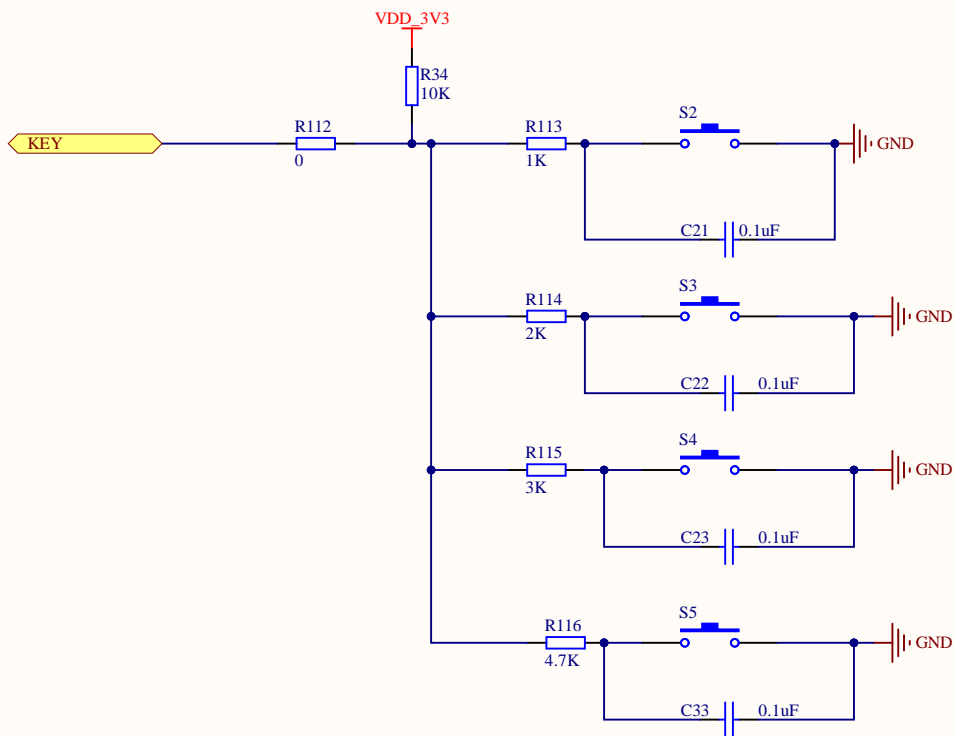


| Title | | |
|-------|----------------------------|-----------|
| Size | Number | Revision |
| A4 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\...\05- KEY.SchDoc | Drawn By: |

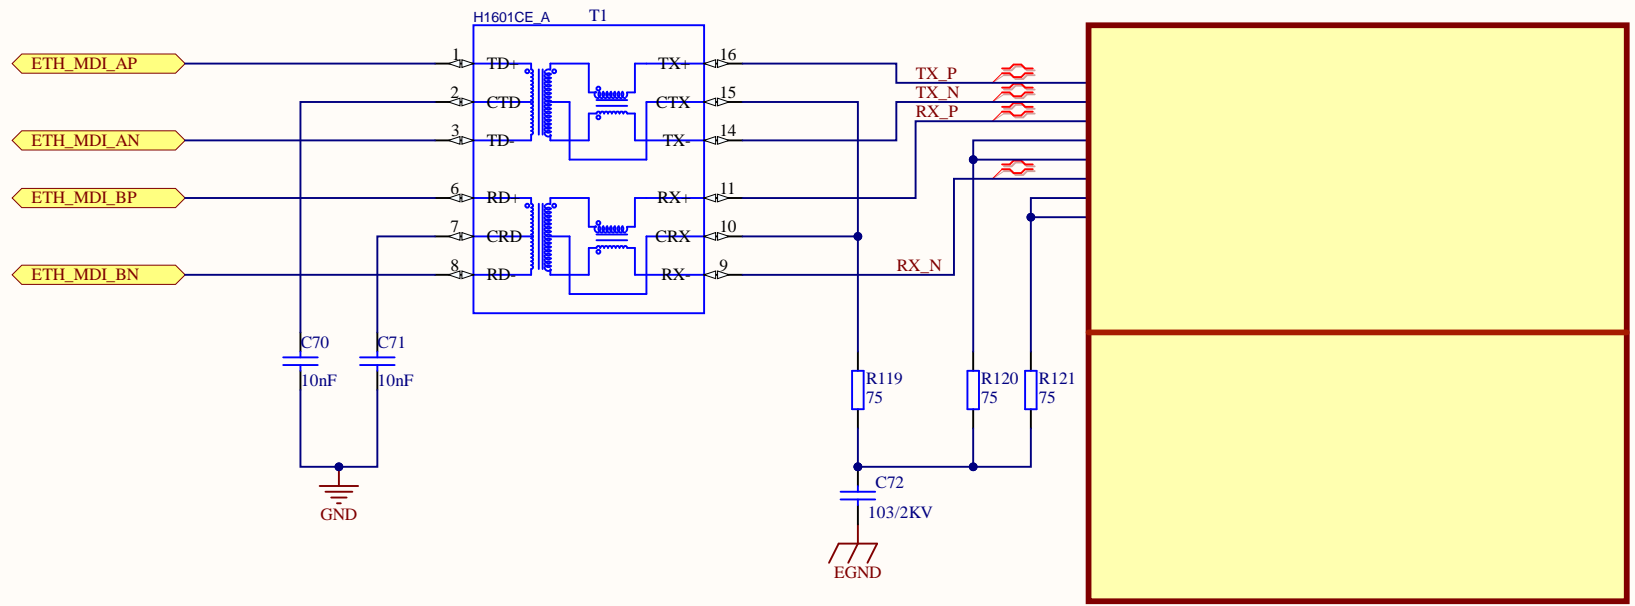

| Title | | |
|-------|---------------------------|-----------|
| Size | Number | Revision |
| A4 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\...\06-NET.SchDoc | Drawn By: |

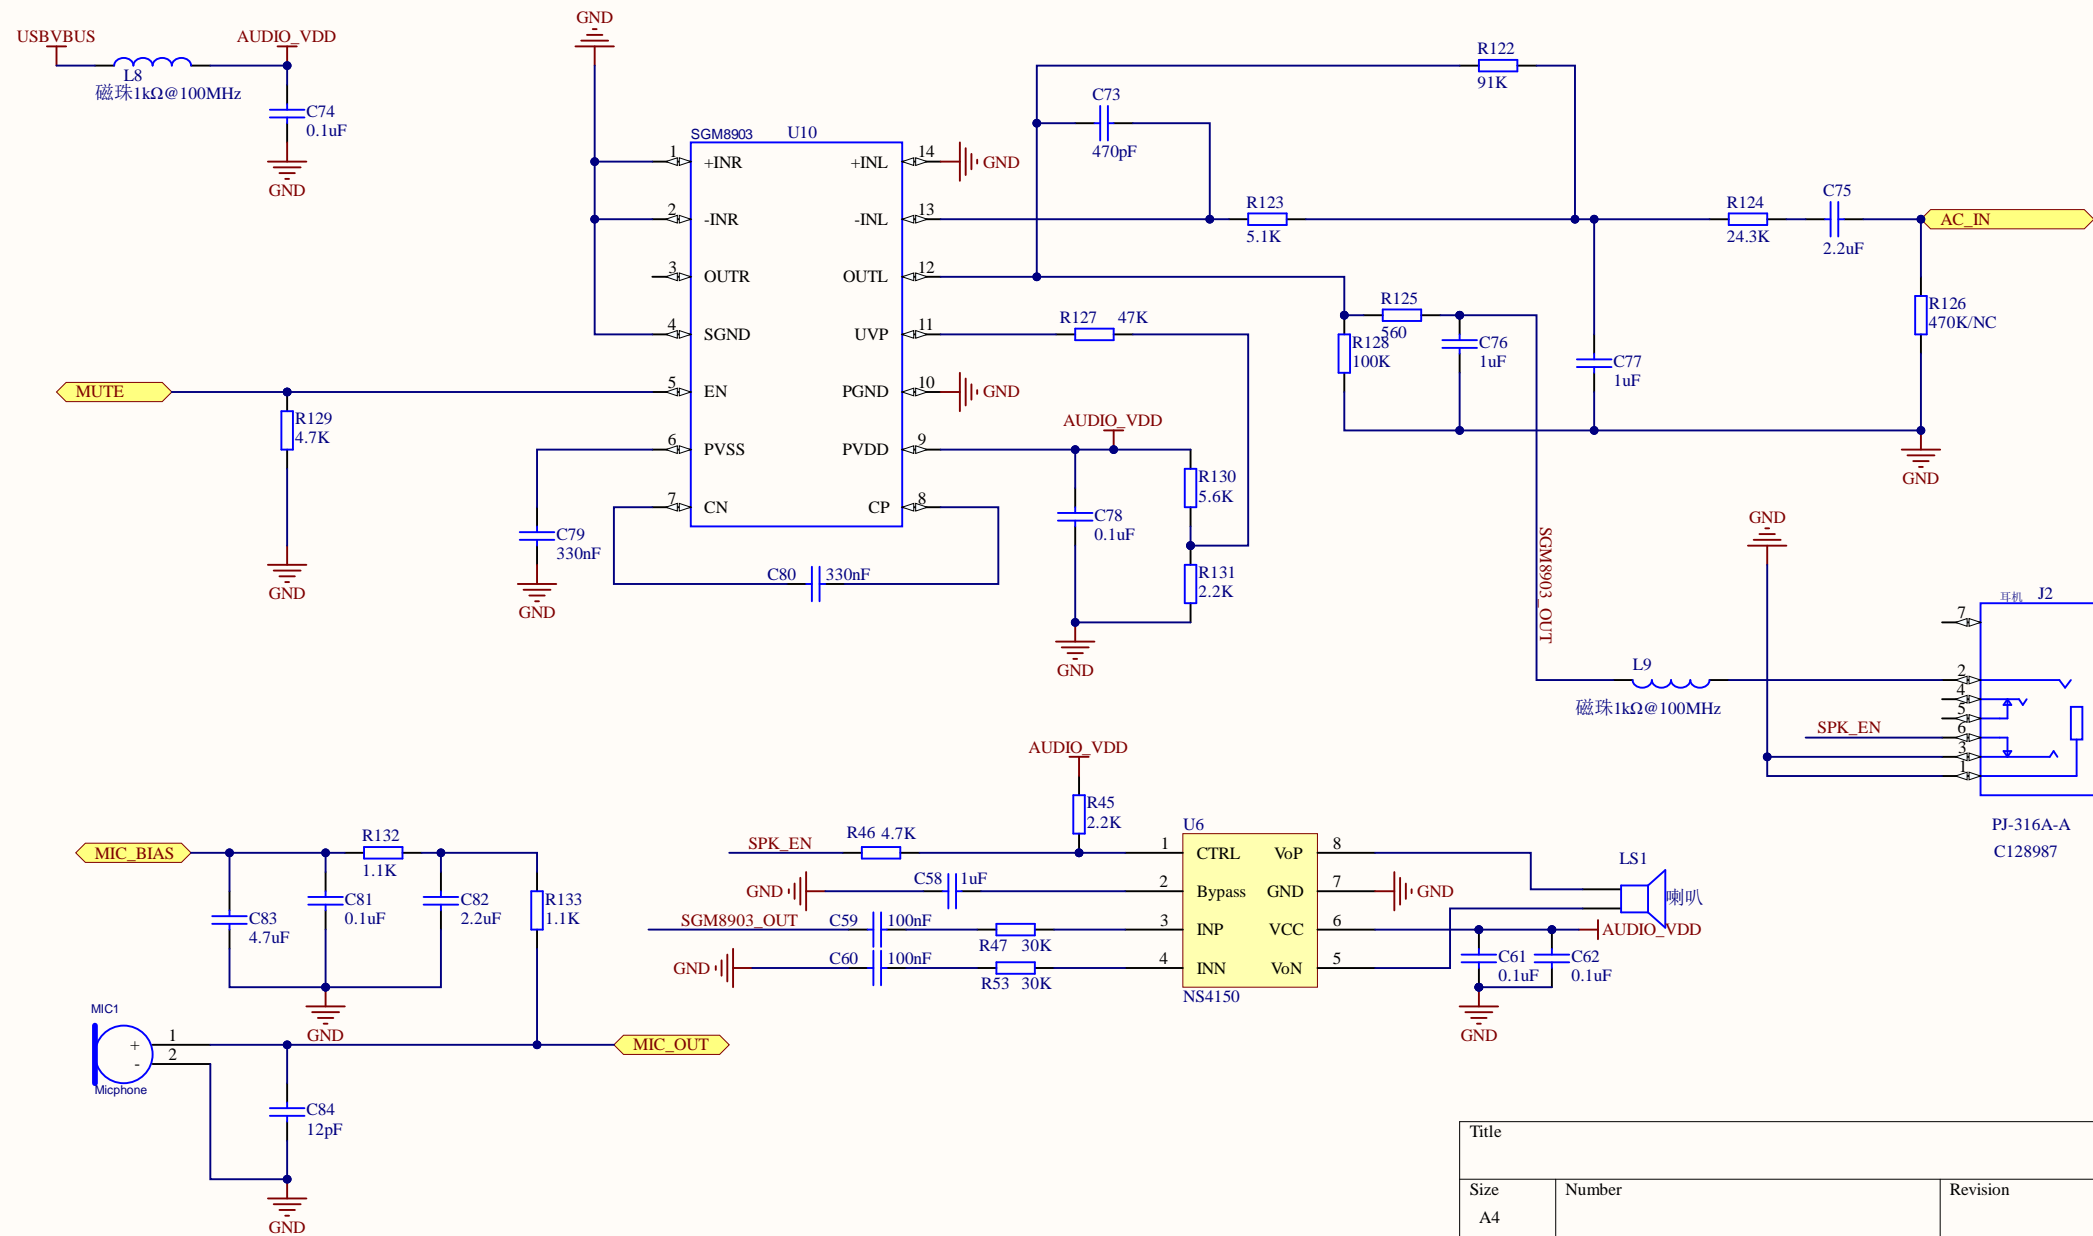


| Title | | |
|-------|-----------------------------|-----------|
| Size | Number | Revision |
| A4 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\...\07-AUDIO.SchDoc | Drawn By: |

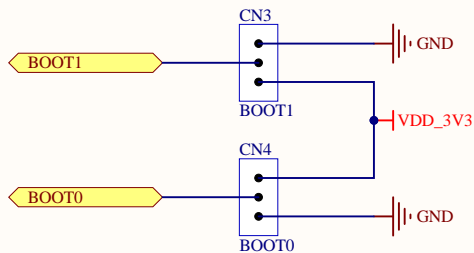


| BOOT1 | BOOT0 | FUNCTION |
|-------|-------|---------------------------|
| 0 | 0 | Boot Form Spi Flash |
| 0 | 1 | Boot form EMMC |
| 1 | 0 | fastboot update spi falsh |
| 1 | 1 | fastboot update eMMC |



BOOT_SEL1,BOOT_SEL0 is internal pull down.

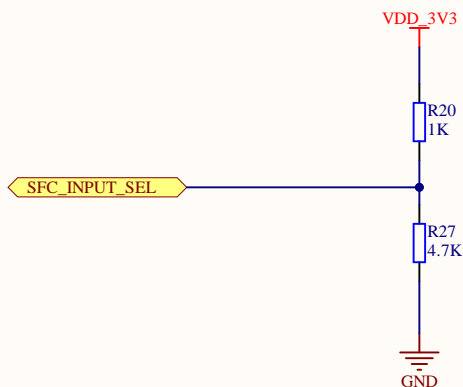

0 ----->BOOT FROM SPI FLASH ON THE SFC IO.
1-----> BOOT FROM SPI FLASH ON THE SDIO1 IO.

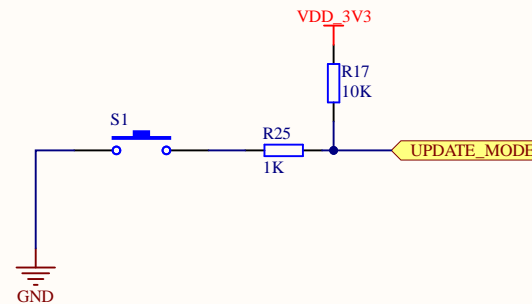

0 -----> Enable UPDATE FROM SDIO0 or USB
1-----> Disable UPDATE_MODE(default)
UPDATE_MODE is internal pull up.

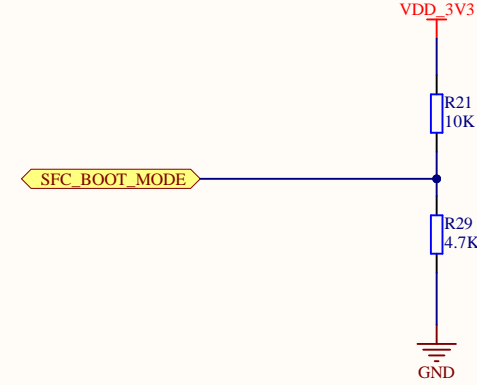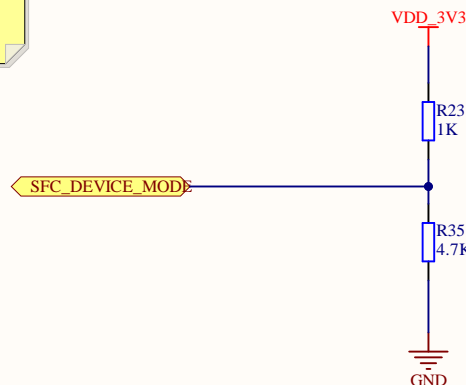

| DeviceMode | BootMode | FUNCTION |
|------------|----------|------------------------------------|
| 0 | 0 | spi nor flash 3byte mode (default) |
| 0 | 1 | spi nor flash 4byte mode |
| 1 | 0 | spi nand flash 1byte mode |
| 1 | 1 | spi nand flash 4byte mode |

SFC_DEVICE_MODE,SFC_BOOT_MODE are internal pull down.

| | | |
|------------|--------------------------|-----------|
| Title | | |
| Size A4 | Number | Revision |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\10-CONFIG.SchDoc | Drawn By: |

1

2

3


4

A

B

C

D

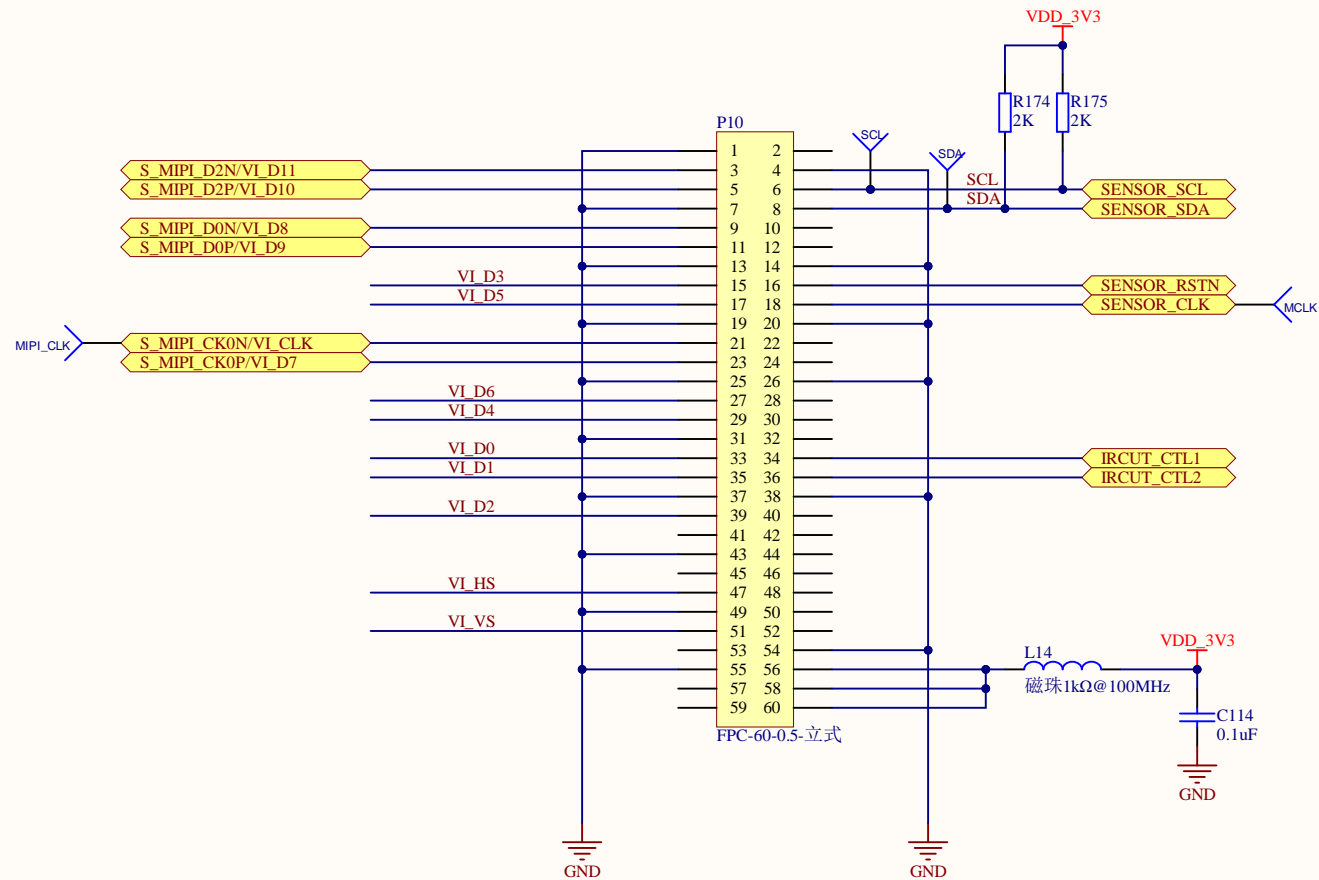


| Title | | |
|-------|--------------------------|-----------|
| Size | Number | Revision |
| A4 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\11-SENSOR.SchDoc | Drawn By: |


1

2

3

4

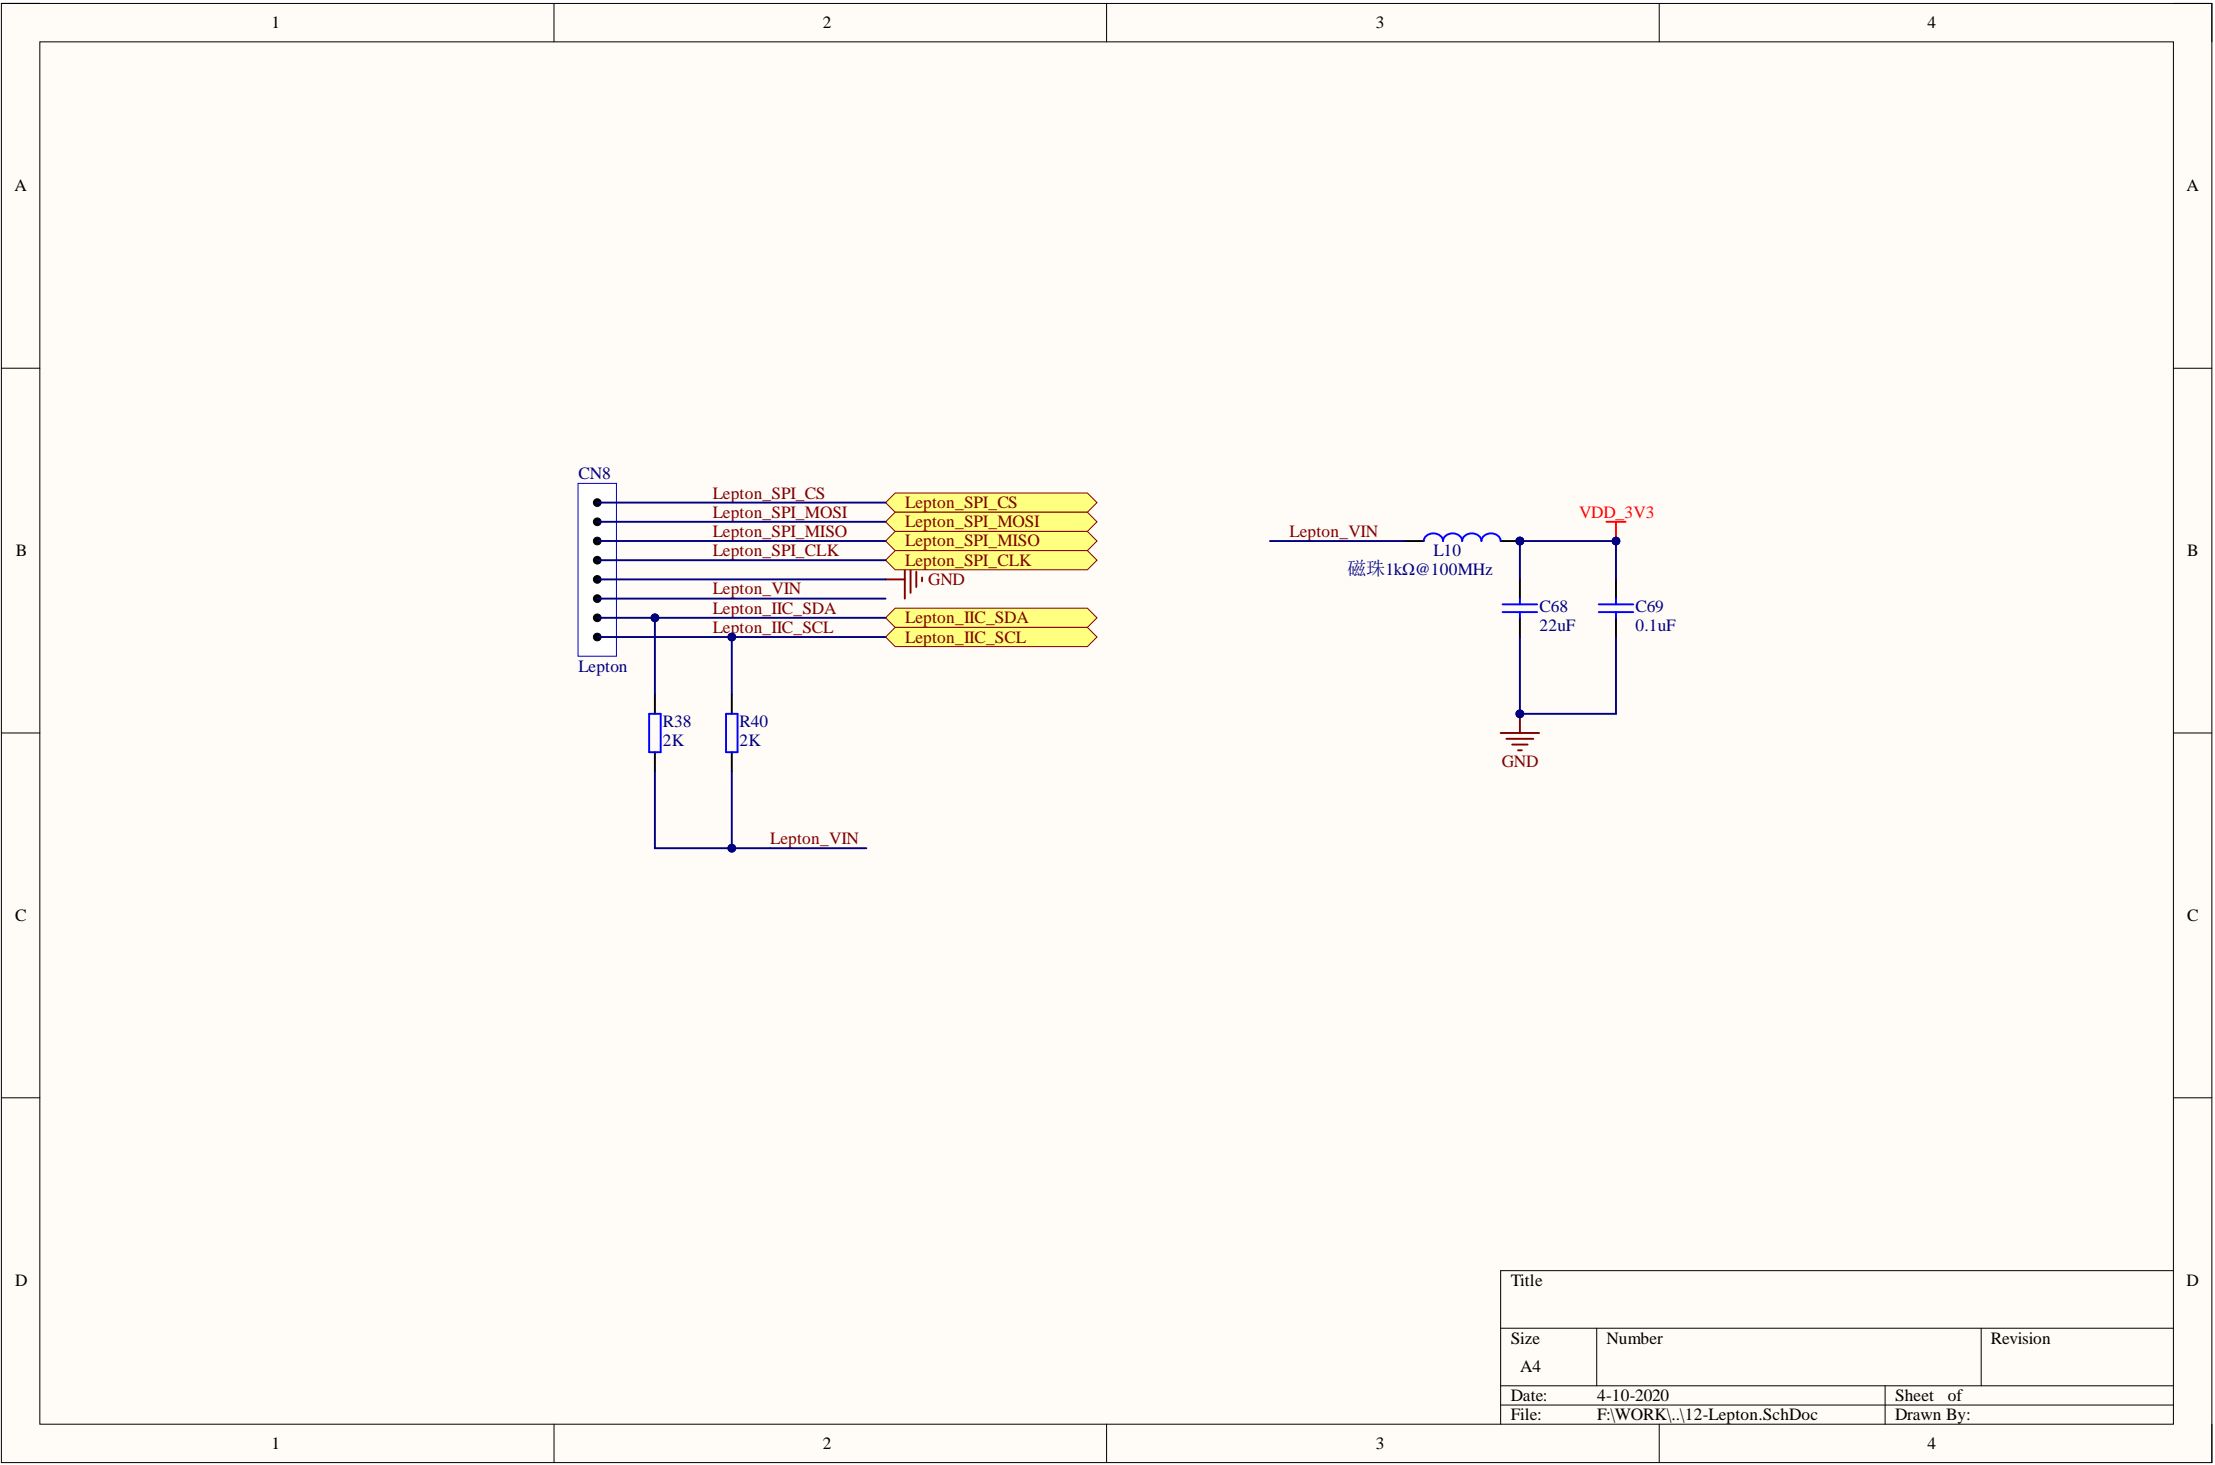

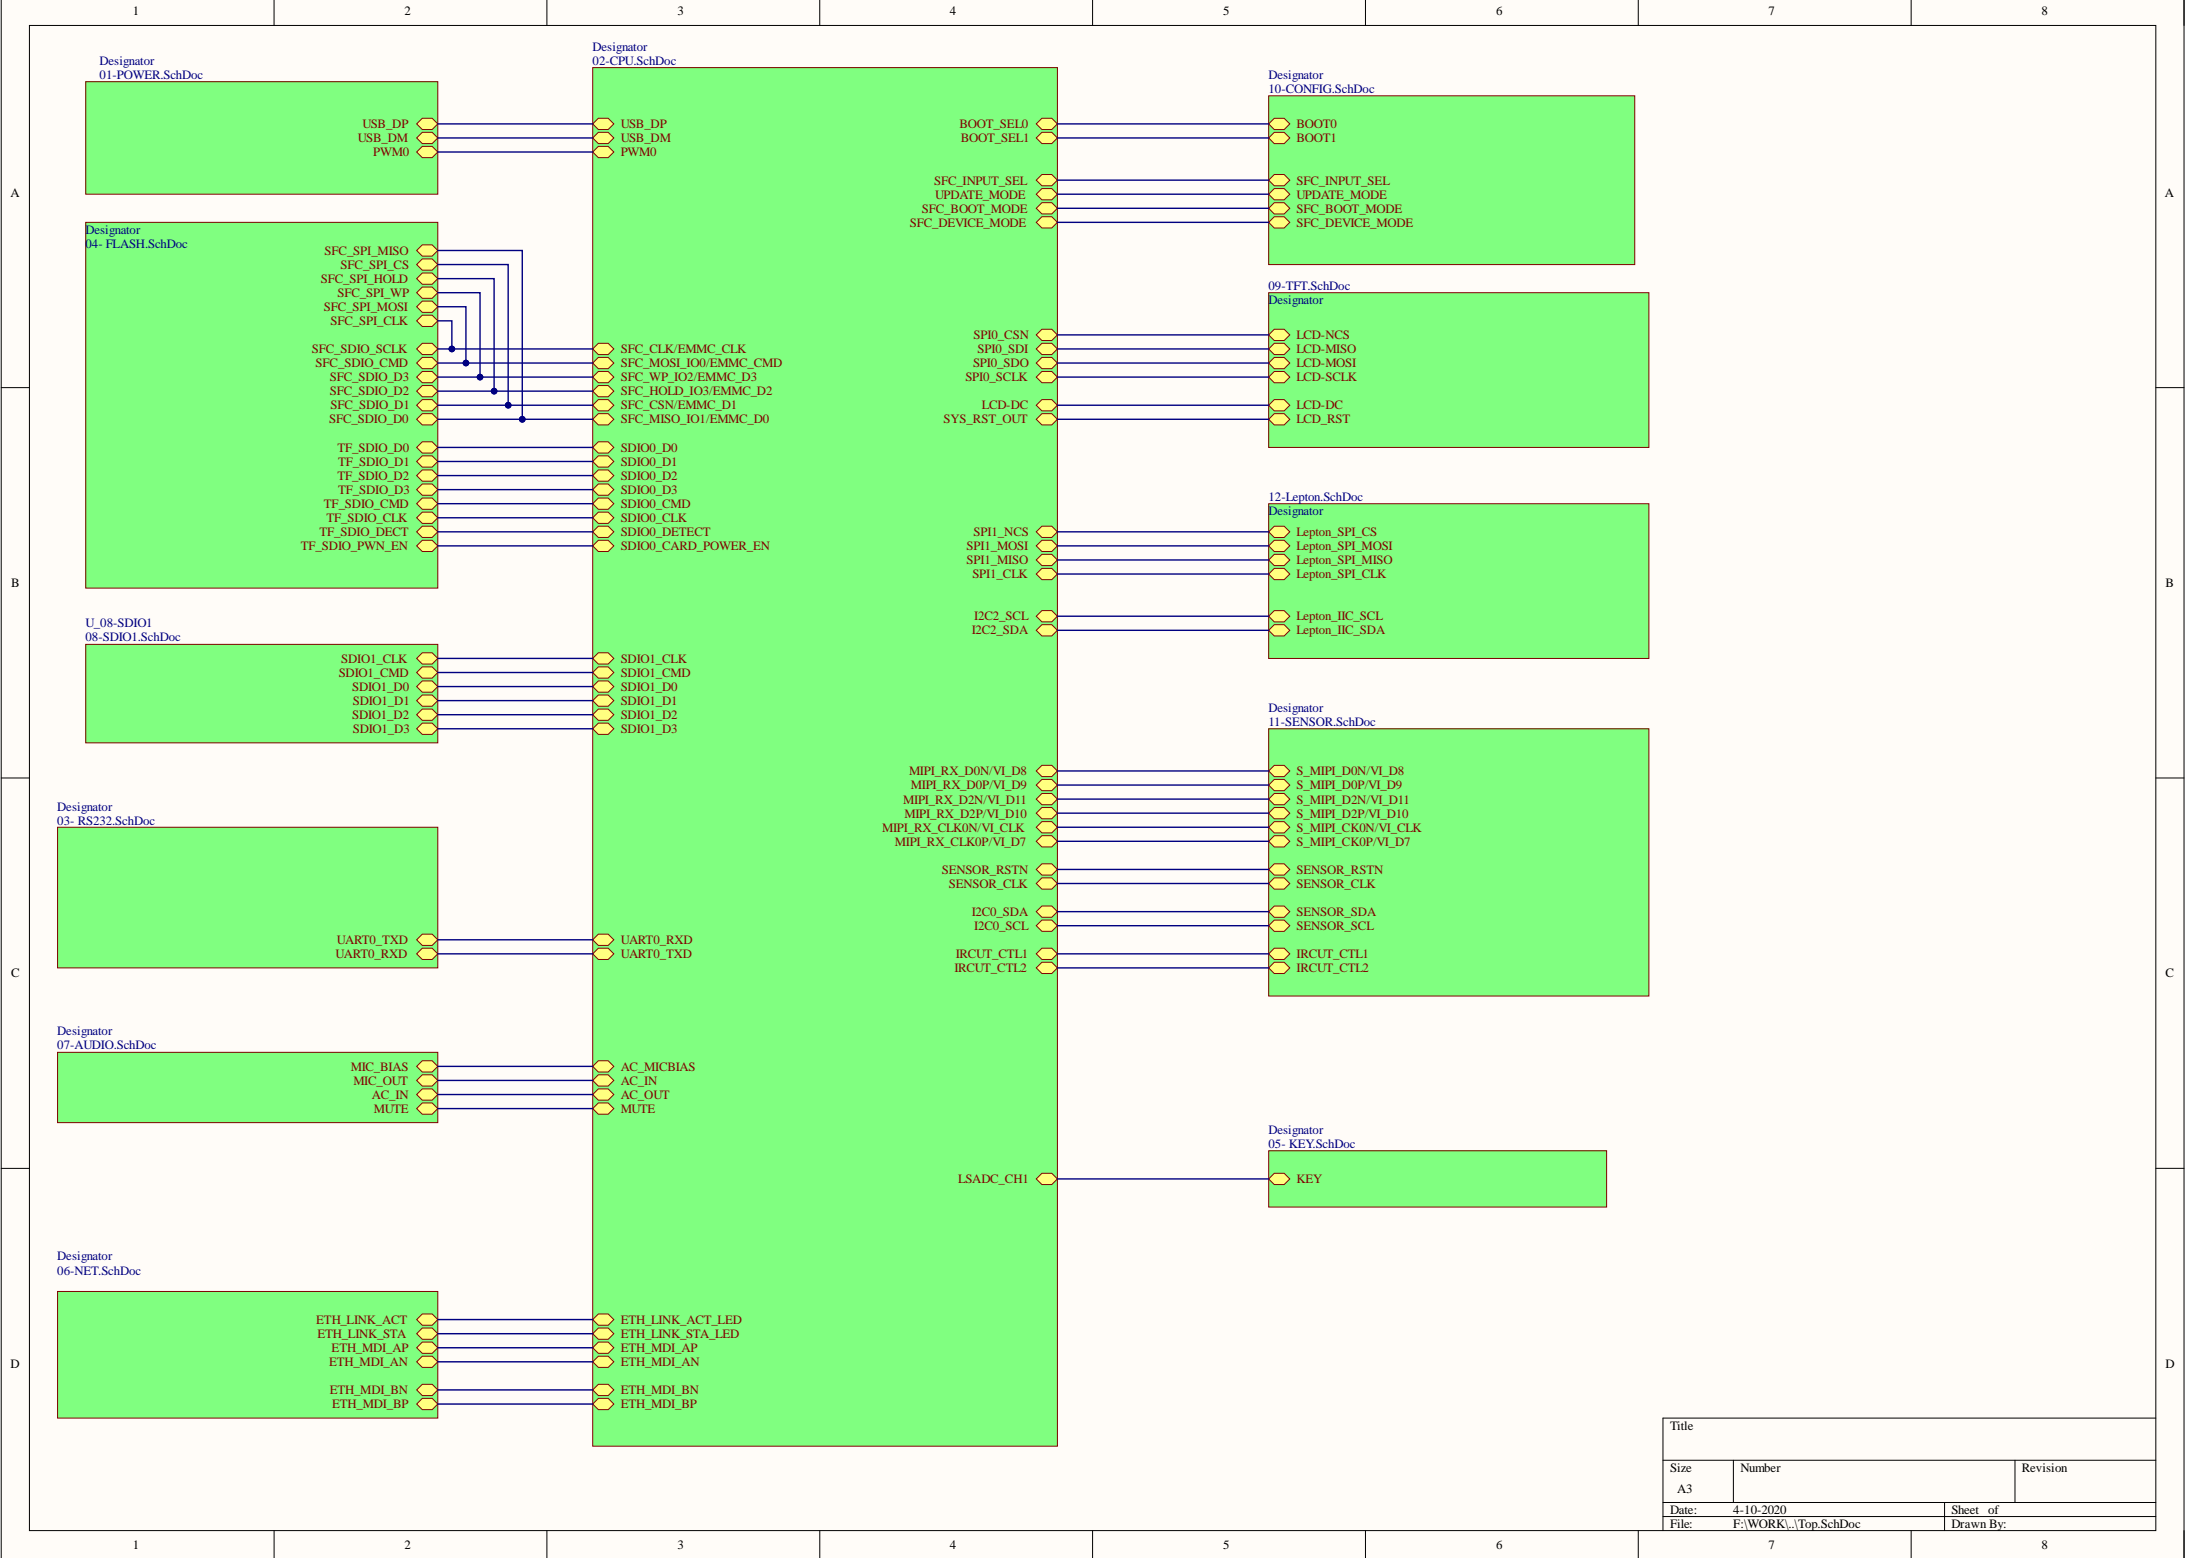

| | | |
|-------|------------------------|-----------|
| Title | | |
| Size | Number | Revision |
| A3 | | |
| Date: | 4-10-2020 | Sheet of |
| File: | F:\WORK\...\Top.SchDoc | Drawn By: |

Board Stack Report