




All status lights off

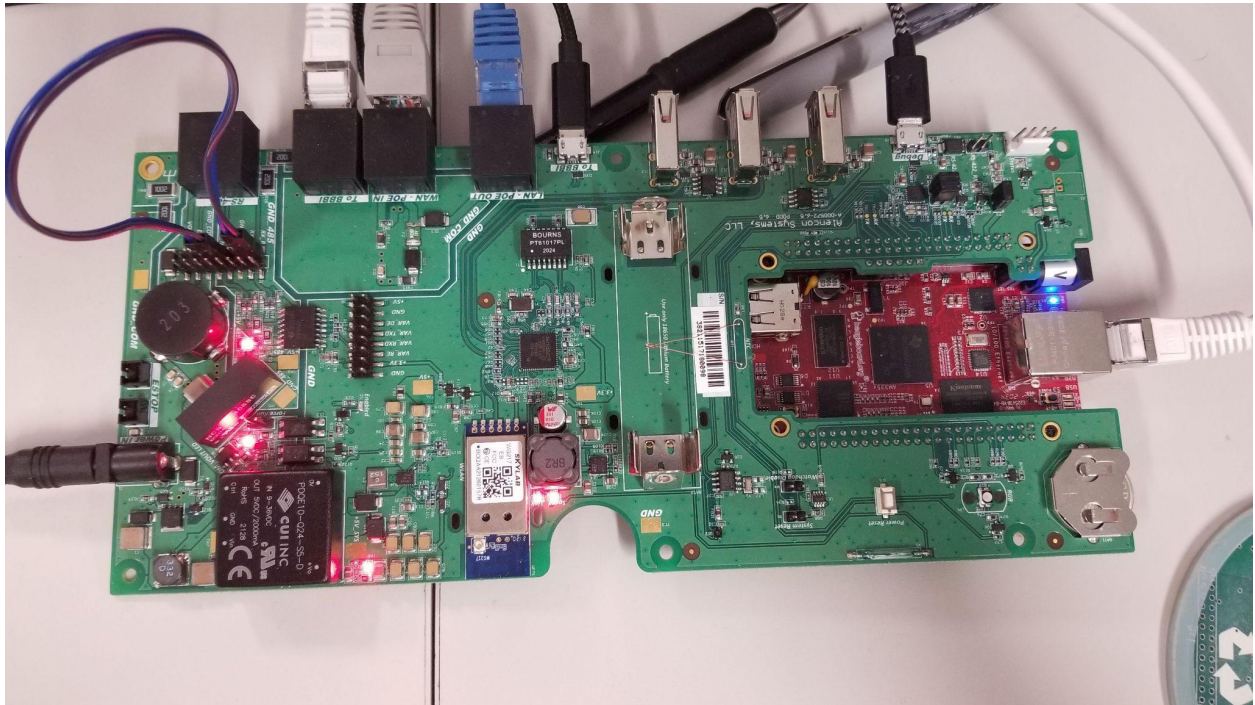


All status lights on

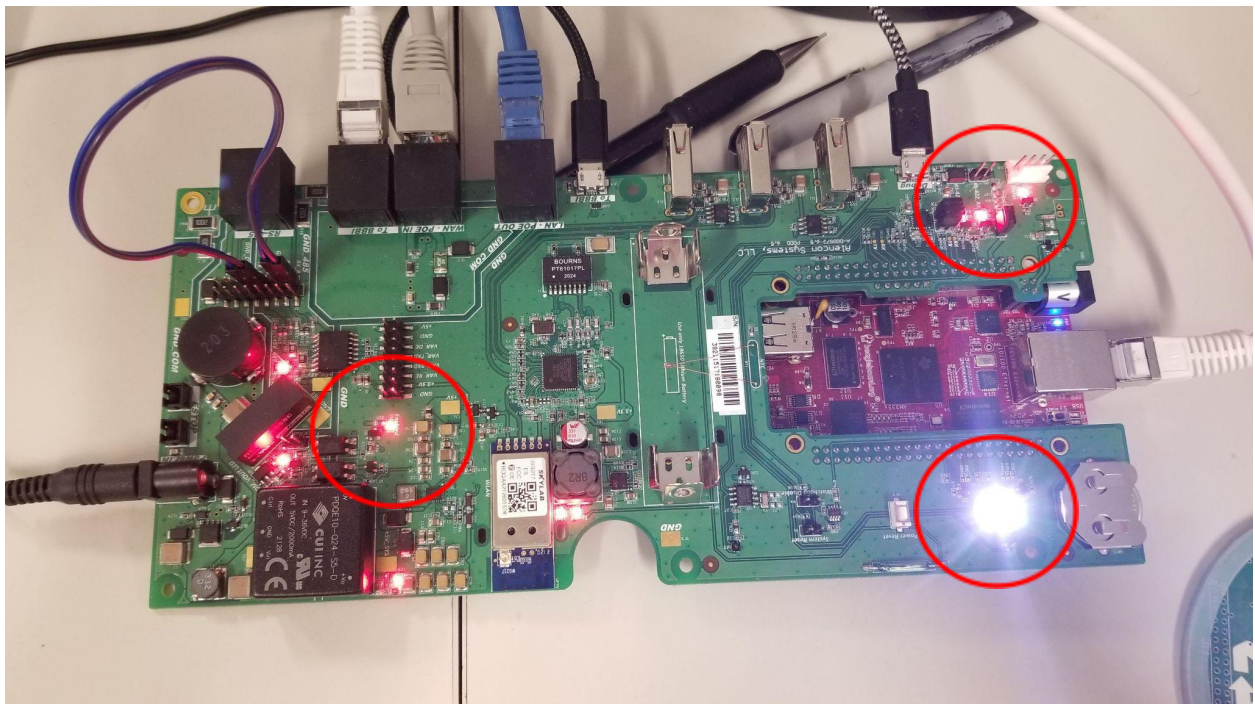


Is only LED Internal Status on

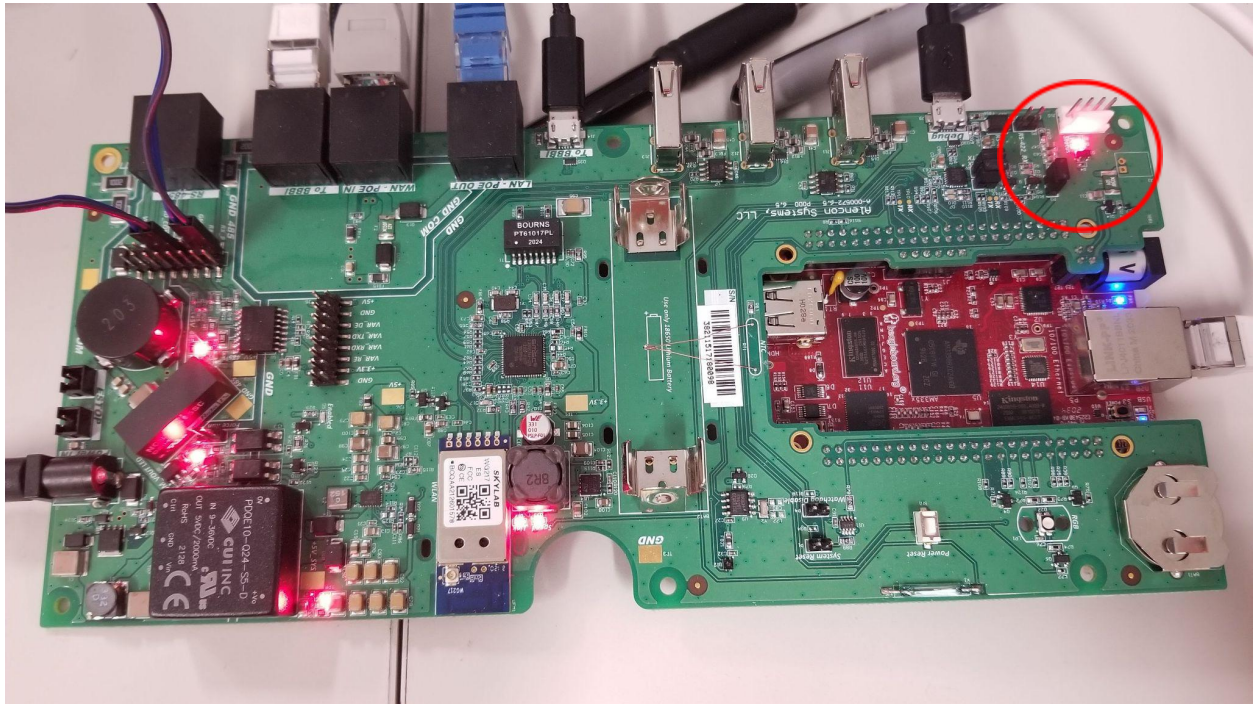


Is only LED Internal TX on

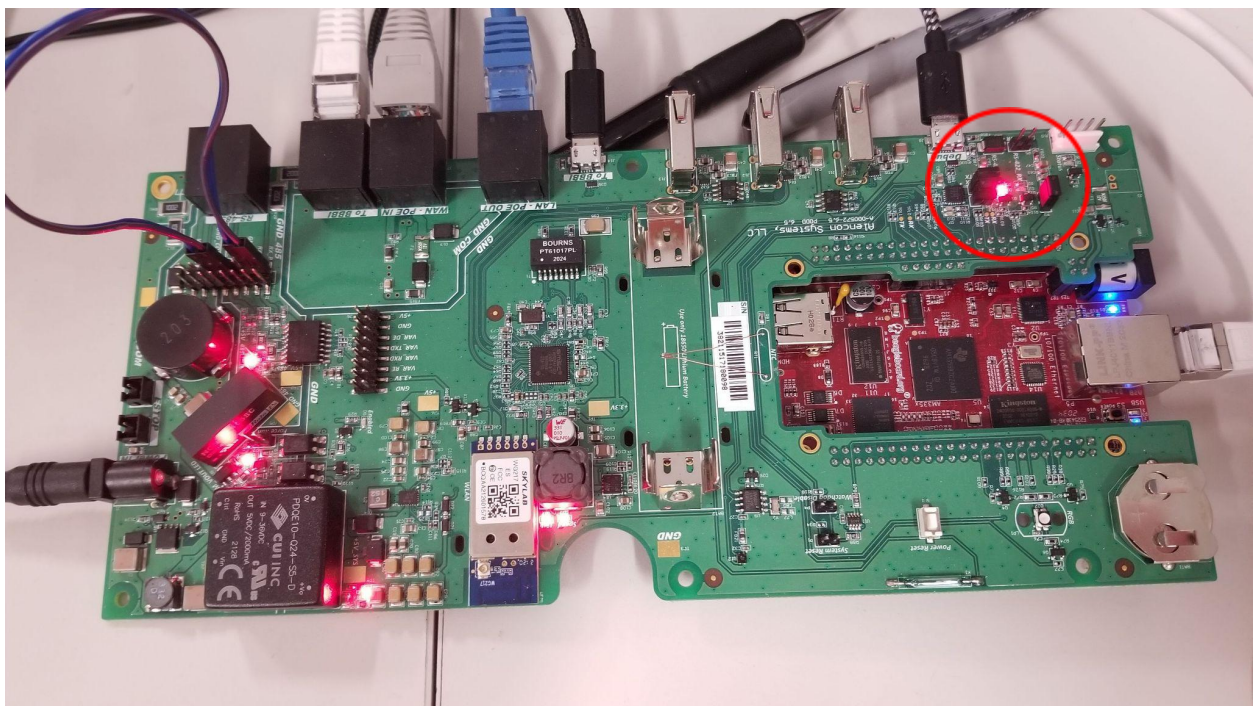


Is only LED Internal RX on

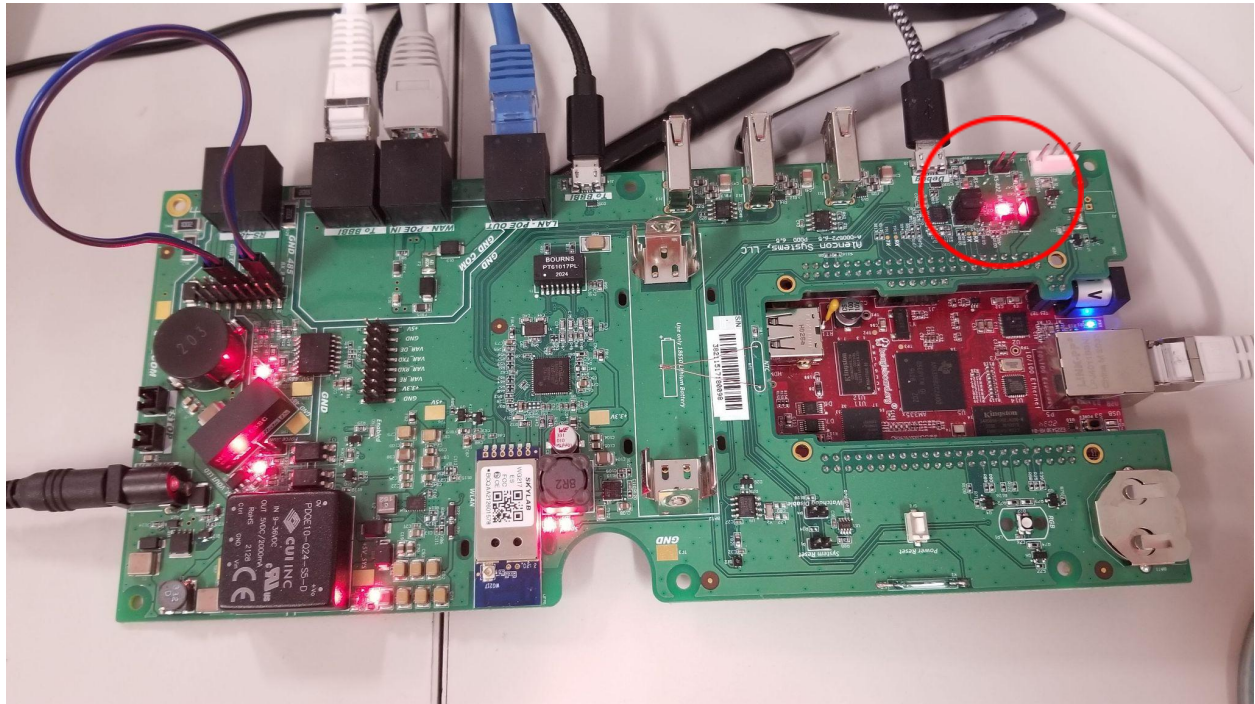


Is only LED ESTOP Out on

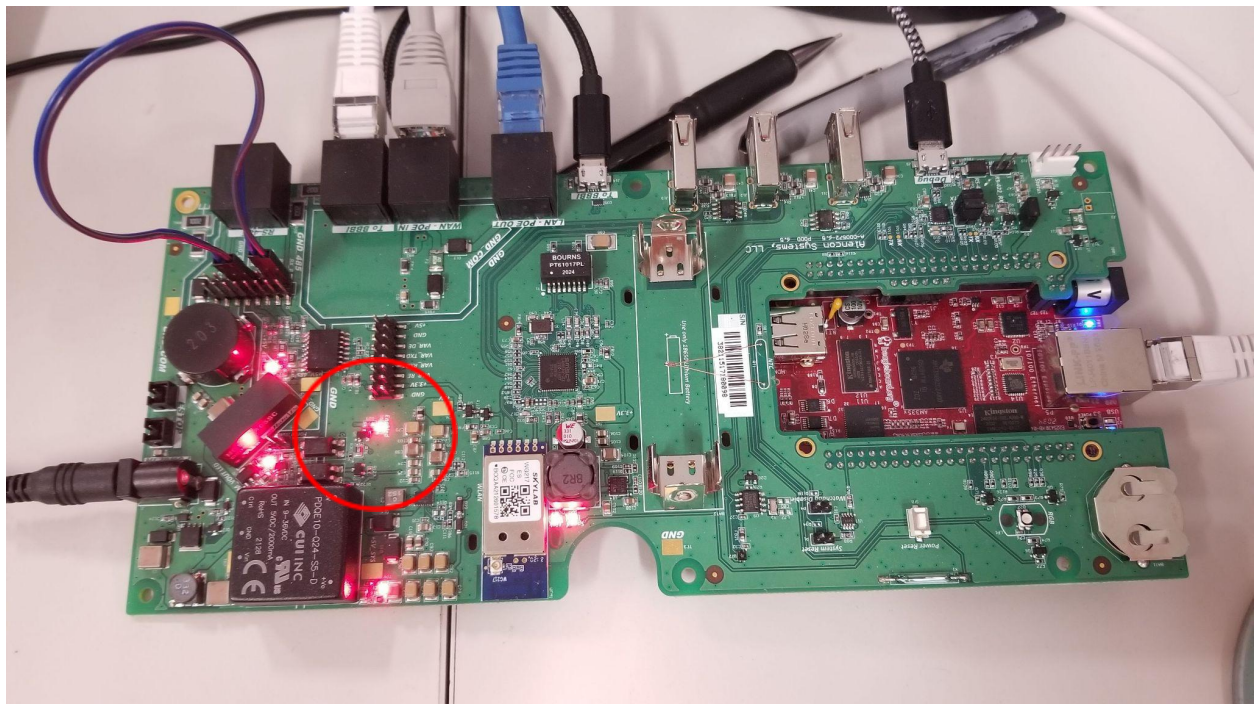


Is only LED External Red on

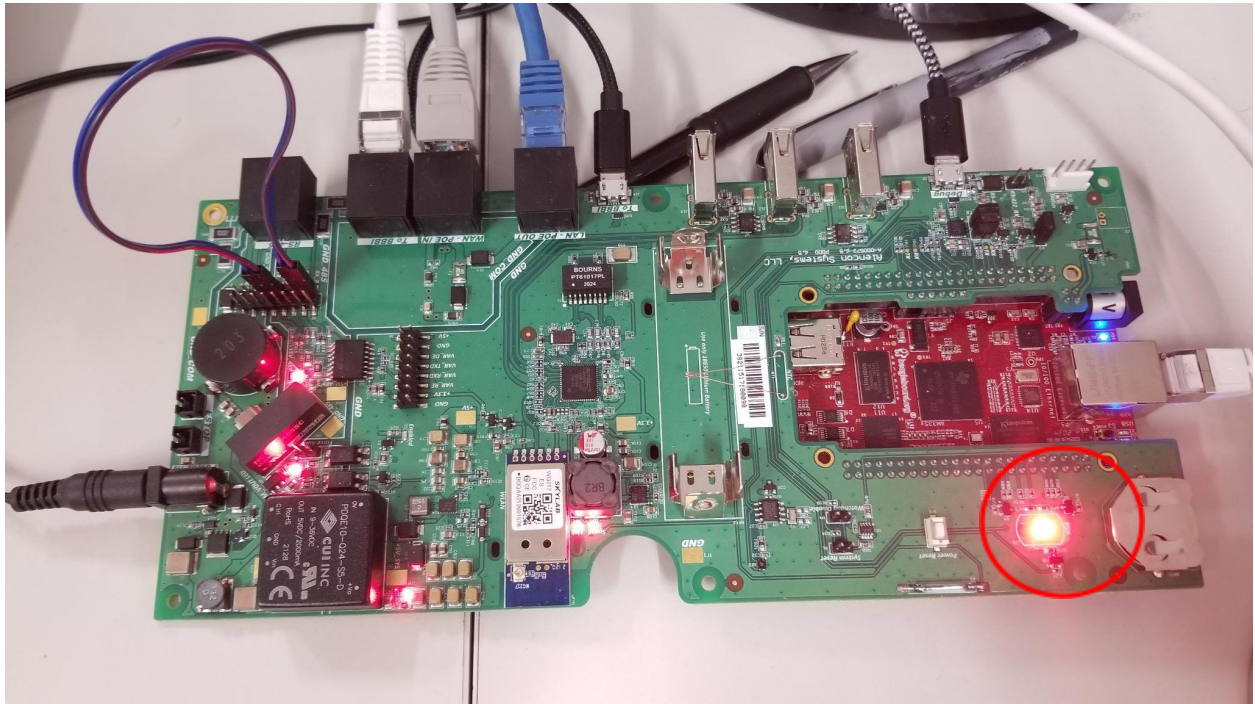


Is only LED External Green on

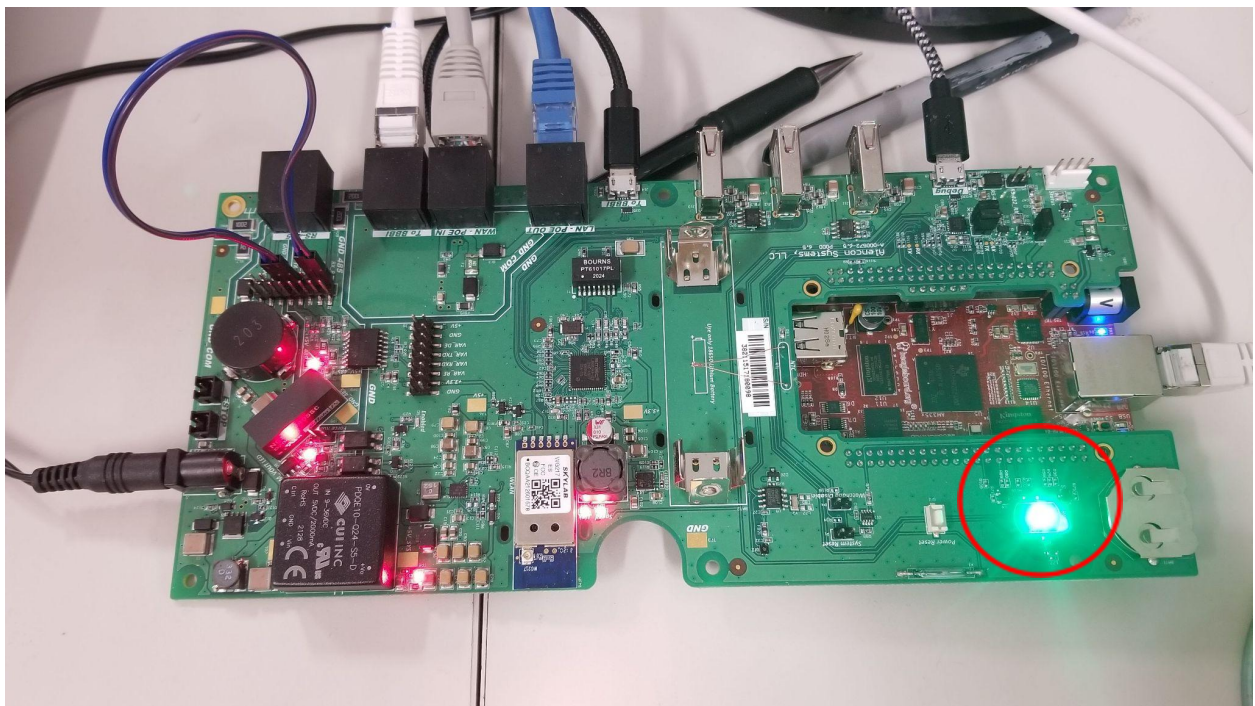

Is only LED External Blue on

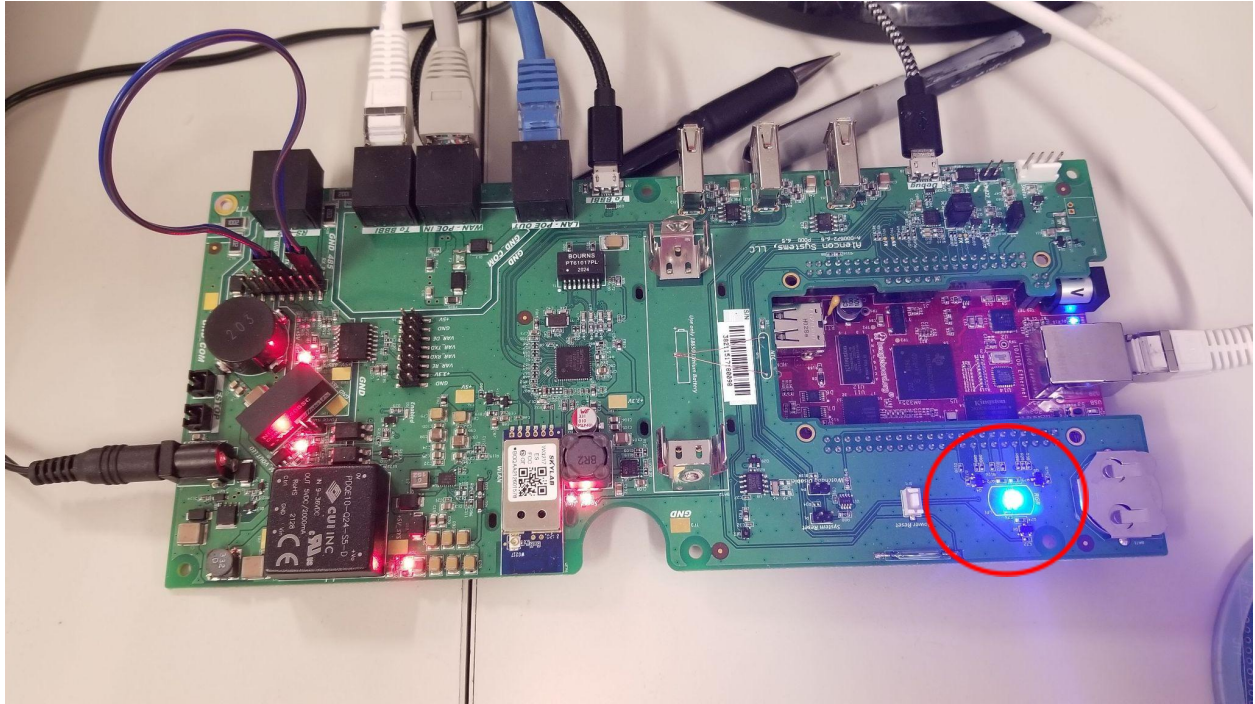


Assert switch ESTOP_IN then press enter

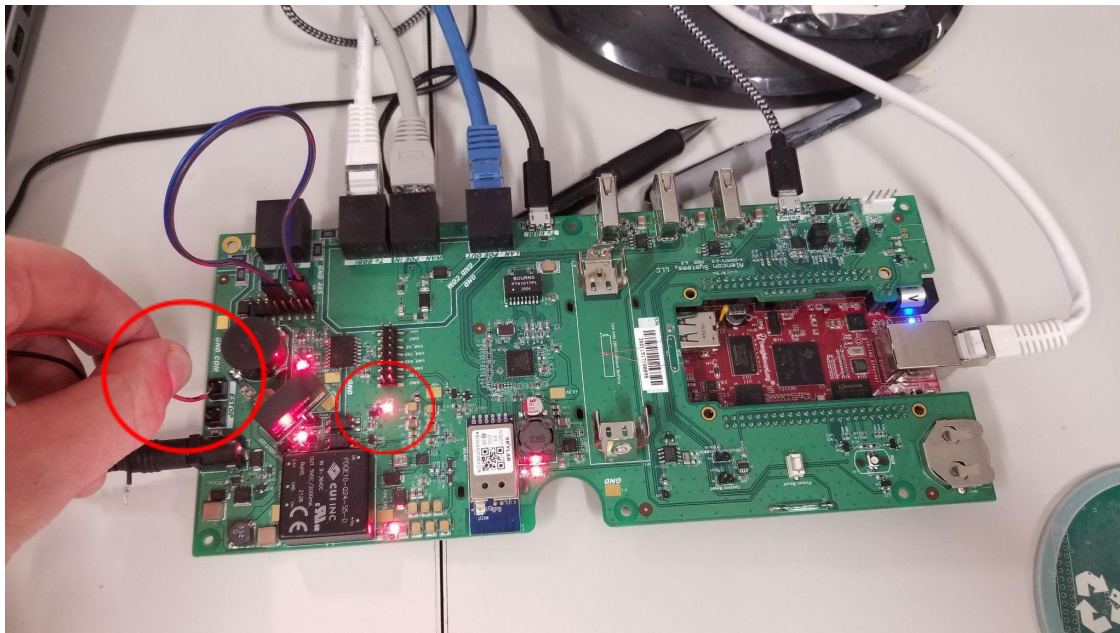

Short the terminal circled above and press enter, the circled LED should turn on

Release switch ESTOP_IN then press enter

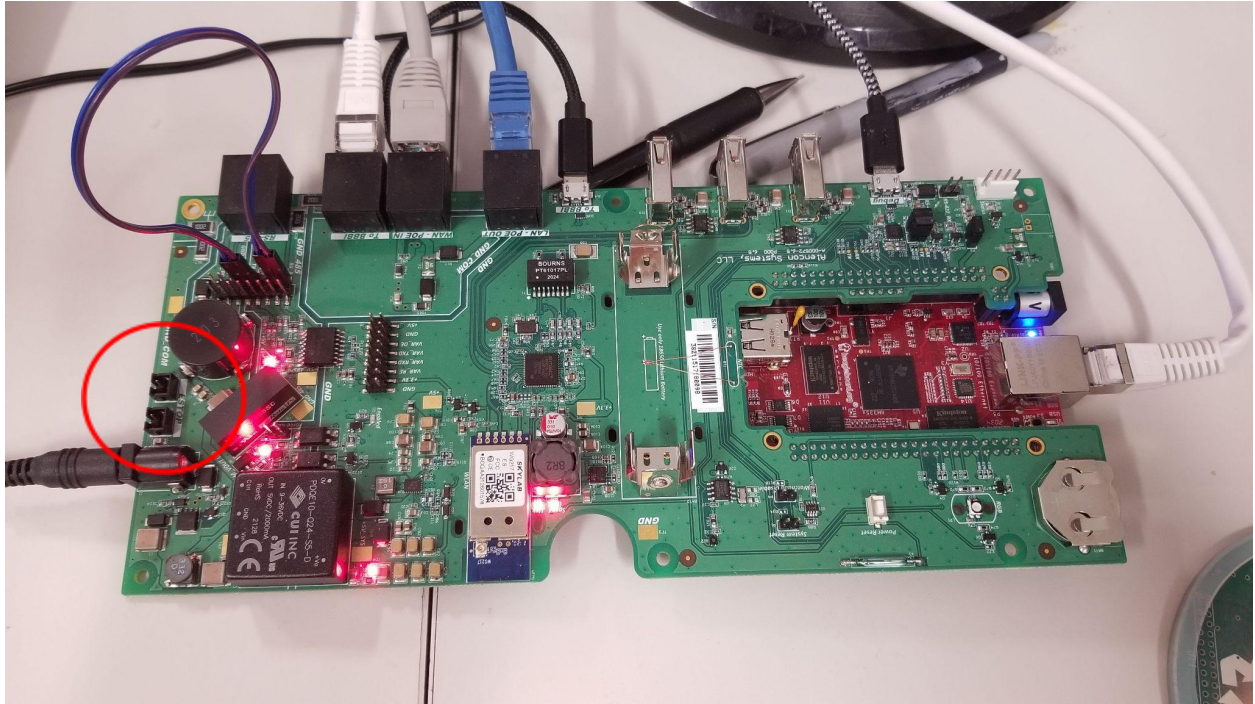

Unshort the terminal circled above and press enter, the circled LED should turn off

Battery Test

Press enter


Humidity Sensor Test

Let run

RTC Test

Let run


RS-422 Test

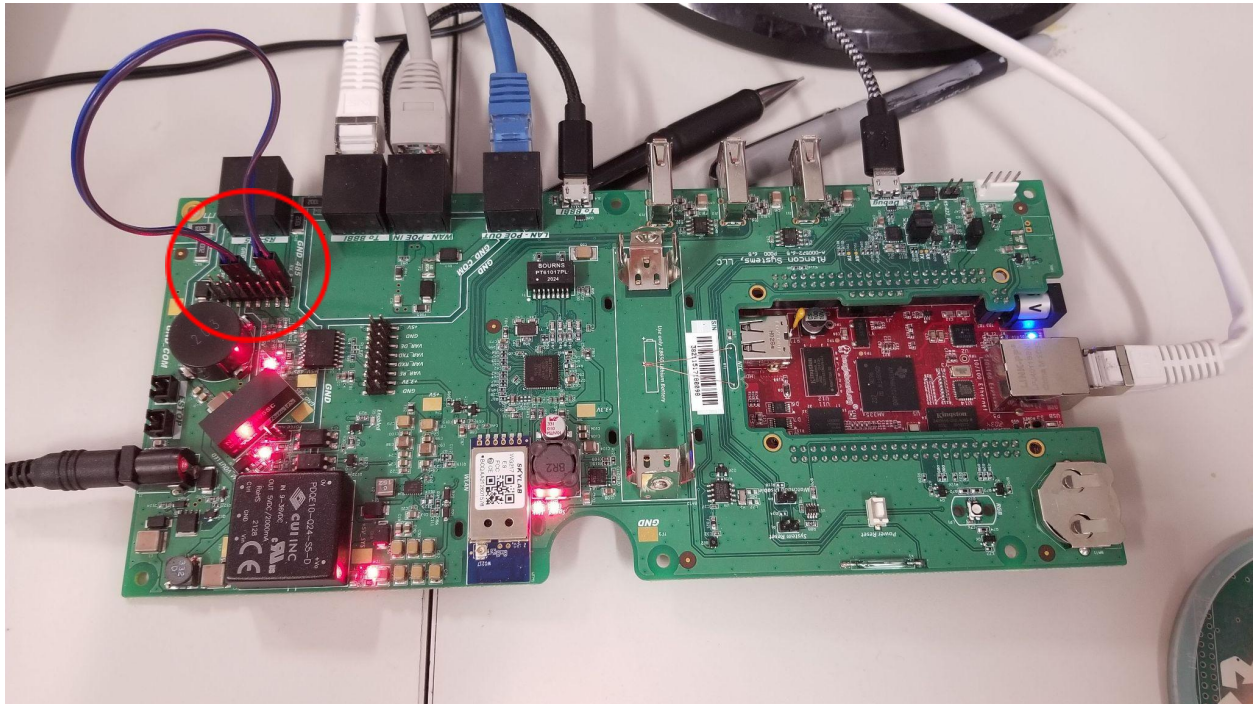

Make sure the jumper cables provided connect RX_P to TX_P and RX_N to TX_N. Then press enter. This is a Loopback test so we will read what we are sending.

USB Tests

Use the uart cable provided to test if the USB ports are properly reading connected devices. The USB ports are labeled below. Follow the instructions in the Python script.

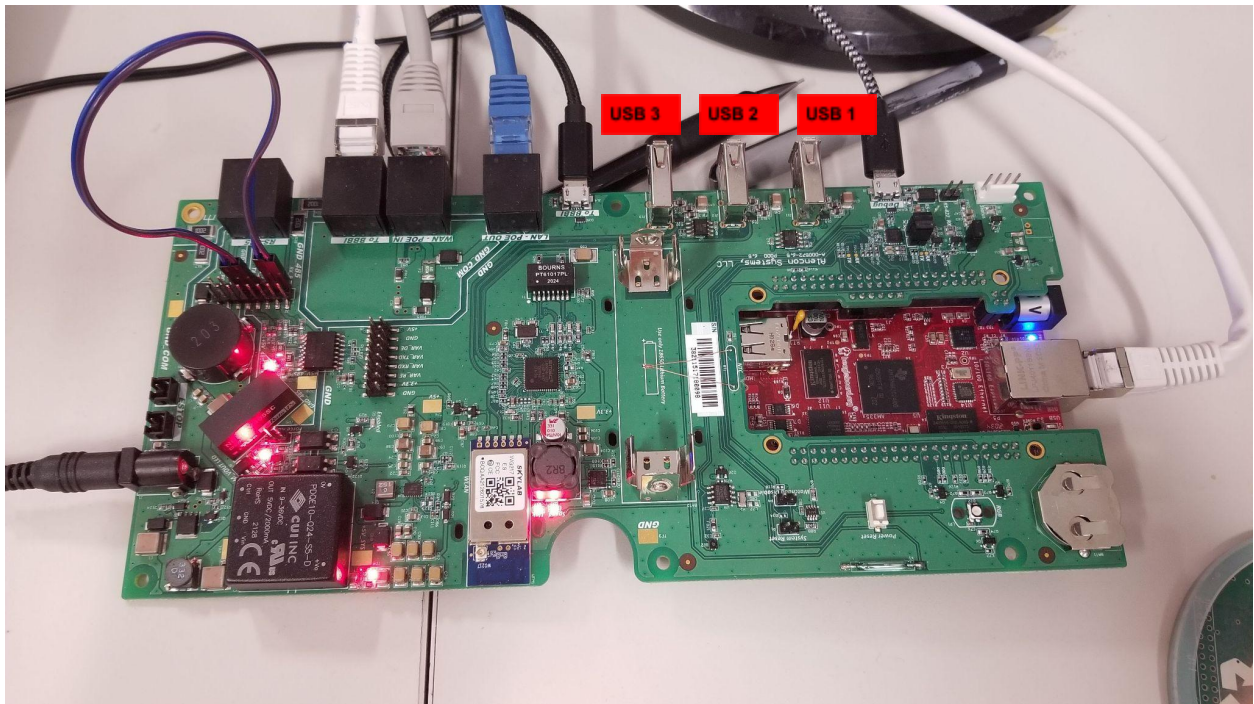

Wifi Test (skip for now)

Try and connect wifi to network and press enter

Ethernet Test

Plug in ethernet cables connected to network and press enter

