


7.6 IFUNT200 Board

Replace the IFUNT200 board by the same procedures as the MIB.
The jumpers do not need to be set.

The IFUNT200 have a built-in CPU and can be operated stand alone. Therefore, it is required to activate and download utility software, “Loader.exe”. Follow the steps below to download the program.

“Loader.exe” can be found in the directory: “C:\NS8000\Tool\”.

- (1) Activate the “Loader.exe” to display the following dialog:

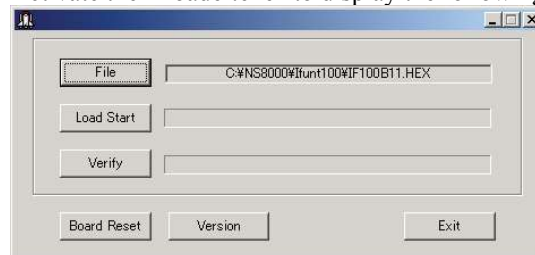

- (2) Click the <File> button and select a file to be downloaded (with the file extension “.hex”).
- (3) Click the <Load Start> button to start downloading.
- (4) Click the <Verify> button after downloading the file to check that the file has been downloaded successfully. If there is any error, download the file again.