



Arduino Data Logger User Manual

Complete Case Build

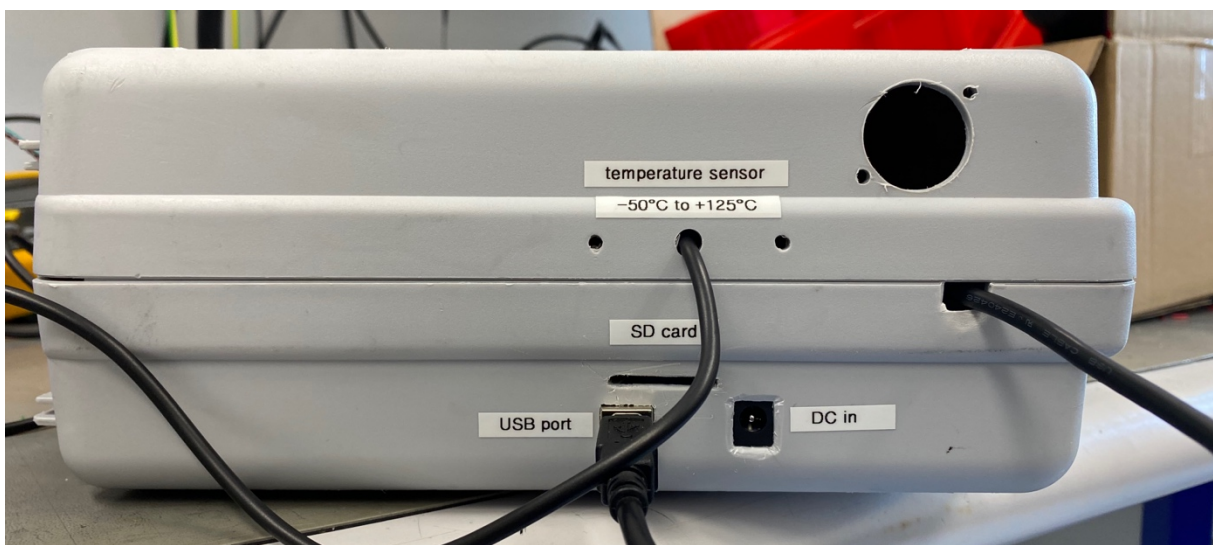


How to connect your Lights

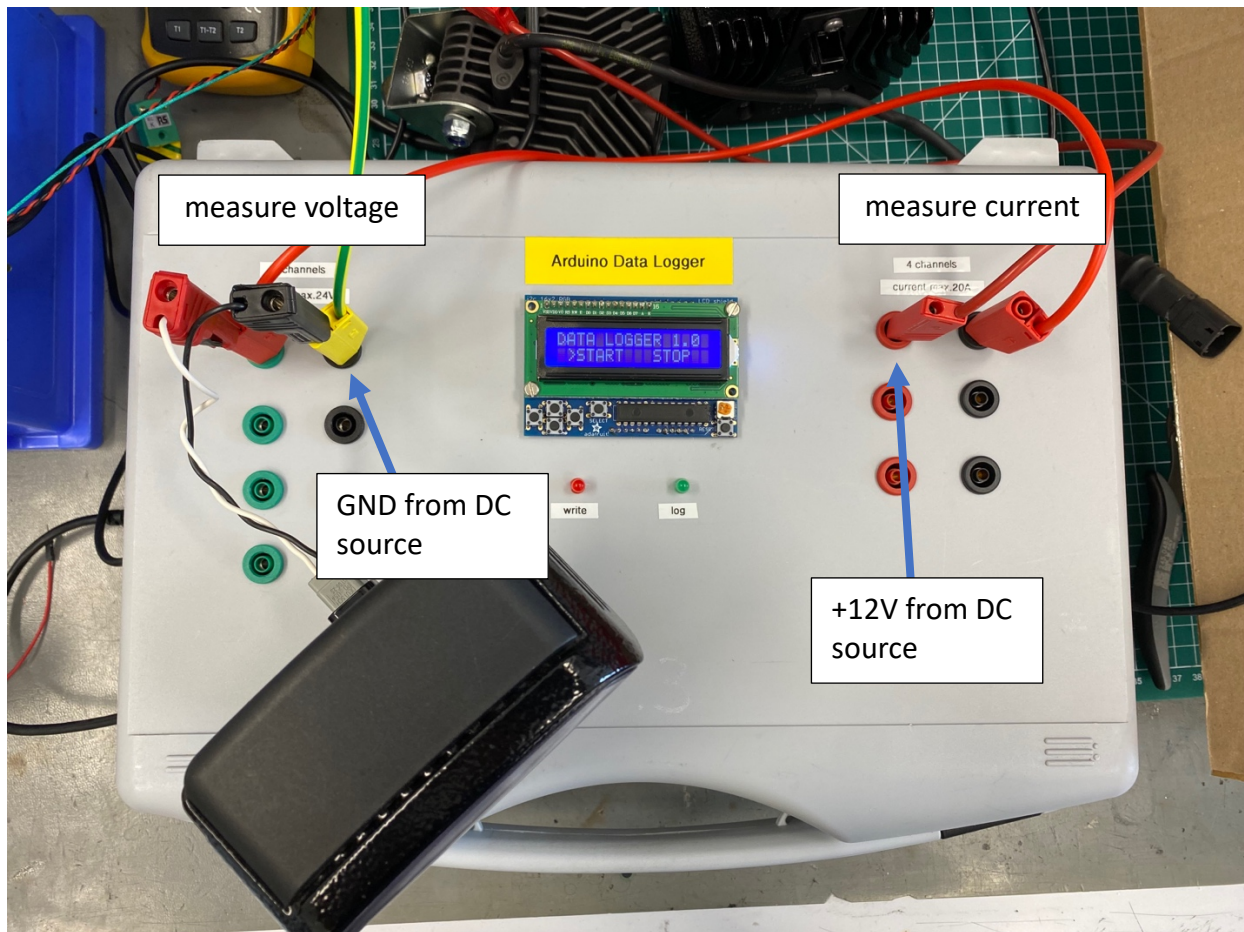


The current sensors must be connected separated from the voltage sensors as voltage is measured parallel and the current is measured in series with the plus cable.

The “plus cable” from the DC PSU must be split at the current section:

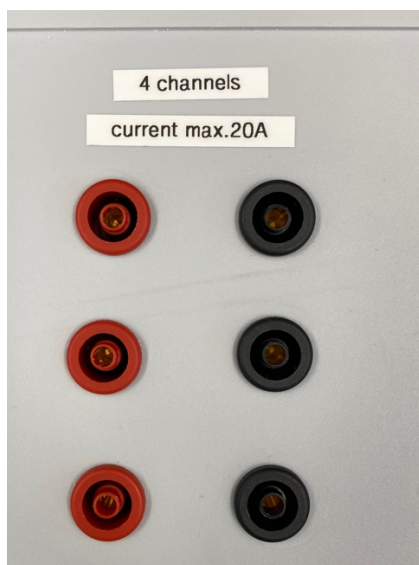

How to start the Data Logger

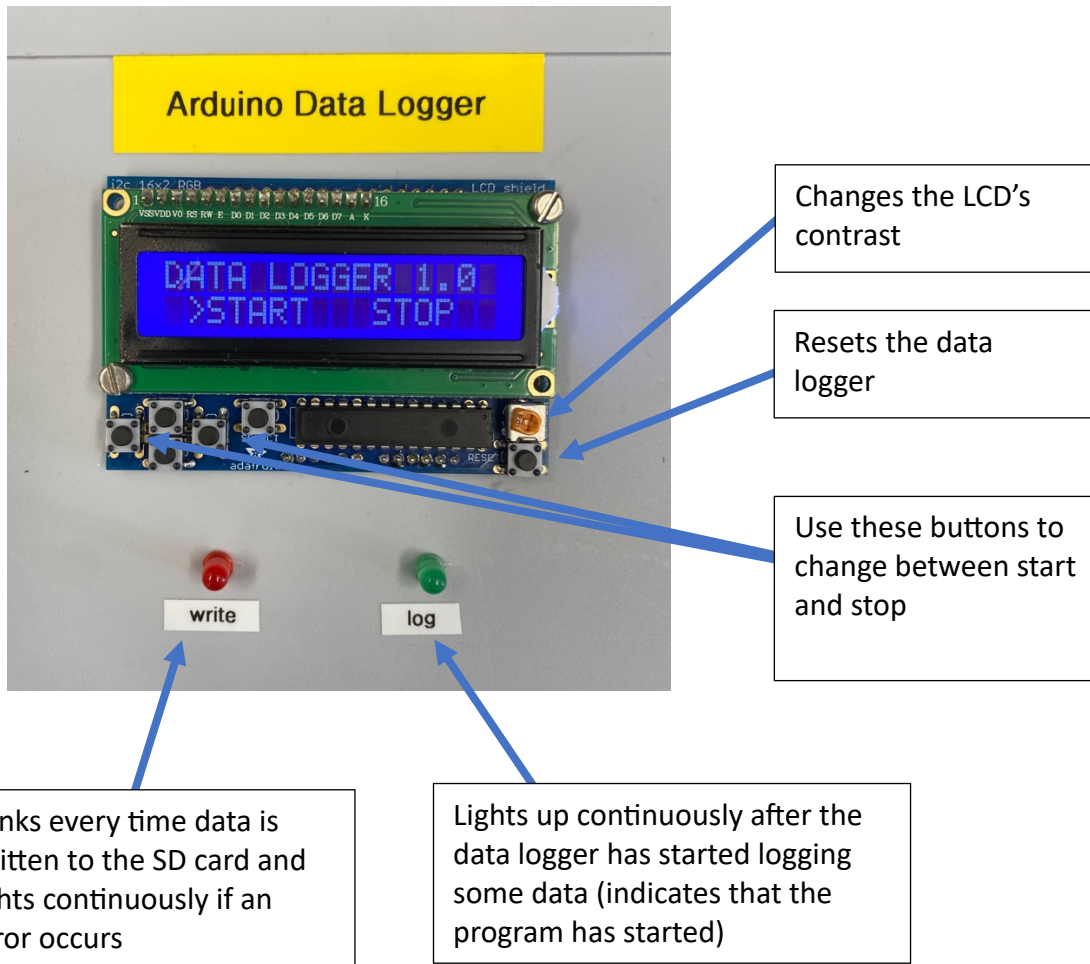

Important notes

The SD card can only be formatted on the PC/laptop. If you can't write data, it may be formatted wrong or has reached the limit of 100 logger files. For further information read the README.md in the GitHub repository.