


Vorsichtsmaßnahmen

- Bitte beachten Sie, dass die Pergola bei Stürmen oder Unwettern nicht geschützt ist. Unter diesen Umständen sollte die Pergola nicht geöffnet und nicht im Freien gelassen werden, da dies zu einer Beschädigung der Pergola führen kann.
- Erfahren Sie, wie Sie das Produkt gemäß dem Produkthandbuch öffnen. Wenden Sie dabei keine Gewalt an, um Schäden am Stoff und ein Verbiegen der Halterung zu vermeiden.
- Wenn Sie das Produkt im Gras verwenden, wird empfohlen, ein gemahlenes Nagelseil einzuführen, um das Produkt auf dem Gras stabiler zu machen.
- Beschädigungen des Zubehörs während des Gebrauchs des Zeltes sollten unverzüglich behoben werden.
- Das Zelt ist mit Staub befleckt. Es kann der Schönheit halber mit warmem Seifenwasser gewaschen und bei starker Verschmutzung mit einem Schwamm gewaschen werden.
- Wenn nach dem Gebrauch des Zeltes Wasserflecken vorhanden sind, sollten Sie es an einem belüfteten Ort trocknen, bevor Sie es aufbewahren.
- Wenn das Zelt längere Zeit nicht benutzt wird, sollte es verpackt und gelagert werden.
- Tipps: Es ist sehr wichtig, auf die Wartung während des Gebrauchs zu achten, damit die Lebensdauer entsprechend verlängert und verschiedene Probleme vermieden werden.


Achten Sie beim Arbeiten:

- Nehmen Sie den Baldachin vorsichtig aus dem Karton und legen Sie ihn auf eine trockene Oberfläche (Sand, Gras oder harte Oberfläche).
- Lassen Sie die Montage von mindestens 2 Personen durchführen, um eine Beschädigung der Stahlstange zu vermeiden. Versuchen Sie nicht, das Zelt alleine aufzubauen, da dies die Beine unnötig belasten und sie beschädigen könnte, wenn sie nicht gleichzeitig auseinandergezogen werden.
- Sichern Sie windige Zeltbedingungen, indem Sie das Seil an beiden Seiten des Baldachins verwenden und die Pfähle in einem Winkel von 30 Grad in den Boden hämmern, um die Seiten des Zeltes auszugleichen. Wenn der Baldachin auf eine harte Oberfläche gestellt wird, befestigen Sie die 4 Seiten mit Steinen oder Sandsäcken, um den Baldachin zu beschweren.
- Bauen Sie Zelte nicht bei Regen, starkem Wind oder Schnee auf, da dies Ihr Zelt beschädigen kann. Es liegt in der Verantwortung des Eigentümers, wenn die Zelte während dieser Bedingungen aufgestellt und beschädigt werden.
- Bewahren Sie Ihr Verdeck / Zelt an einem kühlen, trockenen Ort auf, wenn Sie es nicht benutzen.

Content:

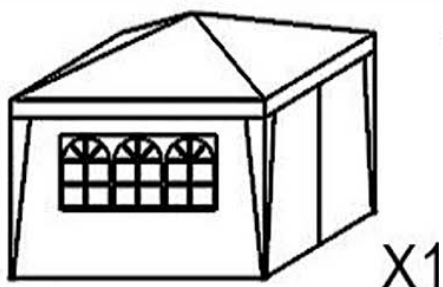

X8

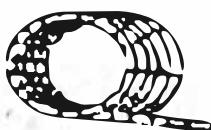

X4



X1


WARNING:

- Always read and follow the instructions before use.
- Please have at least 2 people helping with the assembly, in order to avoid the damage of steel pole.
- Be cautious to avoid pinching your hands or fingers in any of the moving parts as frame opens and closes.
- The gazebo is designed to provide shade only. Do not use this gazebo in strong wind and rain. Wind and rain can damage the gazebo and could result in injury to you and others. It is owner's responsibility if the tents are set-up and damaged during these conditions.
- Keep all flame and heat sources away from this tent fabric.



E-CrossStu GmbH
Mainzer Landstr.69, Frankfurt am Main, Germany
E-CrossStu@web.de

Please note: this is not a return address.

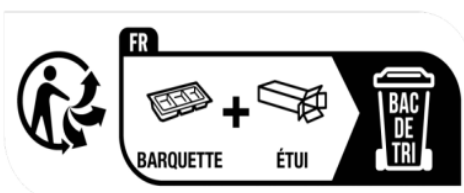

SET-UP STEPS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET UP


1. Stand frame upright, Starting at the corners, with partner standing on the opposite side, grasp the two outer legs, slightly lift the frame off the ground and step backward, stopping at full arms' length.



2. Unfold the fabric canopy pack, place the fabric top over the top frame, Use the velcro pads to secure each corner of the cover to the frame under plastic caps.




3. Each partner should then grasp bottom of the middle frame section (cross beams) where it forms diamond. Lift slightly and slowly walk backward until the frame is fully extended. Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.

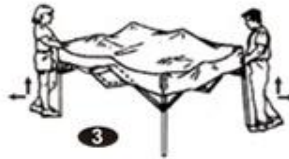

4. Engage the slider at each corner by pushing up the slider with one hand while holding down the top of the leg with the other hand, Repeat this operation at remaining corners.

To secure the fabric top to the frame, please wrap the Velcro loop straps around roof tubes and cross beams.

Pull down the inside valances to cover the beam tubes Velcro the adjacent valances together for clean look.

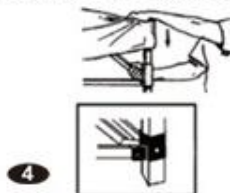

5. Lift two adjacent outer legs and pull out inner legs Gently until spring loaded snap button pops in position.Repeat on the remaining legs.




6. Unfold the sidewall fabric pack, place the sidewall over the side frame, Use the velcro pads to secure the sidewall to the frame.



Open

Before the tent is open, 2 persons are needed to hold 4 corners of the tent to gently shake and to slightly spread the cross pole of the tent frame.


1

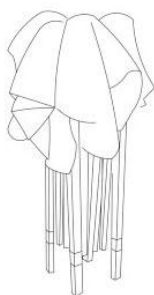


2



3

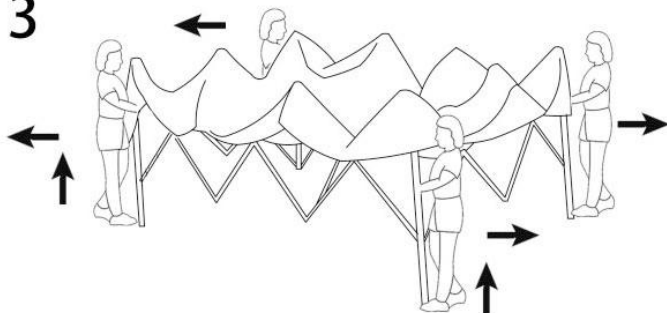


4

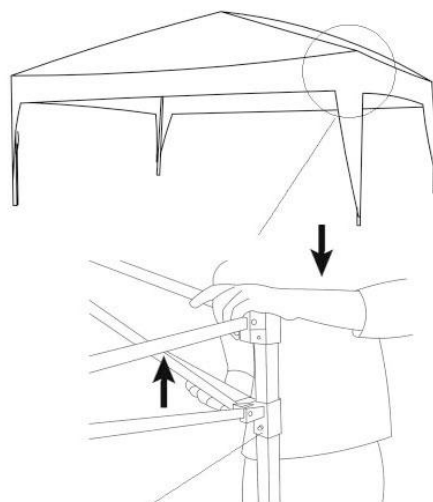


Come out

5

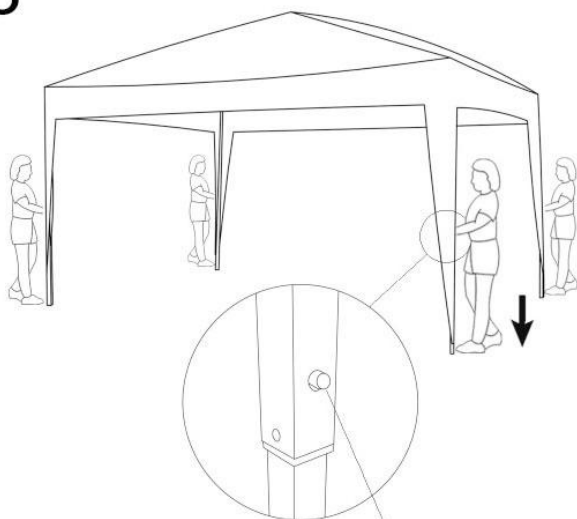

Come out


6

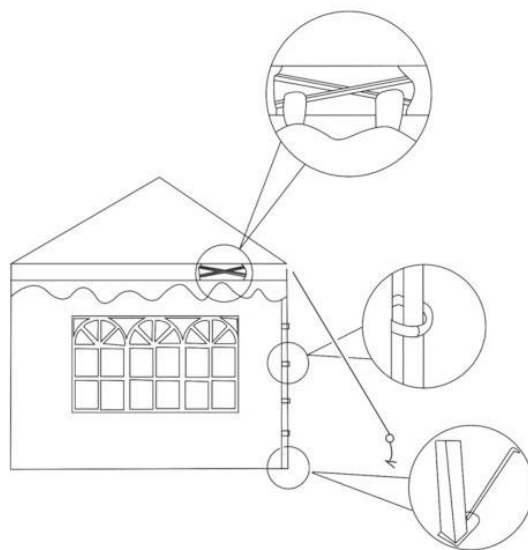

7



Close

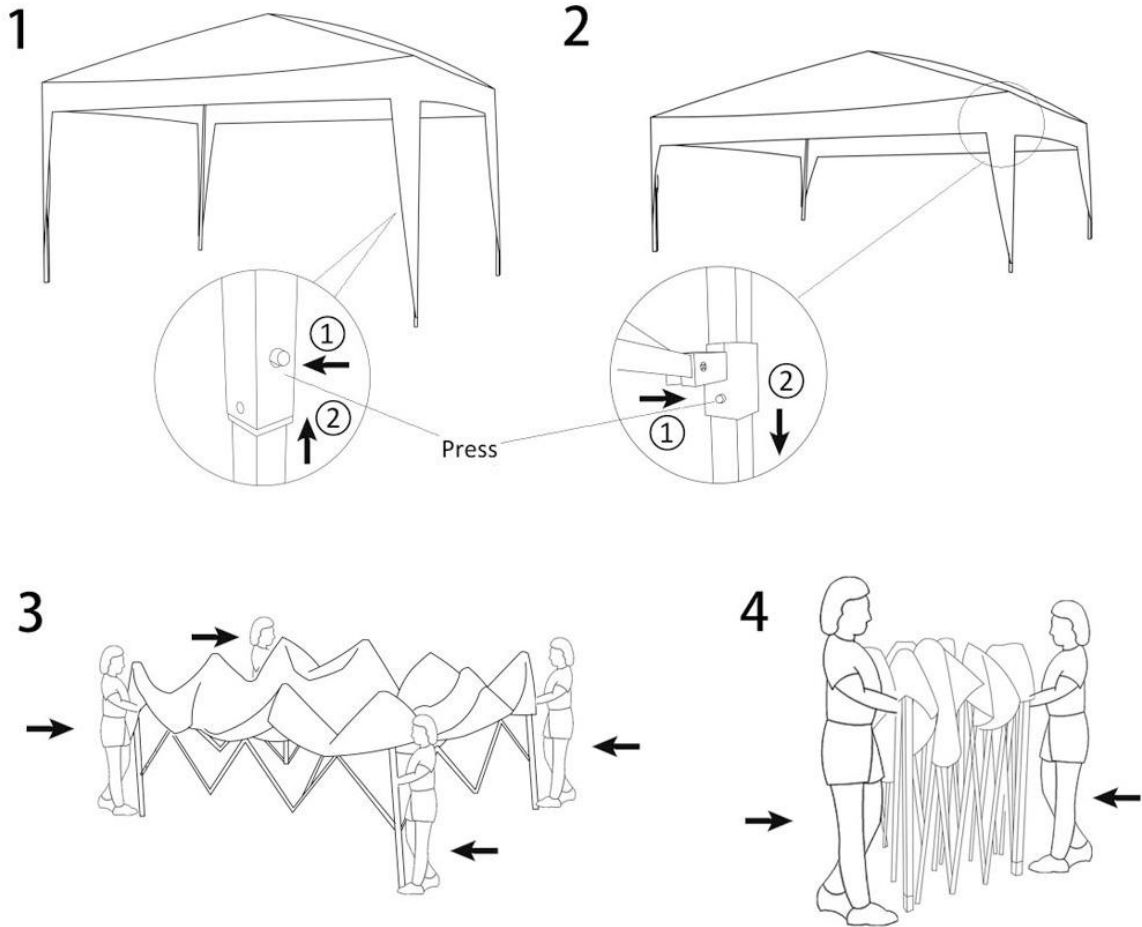

WARNING

1. Take the canopy out of the box carefully and place on dry surface (sand, grass, or hard surface).
2. Please have at least 2 people helping with the assembly, in order to avoid the damage of steel pole. **DO NOT ATTEMPT TO ASSEMBLE TENT ALONE BECAUSE THIS COULD PUT UNNECESSARY STRESS ON THE LEGS AND THEY COULD GET DAMAGED IF THEY ARE NOT PULLED APART IN TANDEM.**
3. Secure tent in windy conditions by using the rope that is located on each side of the canopy and hammering stakes into the ground at a 30 degree angle to balance the sides of tent. If the canopy is placed on a hard surface, secure the 4 sides with bricks or sand bags to weigh the canopy down.
4. **DO NOT ASSEMBLE TENTS IN RAIN, SEVERE WIND OR SNOWY WEATHER CONDITIONS, BECAUSE THIS WILL DAMAGE YOUR TENT.** It is the owner's responsibility if the tents are set-up and damaged during these conditions.
5. Store your canopy/tent in a cool dry place when not in use.

