

# OPERATING INSTRUCTIONS

The video input is auto video sensing, when your additional source is switched on the picture will override the navigation map picture. It will revert back to the navigation picture when your source is switched off.

The second input (Camera Input) is activated when the Blue cable is made live (adding a 12v+ supply) This input will override the additional source or the navigation map when activated



## NAV-INREN

VIDEO INPUT

ALL Renault

With Separate Navigation

NAV TV (Europe) LTD



### NAV TV (Europe) LTD

Distribution Centre  
Unit 21B Vale Business Park  
Llandow, Vale of Glamorgan  
CF71 7PF


Telephone: + 44 (0)8445 783 783  
Fax: + 44 (0)1446 77 22 47  
technical@nav.tv

NAV TV (Europe) LTD is not liable for any accident, consequences or indirect damages, in case of errors, behaviors of the vehicle's driver or passengers. NAV TV (Europe) LTD is not liable for any damage caused by the use of the vehicle's infotainment system. NAV TV (Europe) LTD is not liable for any damage caused by the use of the vehicle's infotainment system. NAV TV (Europe) LTD is not liable for any damage caused by the use of the vehicle's infotainment system.

e11\*72/245\*95/54\*3583\*00  
RoHS 2002/95/EC—2002/96/EC

## LOCATION & REMOVAL

1. Ensure the vehicle is equipped with Navigation
2. All the wires can be accessed at the connector on the back of the navigation.

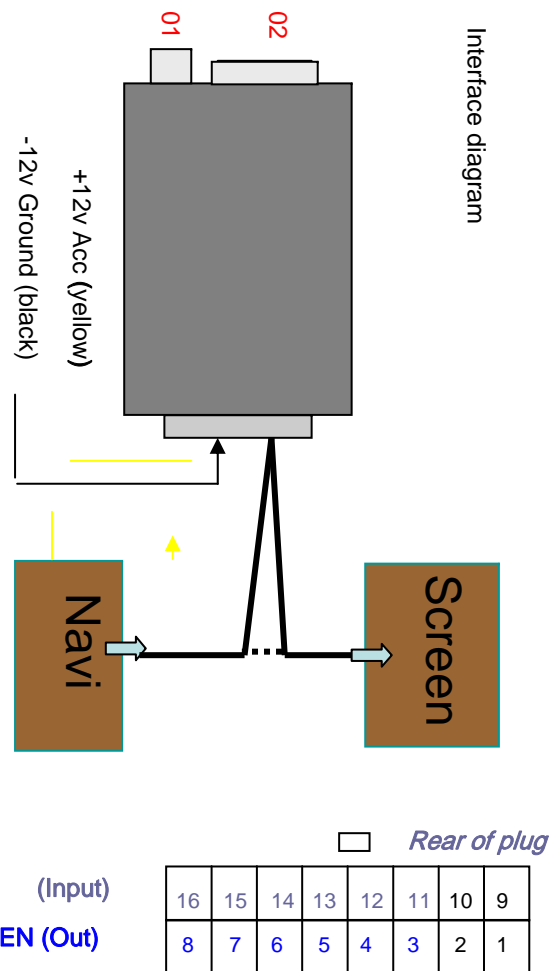

## INSTALLATION

Locate the cable which connects the Navigation computer with the monitor. Within this cable you will find the cable colours given below. You will then need to cut open these cables and connect the input and output cables from the supplied harness as the diagram opposite shows.

The following colours can be found in the screen to navigation cable.

NAV-INREN		Car Harness
RED	to	RED
GREEN	to	GREEN
BLUE	to	YELLOW
YELLOW	to	BLACK
Shield	to	Shield/GND

Inside the interface the jumper should be at the shown position



## INSTALLATION

For Velsatis model

NAV-INREN		Car Harness
RED	to	RED
GREEN	to	GREEN
BLUE	to	ORANGE
YELLOW		<b>NOT USED</b>
Shield	to	shield/GND

Inside the interface the jumper should be at the shown position



### Other connections

YELLOW to 12v+ ignition / acc

BLACK to 12v- Ground

RED **not used**

BLUE to 12v+ to activate camera input (002)