

# OPERATING INSTRUCTIONS

If you have installed the NAVTV “video in motion” interface with an external switch to activate and deactivate the feature the switch should be in the on position for the TV Tuner to be viewed whilst in motion.

If you have not chosen to use an external switch on the PURPLE cable the “video in motion” feature will be permanently active.



## NAV TV (Europe) LTD

Distribution Centre  
Unit 21B Vale Business Park  
Llandow, Vale of Glamorgan  
CF71 7PF

Telephone: + 44 (0)8445 783 783  
Fax: + 44 (0)1446 77 22 47  
technical@nav.tv

**Disclaimer**  
NAV TV (Europe) Ltd is not liable for any incidental, consequential or indirect damages. In case of erratic behavior of the vehicle's electrical system please disconnect the NAV TV product and contact our technical support Team. NAV TV (Europe) Ltd does not assume liability for any diagnostic fees.




## VIMCANMER2

VIDEO IN MOTION  
MERCEDES E/CLS/SLK  
With TV Tuner  
NAV TV (Europe) LTD

e11\*72/245\*2004/104\*4020\*00  
RoHS 2002/95/EC—2002/96/EC

## LOCATION & REMOVAL

All connections are made at the **AUDIO GATEWAY** found in the left hand side of the boot except **SLK** where the audio gateway is found at the passenger foot-well.

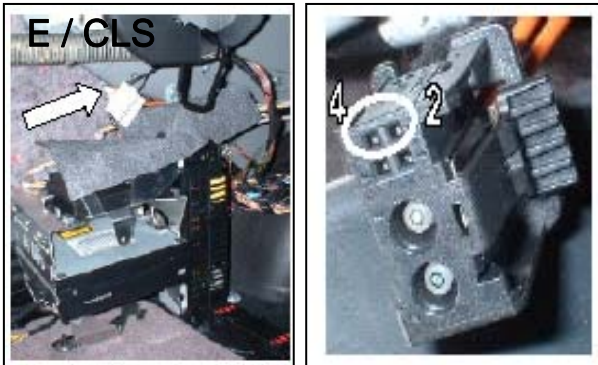

## INSTALLATION

Locate the 4 pin plug from the Audio Gateway (shown opposite) and slide out pin carrier insert.



Remove the BROWN/RED cable (pin 2) and insert it into the BROWN/RED male pin provided and insulate. Then insert the female BROWN/RED pin provided into the black plug (pin2)

Next remove the BROWN cable (pin 4) and insert it into the BROWN male pin provided and insulate. Then insert the BROWN female pin provided into the black plug (pin 4)

Connect the RED cable to 12v+ permanent.

Connect the PURPLE to 12v+ permanent.

Connect the BLACK cable to 12v- ground.

If you have connected the interface and now have no steering wheel controls, or you only have the Mercedes logo on screen, or the screen does not come on / go off with the key you have inserted the CAN HIGH and CAN LOW incorrectly, please check pin numbers given.

## INSTALLATION

\*NAVTV VIMCANMER2 Harness Plug Information\*

PIN	INPUT / OUTPUT	FUNCTION	CABLE COLOUR
1	INPUT	12v+	PURPLE
2	INPUT	12v+	RED
3	OUTPUT	CAN LOW (out)	BROWN
4	OUTPUT	CAN HIGH (out)	BROWN /RED
5	N/A	N/A	N/A
6	INPUT	12v-	BLACK
7	INPUT	CAN LOW (in)	BROWN
8	INPUT	CAN HIGH (in)	BROWN /RED