

## OPERATING INSTRUCTIONS

From the main menu of the car system you will need to select TV then supply 12V+ to the BLUE switch cable (e.g. connect to remote out from DVD) to switch audio and video to your new external source. The switch wire will then need to be deactivated when you revert back to any of the other functions if you wish to listen to the audio from another factory source.

The Video In Motion feature can be activated and de-activated by pressing and holding the “track down” button on the steering wheel controls



## OPV-2RR

**AV MOST Input & Video In Motion  
Range Rover with TV Tuner**

NAV TV (UK) LTD



### NAV TV (UK) LTD

Unit R4  
Capital Business Park  
Wentloog  
Cardiff  
CF3 2PU

Telephone: + 44 (0)870 801 0440  
Fax telephone: + 44 (0)870 801 0441  
technical@nav.tv


**Disclaimer**  
NAV TV (UK) Ltd is not liable for any incidental, consequential or indirect damages. In case of erratic behavior of the vehicle's electrical system please disconnect the NAV TV product and contact our technical support Team. NAV TV (UK) Ltd does not assume liability for any diagnostic fees.

**e11\*72/245\*2004/104\*4020\*00  
RoHS 2002/95/EC—2002/96/EC**

## LOCATION & REMOVAL

### Removing screen and locating IHU unit up to 2006

- 1.Remove the air vents L and R by pulling 4 tabs inside the vent (*see fig 1*)
- 2.Pull the dash side panels (trim clips only)
- 3.Remove 4 screws each side securing the wood trim panels,
- 4.Remove the wood trim panels and unplug lights and head-light switches,
- 5.Unclip the centre speaker grille on the dash to access screws (*see fig 2*)
- 6.Remove all exposed screws on top part of dash and pull away from windscreen (no need to unscrew centre speaker)
- 7.Unplug centre speaker and remove top part of dash completely (*see fig 3*)
- 8.Take out 4 screws at top of screen and 2 at either side behind wood trim (deep reach screwdriver needed)
- 9.Remove the screen and you will see a half DIN sized grey box with the black plug shown in fig 4

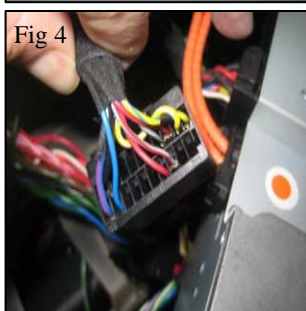

## INSTALLATION

### Installation for OPV-2RR CAN


FOR 2007;

Installation has to be done at the IHU behind lower glove box. Remove glove box and plug in at IHU unit

FOR 2005/2006

Installation has to be done behind the front screen at the IHU unit

Plug the black plug from the IHU unit into the female side of the supplied harness, then plug in the male side of the supplied harness to the IHU unit. Plug in and mount the interface. See below.

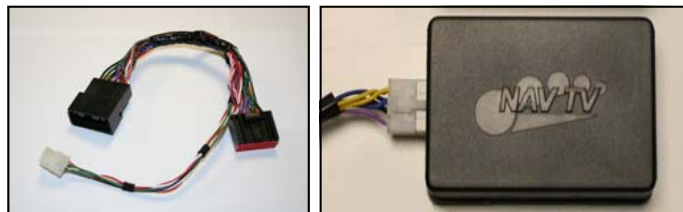


### Installation for OPV-2RR MOST

Installation is made at the screen unit on all models;

Remove the GREEN plug from the GREEN socket on the screen unit,


Plug the GREEN plug into the male green socket supplied, next plug the supplied green female plug into the screen unit, see below

Fig 5

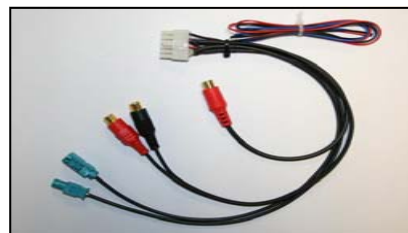

## INSTALLATION

Insert OPTICAL leads into OPV-2RR loom and car loom **AT THE SCREEN/RADIO** to create a loop, see diagram below

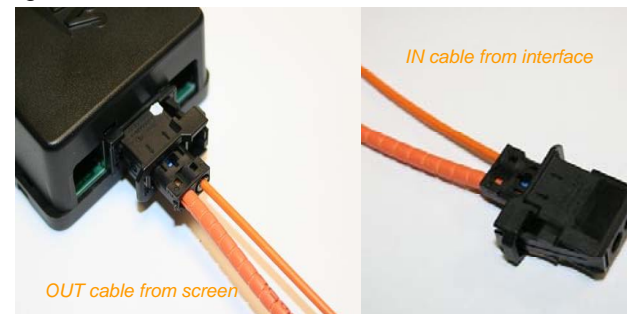

INTERFACE

CAR CONNECTOR

To remove the **(out)** fibre optic cable from the factory connector you will need to remove the black outer casing and push out the blue locking insert. You will need to do the same to insert the cable into the supplied loom. (shown in diagram above)

### Other Connections

Connect the RED cable to 12v+ PERM

Connect the BLACK cable to 12v- GROUND

Connect the BLUE cable to 12v+ to switch from factory TV to your added source. Also see operating instructions.

Connect the cable AUDIO sockets to your audio source. See fig 5

Connect the cable VIDEO socket to your video source, see fig 5