



USER MANUAL



Super Brightness



Plug and Play



1:1 Replacement

Confirm the correct bulb size you need

1. Please check your stock bulbs to confirm the correct bulb size. The part number is marked on the bulb.
2. If you have already changed the bulb before, please check your owner's manual or search "automotive bulb look-up" online to confirm the correct bulb size.

1 CHECK YOUR ORIGINAL BULB



2 CHECK OWNER'S CAR MANUAL



Location	Left	Right
Headlight	H1	H1
Low beam	H7	H7
High beam	H7	H7
Fog light	H8	H8
Daytime Running Light	H11	H11
Turn Signal	H27	H27
Brake Light	W5W	W5W
Trunk Light	W5W	W5W
License Plate Light	W5W	W5W

3 SEARCH ONLINE OR ASK US

automotive bulb lookup 

If the bulbs do not light up after installed

1. You can directly use 12V or 24V DC voltage to test whether the bulbs can light up.
2. Try swapping the positions of the two bulbs.
3. Reinstall the halogen lamp to test whether the original plug is damaged.

If you have tried the above steps and the bulbs still do not light up, please contact us directly through Amazon or our Support E-mail: support@auxlight.net

Other things to note

1. This type led bulbs are not recommended to be used as headlight, only for Fog Light, Daytime Running Light/ DRL.
1. 2. A resistor or decoder may be required for vehicles equipped with CAN-BUS system to bypass the error code.