

If the bulbs do not light up after installed

1. You can directly use 12V DC voltage to test whether the bulbs can light up.
2. Try flipping the base of the bulb 180 degree and reinstall it.
3. Try swapping the positions of the two bulbs.
4. Reinstall the halogen lamp to test whether the original plug is damaged.

If you have tried the above steps and the bulbs still do not light up, please contact us directly through Amazon or our Support E-mail: support@auxlight.net

Other things to note

For some vehicles, the front and rear turn signal lights use different size. It may happen that this bulb only fits front turn signal lights or only fits rear turn signal lights.



USER MANUAL



Super Brightness



Plug and Play



1:1 Replacement


Confirm the correct bulb size you need

1. Please check your stock bulbs to confirm the correct bulb size. The part number is marked on the bulb.
2. If you have already changed the bulb before, please check your owner's manual or search "automotive bulb look-up" online to confirm the correct bulb size.

1 CHECK YOUR ORIGINAL BULB



2 CHECK OWNER'S CAR MANUAL

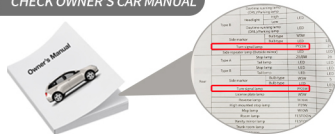

3 SEARCH ONLINE OR ASK US

automotive bulb lookup 🔍

After installed, there may be two possible situations:

1. the bulbs work normally



2. If the following problems occur after installed, add load resistors can solve them.

- 1) When used for turn signal lights, the bulbs flash quickly.
- 2) There is error code on the dashboard.

How to install load resistor?

