




How to access Midas 926 OAM

Method 1:

1. Turn on your Midas 926 and wait 3 seconds until yellow light is on, and then connect it to your router with network cable.
2. Access the IP address of your router in the browser. (Note: The IP address of your router is usually on the back of the router box. You can also find the IP address in your computer's network setting).
3. Find the device called "raspberrypi" in router's dashboard, for which the router has assigned an IP address. Please use the URL formed by this IP address and ": 3852" to access Midas's OAM system. For example, the URL formed by the IP address in the image below is 193.168.2.24:3852



4. Use the username and password below to log in.
Username: admin
Password: adminOAM

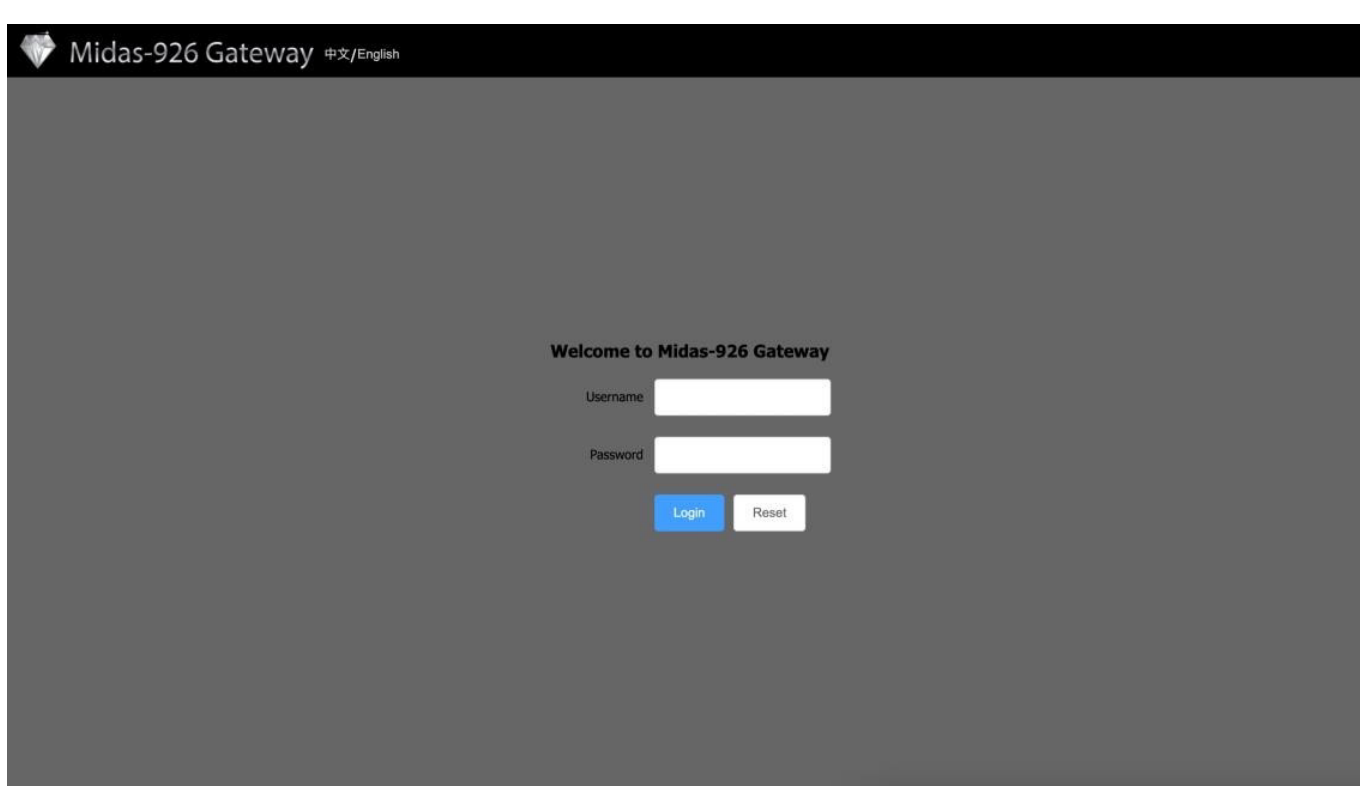


Method 2:

1. Turn on your Midas 926 and wait 3 seconds until yellow light is on, and then connect it to your computer with network cable.
2. Make sure the Ethernet static IP address of your computer is 192.168.254.10 and the static IP address of Midas 926 gateway is 192.168.254.254

Examples:

1) For Mac OS System:

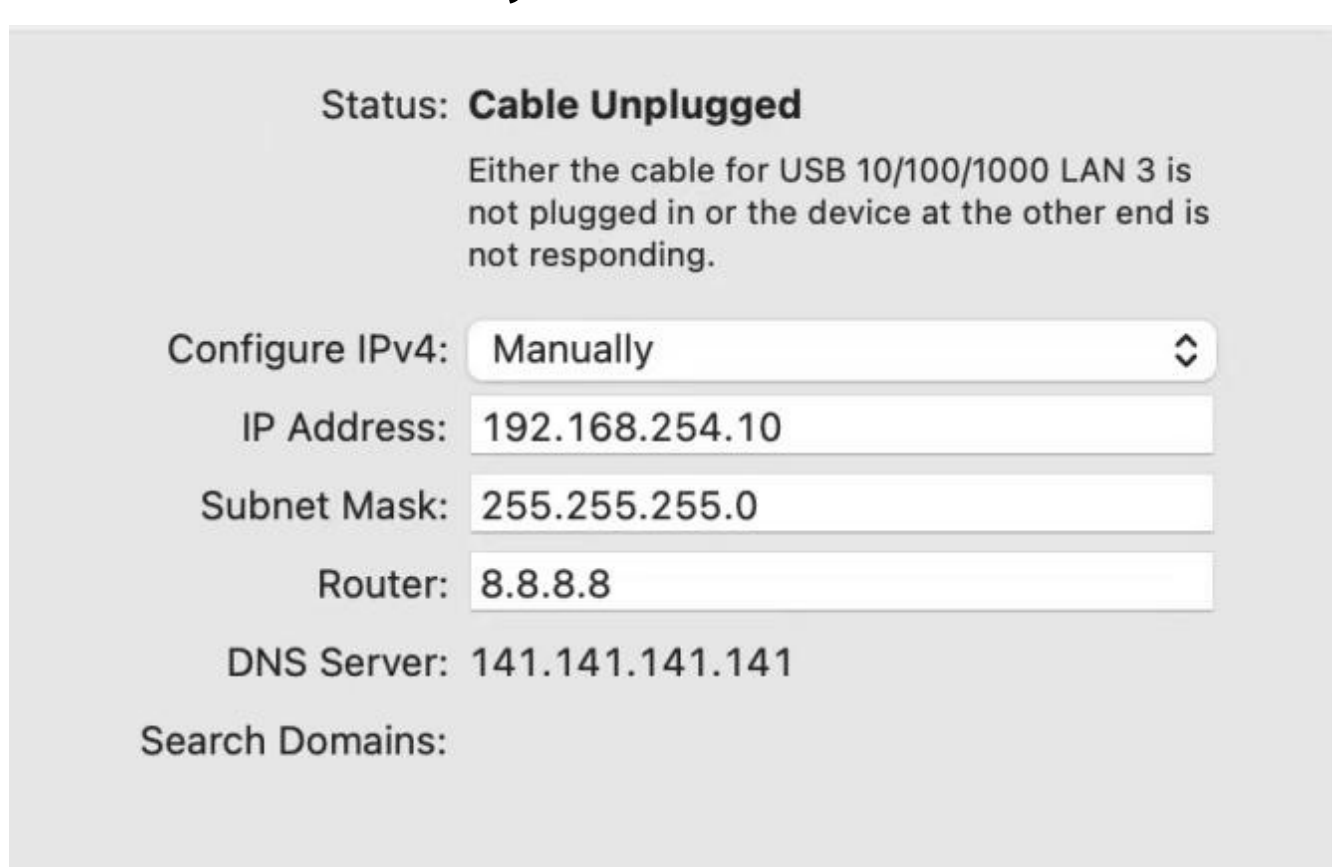


2) For Windows System:

IP settings

IP assignment:	Manual
IPv4 address:	192.168.254.10
IPv4 subnet prefix length:	24
IPv4 gateway:	141.141.141.141
IPv4 DNS servers:	8.8.8.8
<div>Edit</div>	

3. Visit the OAM system at <http://192.168.254.254:3852>

4. Use the username and password below to log in.
Username: admin
Password: adminOAM

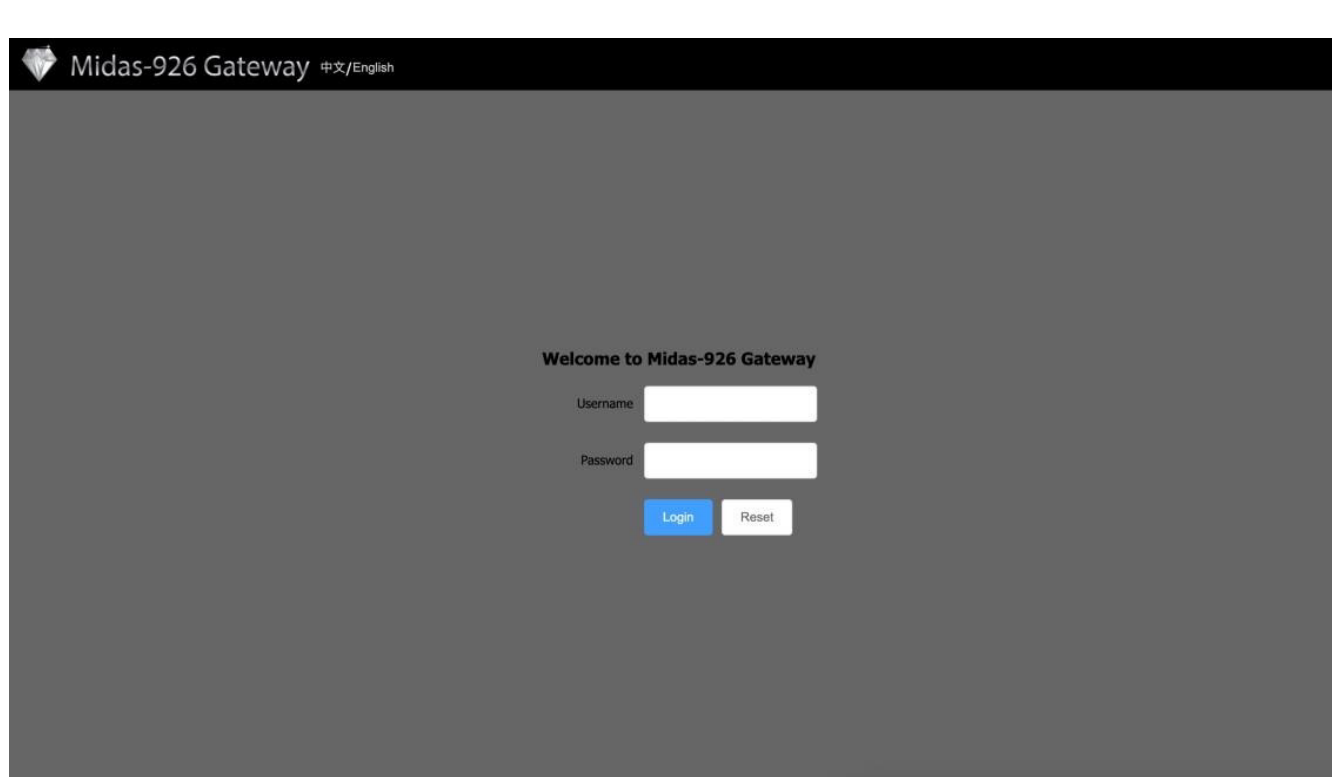

Note:

1. If you do not know how to set your computer's Ethernet static IP address, please search by yourself.
2. Don't use both Wifi and cable to connect Midas 926 to the same router, because this may cause miner procedure failure.