

Electric Install

December 30, 2014

The following was performed on a Windows 7 64 bit system.

Install JAVA JRE

1. Go to:

<http://www.oracle.com/technetwork/java/javase/downloads/jre8-downloads-2133155.html>

2. Download: jre-8u25-windows-x64.exe

3. Install JAVA JRE by running jre-8u25-windows-x64.exe

a. Click Install:



b. Wait while it installs:



c. When the installation finishes, click Close:




Install Electric

1. Go to:

<http://www.staticfreesoft.com/productsFree.html>

2. Download the binary: electricBinary-9.05.jar

3. Create a folder called Electric and place electricBinary-9.05.jar in it:

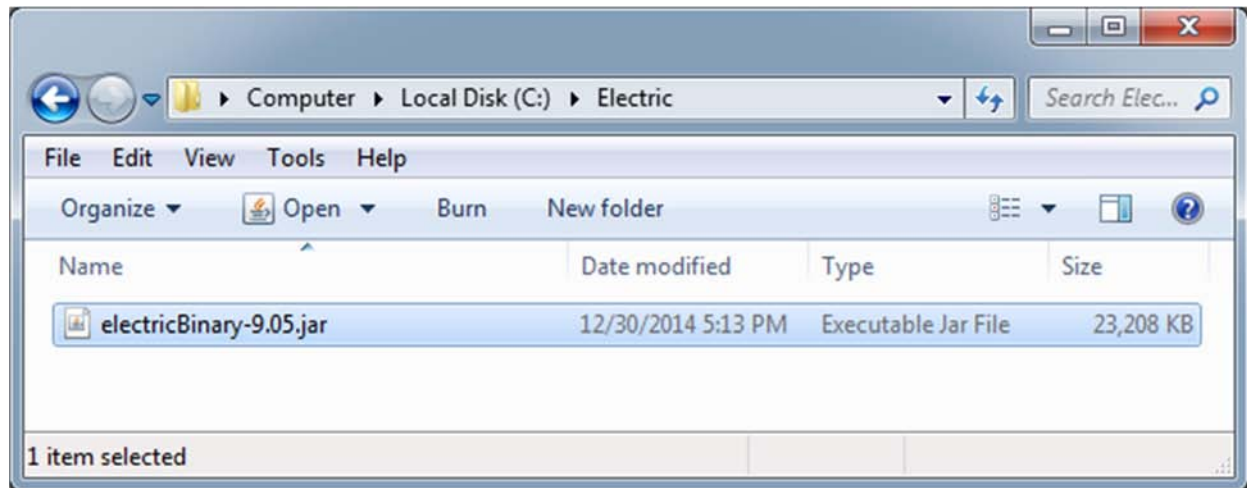

Install 3D Interface


Get Software Extra Plugin

1. Go to:

<http://www.staticfreesoft.com/productsFree.html>

2. Download the Software extras: electricSFS-9.05.jar

3. Place electricSFS-9.05.jar in the Electric folder:

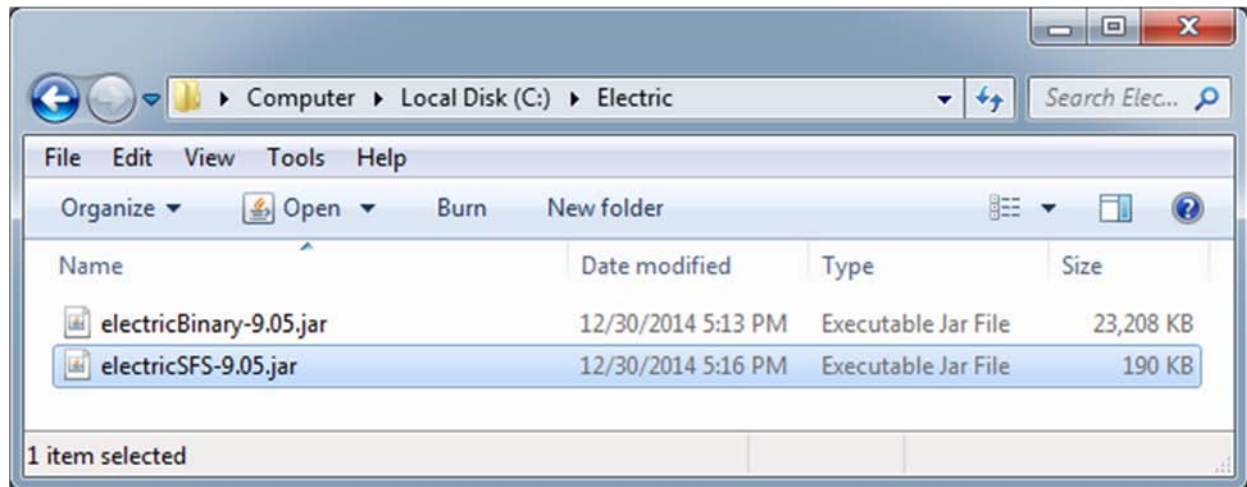

Install JAVA3D


4. Go to:

<http://www.oracle.com/technetwork/java/javasebusiness/downloads/java-archive-downloads-java-client-419417.html#java3d-1.5.1-oth-JPR>


5. Download: java3d-1_5_1-windows-amd64.exe

6. Install JAVA3D by running java3d-1_5_1-windows-amd64.exe


a. Click Accept:

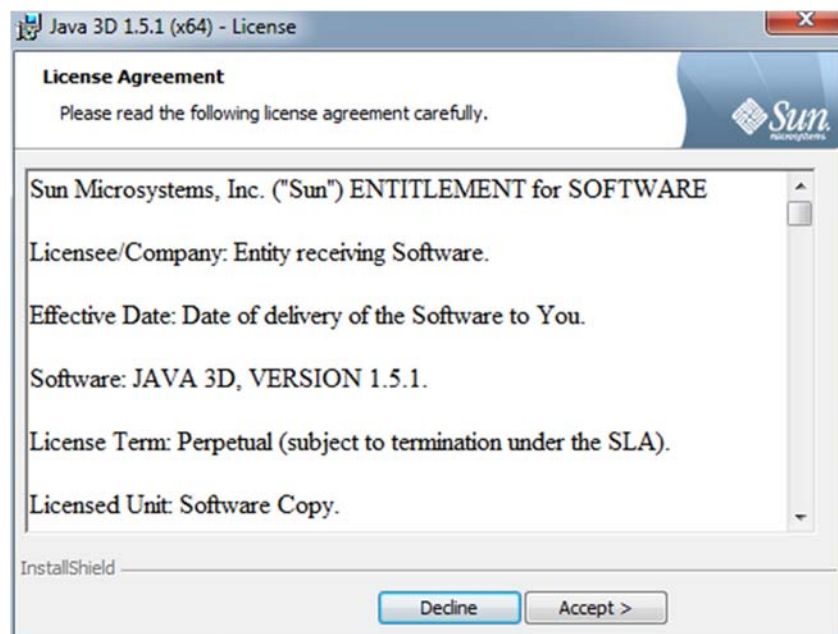


b. Click Install:

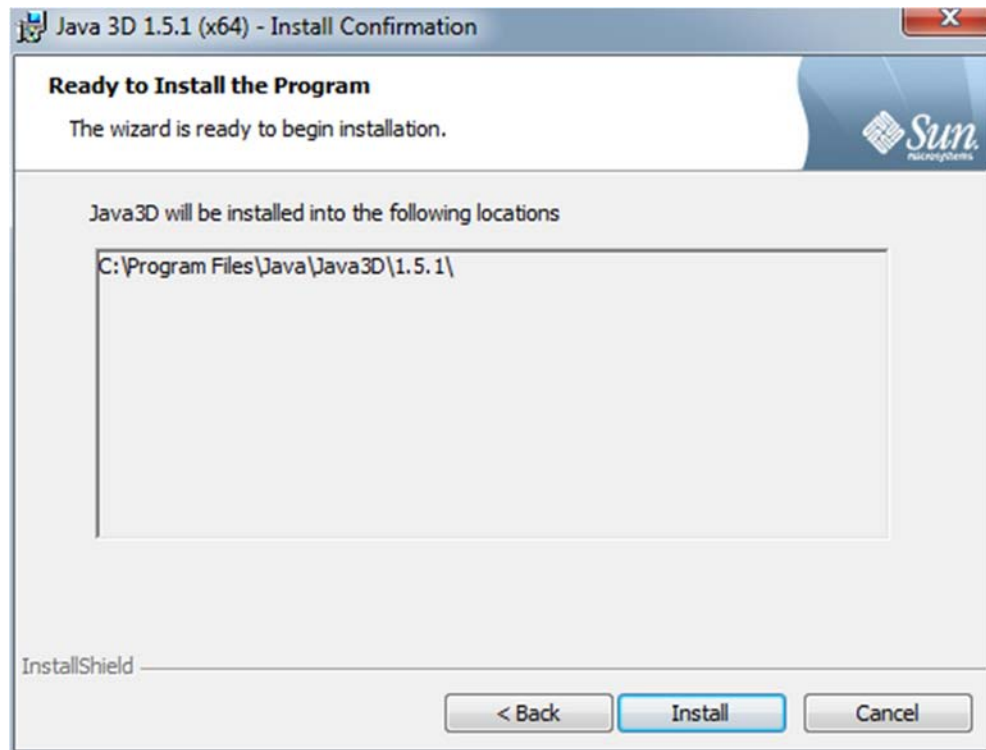


c. Wait while it installs:

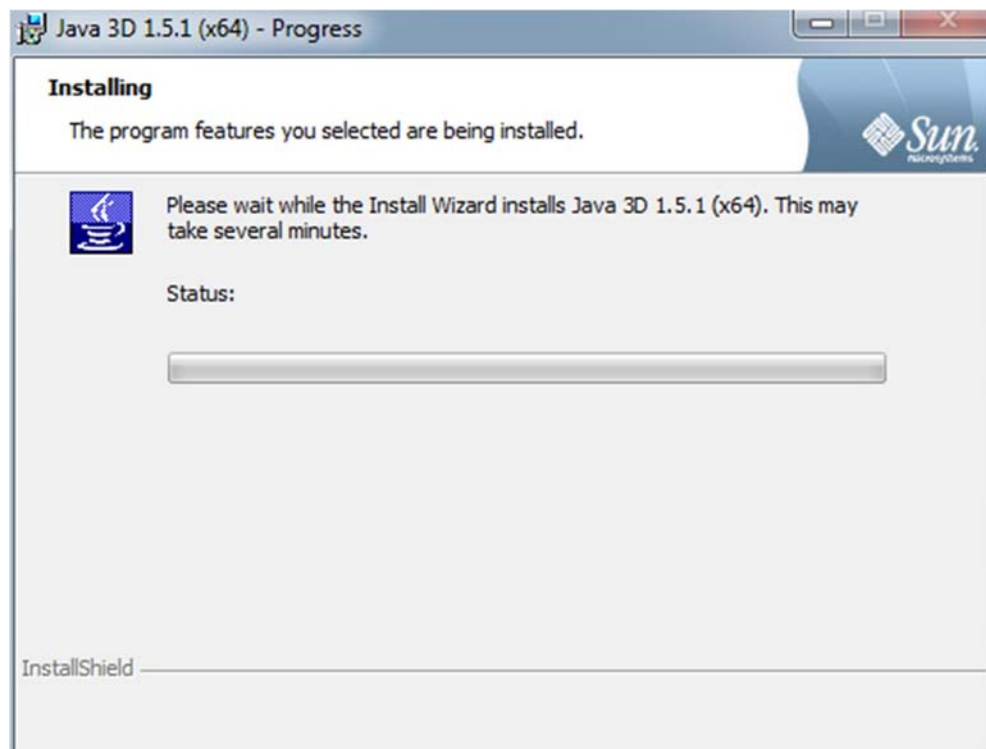


d. When the installation finishes, click Finish:

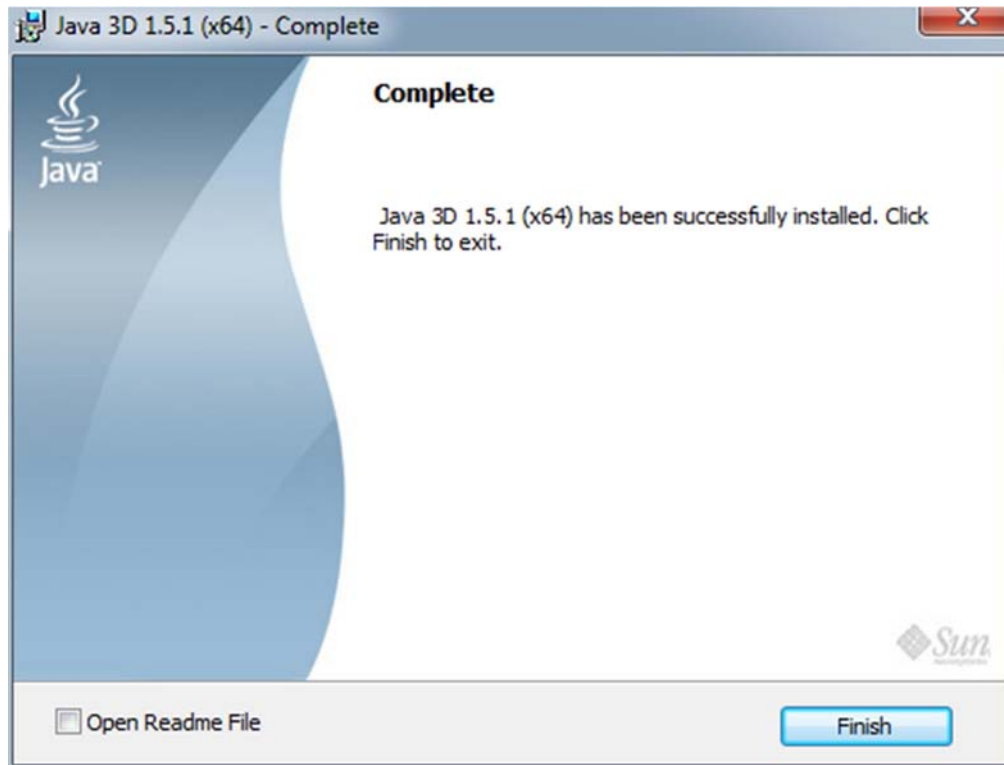


e. Locate on Windows where JAVA JRE and JAVA3D have been installed. For this system, they were installed in C:\Program Files\Java:

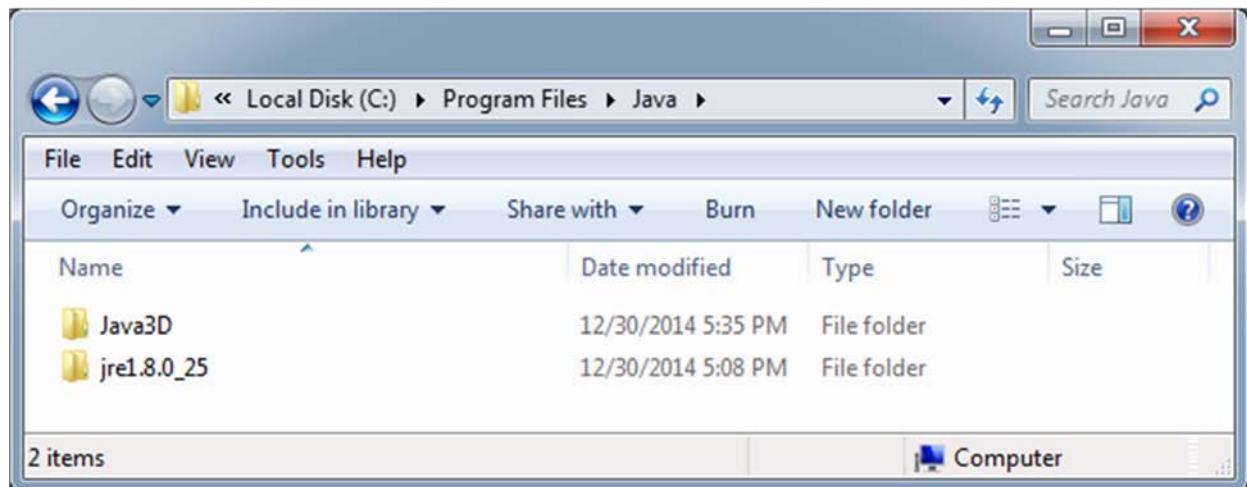

f. In C:\Program Files\Java\Java3D\1.5.1\lib\ext, there are three files (j3dcore.jar, j3dutils.jar, and vecmath.jar). Copy these JAVA3D files to the JAVA JRE (i.e., to C:\Program Files\Java\jre1.8.0_25\lib\ext):

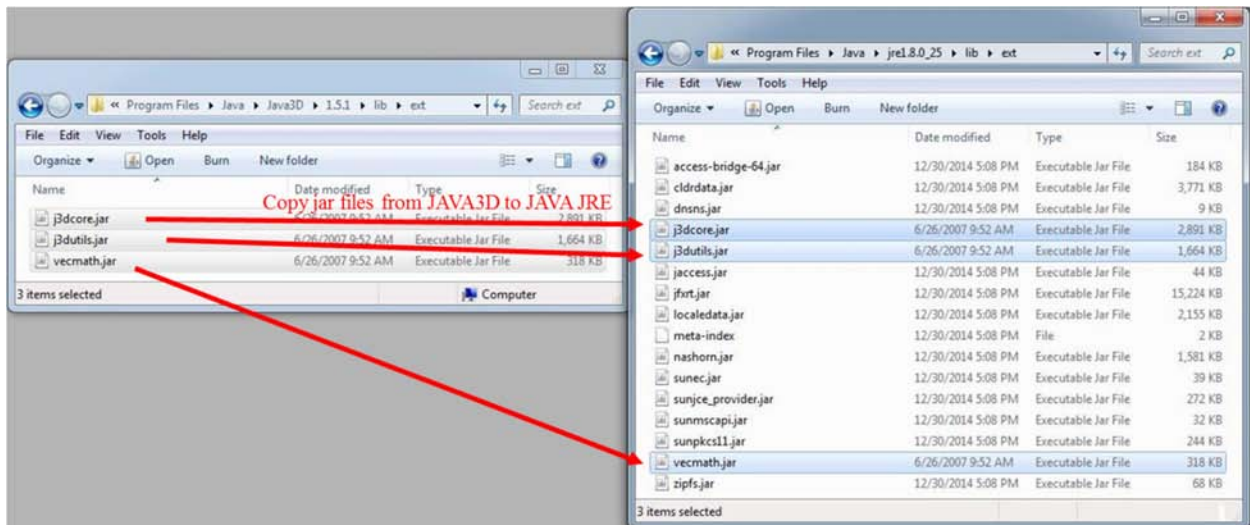

g. In C:\Program Files\Java\Java3D\1.5.1\bin, there is one dll file (j3dcore-ogl.dll). Copy this JAVA3D file to the JAVA JRE (i.e., to C:\Program Files\Java\jre1.8.0_25\bin):

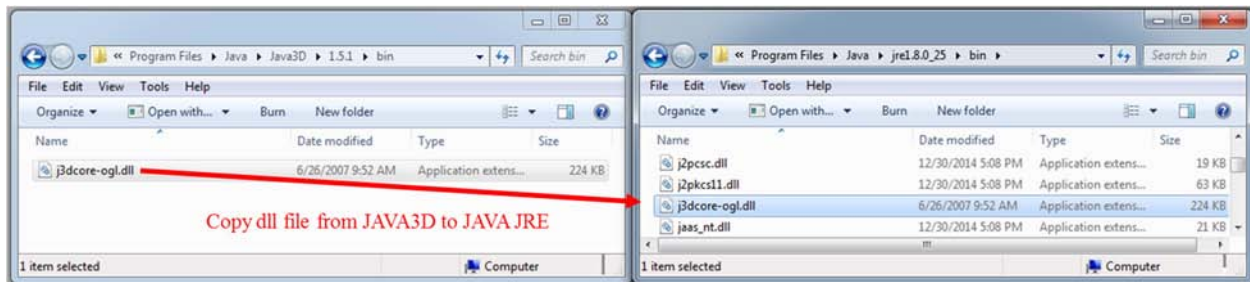


Reference for steps g and f:


<http://codinglogbook.com/game-development/how-to-get-java3d-to-work-on-64bit-windows-7-machine/>

Create a Windows Shortcut to Run Electric with the Software Extras


1. Right-click and select New -> Shortcut:

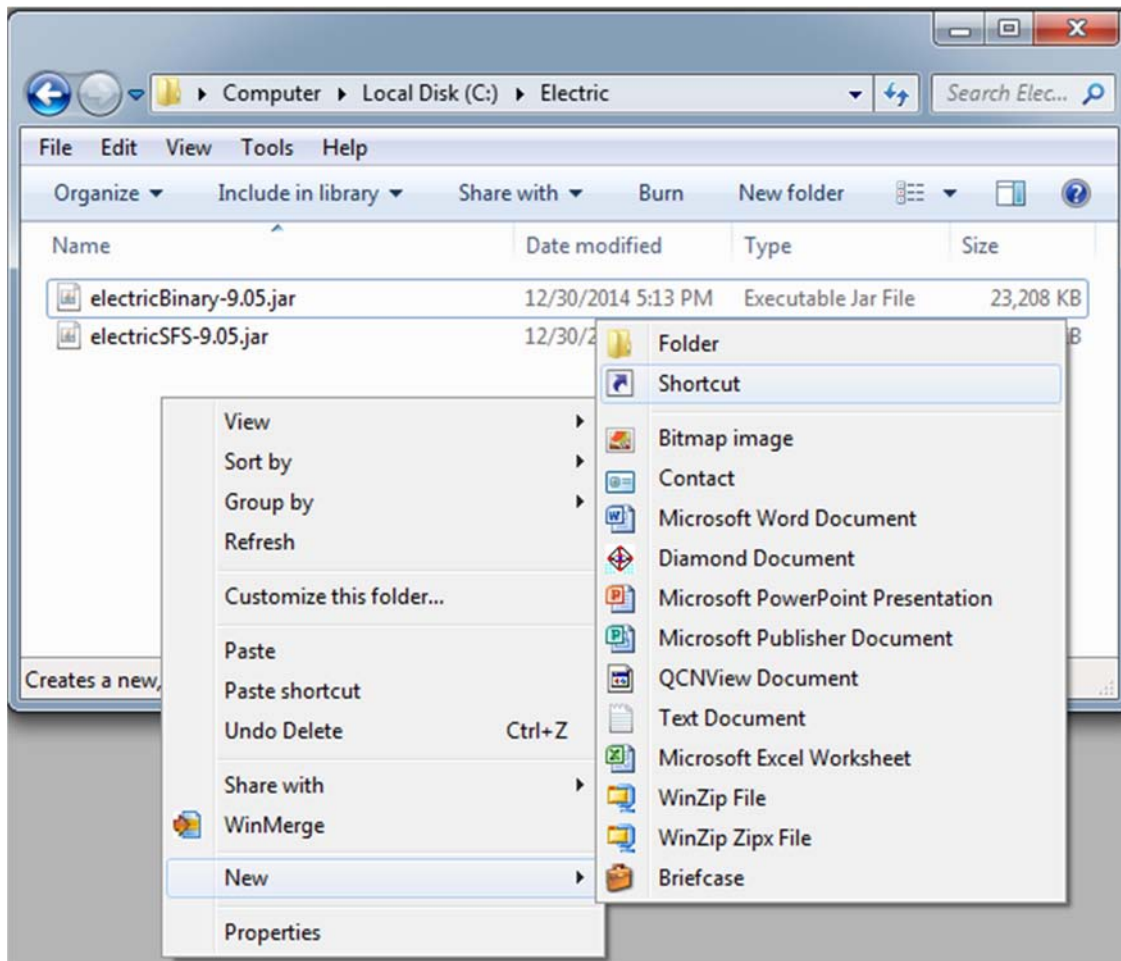

2. For the “Type the location of the item”, enter C:\Electric, then click Next:

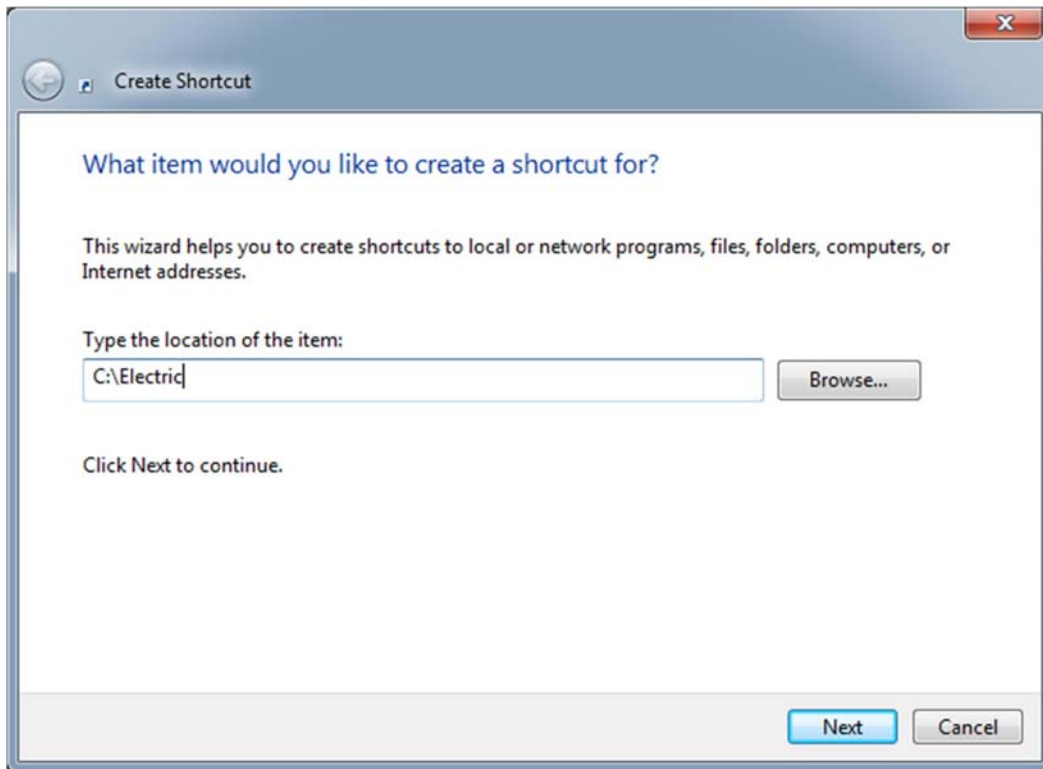


3. Click Finish:

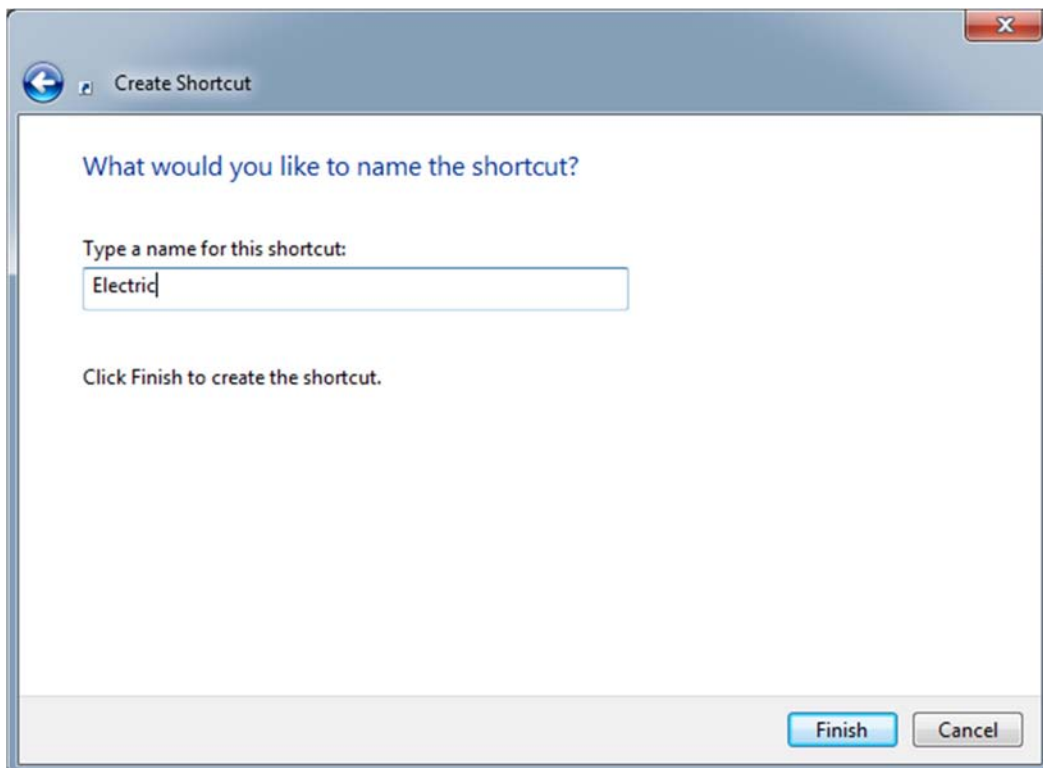

4. Right-click on the Electric shortcut and select Properties, then change the Target from C:\Electric to:


`%programfiles%\Java\jre1.8.0_25\bin\java.exe -classpath "electricBinary-9.05.jar;electricSFS-9.05.jar" com.sun.electric.Launcher`

Then, click OK:

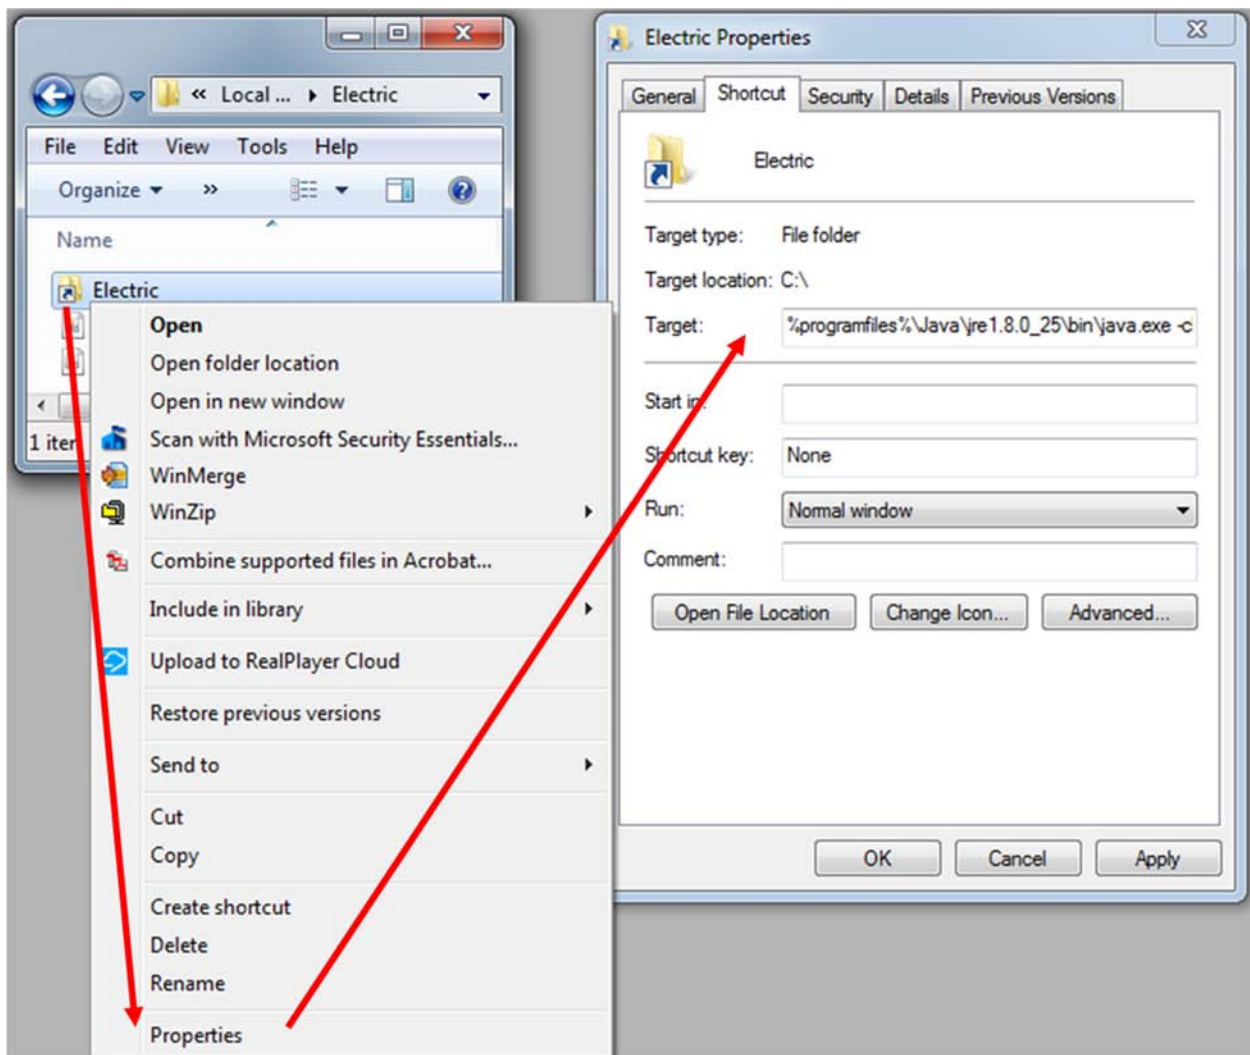

Run Electric

1. Run the Electric shortcut:

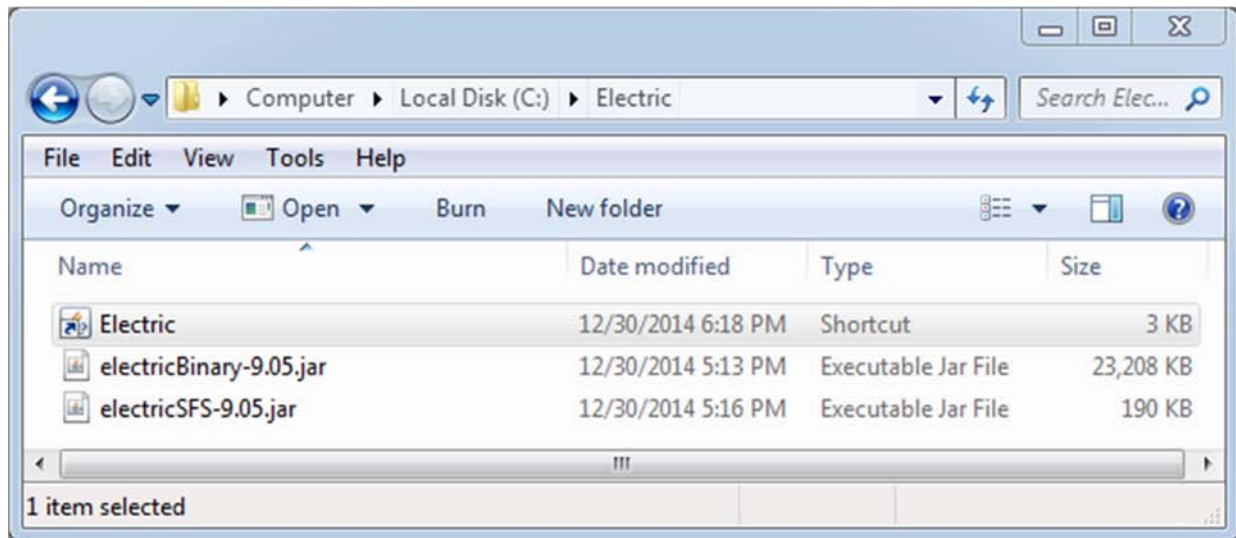

2. Go to:

http://cmosedu.com/videos/electric/tutorial1/electric_tutorial_1.htm

3. Get the file tutorial_1.jelib

4. Open tutorial_1.jelib in Electric, select lay in the Explorer tab, then click Window -> 3D Window -> 3D View. If successful, this will show the 3D View:

