

M The joint assembly of track

Installation method

Notes: The track needs to be enlarged when the angle is 90°. The track needs to be enlarged when the angle is 90°.

M The assembly of rubber belt for curtain motor

Installation method

The confirmation of material dimension

DT82: The length of the rubber belt is 1000mm ± 10mm.

DT82: The length of the rubber belt is 1000mm ± 10mm.

M Folding method for joint track (for easy transit)

Installation method

Track folding method

DT82TV DC Curtain Motor Specification

Version NO.: A100

T Product characteristics

Technical support

AC 100V-240V

T Notes

Technical support

Assembly the motor with the motor control system carefully.

T Assembly dimension

Technical support

MIN: 100mm (4")

T Inspection for motor buttons

Technical support

Weak electric control. Ready interface. LED light.

T Motor function

Technical support

Press the set button on the motor for 10 seconds, the indicator will flash for 7 times. That the motor will adjust all distribution factory settings. Then you can match the code and set the limit again.

Electronic / Electronic limit-Resistance and stop function-Limit memorized after power-off-Weak electric control-Can adjust the limit point manually-Touch-start-strong electric control-85dB function

C Strong electric switch mode selection

Installation method

The default case for the first

C Strong electric Switch installation of curtain motor

Installation method

The motor line and the line can not be reversed, the wiring order, if done with the wrong, please push with a push button the stop and do not start again.

C Common emitters for curtain motor

Control system

C Setting up (Method 1)

Control system

C Add emitter (Setting up Method 2)

Control system

C The reverse of direction setting

Control system

C Set limit position and cancel the limit

Control system

C The third limit setting

Control system

C Touch-start

Control system

C The programming of the RS485

Control system

C Restore factory settings

Control system

C Common troubleshooting

Control system

NUMBER	COMMON FAULTS	PROCESSING METHOD
1	The motor is not running	1. Check the power supply. 2. Long time operation will motor thermal protection. Wait 10 minutes.
2	Unable to control remote controller	1. Replacement of the remote controller, replacement of the remote control battery.
3	Remote control on the contrary	Reverse the reverse of direction setting.
4	Remote switch on the contrary	Replacement switches line order.
5	Cannot close	1. Check emitter's open button to ensure if it works with open function, if not please change direction firstly. 2. Check limit position.
6	Always hit or couldn't get to the edge	Cancel the limit, setting again.
7	With the hand to pull, feeling stuck	Set the limit of the trip.
8	Encounter obstacle will not stop	Check the screw used to fixed orbital.

Restoring the track

M The installation for curtain motor and cable

Installation method

M External switch selection

Installation method