



## **How to use your alarm system.**

### **Arm:**

To arm your system, press the arm button. This will initiate the arming sequence and after 20 seconds your alarm will be fully armed.

### **Disarm:**

To disarm your system, enter your pin code then enter. This will be followed by a triple beep and the alarm will be disarmed.

## **How to change alarm code:**

To change your alarm code press the PROG button followed by your current alarm code, if done correctly the screen should now display CPGM.

- Press the PROG button then 1 then ENTER.
- Press 1 then ENTER

Your current alarm code should flash on screen.

Press your new code in and press ENTER,  
Your new code will flash back to you.

If your happy with this press PROG then ENTER

**\*\*\*Please test your code to make sure it's correct by entering your code then pressing ENTER to arm the system then quickly disarming the system\*\*\*\***

**Repeat the steps if necessary.**

## **Commonly asked questions**

### **How do I know my alarm is armed?**

The armed light or indicator will be illuminated.

### **How do I know if my alarm is disarmed?**

The ready light or indicator will be illuminated.

### **How can I tell if the alarm has gone off?**

If your alarm has been armed and has been triggered, the memory light will be flashing indicating that there has been an event.

### **What else can my alarm do?**

Smartphone monitoring and notifications

Smartphone arming and disarming

Arming and disarming via remotes

Garage door control via remotes

If you have any further question feel free to contact us

Mario Cannon

[Hello@secure-works.co.nz](mailto:Hello@secure-works.co.nz)

0800 577 178