


NOTE: FUSE MUST BE USED  
ON BATTERY OR POWER SUPPLY

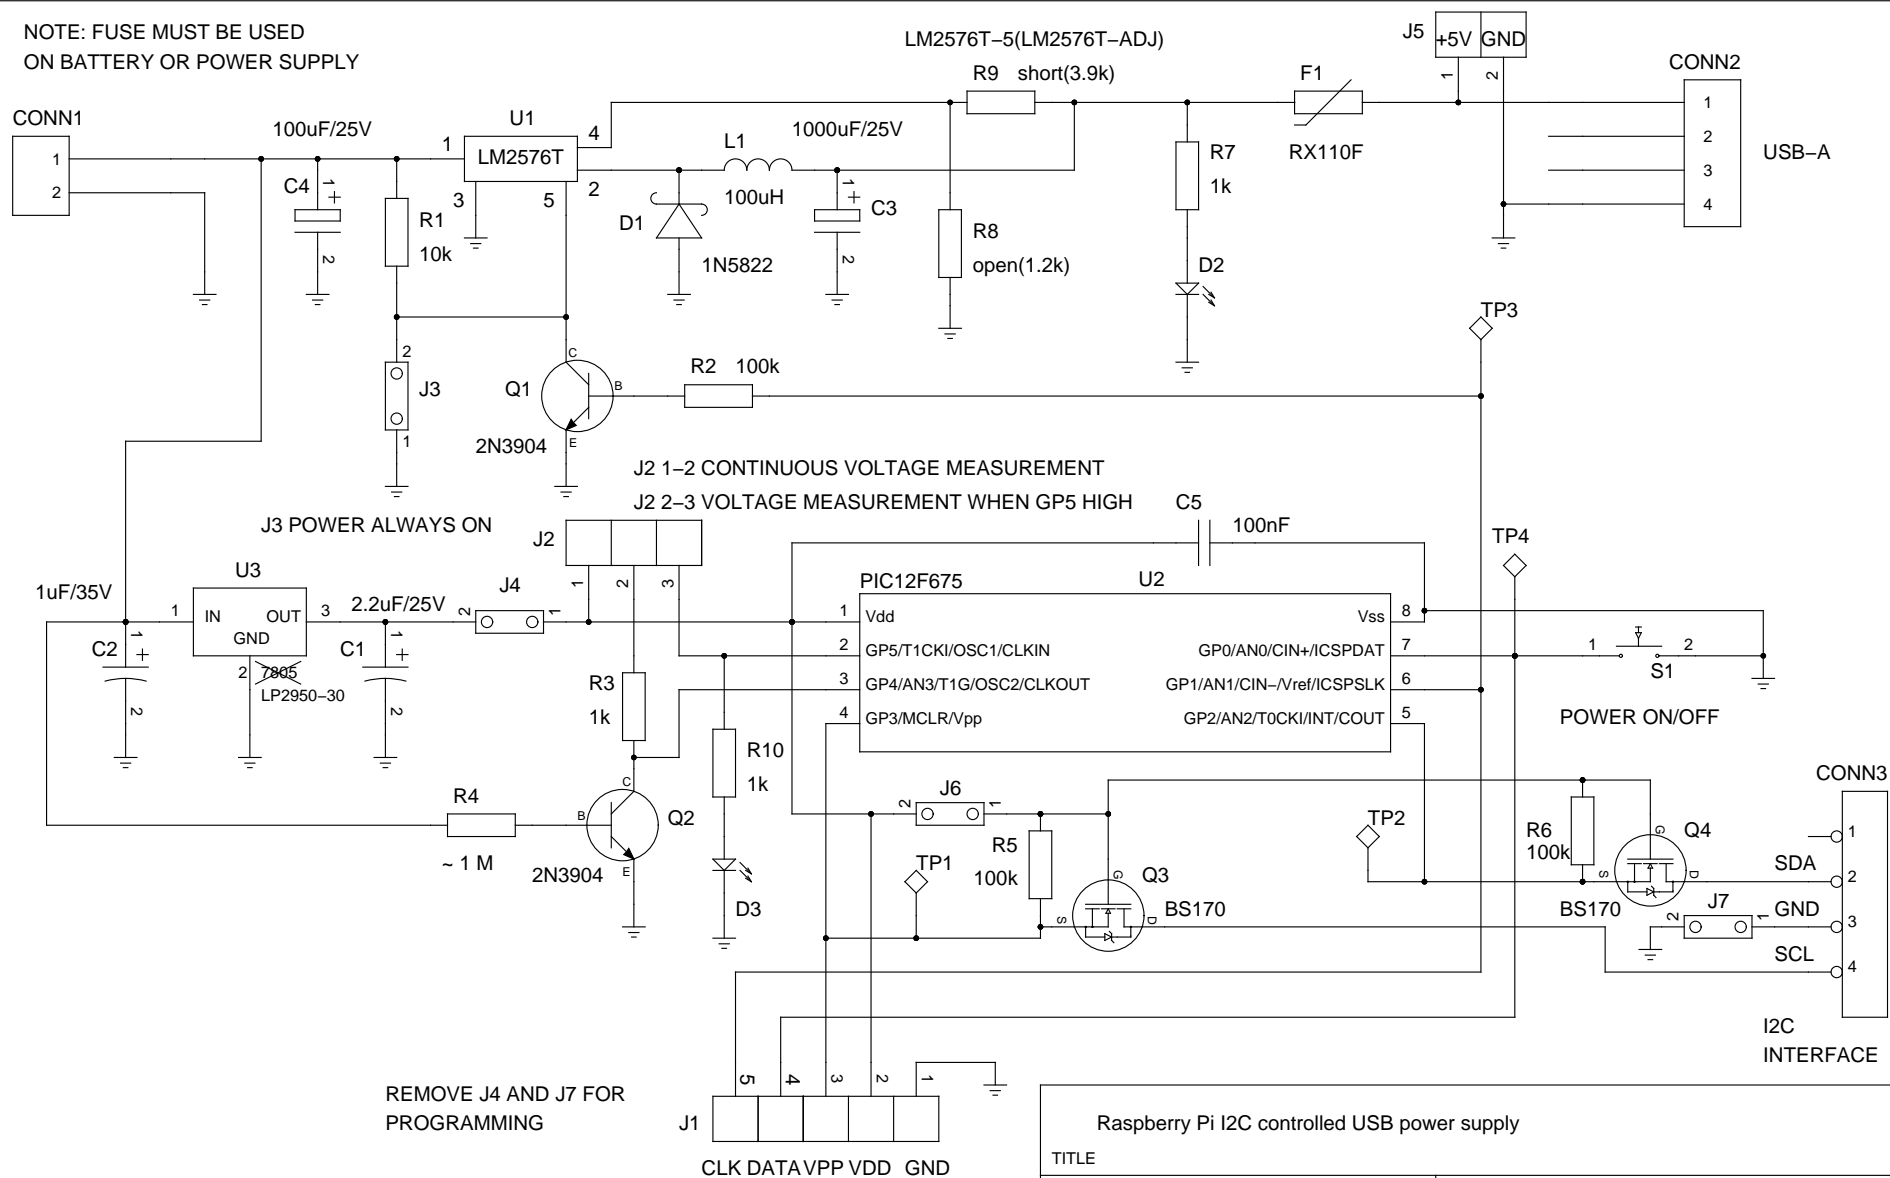

# Raspberry Pi I2C controlled USB power supply

TITLE

FILE: raspipwr12V.sch

REVISION: 16 November 2013

PAGE OF

DRAWN BY: Jaakko Koivuniemi