


NOTE: FUSE MUST BE USED
ON BATTERY OR POWER SUPPLY

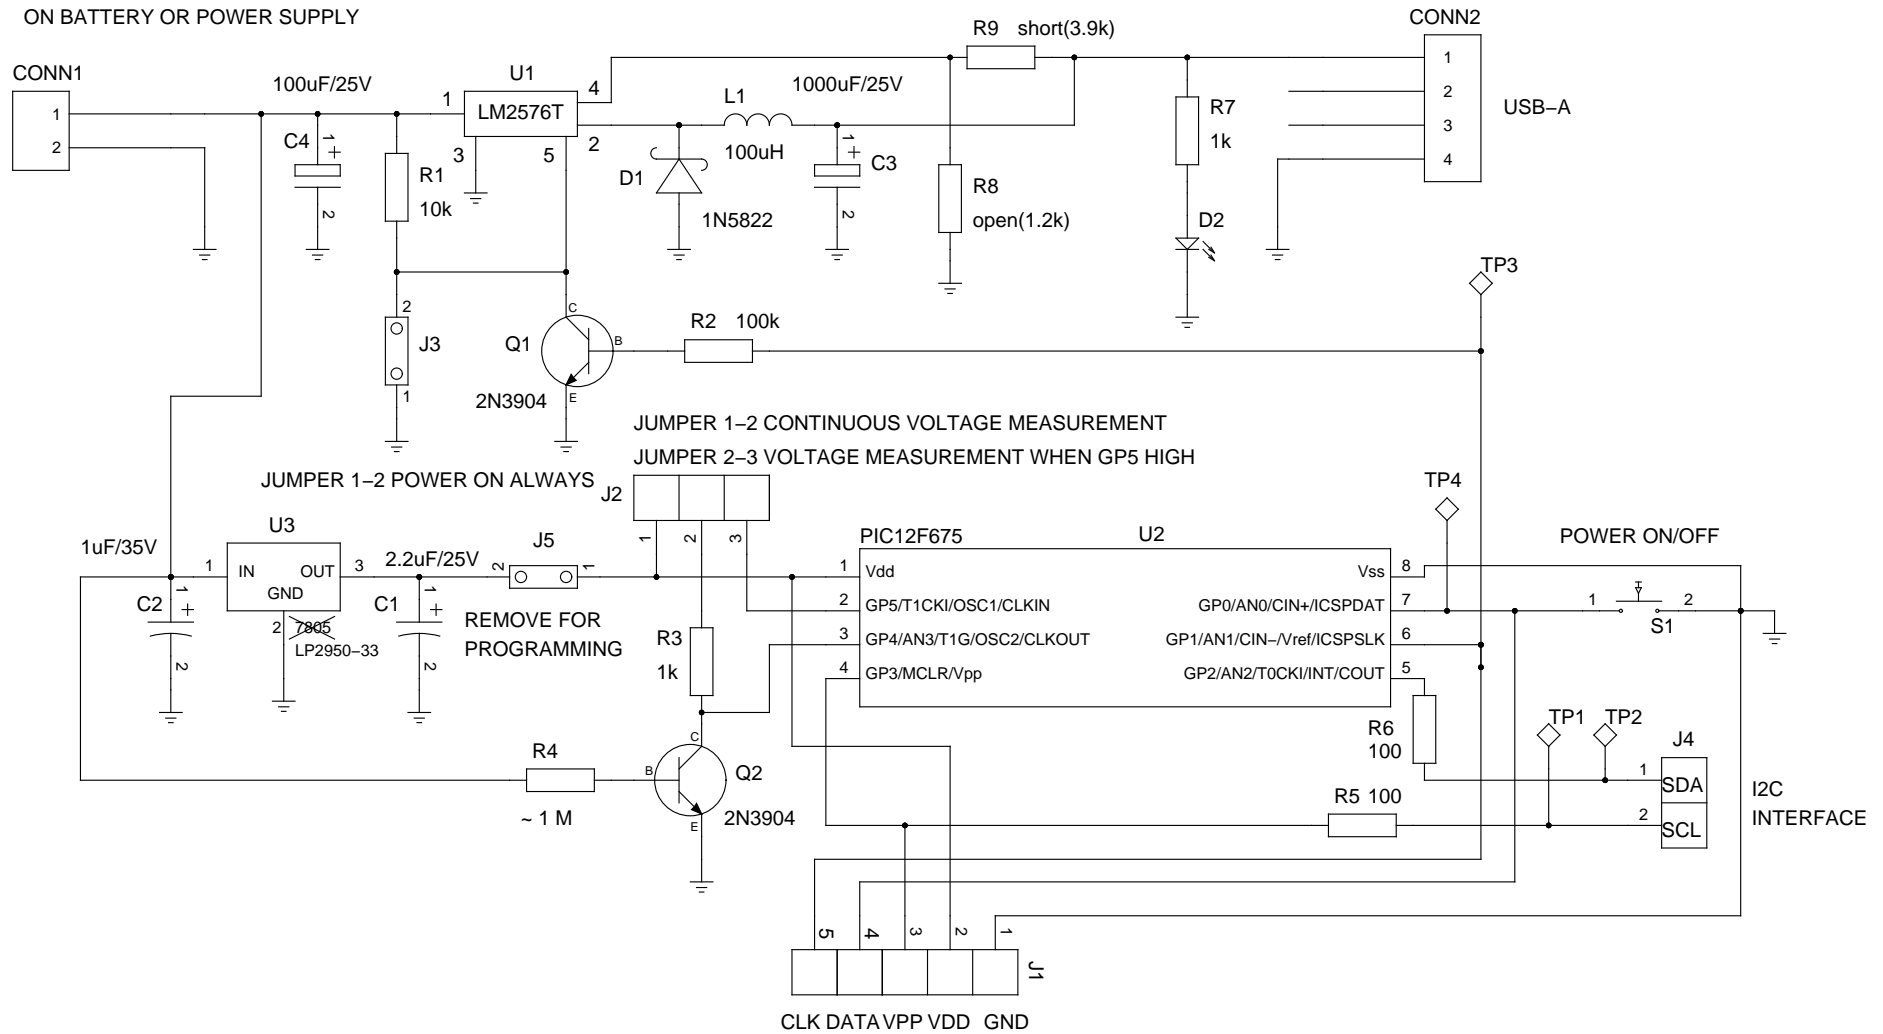

Raspberry Pi I2C controlled USB power supply

TITLE

FILE: raspipwr12V.sch

PAGE OF

REVISION: 11 September 2013

DRAWN BY: Jaakko Koivuniemi