


NOTE: FUSE MUST BE USED
ON BATTERY OR POWER SUPPLY

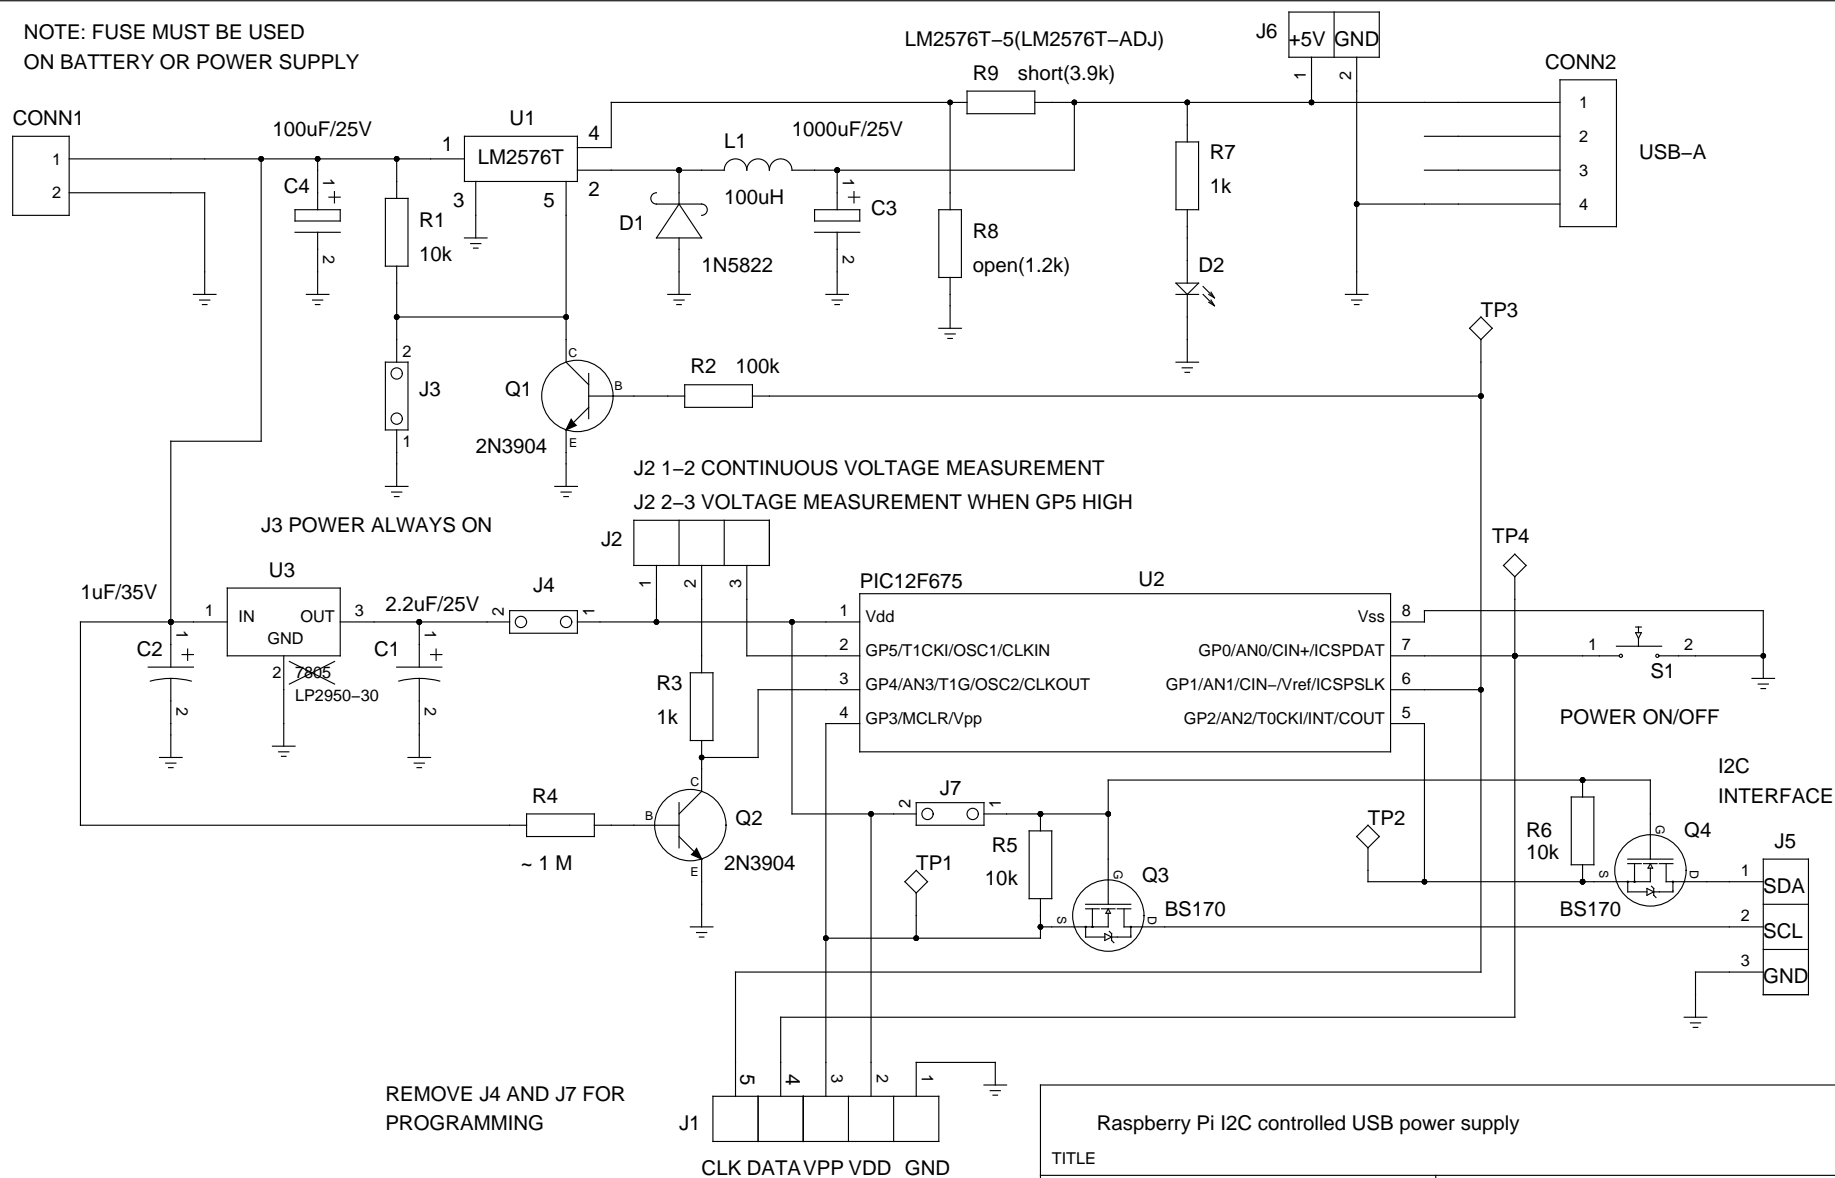

Raspberry Pi I2C controlled USB power supply

TITLE

FILE: raspipwr12V.sch

REVISION: 15 September 2013

PAGE OF

DRAWN BY: Jaakko Koivuniemi