


Onsite Photoviewer Instruction Manual


The Onsite Photoviewer can be accessed at www.osmium.nz. The user can then login to the site using the username and password supplied by Onsite Developments.

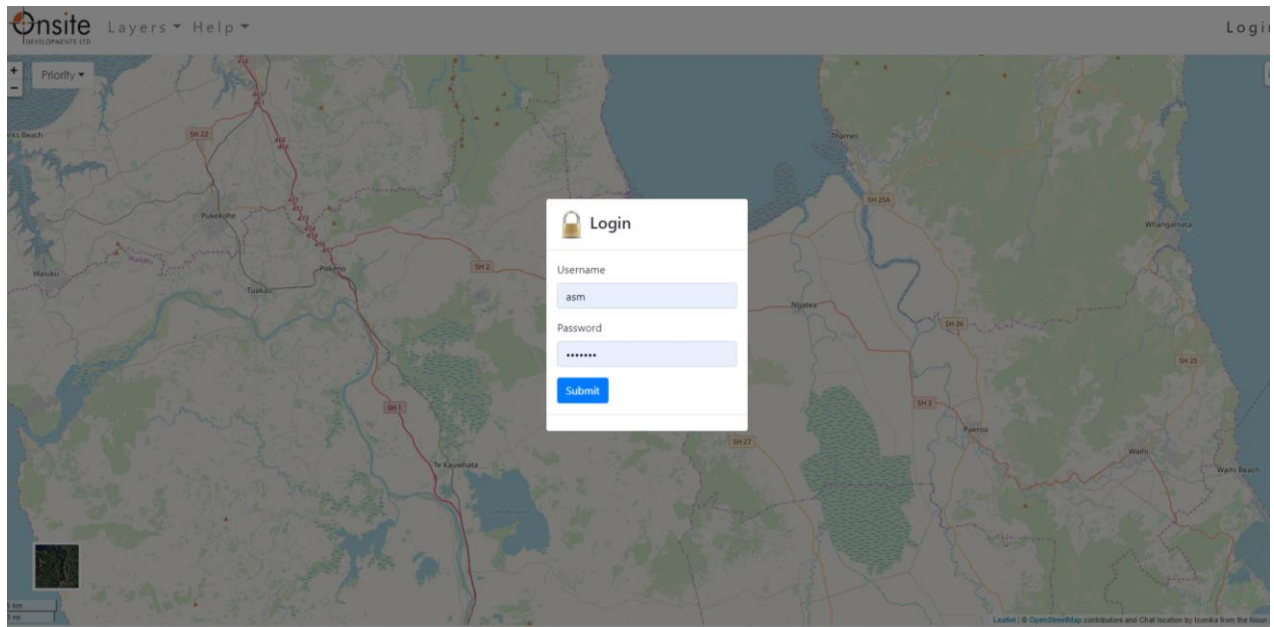

To view the projects.

Click Layer -> Add Layers

The projects that have been loaded will now be visible. Click the project the user wishes to view.

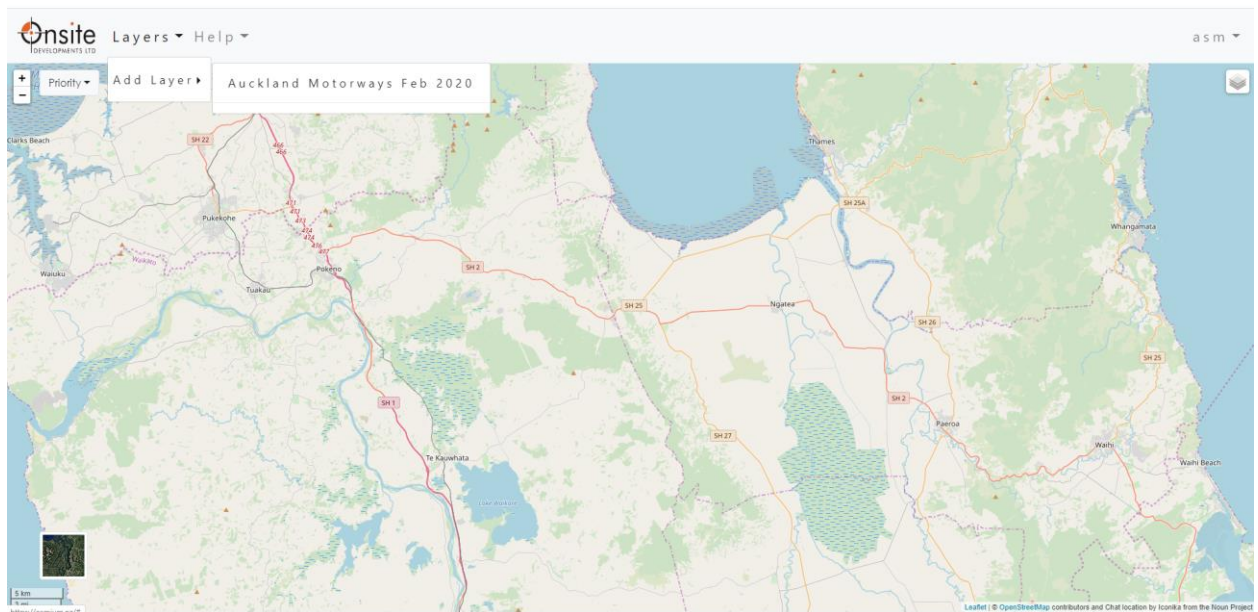


The data will now be visible on the screen as a series of coloured markers. These markers represent the location of each road fault and are coloured by priority

Red – Priority 1


Orange - Priority 2

Yellow – Priority 3


Green – Sign faults

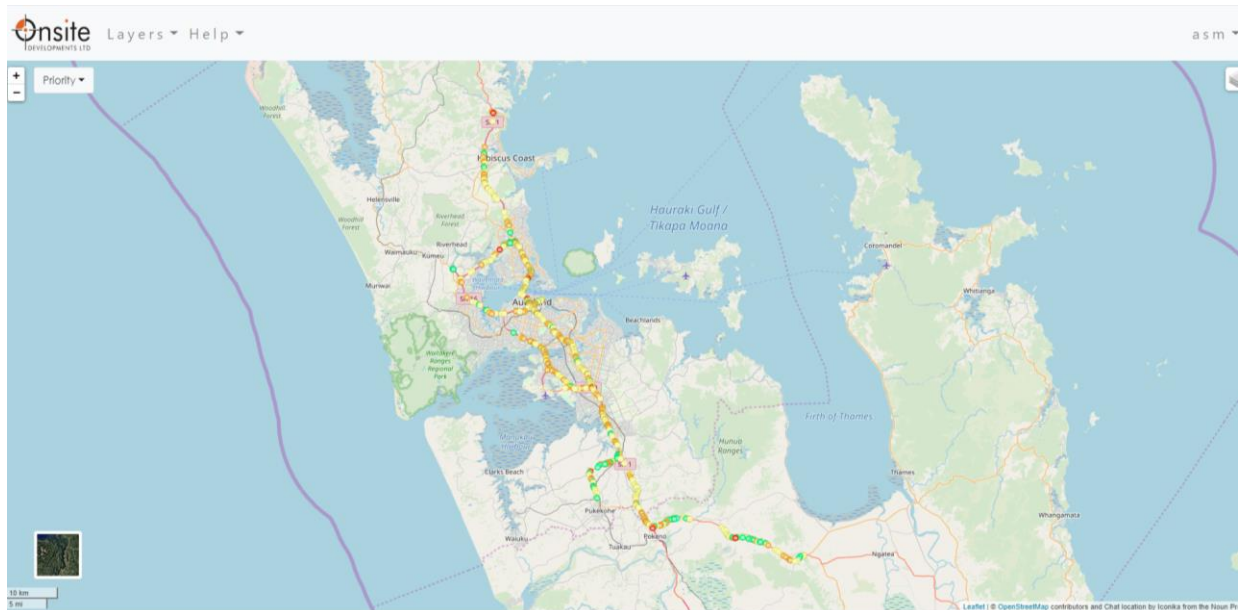


By clicking the Priority dropdown the data can be filtered priority/signage. By ticking or unticking the priority/signage checkboxes. The example below shows the Priority 1 faults.

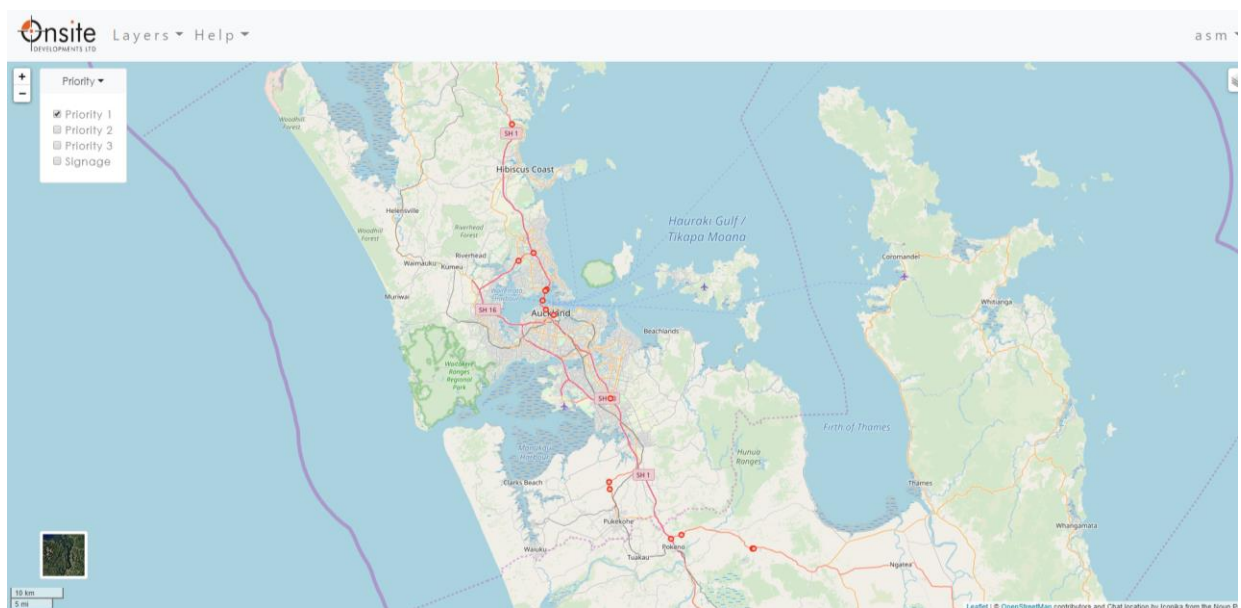

The user can zoom in to the markers using the mouse wheel or the plus/minus buttons. When the fault marker is clicked a popup appears showing the fault type, location, date and a thumbnail of the photo.

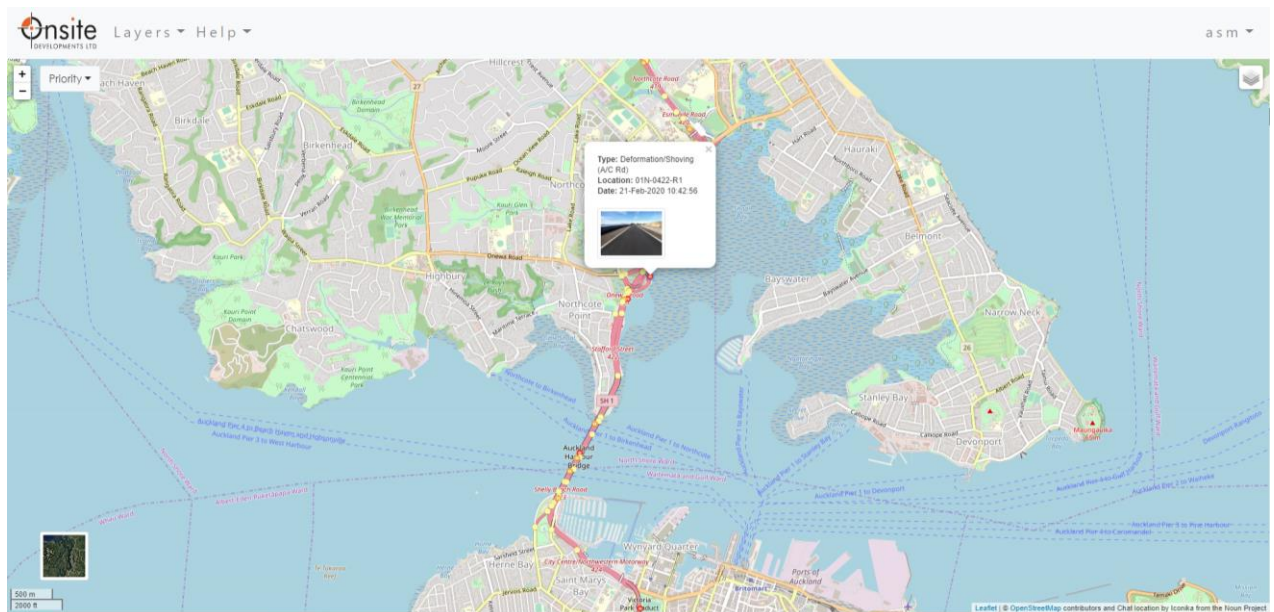


The user can then click the thumbnail, a photo viewer of the fault will appear with information on that fault. The user can move back and forward using the previous and next buttons.

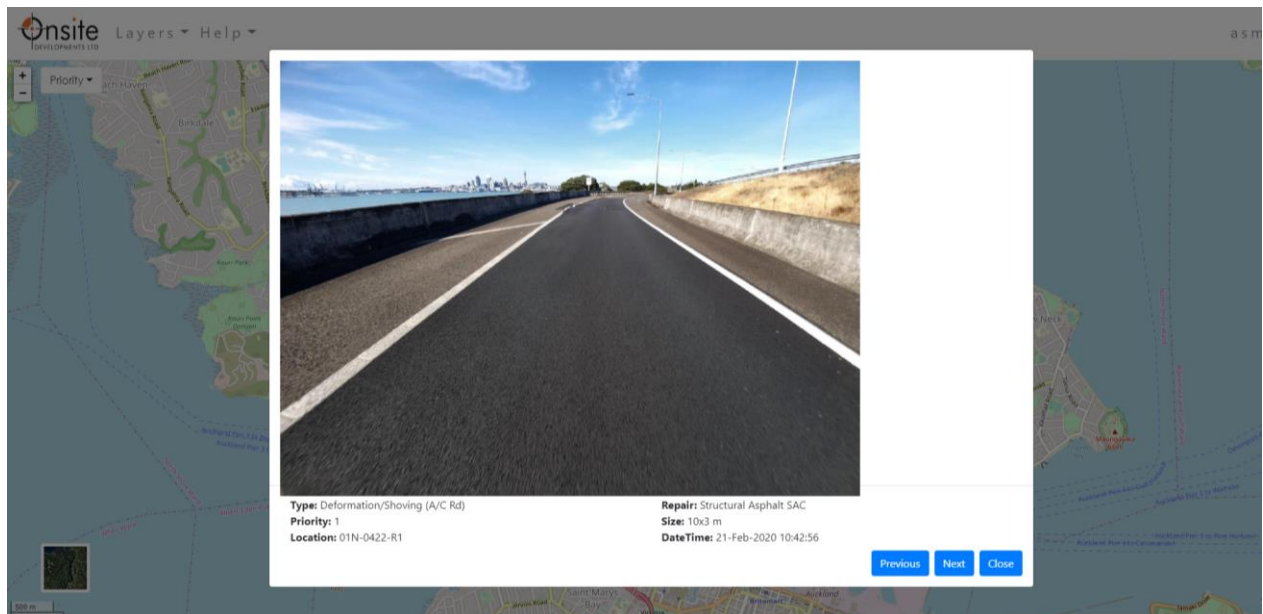


If the user wants to view specific fault types the data can be filtered by clicking

Layer -> Filter Layer

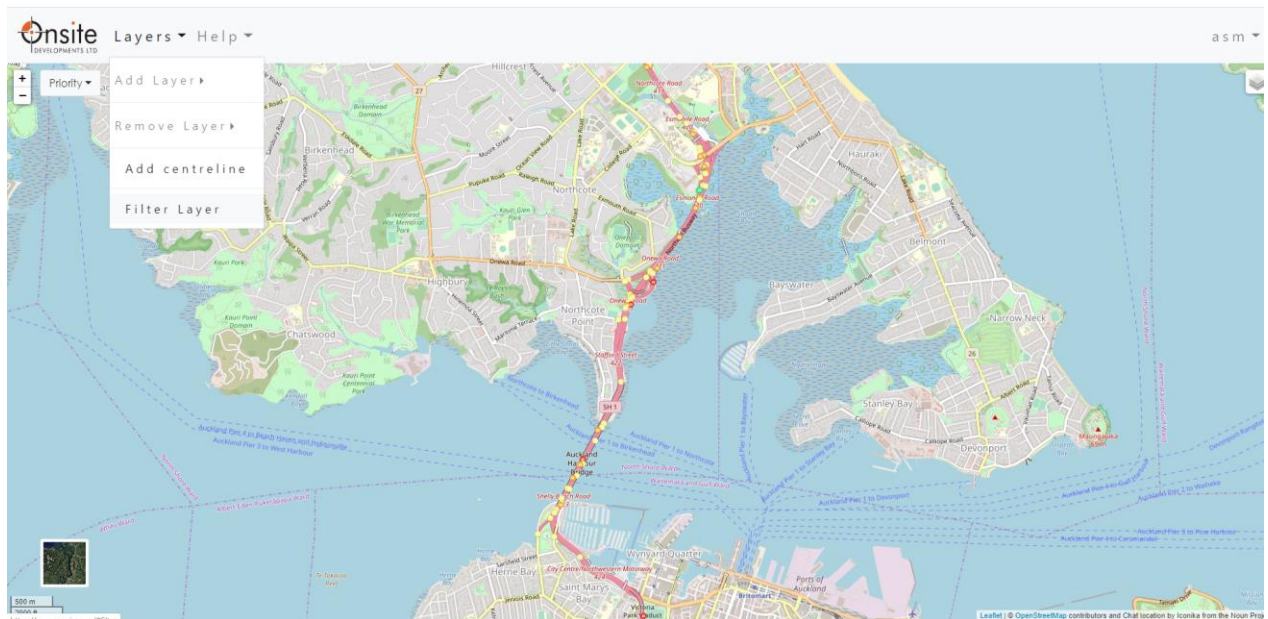

A form will appear where the user can select the desired fault(s) to view by selecting the checkboxes and clicking filter button.

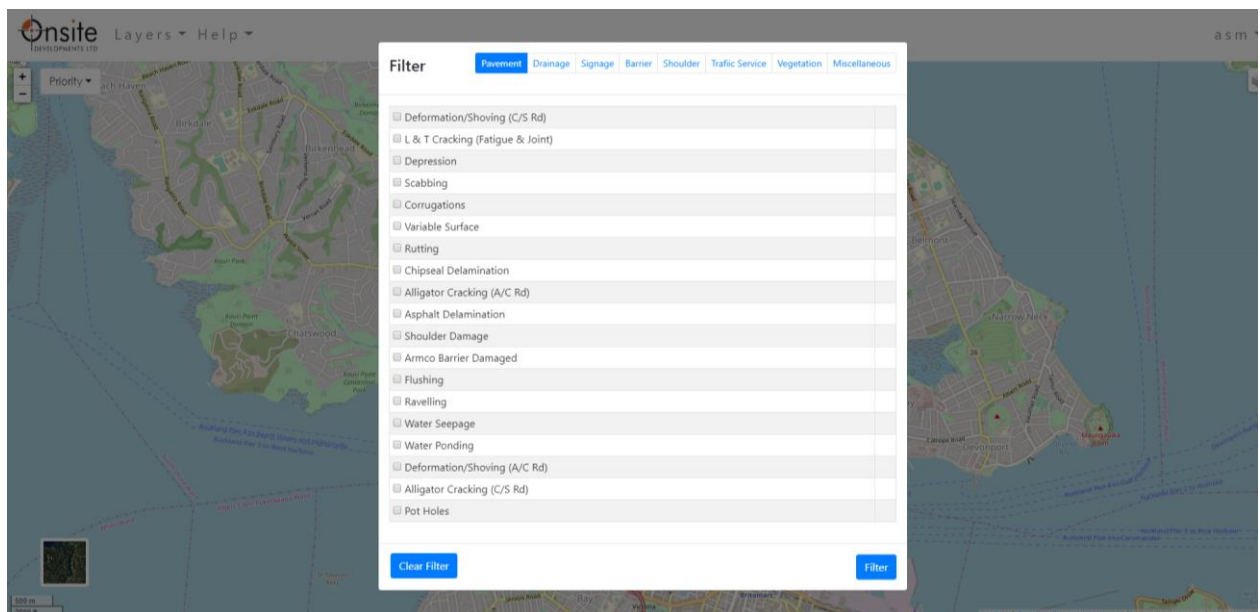

Any issues or help please contact Matt Wynyard at Onsite Developments.

E: matt@onsitedevel.co.nz

P: 021 297 8465.