

Table of Contents

rM Hacks Documentation.....	2
Installation.....	2
Settings / Configuration.....	2
Features Overview.....	3
Toolbar additions.....	4
Navigation.....	4
Writing.....	4
Settings.....	5
Features Deep Dive.....	5
Gestures.....	5
Strokes.....	6
Bookmarks.....	6
Pen Button Actions.....	6
Document-level Settings.....	6
rM Hacks Documentation Settings / Configuration.....	8
General Settings.....	9
Show current brush icon.....	9
Hide document close button.....	9
Set new notebook name as current date.....	9
More stroke sizes.....	10
Document-level toggle buttons.....	11
Page number and total pages count button.....	12
Table of contents button.....	13
Replace the sleep-mode black banner with '...zzZ'.....	13
Hide page numbers.....	13
Compressed files list.....	14
Alphabetize tags filter list.....	14
Gesture Configuration.....	15
Gesture to toggle toolbar.....	15
Gesture to swap last two tools.....	16
Gesture to swap last tool with eraser.....	17
Gesture to swap the last two pen strokes.....	18
Gesture to swap the last two colors.....	19
Gesture to open previous document.....	20
Gesture to put the device into light sleep mode.....	21
Gesture to force screen refresh.....	22
Bookmarks Configuration.....	22
Bookmarks.....	22
Bookmarks corner tap.....	23
First page bookmark.....	23
Last page bookmark.....	23
rM Hacks Documentation Features Overview.....	23
Toolbar additions.....	23
Navigation.....	25
Writing.....	28
Gestures.....	28
Sleep mode.....	34
Bookmarks.....	34
rM Hacks Documentation Gestures.....	36
Open / close toolbar.....	36
Swap the last two tools.....	37
Swap last tool with eraser.....	38
Swap the last two pen thicknesses (strokes).....	39

Swap the last two colors.....	40
Open previous document.....	41
Full screen refresh.....	42
Sleep mode.....	43
rM Hacks Documentation Strokes.....	44
Writing tools.....	44
Eraser.....	45
rM Hacks Documentation Bookmarks.....	46
Bookmarks Configuration.....	46
Bookmarks.....	46
Bookmarks corner tap.....	47
First page bookmark.....	48
Last page bookmark.....	48
rM Hacks Documentation Pen Button Actions.....	49

rM Hacks Documentation

1. [Installation](#)
2. [Settings / Configuration](#)
3. [Features Overview](#)
4. [Features Deep Dive](#)
 - [Gestures](#)
 - [Strokes](#)
 - [Bookmarks](#)
 - [Pen Button Actions](#)
 - [Document-level Settings](#)

Installation

For installation instructions, see [README](#).

Settings / Configuration

After installing rM Hacks, tap

- ☰ Menu
- ⚙ Settings
- ⚙⚙ rM Hacks

This displays the rM Hacks Configuration page.

See [Settings / Configuration](#) for more details.

Features Overview

Below is a brief listing of features.

See [Features Overview](#) for more details.

Toolbar additions

- Clock display
- Battery and WiFi indicators
- Current page / Page count display and button
- Bookmarks button to toggle bookmark and show navigation grid
- Table of Contents button
- Brush / Tool icon (when toolbar is closed)

Navigation

- Bookmarks navigation grid
- Compressed List option for document lists
- Tags are alphabetized on Menu ⇒ Tags display
- Swipe two fingers up from the bottom of the page to cycle between two recent documents.
- Tap the current page/page count numbers to open fast page scroll.

Writing

Gestures for writing

- Swipe one finger down in the body of the page to open/close toolbar.
- Swipe one finger down in the top left corner (right-handed)/right corner (left-handed) to switch between the last two tools.
- Swipe one finger up in the top left corner (right-handed)/right corner (left-handed) to switch between the writing tool and eraser.
- Swipe one finger down in the top right corner (right-handed)/left corner (left-handed) to swap the last two pen thicknesses (strokes).
- Swipe one finger up in the top right corner (right-handed)/left corner (left-handed) to swap the last two colors.
- Five-finger tap triggers screen refresh

Sleep mode

- Enable sleep mode by swiping up from the top of the screen (light or deep sleep selectable in Settings/Security).
- Display `...zzz` in the top right corner during light sleep mode instead of a big black banner.

Bookmarks for writing

- Tap in the top corner opposite the toolbar to toggle a bookmark for the current page.
- Long press in the top corner opposite the toolbar to create a named bookmark or to change the name of an existing one.
- New toolbar bookmarks button showing all bookmarks in the currently open document.
- Long press the bookmarks toolbar button to toggle a bookmark for the current page.
- Long press the bookmark grid item from the bookmarks menu to rename the bookmark.

Settings

Settings / Configurations menus under

- ☰ Menu
- ⚙ Settings
- ⚙ rM Hacks

Document-level toggle buttons (accessible through the *Share and Convert* menu):

- Enable/disable WiFi Connection
- Enable/disable All Gestures
- Enable/disable rM1 Buttons (rM1 only)
- Enable/disable Automatic Updates
- Show/hide clock display
- Show/hide Battery/WiFi Levels display
- Enable/disable Straight Lines

Miscellaneous

- New notebook name defaults to the current date and time (format: `yyyy-mm-dd_hhmmss`).
-

Features Deep Dive

Gestures

Gestures include

- Open / close toolbar

- ◆ Swap the last two tools
- ◆ Swap last tool with eraser
- ◆ Swap the last two pen thicknesses (strokes)
- ◆ Swap the last two colors
- ◆ Open previous document
- ◆ Full screen refresh
- ◆ Sleep mode

See [Gestures](#) for more details.

Strokes

rM Hacks adds additional stroke sizes (line thicknesses).

- ◆ five additional sizes for writing tools
- ◆ three additional sizes for the eraser

See [Strokes](#) for more details.

Bookmarks

With Bookmarks enabled, any page can be bookmarked and each bookmark can have short text to describe it.

On any page, tapping the bookmarks toolbar icon will show the bookmarks navigation grid where you can jump to any bookmark.

See [Bookmarks](#) for more details.

Pen Button Actions

See [Pen Button Actions](#) for more details.

Document-level Settings

This feature allows you to toggle some settings without leaving a document.

- ◆ WiFi Connection
- ◆ All Gestures
- ◆ rM1 Buttons (rM1 only)
- ◆ Automatic Updates
- ◆ Clock
- ◆ Battery/WiFi Levels

- ◆ Straight Lines

 
See [Document-level Settings](#) for more details.

[rM Hacks Documentation](#) Settings / Configuration

After installing rM Hacks (see [README](#)), tap

- ◆ ☰ Menu
- ◆ ⚙ Settings
- ◆ ⚙⚙ rM Hacks

to open the rM Hacks Configuration page.

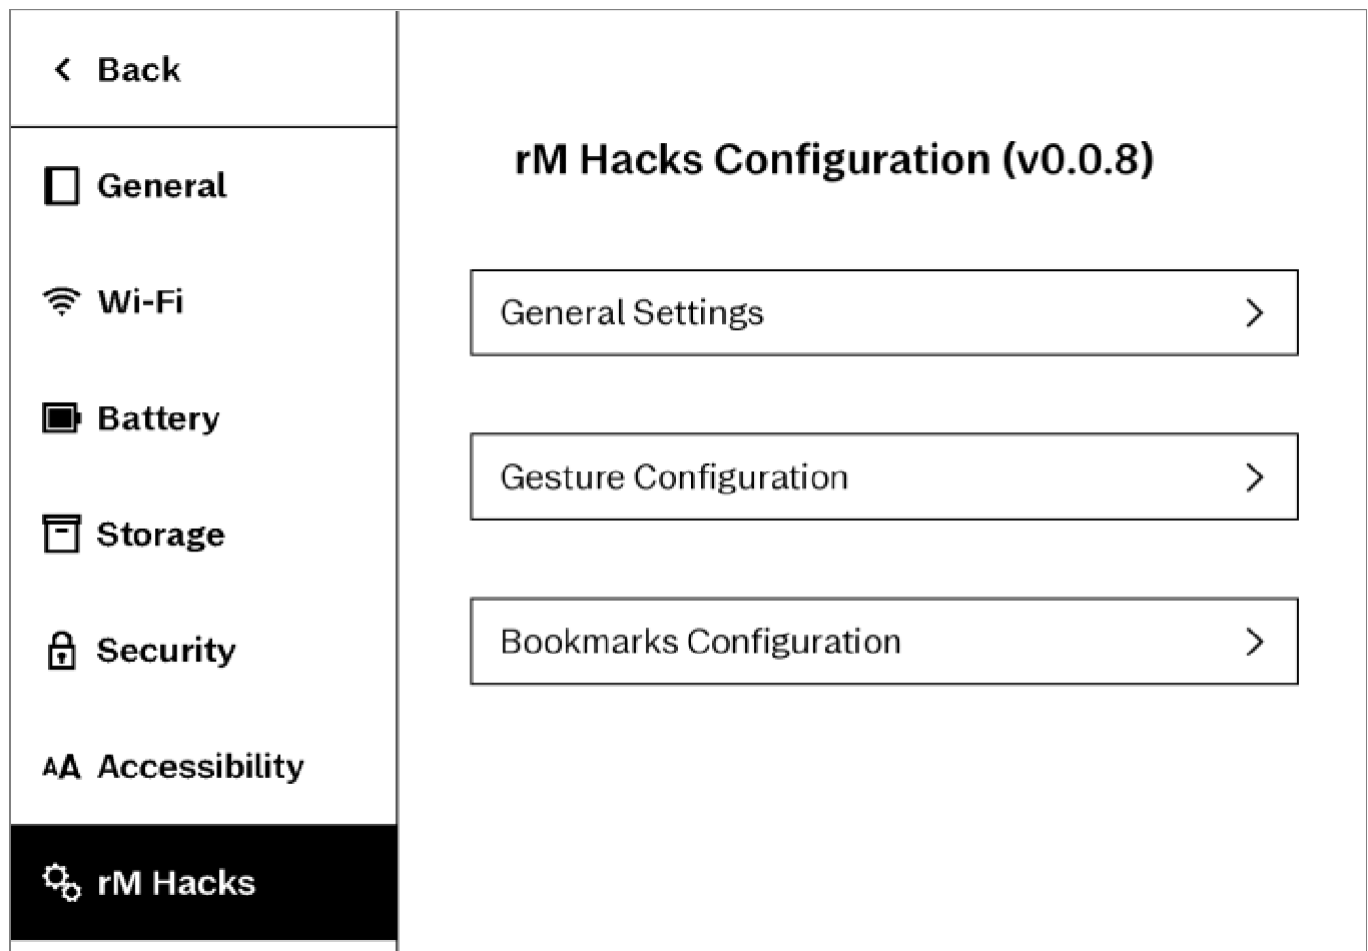


This page has entry points for

- ◆ [General Settings](#)
- ◆ [Gesture Configuration](#)
- ◆ [Bookmarks Configuration](#)


General Settings

Show current brush icon

 When this setting is off and the toolbar is hidden, it will display the usual icon.



 
When this setting is on and the toolbar is hidden, a different icon displays.



In the upper left is an indicator of the stroke thickness (where applicable), the upper right shows the color (where applicable), and the bottom center shows the tool selected.

Hide document close button

 
When this setting is off and the toolbar is not hidden, the close button will appear like normal.

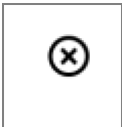

When this setting is on, the close button will not appear, but it is still possible to close the document by swiping one finger down from the top.

Set new notebook name as current date

 When this setting is off, new notebooks are assigned default names like "Notebook", "Notebook 1", etc.

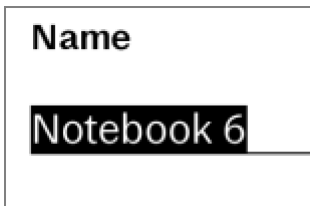


When this setting is on, new notebooks are named with the current date in the format `yyyy-mm-dd_hhmmss`.


Name
2024-01-12_210849

More stroke sizes

 When this setting is off, the default writing tool stroke sizes are available (Thin, Medium, Thick).

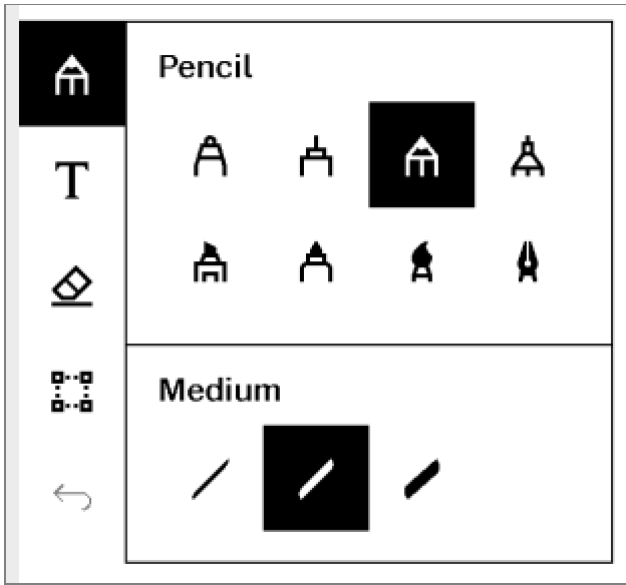


 When this setting is on, more stroke sizes are available (Thinner (0.5), Thin (1), Medium Thin (1.5), Medium (2), Thick (3), Thicker (5), Even Thicker (8), Thickest (13)).

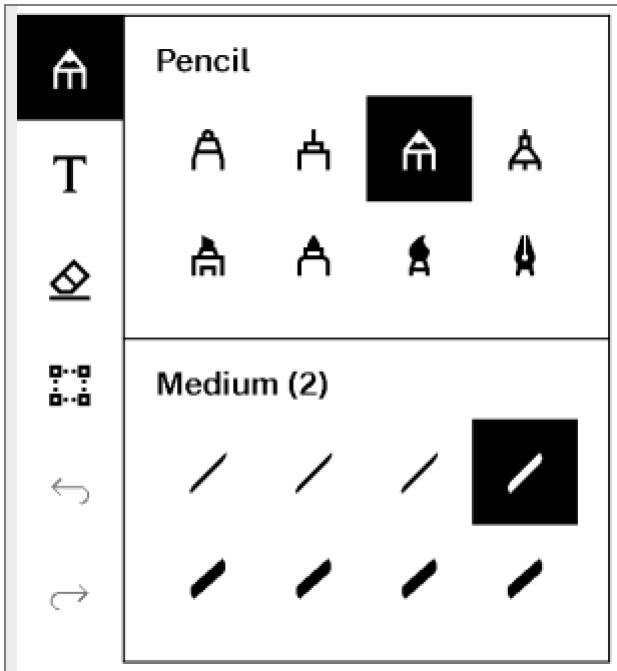


Document-level toggle buttons

 When this setting is off, the default document share options are available.

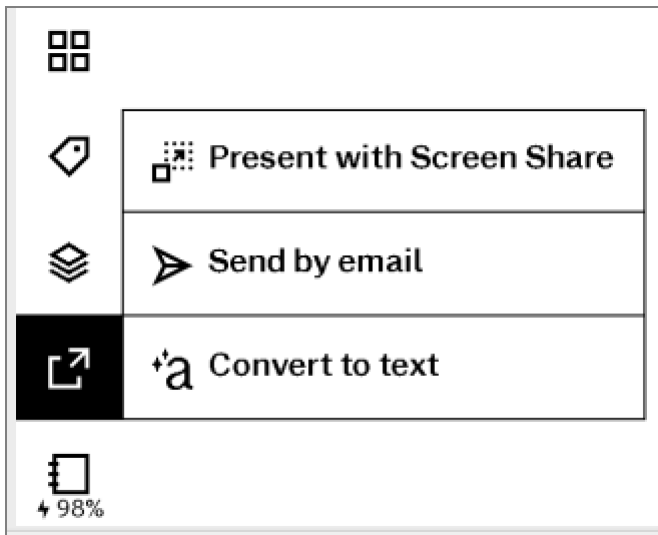

 When this setting is on, more options are available in this menu, allowing you to change some settings without exiting the document.

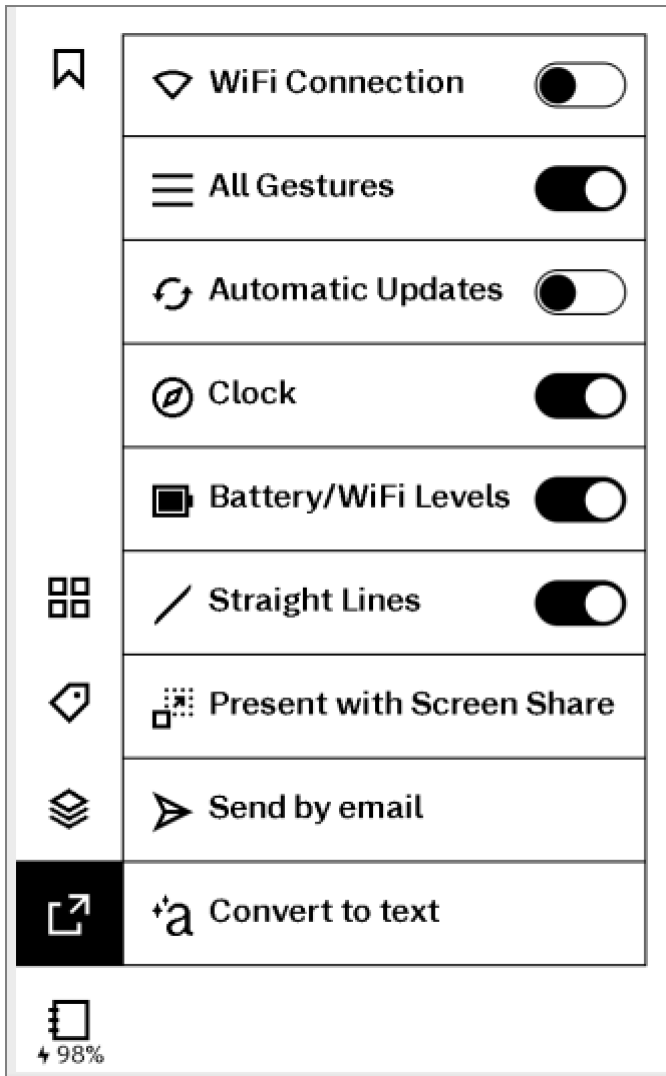


Page number and total pages count button

When this setting is on, the current page number and total page count is shown in the toolbar. In addition, tapping these numbers will open the fast page scroll feature (which normally is available by swiping one finger up from the bottom of the page).




Table of contents button

 When this setting is on, if a document has a table of contents, a table-of-contents toolbar button displays.

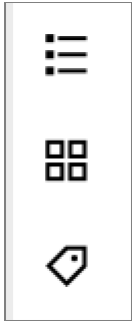

Replace the sleep-mode black banner with '...zzZ'

 When this setting is off, the default black sleep-mode banner displays during light sleep.



When this setting is on, light sleep will display a smaller '...zzZ' symbol.



 
Hide page numbers

When this setting is off, the tablet will display page numbers at the bottom as you swipe from page to page. When this setting is on, those numbers will not display.



Compressed files list

When this setting is on, an additional Compressed List menu option is available to display a more compressed files list.

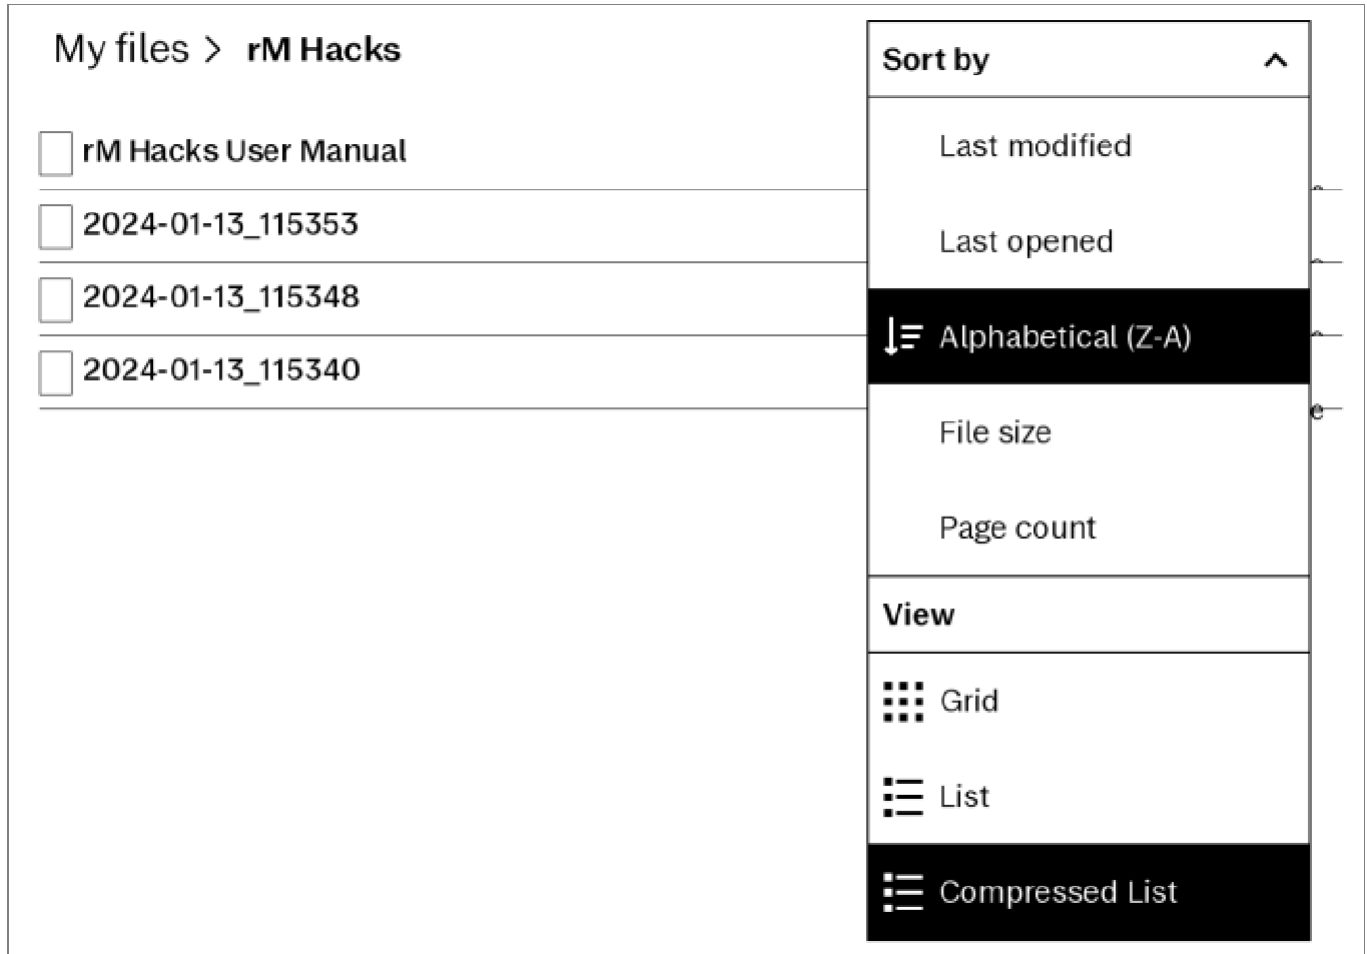


Alphabetize tags filter list

When this setting is off, the default tag order (newest first?) displays in the Menu ⇒ Tags filter list.



 
When this setting is on, the tags display in alphabetical order.

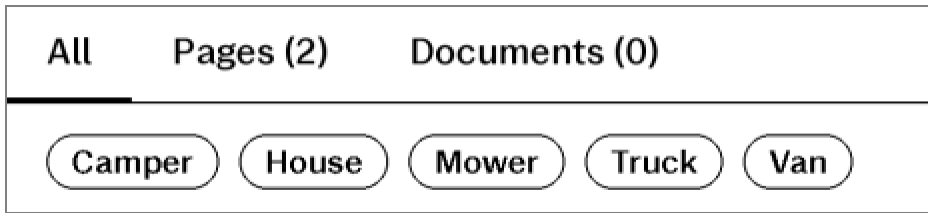

Gesture Configuration

Gesture to toggle toolbar

 Swipe one finger down to open or close the toolbar.

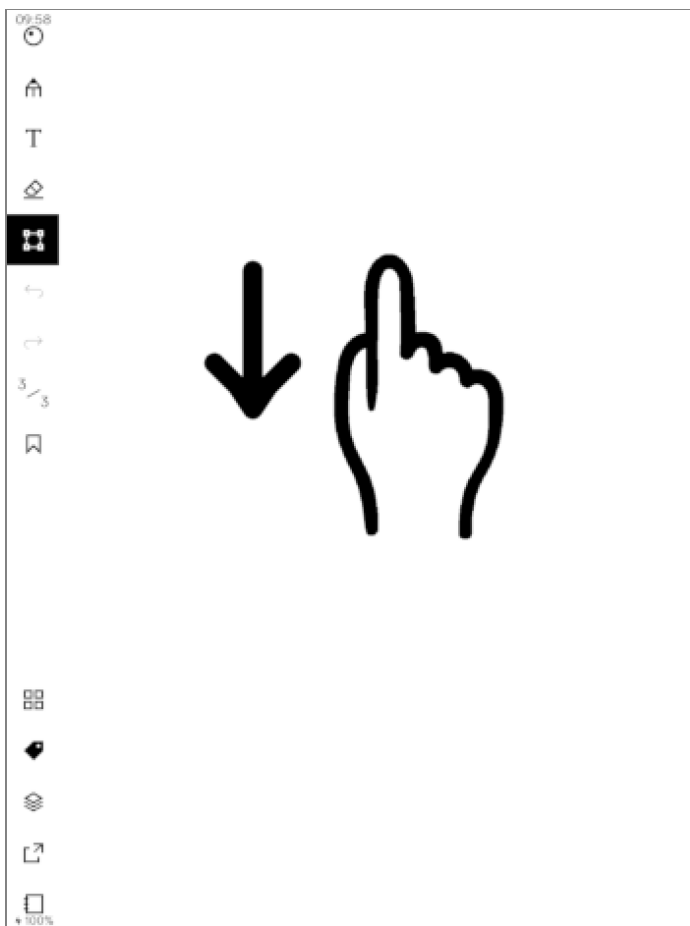


Gesture to swap last two tools

Swipe one finger down in the corner closest to the toolbar to switch between the last two tools.



Gesture to swap last tool with eraser

 Swipe one finger up in the corner closest to the toolbar to switch to the eraser and back.

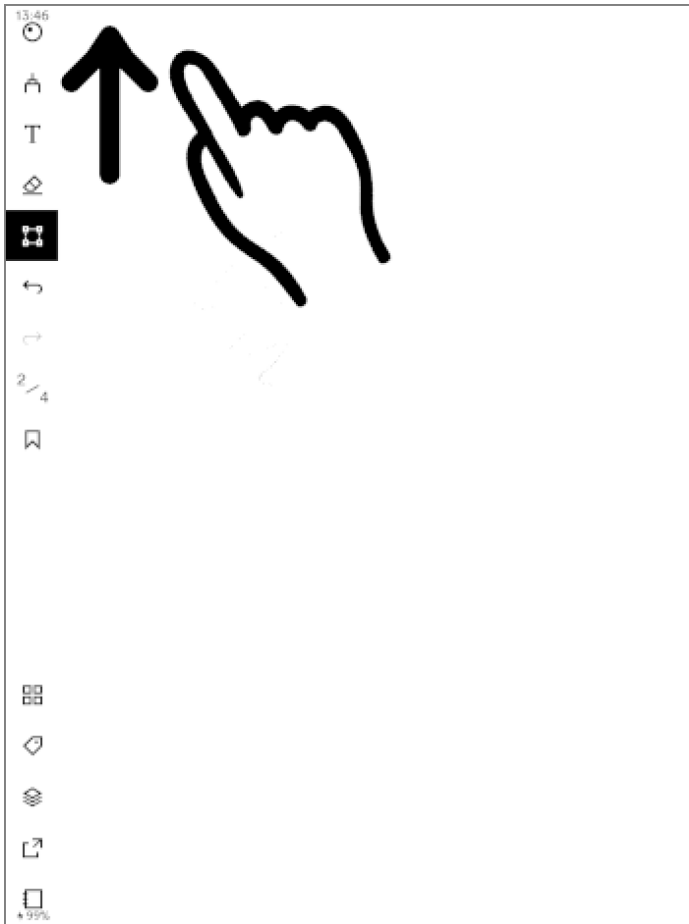

Gesture to swap the last two pen strokes

Swipe one finger down in the corner opposite the toolbar to switch between the last two pen strokes.



 
Gesture to swap the last two colors

Swipe one finger up in the corner opposite the toolbar to switch between the last two colors.



Gesture to open previous document


Swipe two fingers up from the bottom of the page to open previously edited document.

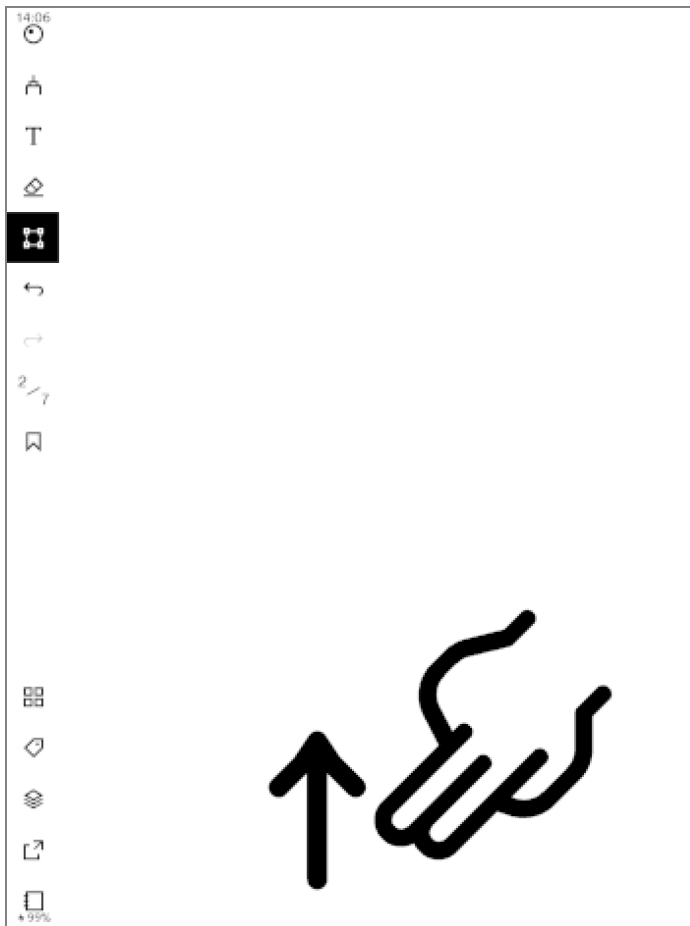

Gesture to put the device into light sleep mode


Swipe on finger up from the top of the page to enable light sleep mode.

 Turn on light sleep mode from the Menu ⇒ Settings ⇒ Security page. If light sleep is not turned on, this gesture will put the device into normal sleep mode.

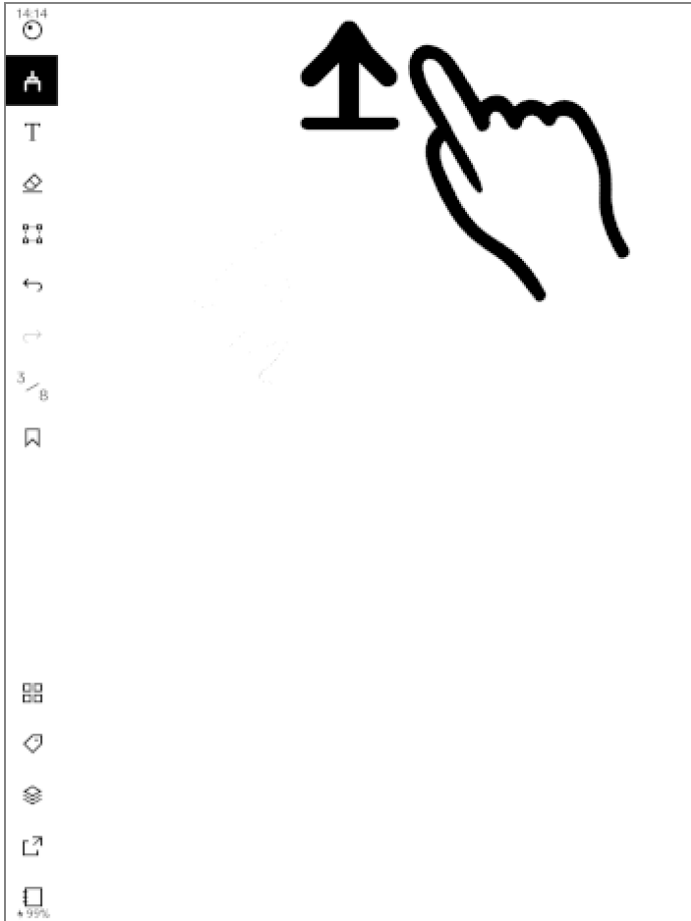

Gesture to force screen refresh

 
Tap with all five fingers to trigger a whole screen refresh.

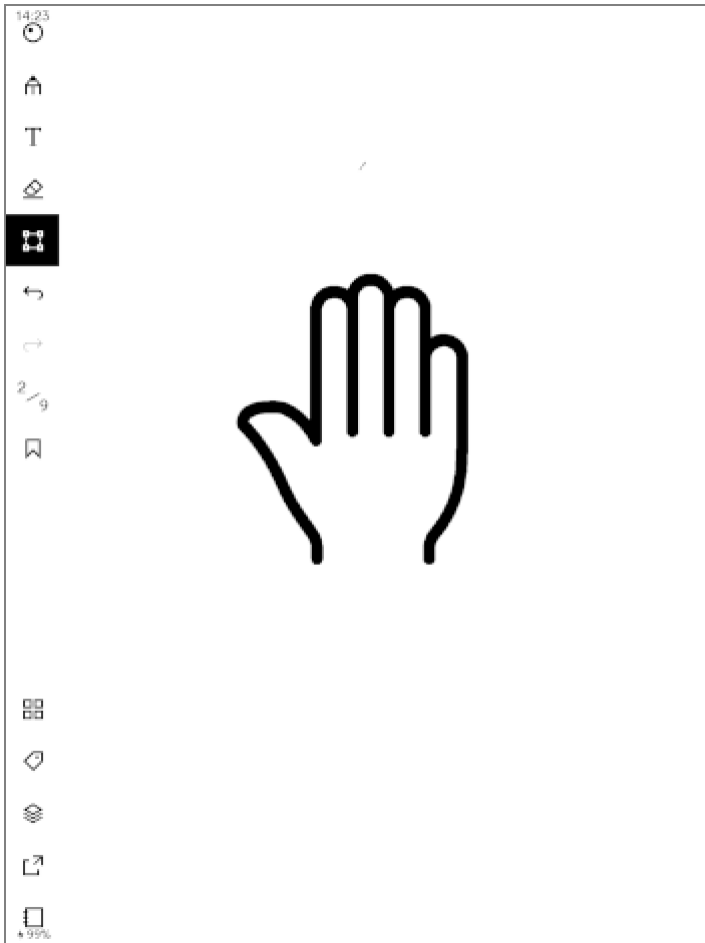

Bookmarks Configuration


Bookmarks

 This setting enables bookmarks feature for documents.

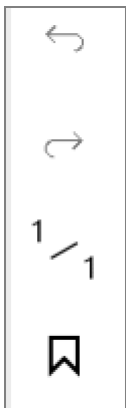


Bookmarks corner tap

 Bookmark the current page by tapping in the corner opposite the toolbar, just inside the document close button (⊗), if displayed.




First page bookmark

 This setting adds 'First Page' to the bookmarks grid.

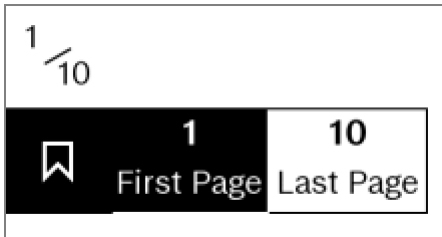

Last page bookmark

 This setting adds 'Last Page' to the bookmarks grid.

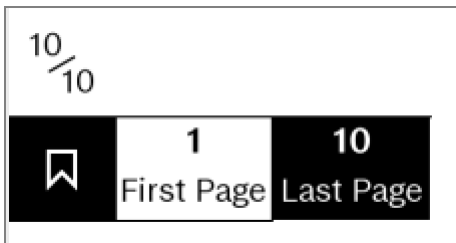


[rM Hacks Documentation](#) Features Overview

Toolbar additions


Clock (HH:MM) displays at the top of the toolbar



 Battery level and WiFi signal strength indicators display at the bottom of the toolbar.



 Current page and page count (*n/n*) display near the middle of the toolbar. Tapping these numbers opens fast page scroll.

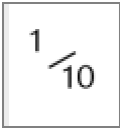


Bookmarks button to toggle bookmark and show navigation grid displays near the middle of the toolbar.



Short tap on this button opens/closes the bookmarks navigation grid.



 
Long press toggles a bookmark for the current page.

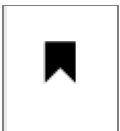

When a document has a table of contents, a button for it appears in the toolbar above the page overview button.




 When the toolbar is closed a brush/tool icon displays instead of the default open/close icon.

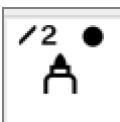


Navigation

 
Short tap on the bookmarks button opens/closes the bookmarks navigation grid.

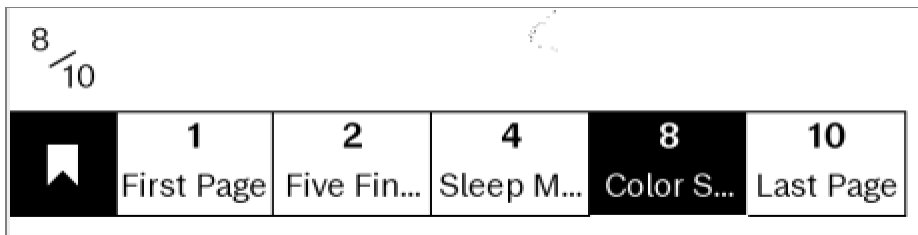

 
Compressed List option for document lists

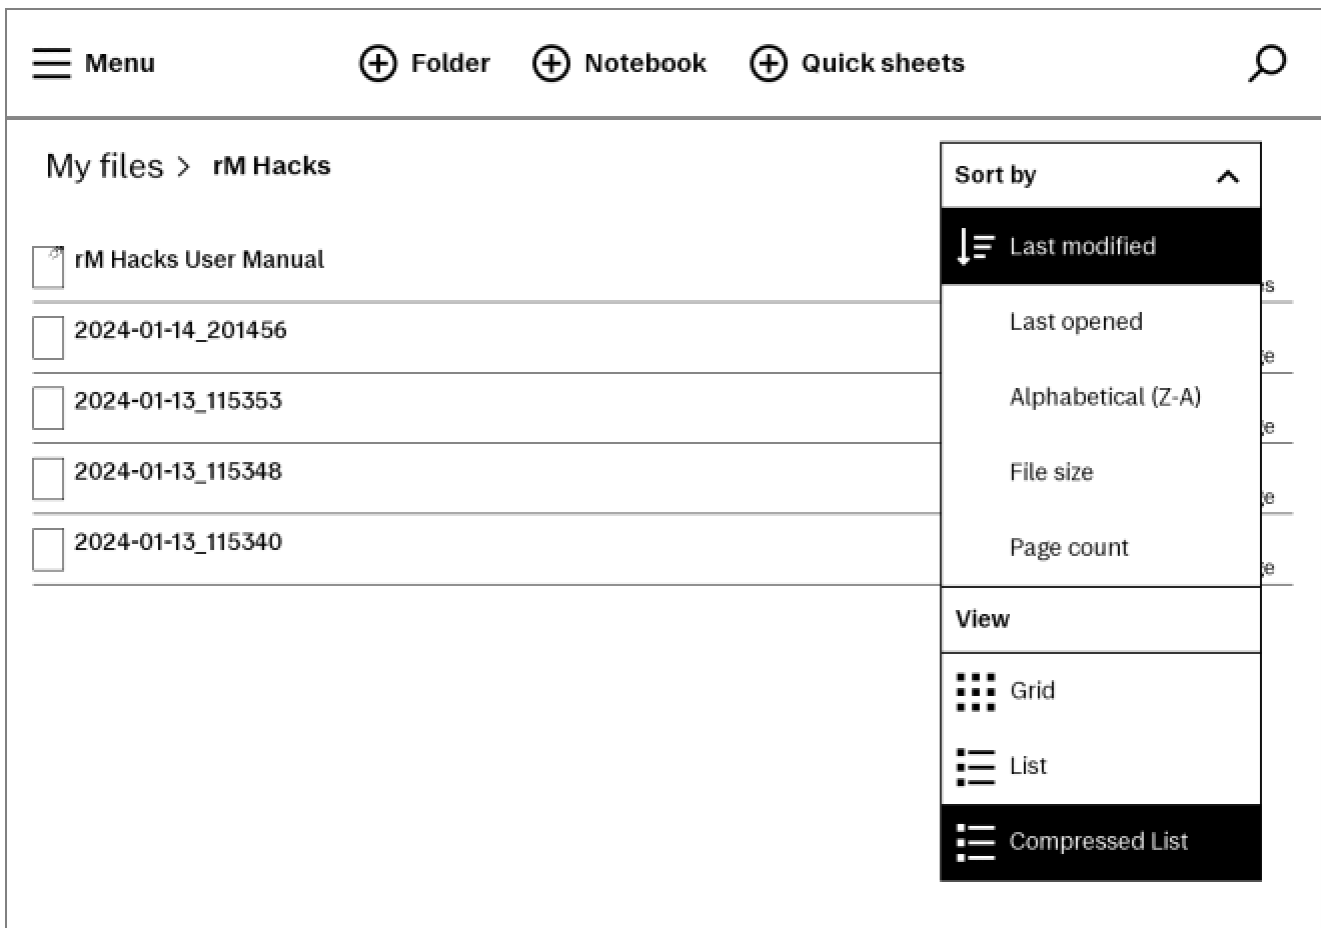

 
Tags are alphabetized on Menu ⇒ Tags display

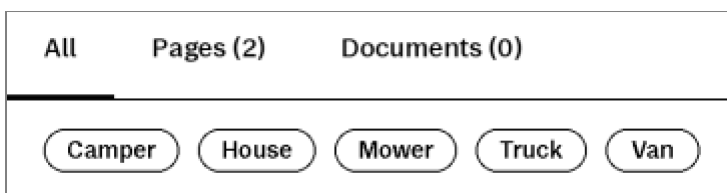

 Swipe two fingers up from the bottom of the page to cycle between two recent documents.

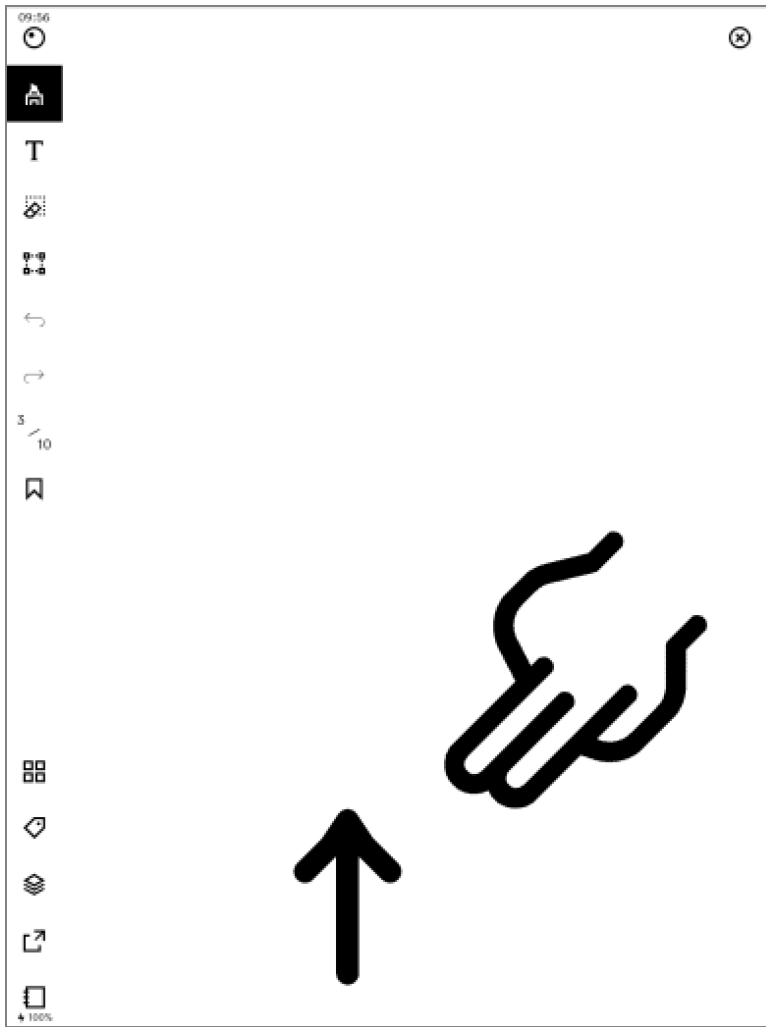

 
Tap the current page/page count numbers to open fast page scroll.

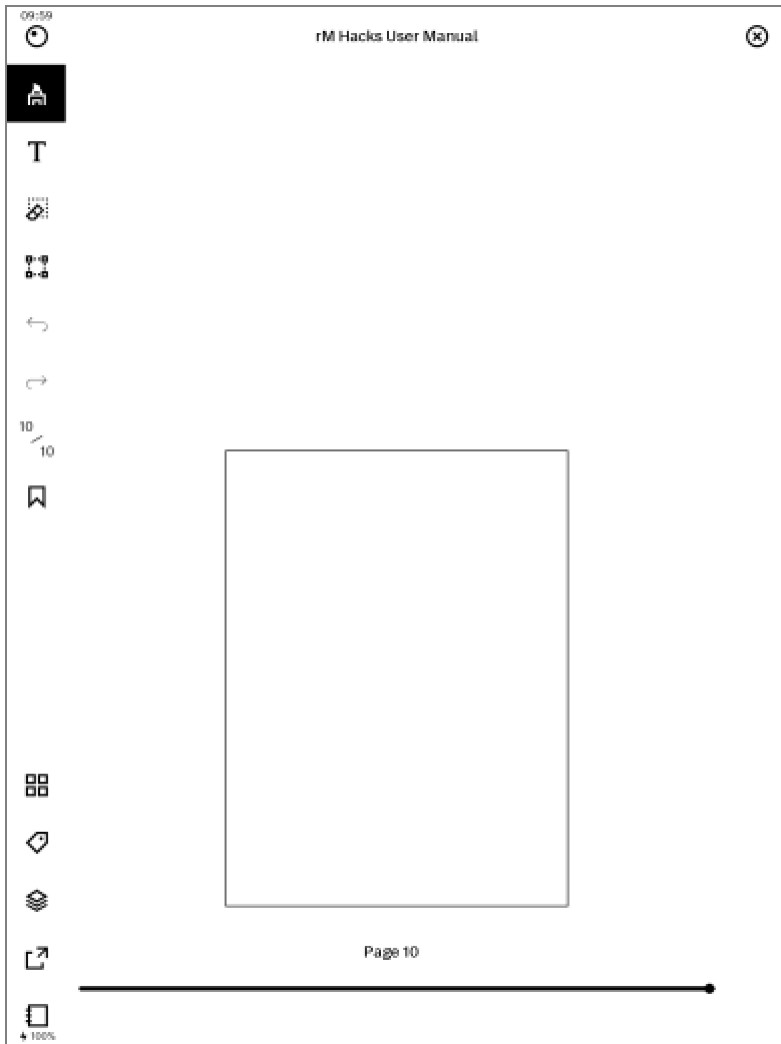


Writing

Gestures

 
Swipe one finger down in the body of the page to open/close toolbar.

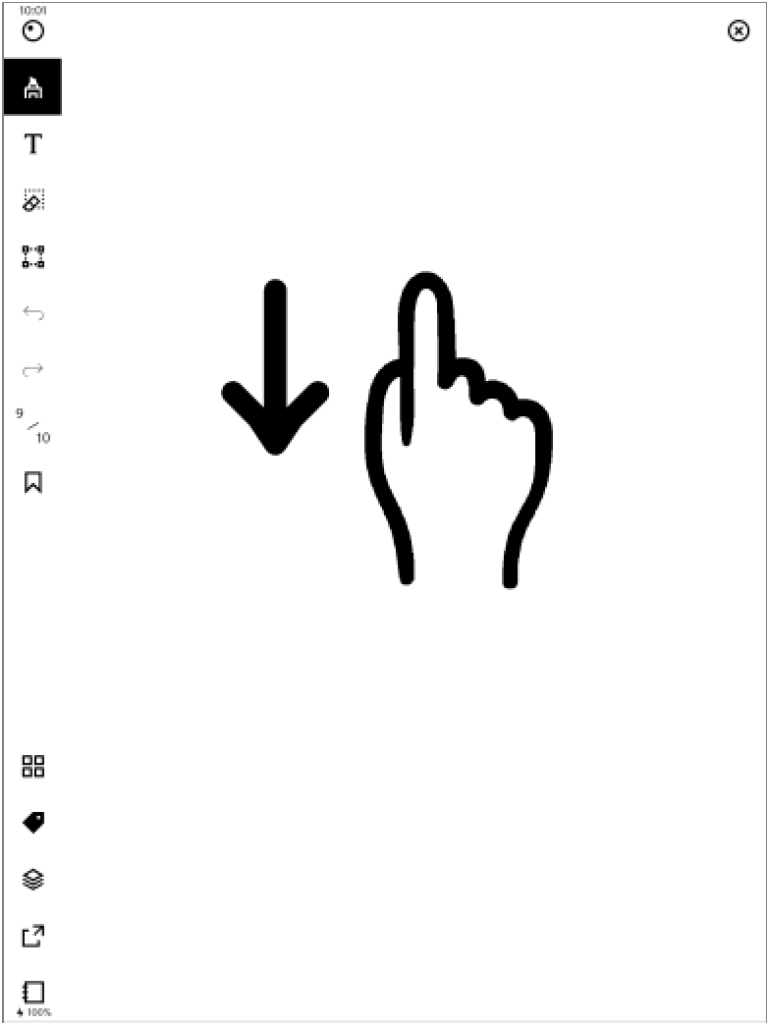

 
Swipe one finger down in the top left corner (right-handed)/right corner (left-handed) to switch between the last two tools.

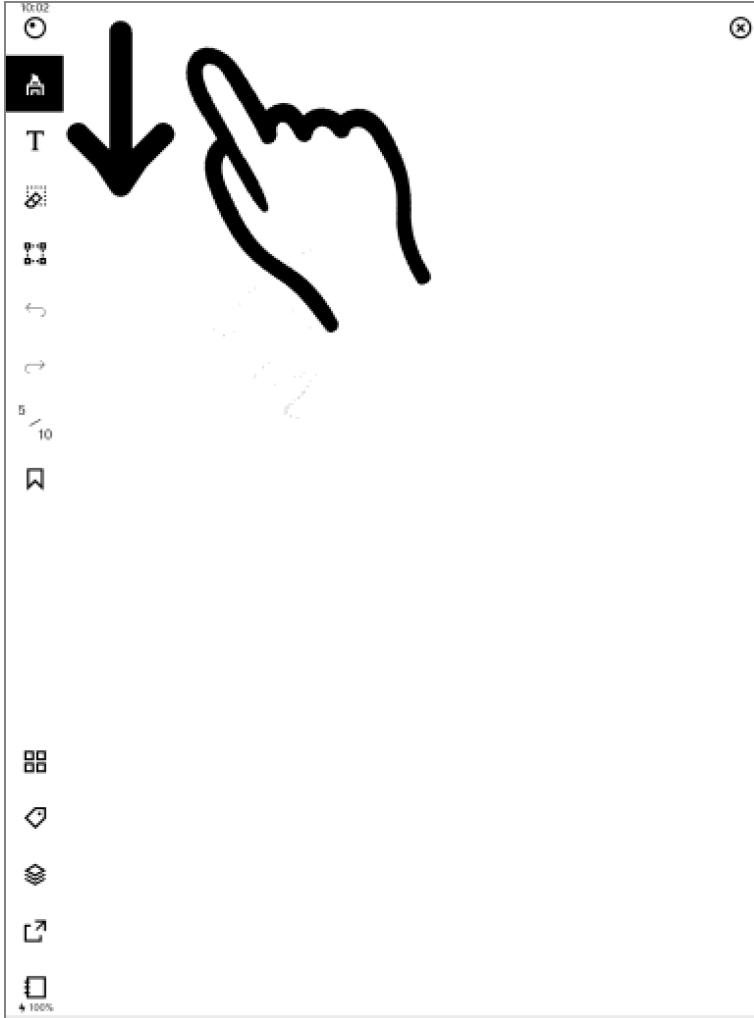

 
Swipe one finger up in the top left corner (right-handed)/right corner (left-handed) to switch between the writing tool and eraser.

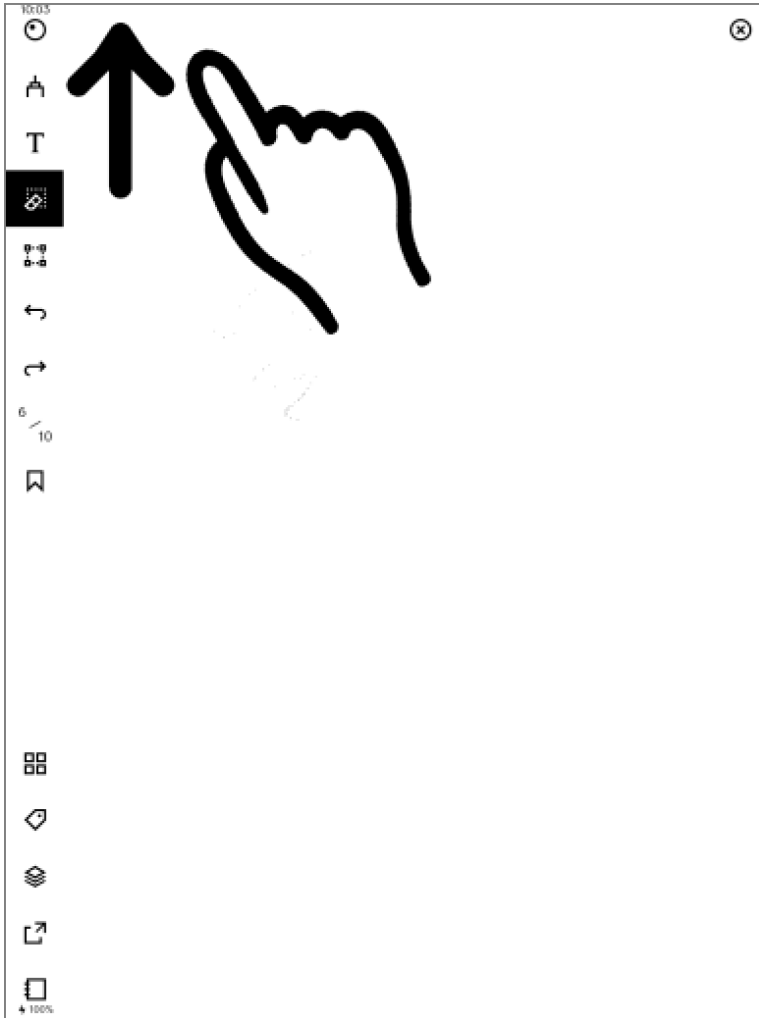

 
Swipe one finger down in the top right corner (right-handed)/left corner (left-handed) to swap the last two pen thicknesses (strokes).

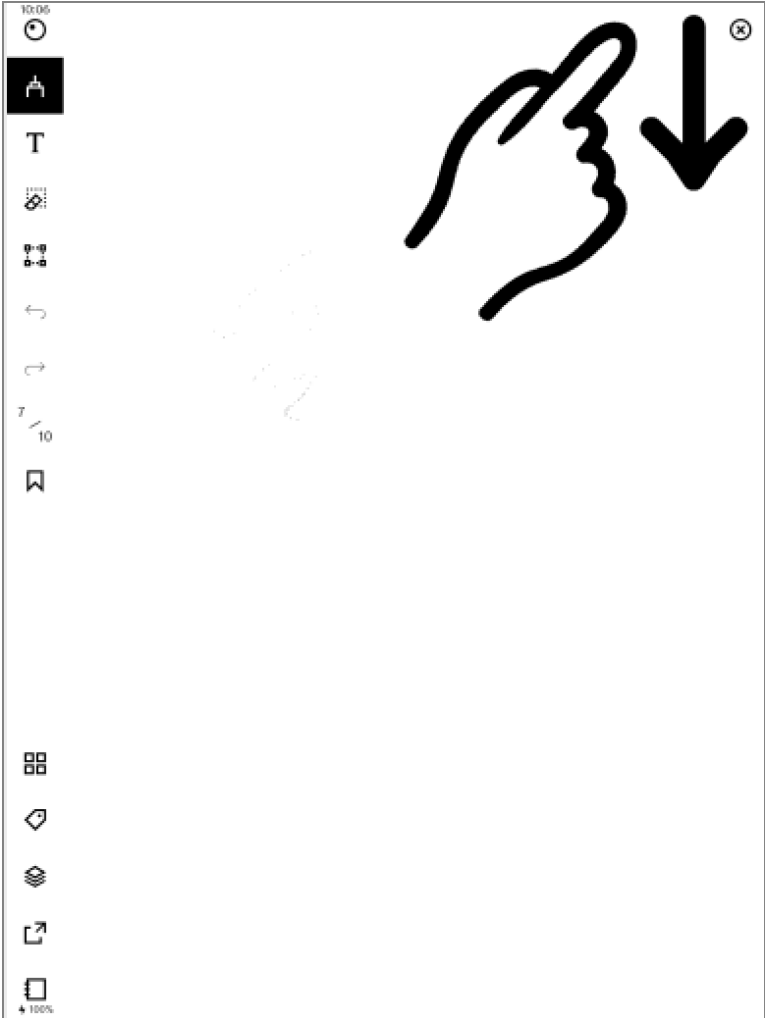

 Swipe one finger up in the top right corner (right-handed)/left corner (left-handed) to swap the last two colors.

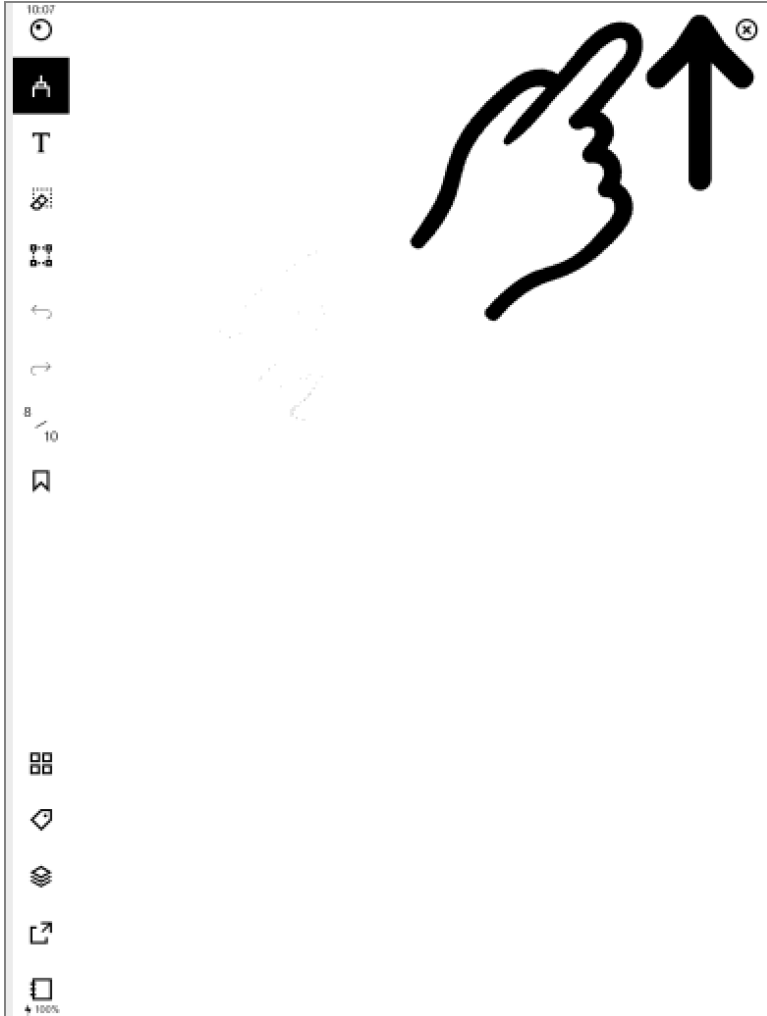


Five-finger tap triggers screen refresh

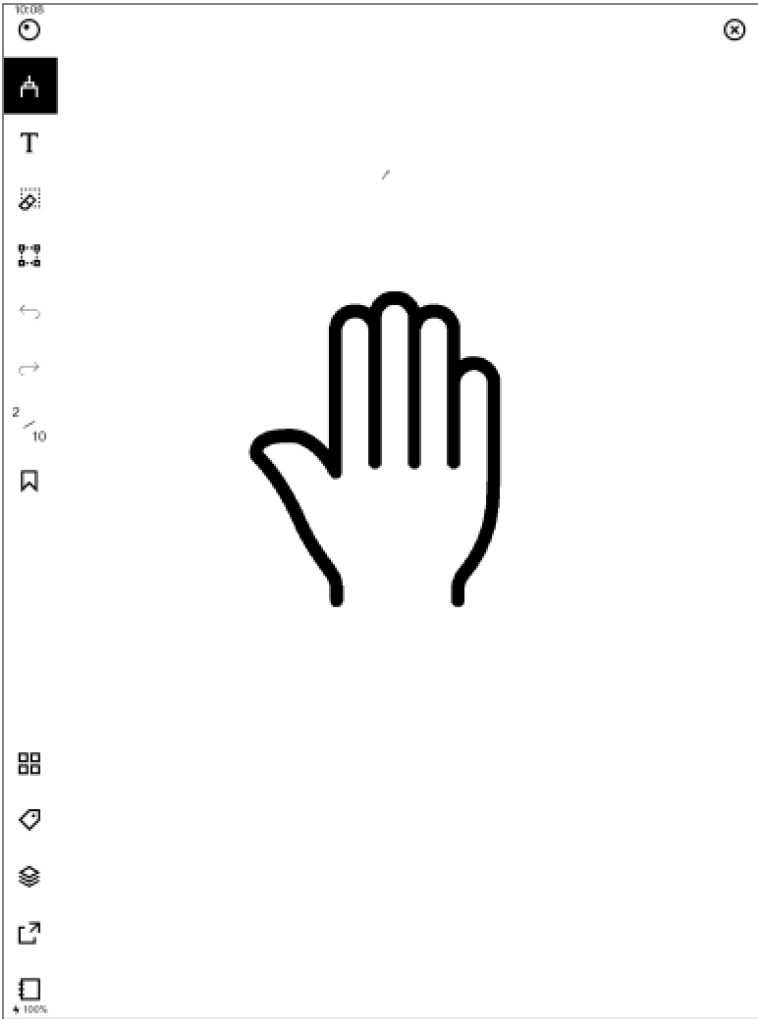 

Sleep mode

 Enable sleep mode by swiping up from the top of the screen (light or deep sleep selectable in Settings/Security).

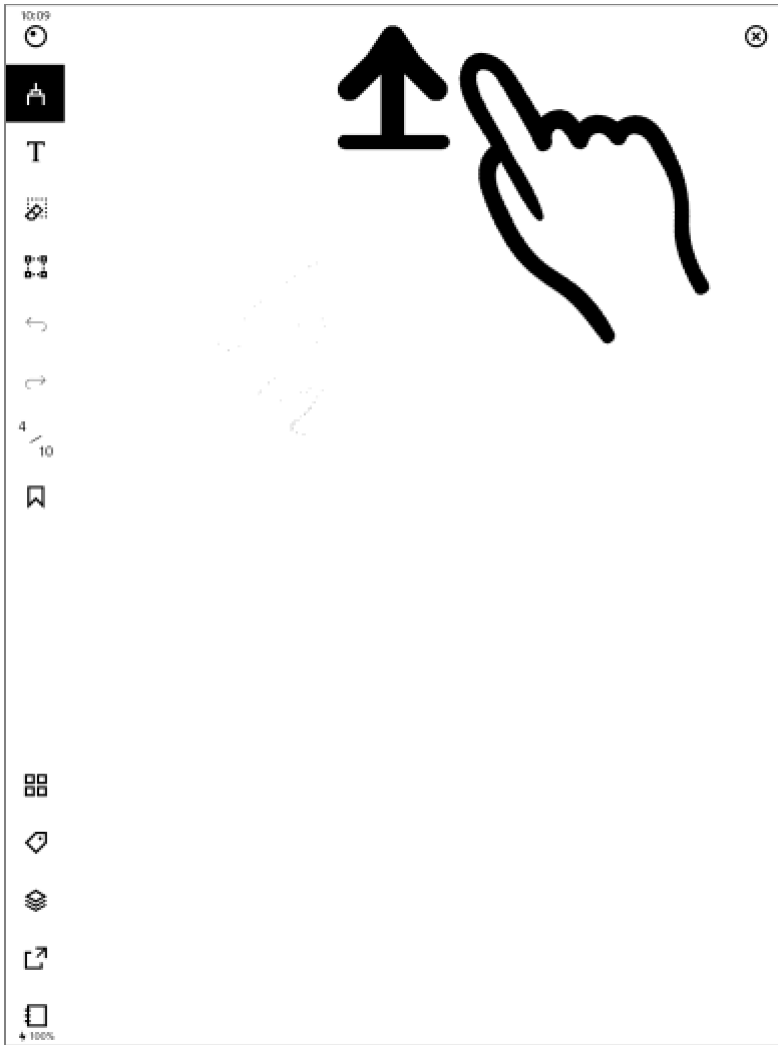


Display `...zzZ` in the top right corner during light sleep mode instead of a big black banner.



Bookmarks

 
Tap in the top corner opposite the toolbar to toggle a bookmark for the current page.

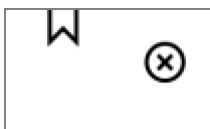


Long press in the top corner opposite the toolbar to create a named bookmark or to change the name of an existing one.



 
New toolbar bookmarks button showing all bookmarks in the currently open document.

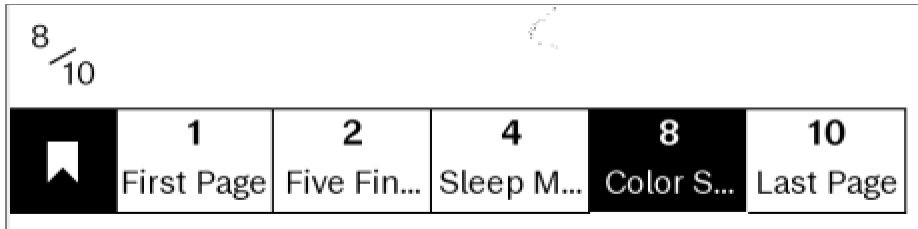

 Long press the bookmarks toolbar button to toggle a bookmark for the current page.

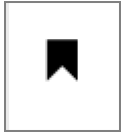

 Long press the bookmark grid item from the bookmarks menu to rename the bookmark.

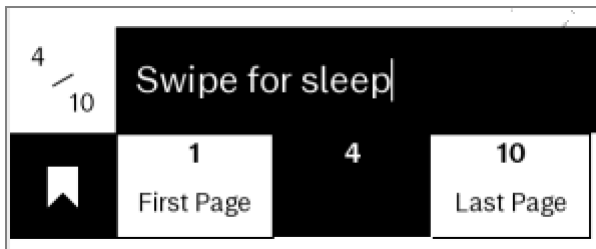


[rM Hacks Documentation](#) Gestures

Open / close toolbar

Swipe one finger down in the body of the page to open or close the toolbar.

 
When the toolbar is closed the brush / tool icon will appear in the place of the default toolbar toggle icon.

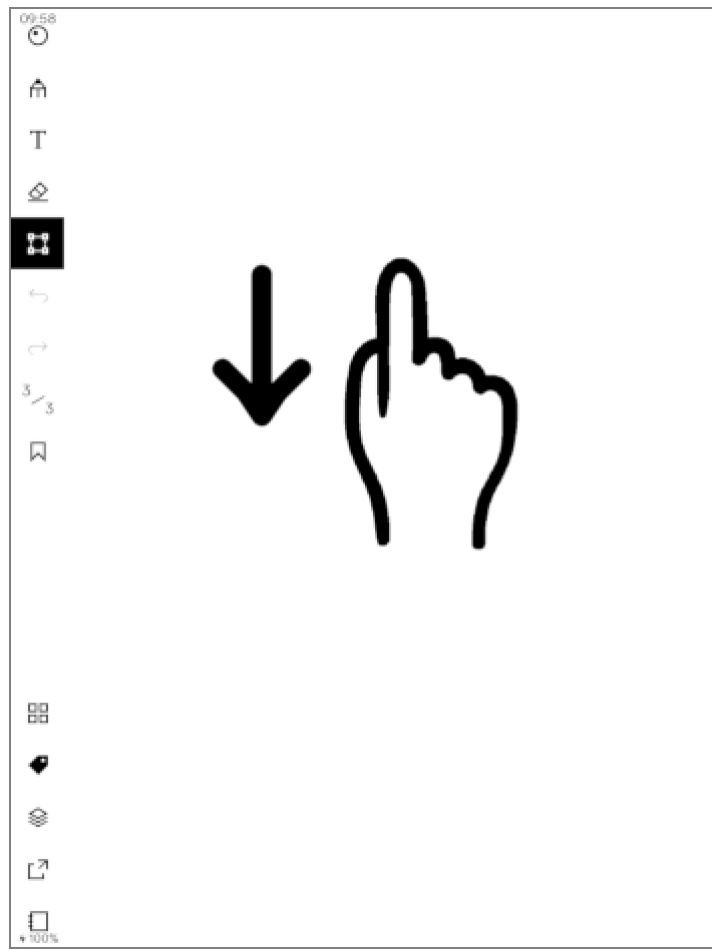

Swap the last two tools


Swipe one finger down in the corner closest to the toolbar to switch between the last two tools.

 For example, you could switch between two writing tools, like the Pencil and the Highlighter. Or between a writing tool and the selection tool.

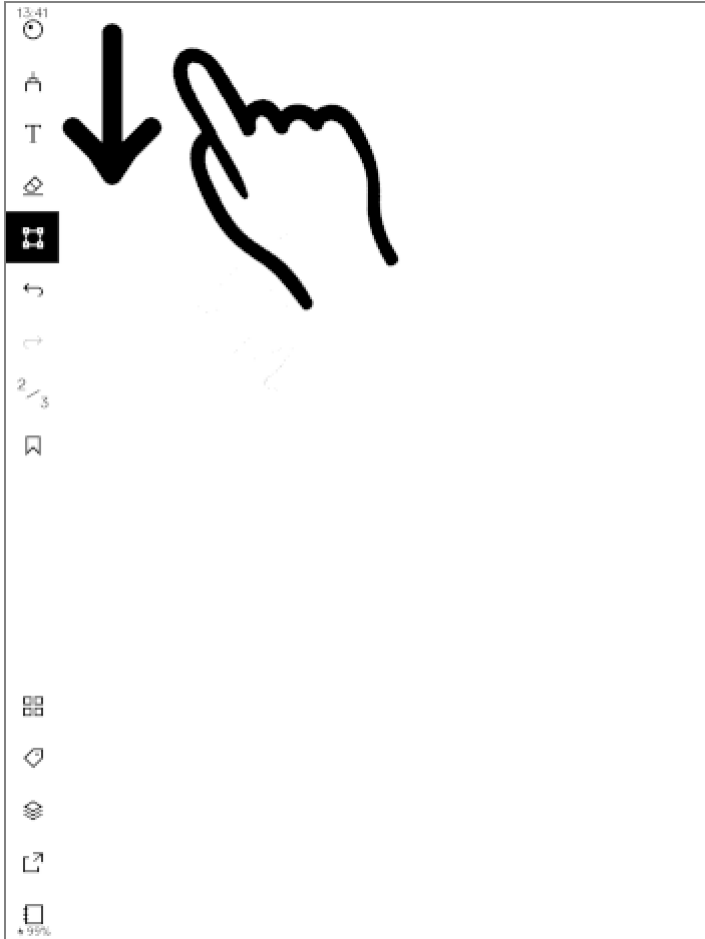

Swap last tool with eraser

 Swipe one finger up in the corner closest to the toolbar to switch between the writing tool and eraser.

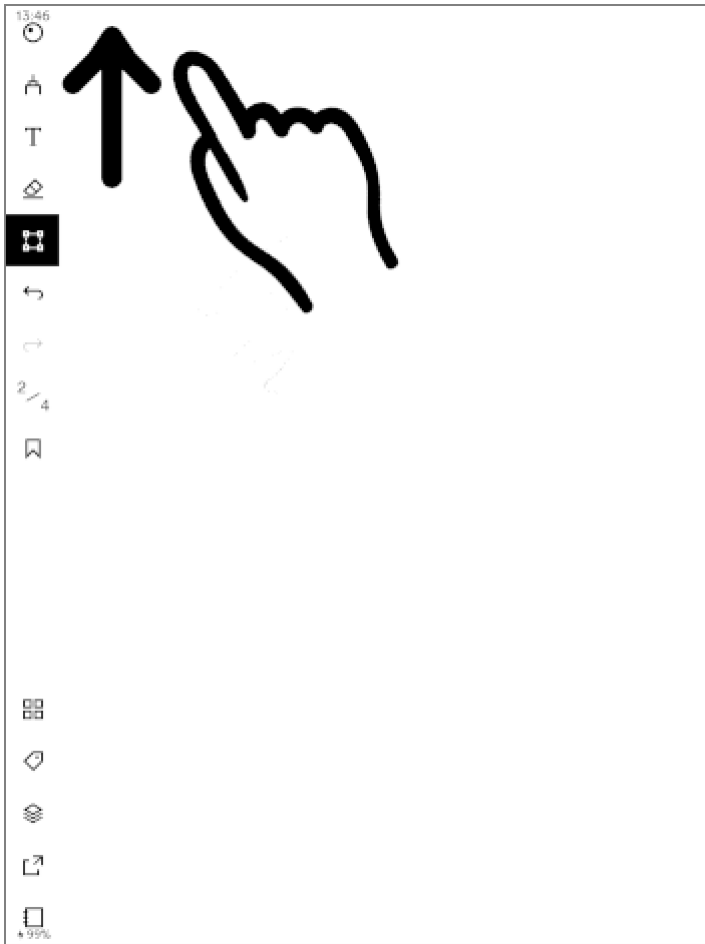

Swap the last two pen thicknesses (strokes)

Swipe one finger down in the top corner opposite the toolbar to swap the last two thicknesses (strokes).

For example, you might switch between Thin (1) and Thick (3).



Swap the last two colors

 
Swipe one finger up in the top corner opposite the toolbar to swap the last two colors.

For example, you might switch between Black and Gray, or between Yellow and Pink.




Open previous document

Swipe two fingers up from the bottom of the page to open previously edited document.

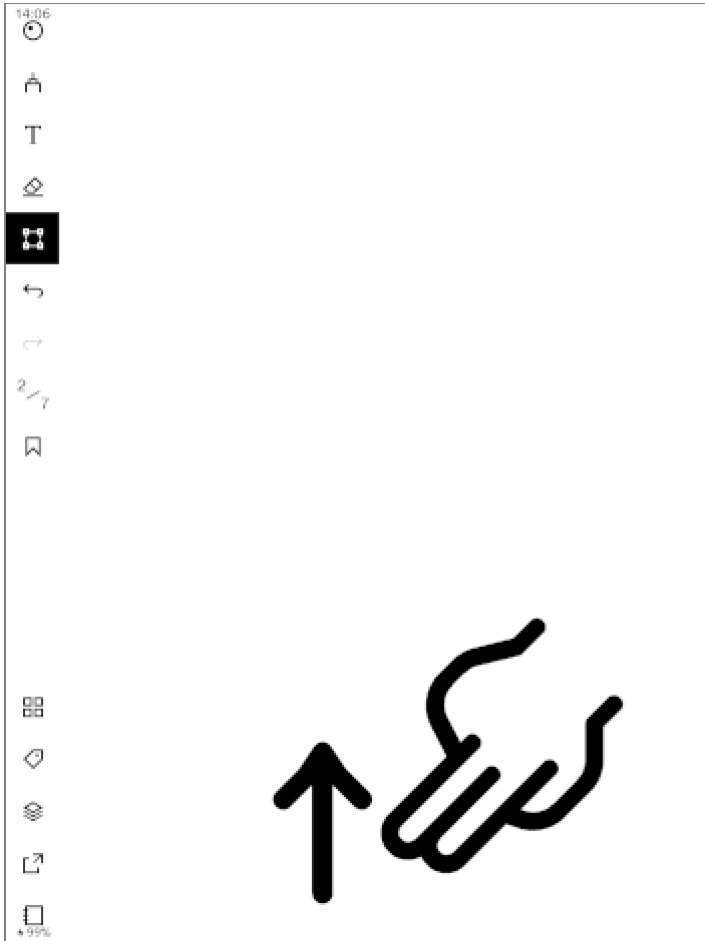

Full screen refresh

 
Tap all five fingers to trigger a full screen refresh.

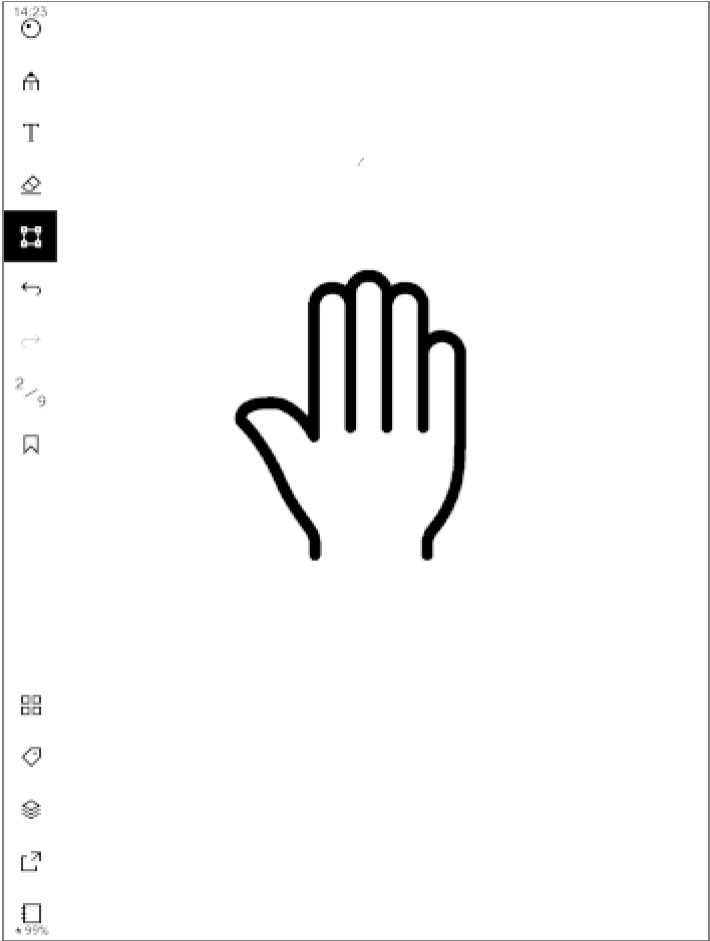

Sleep mode

Swipe one finger up from near the top of the page to trigger sleep mode.

 Turn on light sleep mode from the Menu ⇒ Settings ⇒ Security page. If light sleep is not turned on, this gesture will put the device into normal sleep mode.

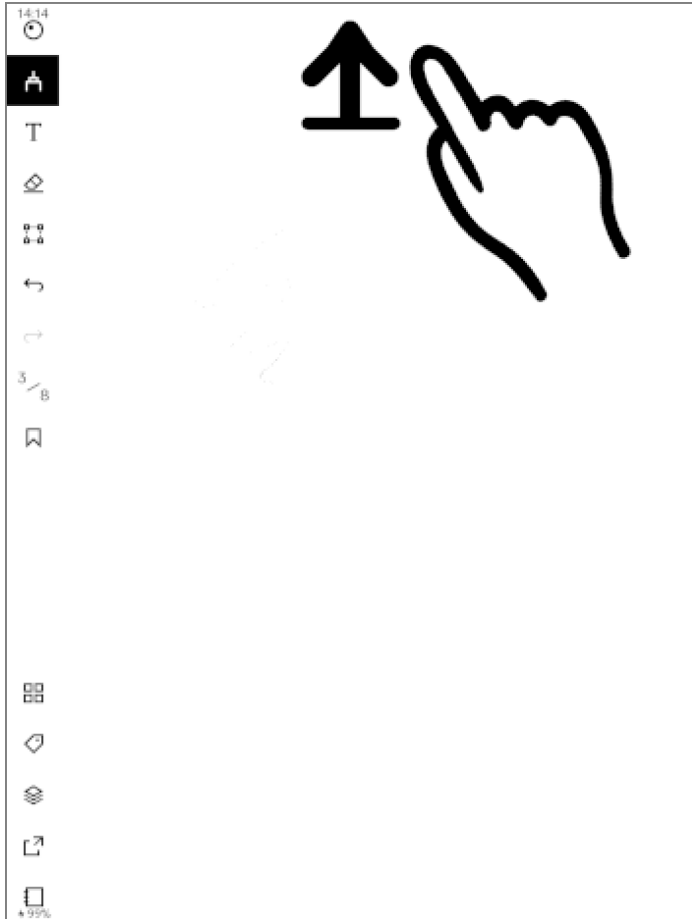

[rM Hacks Documentation](#) Strokes

 
Writing tools

By default, there are three stroke sizes (line thicknesses) for all the writing tools except highlighter and for the eraser tool. The sizes are Thin, Medium, and Thick.

rM Hacks adds additional stroke sizes, five additional for the writing tools and three additional for the eraser.

For all the writing tools except highlighter, the sizes are


- Thinner (0.5)
- Thin (1)
- Medium Thin (1.5)
- Medium (2)
- Thick (3)
- Thicker (5)
- Even Thicker (8)
- Thickest (13)

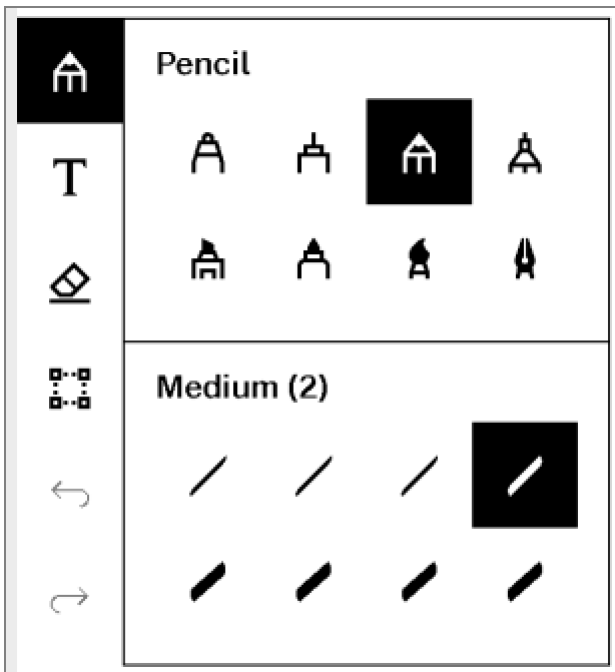

Eraser

For the eraser, the sizes are

 - Thinner (0.5)
- Thin (1)
- Medium Thin (1.5)
- Medium (2)
- Thick (3)
- Thicker (5)

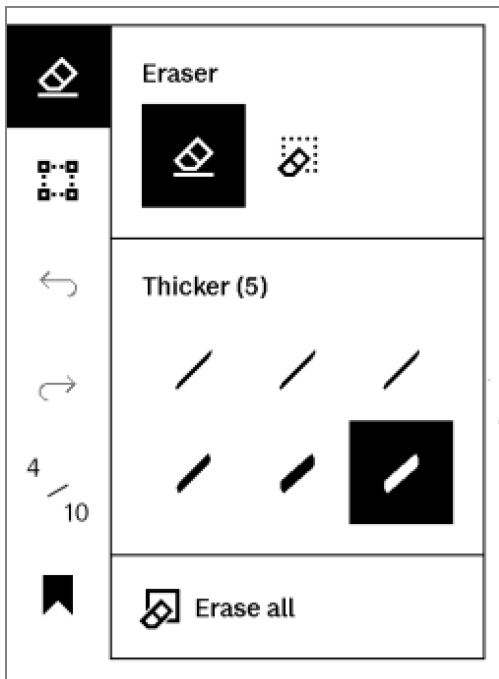


[rM Hacks Documentation](#) Bookmarks

Bookmarks Configuration


Bookmarks Enables bookmarks feature for documents.	<input checked="" type="checkbox"/>
Bookmarks corner tap Bookmark the current page by tapping in the corner opposite to the toolbar.	<input checked="" type="checkbox"/>
First page bookmark Adds 'First Page' to the bookmarks grid.	<input checked="" type="checkbox"/>
Last page bookmark Adds 'Last Page' to the bookmarks grid.	<input checked="" type="checkbox"/>

Bookmarks

 
Enable this setting to use bookmarks. A bookmarks icon will appear in the toolbar.

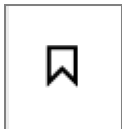


Tap this icon to display the bookmarks navigation grid.

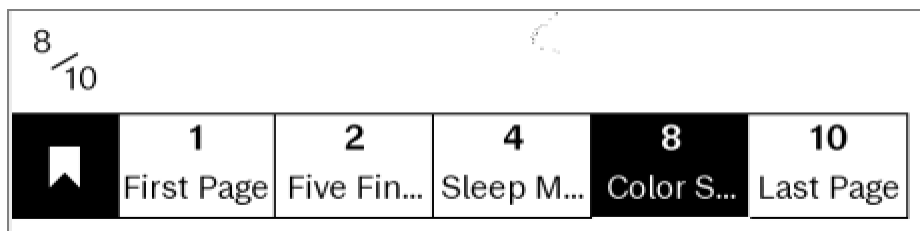 

 Long press this icon to toggle a bookmark for the current page.



 When the bookmarks navigation grid is visible, long press any bookmark entry to open the Rename Bookmark dialog to add, change or remove a bookmark's name.

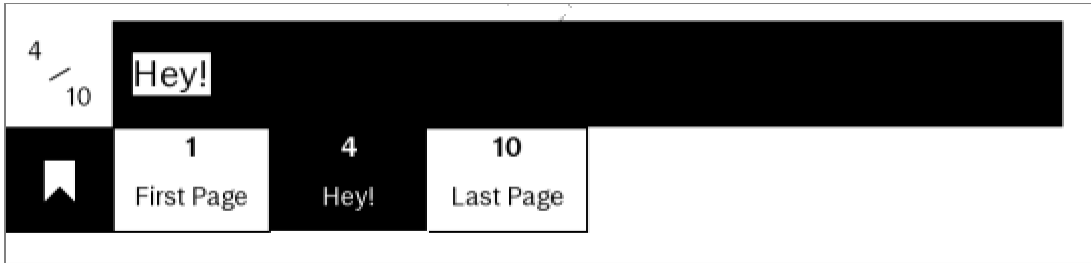


Bookmarks corner tap

If this setting is enabled, then in addition to the bookmarks icon in the toolbar, an area in the top corner opposite the toolbar will become active.

Tapping this area will toggle a bookmark for the current page (similar to a long press of the bookmark icon in the toolbar).

 
If the current page has a bookmark, a bookmark icon will appear in this upper corner area.

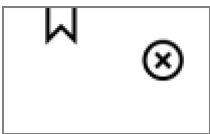

Whether the icon appears or not, a long press in this area will open the Rename Bookmark dialog to give the (new or existing) bookmark a name.




 That name will appear in the bookmarks navigation grid along with the page number.

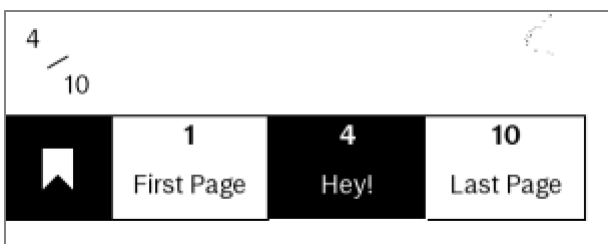


First page bookmark

 If this setting is enabled, a First Page entry will appear in the bookmarks navigation grid.

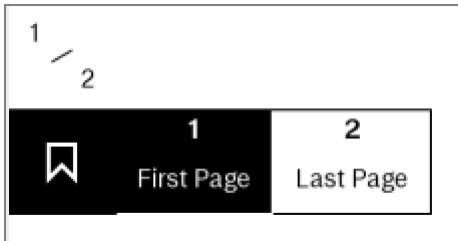

 
If the first page has a bookmark, that bookmark will show instead.

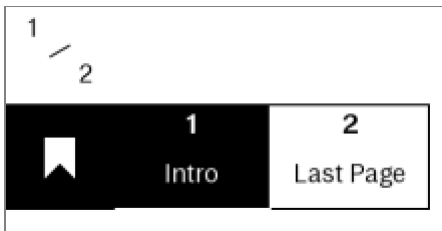


The First Page entry will not appear if the document has only one page.

Last page bookmark

 If this setting is enabled, a Last Page entry will appear in the bookmarks navigation grid.

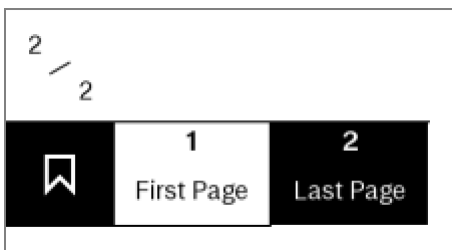

 If the last page has a bookmark, that bookmark will show instead.

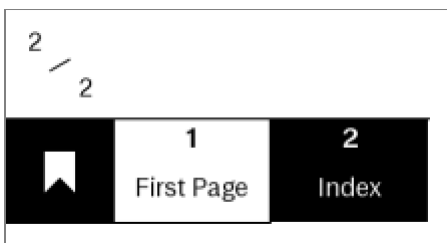


The Last Page entry will not appear if the document has only one page.

[rM Hacks Documentation](#) **Pen Button Actions**

[rM Hacks Documentation](#) Document-Level Settings

 When you enable Document-level toggle buttons, more entries appear in the Export / Share menu.

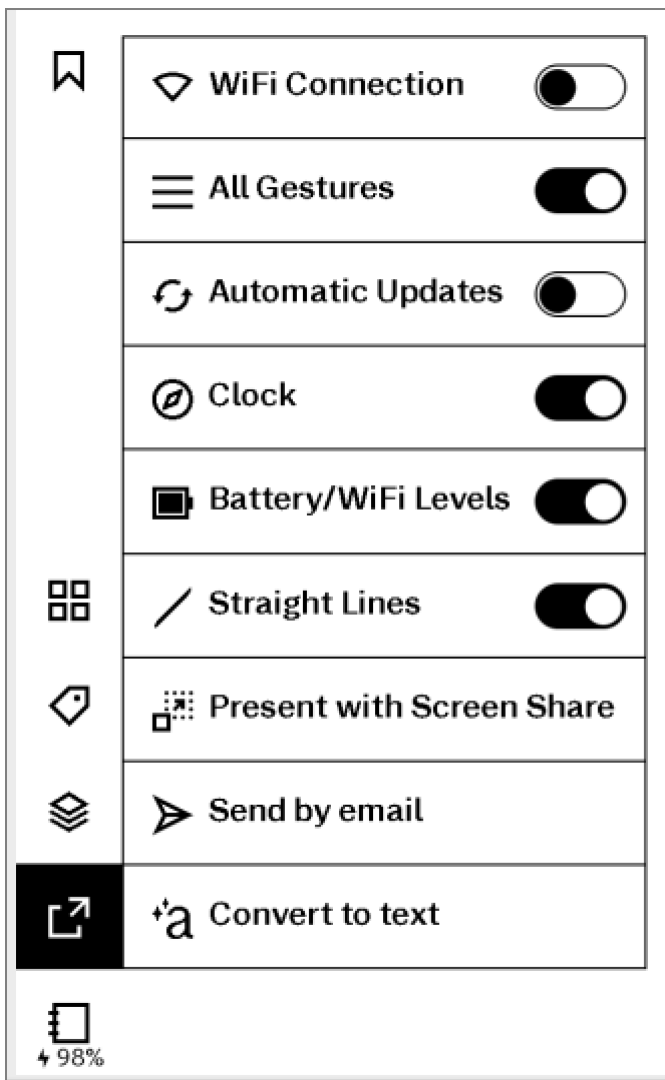

This allows you to toggle these settings without leaving the document.

- WiFi Connection
- All Gestures
- rM1 Buttons (rM1 only)
- Automatic Updates

- ◆ Clock
- ◆ Battery/WiFi Levels
- ◆ Straight Lines