

1PCT72X00000J

SW1

R9

BATTERY1

L201

R202

R203

R214

R212

R205

R206

R215

R213

R211

R219

R216

R204

R217

R218

R210

R208

R207

R209

R201

R200

R204

R203

R202

R201

R200

C201

C202

C203

C204

C205

C206

C207

C208

C209

C210

C211

C212

C213

C214

C215

C216

C217

C218

C219

C220

C221

C222

C223

C224

C225

C226

L201

L202

L203

L204

L205

L206

L207

L208

L209

L210

L211

L212

L213

L214

L215

L216

L217

L218

L219

L220

L221

L222

L223

L224

L225

L226

U200
BL V
GP
VG
FNY
804

Y201
100Lf

E1





OK
23/18

CH1 CH2

SW3

H1

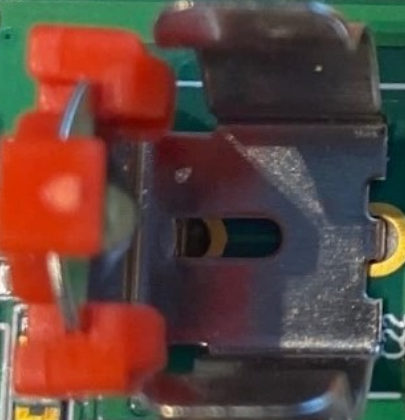

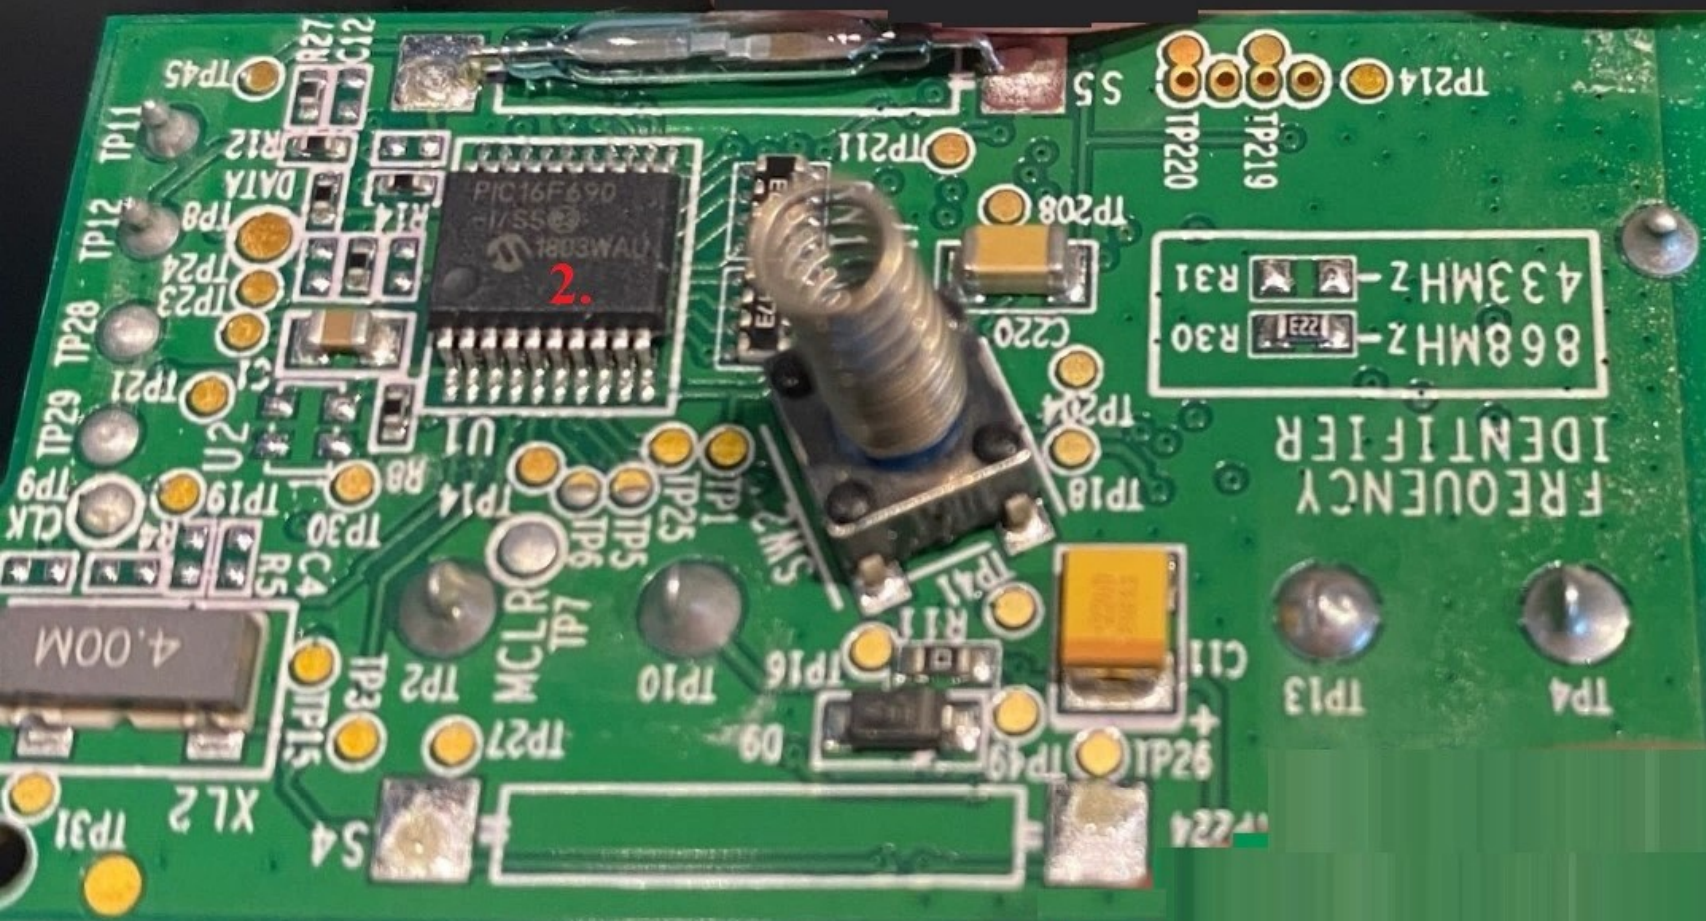

V11

868MHz - R30
433MHz - R31

FREQUENCY IDENTIFIER

3 9L94V-0
M1 E213371
1501 2517

4.00M

PIC16F690
17/55
069F91C12