

FirmwareUpgrade Instruction

Unzip ROCKER_update,then open Folder. Copy all the following files to the root-directory of the Micro SD card.Then power on your player,go to “Settings” > “Firmware update” .Make sure there is enough power for your player(no less than 50%)before the updating.