

satellite ST 2 - 88° E

azimuth 140.6°

elevation 61.6 °

To see signal strength go to

```
menu >
setup >
Installation code `1234` >
box setting >
satellite management >
enter advance setting password ( 4th, 6th, 8th and 10th digits of your vc card n. or regi. no .
```

press yellow key by remote

```
make sure
lnb type is universal
lnb power is on
22 k hz on
```

Parameter Value

```
satellite    st 1
nb type      universal
Lnb power    on
22k hz       off
diseqc       off
```

Transponder

```
11069 (h)
11069 (v)
11672 (h)
11672 (v)
11164 (v)
11483 (h )
11483 (v)
11546 ( h)
11546 (v)
```

Signal settings Value

```
modulation system DVB-S 2
fec                2/3
symbol rate        43978
modulation type    QPSK
roll off           0.35
```

Now adjust your dish till

Signal Value

```
signal strength full
signal quality near 80%
```