

## ***Heated Wiper Wiring installation***

**Installation should only be performed by a licensed auto tech.**

Please refer to wiper installation on package before continuing.

After wiper is installed to wiper arm, perform the following:

1. Secure BLACK wire from *heated* wiper to underside of wiper arm using the provided wires ties
2. Leave a small amount of slack at top of wiper arm and lower wiper arm to allow *heated* wiper to pivot
3. Be sure to put a wire tie on each side of the sensor in the cable and on the center of the sensor.
4. With an awl or small Phillips screwdriver, poke a small hole through the rubber seal close to the wiper arm pivot between the hood and engine compartment for the connector. Route wire through hole in seal to engine compartment. Make sure wire does not pinch when hood is closed.

## ***Heated Wiper Wire harness installation***

1. Connect both connecting plugs of harness to wiper plugs. Be sure arrows line up on plugs.
2. Connect BLACK wire (ground wire) along with the black wire from the Manager module to the negative battery post
3. Connect the RED wire from the Manager to the positive battery post.
4. Wire tie harness neatly to keep harness from drooping or rubbing on any metal or hot spots.

60 Day Warranty from factory defects on the Wiper Blade  
1 Year Warranty from factory defects on the Wiring Harness

Operation specifications:

12-14 volts


Approximately 5 amp maximum draw (per pair)

Sensor closed @ 40F +/- 5F

Sensor opens @ 42F +/- 5F

**WARNING: Fuse 7.5 amp max**


# ICE-E-Liminator

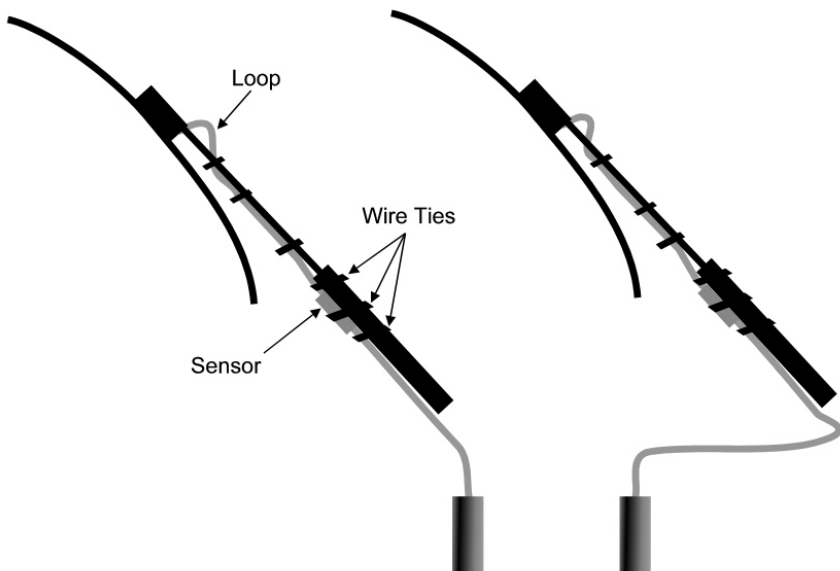

WIPER  
CONNECTOR

WIPER  
CONNECTOR

## Heated Wiper Blade Wiring Harness

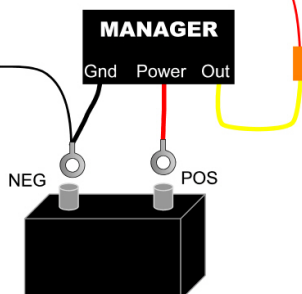


**H.W.B**

10901 Northland Drive  
Rockford, MI 49341  
Ph. (616) 866-3435  
sales@hwbllc.biz

Patent # 7,721,382  
Other Patents Pending


# ICE-E-Liminator

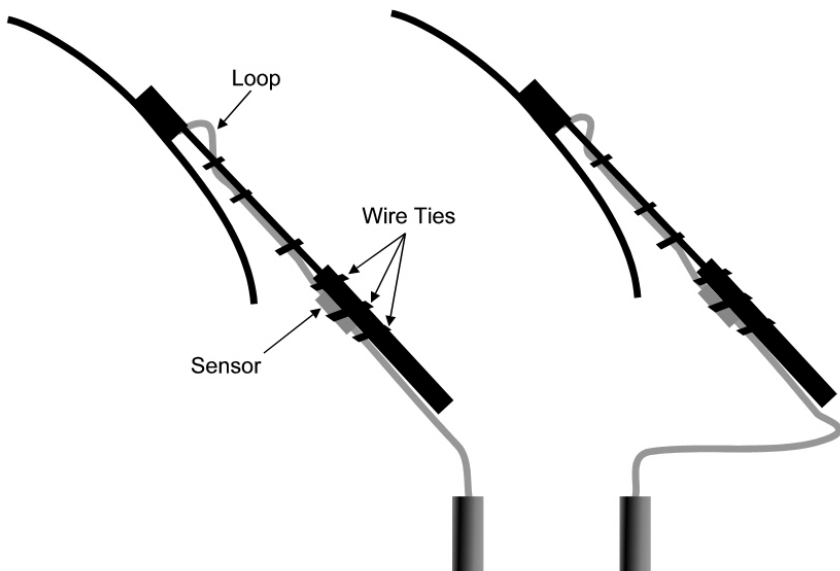

WIPER  
CONNECTOR

WIPER  
CONNECTOR

## Heated Wiper Blade Wiring Harness

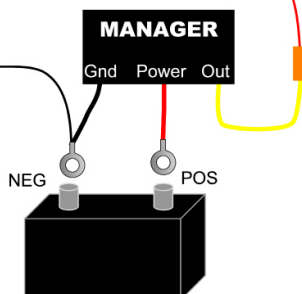

**H.W.B**

10901 Northland Drive  
Rockford, MI 49341  
Ph. (616) 866-3435  
sales@hwbllc.biz

Patent # 7,721,382  
Other Patents Pending

## ***Heated Wiper Wiring installation***

**Installation should only be performed by a licensed auto tech.**

Please refer to wiper installation on package before continuing.

After wiper is installed to wiper arm, perform the following:

1. Secure BLACK wire from *heated* wiper to underside of wiper arm using the provided wires ties
2. Leave a small amount of slack at top of wiper arm and lower wiper arm to allow *heated* wiper to pivot
3. Be sure to put a wire tie on each side of the sensor in the cable and on the center of the sensor.
4. With an awl or small Phillips screwdriver, poke a small hole through the rubber seal close to the wiper arm pivot between the hood and engine compartment for the connector. Route wire through hole in seal to engine compartment. Make sure wire does not pinch when hood is closed.

## ***Heated Wiper Wire harness installation***

1. Connect both connecting plugs of harness to wiper plugs. Be sure arrows line up on plugs.
2. Connect BLACK wire (ground wire) along with the black wire from the Manager module to the negative battery post
3. Connect the RED wire from the Manager to the positive battery post.
4. Wire tie harness neatly to keep harness from drooping or rubbing on any metal or hot spots.

60 Day Warranty from factory defects on the Wiper Blade  
1 Year Warranty from factory defects on the Wiring Harness

Operation specifications:

12-14 volts

Approximately 5 amp maximum draw (per pair)

Sensor closed @ 40F +/- 5F

Sensor opens @ 42F +/- 5F

**WARNING: Fuse 7.5 amp max**